

Aviation Environmental Design Tool (AEDT)

Version 3c

Installation Manual



Table of Contents

1	Installati	ion Introduction	4
2	Technica	al Assistance	4
3	System I	Requirements	5
	3.1 Not	te for International Users	6
	3.1.1	SQL Server Collation	6
3.1.2		Windows Region and Language	6
	3.1.3	Windows System Locale	7
	3.1.4	Windows Performance Counter	8
	3.2 Upg	grading from SQL Server 2012 to SQL Server 2017	9
	3.2.1	Option 1. Use the Migrate Studies Feature in AEDT ← Recommended	9
	3.2.2	Option 2. In-Place Upgrade of SQL Server 2012 Instance to SQL Server 2017	9
4	Installati	ion Package Contents	11
	4.1 Mic	crosoft SQL Server Software	11
	4.1.1	SQL Server 2012 Downloads	11
	4.1.2	SQL Server 2017 Downloads	11
	4.2 AEC	OT Software	12
5	Software	e Installation	12
	5.1 Typ	sical Installation Configurations	12
	5.1.1	Standalone Installation Configuration	12
	5.1.2	Client – Server Installation Configuration	12
	5.2 Inst	tall Microsoft SQL Server	13
	5.2.1	Instructions for Installing the SQL Server 2017 Express Edition	13
	5.2.2	SQL Server 2017 – Add Startup Parameter	25
	5.2.3	Install the Latest Cumulative Update for SQL Server 2017	26
	5.2.4	Install Microsoft SQL Server Management Studio	27
	5.2.5	SQL Server – sysadmin Server Role	27
	5.2.6	SQL Server – Maximum Server Memory Setting	27
	5.3 Inst	tall AFDT 3c	29

Aviation Environmental Design Tool

Installation Manual: 3c

5.3.1	Older AEDT Installations and AEDT 3c	29
5.3.2	Install AEDT 3c	30
5.3.3	Migrate User-Defined AEDT Study Databases	39
5.3.4	Upgrade User-Defined AEDT Study Databases	39
5.4 O	ptional – Install AEDT Distributed Processing Service	40
5.4.1	Setup AEDT Client	42
5.4.2	Setup Taskmaster Servers Running Distributed Processing Service	42
5.5 N	anage AEDT Databases	48
5.5.1	Connect to SQL Server Instance in SQL Server Management Studio	48
5.5.2	Verify AEDT System Database Versions	48
5.5.3	Backup SQL Server Database	49
5.5.4	Restore SQL Server Database	50
5.5.5	Delete SQL Server Database	52
5.6 St	eps to Uninstall AEDT	53

1 Installation Introduction

This document provides detailed instructions on how to install and run AEDT 3c. It is important to follow the installation instructions in the order listed below, as Microsoft SQL Server is a prerequisite for AEDT 3c. Installation components must run locally.

- 1. Install Microsoft SQL Server 2012 or SQL Server 2017
- 2. Install AEDT 3c



To install software, the user must have administrative rights to the computer.

2 Technical Assistance

The AEDT Support website, https://aedt.faa.gov/, is the technical support hub for AEDT. Support requests, feedback on bugs, and feature requests should be submitted through this website. The AEDT installer and support resources such as documentation and frequently asked questions (FAQ) are also available on the AEDT Support website. Register on the website to request support or submit feedback on AEDT. Additional options for support include:

• E-mail: <u>aedt-support@dot.gov</u>

• Phone: 617-494-2603

Please include the AEDT Administrative File when requesting technical support. Please refer to Section 4.11.2 in the AEDT User Manual for instructions on generating the Administrative File.

3 System Requirements

System specifications for computers capable of hosting the AEDT 3c application are displayed in Table 3-1. The preferred specifications are listed with suggested minimum requirements where applicable.

Using the SQL Server 2017 requires additional configuration steps. Please see the Section 5.2.2 and 5.2.3 in this Manual.

Table 3-1 AEDT 3c System Requirements

	AEDT 3c System Specifications			
	Minimum	Noise Only (Recommended)	Emissions Dispersion and Multi-Airport Studies (Recommended) ¹	
Operating Systems ²	Windows 10 (x64)	Windows 10 (x64) or Windows Server 2016	Windows 10 (x64) or Windows Server 2016	
Processor	Modern dual core processor with 2 GHz or higher clock	Modern many core (>2) processors with 2 GHz or higher clock	Modern many core (>2) processors with 2 GHz or higher clock	
RAM	8 GB	16 GB	64 GB or more	
Hard Disk Space	100 GB Storage	500 GB Storage	500 GB Solid State Drive (SSD) for single airport emissions dispersion 4 TB or more SSD for large scale emissions analysis	
Microsoft SQL Server	Express Edition, Version 2012 or 2017	Standard/Enterprise Edition, Version 2012 or 2017	Standard/Enterprise Edition, Version 2012 or 2017, running on the SSD ³	
Other Software	Adobe Acrobat Reader	Adobe Acrobat Reader	Adobe Acrobat Reader	



AEDT requires administrative privileges for both 1) installation and 2) execution of the software.

¹ While it is possible to generate emissions dispersion metric results with less than the recommended configuration, the time required for those runs to complete will be significantly longer.

² Use Windows Update to ensure your computer has the latest priority updates.

³ Please see Section 5.2.6 SQL Server – Maximum Server Memory Setting for important information on limiting the maximum server memory of SQL Server.



The SQL Server Express Edition (a free edition of SQL Server) has the following limitations:

- Limited to the lesser of one socket or four cores
- Maximum memory for the database engine is 1 GB
- Maximum database size is 10 GB per database

As specified in Table 3-1 AEDT 3c System Requirements, using the SQL Server Standard Edition or higher is strongly recommended for running large studies.



The recommended screen resolution is 1920 x 1080.



AEDT uses the accelerated map display that is part of the ArcGIS Runtime SDK for WPF in order to achieve performance benefits when displaying map layers. Accelerated display is disabled if the computer's graphics hardware does not meet requirements or when accessing AEDT remotely (e.g. through Remote Desktop). When accelerated display is disabled, map layers may require additional time to load.



It is recommend to include AEDT application as an exception to antivirus run time scan.

3.1 Note for International Users

3.1.1 SQL Server Collation

During the SQL Server installation, select **SQL_Latin1_General_CP1_CI_AS**. Upgrading an older AEDT study database to the latest study version will fail if different collation is used, see Section 5.2.

3.1.2 Windows Region and Language

AEDT supports only "English (United States)" format for the Windows Region and Language.

To change Windows Region and Language:

- 1. Open the Windows Settings.
- 2. Click Time & Language.
- From the left-hand panel, click Region & language.
 This screen may vary depending on your version of Windows 10.
- 4. Under *Languages*, select "English (United States)". If it is not already listed, use the *Add a language* option to add the "English (United States)" language.

Installation Manual: 3c

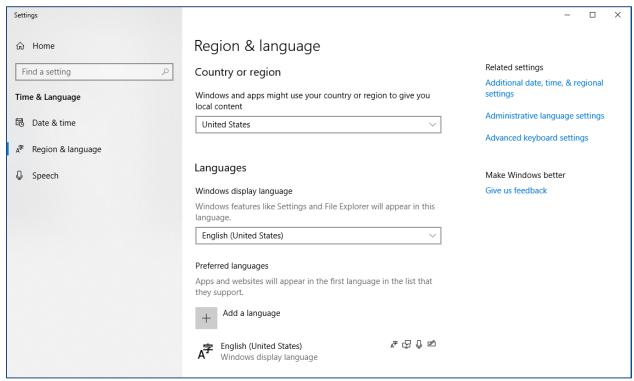


Figure 3-1 Windows Region & Language Settings

3.1.3 Windows System Locale



When the Windows system locale is not set to **English (United States)**, contour generation may fail with "The name of the Field is invalid: valid names may contain letters, numbers or underscores" error.

To change Windows System Locale:

- 1. In the Region & language settings dialog, click the Administrative language settings.
- 2. In the "Language for non-Unicode programs" section, click the **Change system locale** button.
- 3. Change the Current system locate to "English (United States)".
- 4. Click OK to close the dialog.

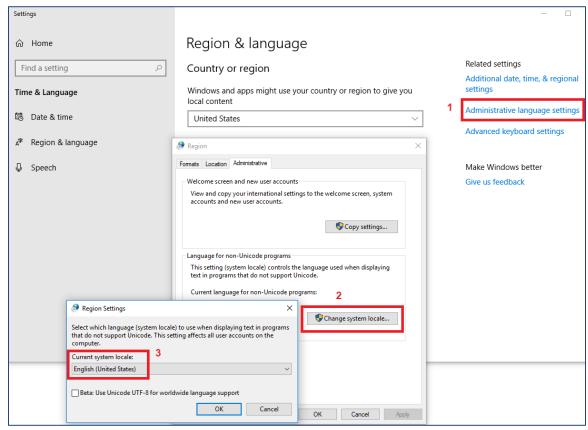


Figure 3-2 Windows Region Settings – System Locale

3.1.4 Windows Performance Counter

Some international users may receive the following exception message when starting AEDT for the first time after installing AEDT.

Application version: 93.0.6136.1 Airport DB version: unable to retrieve. Fleet DB version: unable to retrieve.

Exception: System.InvalidOperationException: Cannot load Counter Name data because an invalid

index " was read from the registry.

 $at\ System. Diagnostics. Performance Counter Lib. Get String Table (Boolean\ is Help)$

This error indicates that the Windows performance counter settings has become corrupted and must be reset.

To reset the Windows performance counter setting:

- 1. From Windows Start, type cmd.
- 2. Right-click on cmd.exe and click Run as administrator.
- 3. In the command prompt, type LODCTR.exe /R and press enter. The following message will be displayed "Info: Successfully rebuilt performance counter setting from system backup store".
- 4. Start AEDT to confirm that it starts successfully.

3.2 Upgrading from SQL Server 2012 to SQL Server 2017

This section is applicable to users who have been using older AEDT versions with SQL Server 2012 and want to upgrade to SQL Server 2017. AEDT 3c release supports both the 2012 and 2017 versions of Microsoft SQL Server.

Skip this section if you are a new user or have already migrated to SQL Server 2017.

This section explains two options for upgrading from SQL Server 2012 to SQL Server 2017. Both options assume that SQL Server 2012 (v11) is currently used with the existing AEDT installation (e.g. AEDT 3b).

3.2.1 Option 1. Use the Migrate Studies Feature in AEDT ← Recommended

The *Migrate Studies* feature in AEDT 3c application supports copying studies on a SQL Server 2012 instance to a SQL Server 2017 instance. Using this option is recommended over the Option 2 (in-place upgrade).

To migrate by using the Migrate Studies feature in AEDT:

- 1. Install SQL Server 2017 side-by-side with the 2012 instance. This will create a SQL Server 2017 instance.
- 2. Install AEDT 3c. During AEDT 3c installation, select the SQL Server 2017 instance (created from the previous step).
- 3. Use the *Migrate Studies* feature in the AEDT 3c application (refer to the instructions in the AEDT User Manual).
- 4. After migration, upgrade AEDT user-defined studies to the most current AEDT study version, see Section 5.3.4.
 - This will copy the AEDT study databases in a 2012 instance to a 2017 instance.
 - You can choose which studies in the 2012 instance to migrate to a 2017 instance.
 - AEDT study databases in the 2012 instance are not removed or replaced.

3.2.2 Option 2. In-Place Upgrade of SQL Server 2012 Instance to SQL Server 2017

This option uses the in-place upgrade feature of the Microsoft SQL Server Installation wizard. The feature allows users to upgrade instances of SQL Server 2012 to SQL Server 2017. All the databases (including any AEDT databases) on the selected SQL Server 2012 instance will be upgraded to SQL Server 2017 version.



When you upgrade SQL Server, the previous SQL Server instance (i.e. 2012) will be overwritten and will no longer exist on your computer. Before upgrading, back up SQL Server databases and other objects associated with the previous SQL Server instance.



If you have a Standard/Developer/Enterprise edition of SQL Server 2012, use the SQL Server 2017 Installer that is same as or higher than the 2012 edition.

For example, a SQL Server 2012 *Standard* edition cannot be upgraded to 2017 using a SQL Server 2017 *Express* Installer. It must be upgraded using a SQL Server 2017 Standard or higher edition installer.

To upgrade to SQL Server 2017 by using the SQL Server Installation Wizard:

- 1. Run the SQL Server 2017 Installer, and click the *Custom* installation type.
- 2. In the SQL Server Installation Center window, click the Upgrade from a previous version of SQL Server.
- 3. Follow the SQL Server Setup instructions to upgrade a SQL Server 2012 instance to 2017.

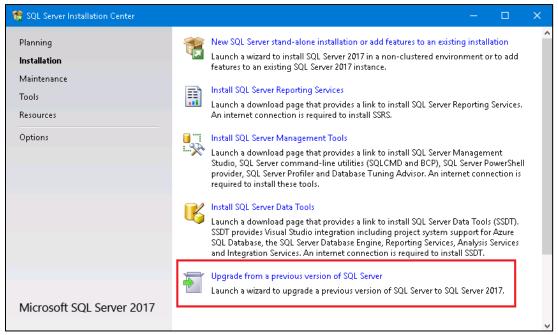


Figure 3-3 SQL Server 2017 Installation Center

- 5. Make sure to select the correct SQL Server 2012 instance that you want to upgrade to 2017.
- 6. After the SQL Server upgrade is complete, upgrade AEDT user-defined studies to the most current AEDT study version, see Section 5.3.4.

4 Installation Package Contents

4.1 Microsoft SQL Server Software

Starting with AEDT 3c, Microsoft SQL Server 2017 is officially supported in addition to SQL Server 2012. Microsoft SQL Server 2012 *or* SQL Server 2017 is a prerequisite for using AEDT 3c.



The SQL Server Express Edition (a free edition of SQL Server) has the following limitations:

- Limited to the lesser of one socket or four cores
- Maximum memory for the database engine is 1 GB
- Maximum database size is 10 GB per database

As specified in Table 3-1 AEDT 3c System Requirements, using the SQL Server Standard Edition or higher is strongly recommended for running large studies.



SQL Server Management Studio is a graphical management tool that allows for configuration and management of Microsoft SQL Server, including backing up and restoring databases and running SQL queries.

4.1.1 SQL Server 2012 Downloads

Microsoft SQL Server 2012 Express Edition

Download the "ENU\x64\SQLEXPRWT_x64_ENU.exe" which is the combined installer for Microsoft SQL Server 2012 Express and the SQL Server Management Studio Express for 64-bit operating systems. https://www.microsoft.com/en-us/download/details.aspx?id=50003

4.1.2 SQL Server 2017 Downloads

Using the SQL Server 2017 requires additional configuration steps. Please see the Section 5.2.2 and 5.2.3 in this Manual.

Microsoft SQL Server 2017 Express Edition

Download the Microsoft SQL Server 2017 Express Edition from this link: https://www.microsoft.com/en-us/download/details.aspx?id=55994

SQL Server 2017 for Microsoft Windows Latest Cumulative Update

Download the SQL Server 2017 for Microsoft Windows Latest Cumulative Update (minimum version is Cumulative Update 13 or higher) from this link:

https://support.microsoft.com/en-us/help/4047329/sql-server-2017-build-versions

SQL Server Management Studio Express

Download the SQL Server Management Studio Express for 64-bit operating systems from this link (minimum version is 17.9.1 or higher):

https://docs.microsoft.com/en-us/sql/ssms/download-sql-server-management-studio-ssms?view=sql-server-ver15

4.2 AEDT Software

- Install AEDT 3c.exe Installer for AEDT 3c application
- Install AEDT 3c Distributed Processing.exe Installer for AEDT 3c Distributed Processing service (see Section 5.4)

5 Software Installation

This section contains installation instructions for Microsoft SQL Server, AEDT software, and AEDT Distributed Processing Service. Instructions for verifying the AEDT database versions and steps to uninstall AEDT are also included.

5.1 Typical Installation Configurations

There are two typical installation configurations for AEDT: Standalone configuration; or Client–Server configuration.

In addition to the typical installation configurations, a distributed processing configuration can be setup to run metric results across a number of remote servers to reduce processing time, see Section 5.4.

5.1.1 Standalone Installation Configuration

In the **Standalone configuration**, the AEDT GUI application and AEDT databases are all installed on one machine.

For this setup:

- 1) Install Microsoft SQL Server (Section 5.2).
- 2) Install the AEDT application (Section 5.3).

5.1.2 Client - Server Installation Configuration

In the **Client-Server configuration**, the AEDT GUI application is installed on one or more client (individual) machines and connect to a remote database server where AEDT databases are installed.



On both the client and server machines, enable the TCP/IP protocol network configuration and run the SQL Server Browser service.



Accessing the same study database simultaneously by more than one user is not recommended.

Here are the installation instructions for the Client-Server configuration.

- 1) On the remote SQL Server, run the AEDT installer.
 - a. Select the *Custom* setup type.
 - b. Only check the "AEDT 3c System Databases" and the "AEDT 3c Sample Databases". Uncheck the other options.
 - c. Proceed with the installation.

Aviation Environmental Design Tool

Installation Manual: 3c

- d. After the installation is complete, confirm that the AEDT database backup files (.bak) exist in the AEDT *DatabaseBackups* folder (e.g., C:\Program Files\FAA\AEDT3c\DatabaseBackups)
- e. Start SQL Server Management Studio, and confirm that the AEDT system and sample databases are listed.
- 2) On a client machine, run the AEDT installer.
 - a. Select the *Custom* setup type.
 - b. Only check the "AEDT 3c", "Sample PEM Data", and "Visual C++ Redistributable". Uncheck the database options.
 - c. Proceed with the installation.
 - d. After the installation is complete, open the ConnectionStrings.config file under the AEDT application directory (e.g., C:\Program Files\FAA\AEDT3c)
 - e. For all connection strings, change the "Data Source" property to point to the remote SQL Server instance name, then save the file.
 - f. Start AEDT. In the Open Study dialog, enter the instance name of the remote SQL Server database server.

5.2 Install Microsoft SQL Server



Starting with AEDT 3c, Microsoft SQL Server 2017 is officially supported in addition to SQL Server 2012.

Please see Section 3.2 on options for migrating/upgrading from SQL Server 2012 to SQL Server 2017.

Using the SQL Server 2017 requires additional configuration steps. Please see the Section 5.2.2 and 5.2.3 in this Manual.

5.2.1 Instructions for Installing the SQL Server 2017 Express Edition

Instructions on installing the SQL Server 2017 Express Edition are described below. The steps and options may be different for other SQL Server Editions or different versions of the SQL Server installer.

To install Microsoft SQL Server 2017 Express Edition:

- 1. Double-click the **SQLServer2017-SSEI-Expr.exe**.
- 2. The SQL Server 2017 Express Edition window will automatically launch.

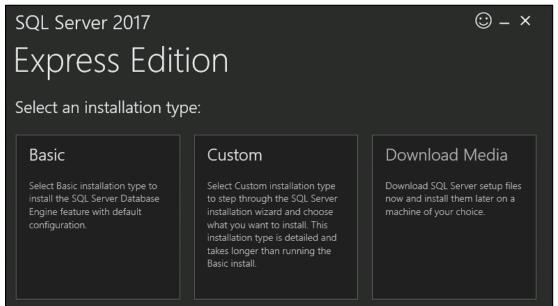


Figure 5-1 SQL Server 2017 Express Edition – Installation Type

- 3. Click the *Custom* installation type.
- 4. In the next screen, specify the location for SQL Server media download and click *Install*. It will download installation packages and open the *SQL Server Installation Center* window.

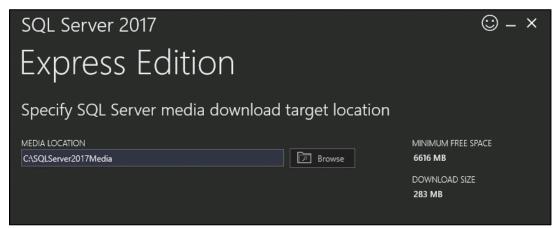


Figure 5-2 SQL Server 2017 Express Edition – Media Location

Installation Manual: 3c

- 5. In the *SQL Server Installation Center* window, click the *Installation* link on the left side of the window.
- 6. Click the appropriate installation option. Click the **New SQL Server stand-alone installation or add features to an existing installation** option unless upgrading from an older version.

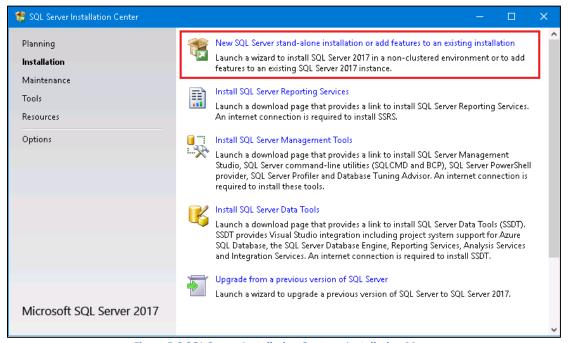


Figure 5-3 SQL Server Installation Center – Installation Menu

7. SQL Server 2017 Setup will automatically run *Setup Rules* which will identify potential installation problems that might occur. Click *Next*.

8. Installation Type: Select the Perform a new installation of SQL Server 2017 option. Click Next.

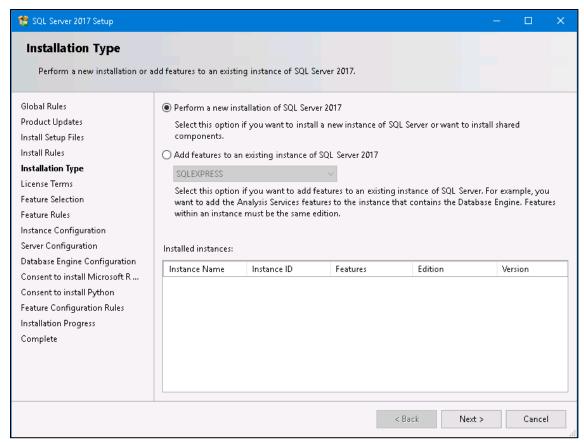


Figure 5-4 SQL Server 2017 Setup – Installation Type

9. License Terms: Read the terms and check the box that reads I accept the license terms. Click Next.

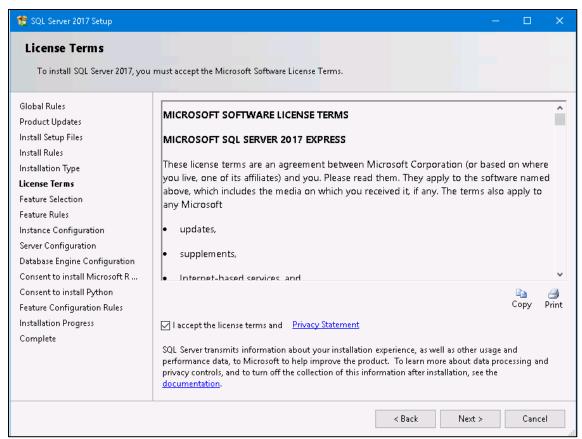


Figure 5-5 SQL Server 2017 Setup – License Terms

- 10. Feature Selection: The list of features will be different depending on the SQL Server Edition. Select the following features (additional features are optional). Click Next.
 - Database Engine Services
 - SQL Server Replication
 - o Full-Text and Semantic Extractions for Search
 - SQL Client Connectivity SDKSQL

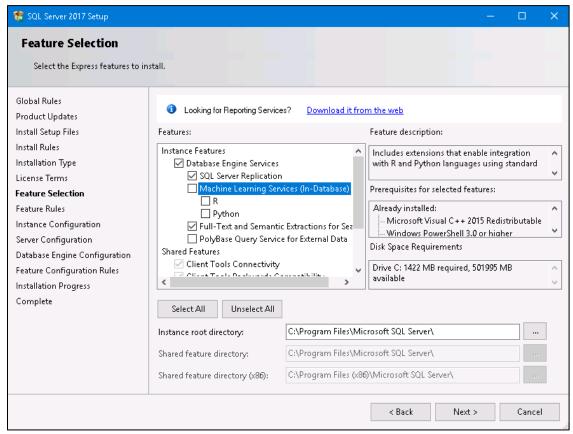


Figure 5-6 SQL Server 2017 Setup – Feature Selection

11. *Instance Configuration:* When installing the Express Edition, the "Named instance" option is selected by default. Select the desired instance option. If *Named instance* is selected, change the named instance name as needed. Click *Next*.

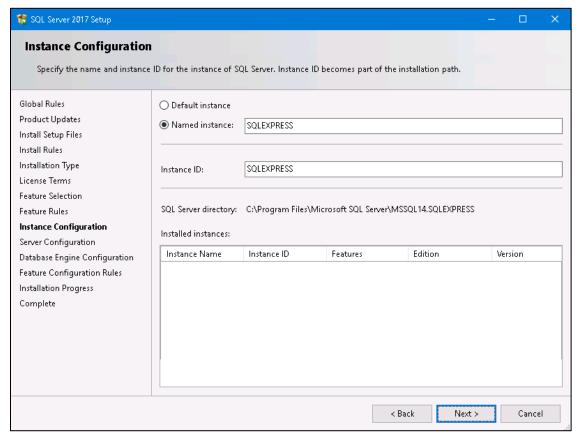


Figure 5-7 SQL Server 2017 Setup – Instance Configuration



The SQL Server instance created in this step should be selected when installing AEDT (see Figure 5-25).

12. Server Configuration: In the Service Account tab, the default settings work in most cases. Change the settings if necessary.

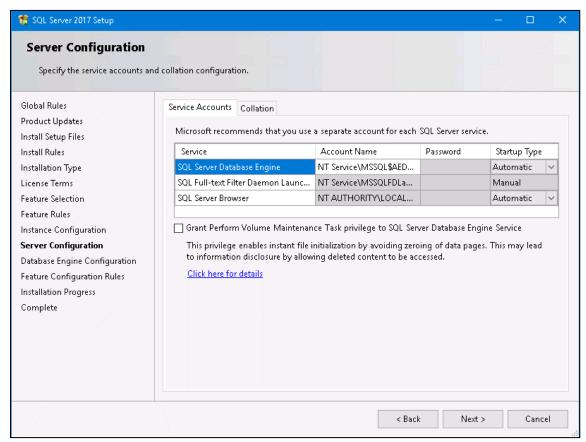


Figure 5-8 SQL Server 2017 Setup – Server Configuration, Service Accounts Tab

13. Server Configuration: Click the Collation tab and confirm that "SQL_Latin1_General_CP1_CI_AS" is selected. Click Next.



The default collation may be different for international users; ensure that **SQL_Latin1_General_CP1_CI_AS** is selected. Upgrading an AEDT study database (in a different collation) to the latest study version is not supported.

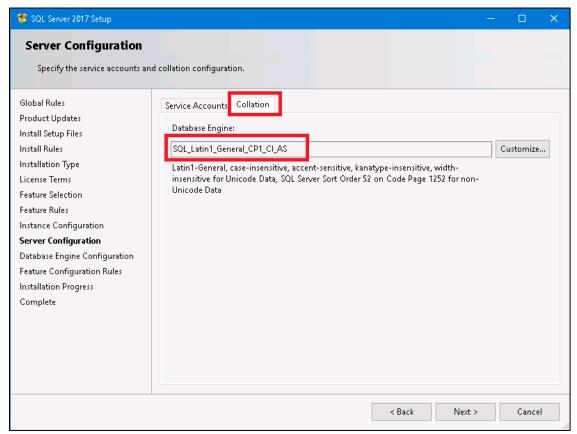


Figure 5-9 SQL Server 2017 Setup – Server Configuration, Collation tab

14. *Database Engine Configuration*: Select the desired authentication mode, then specify SQL Server administrators. This is equivalent to granting the **sysadmin** server role to the users.



- Add the user who will be installing AEDT as a SQL Server administrator.
- Add the user who will be using/running AEDT as a SQL Server administrator.

Click Next.

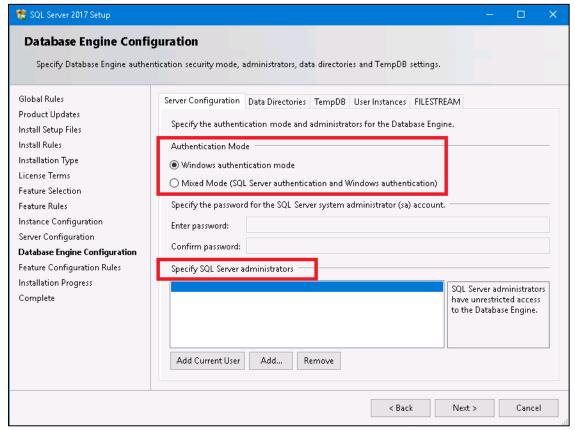


Figure 5-10 SQL Server 2017 Setup – Database Engine Configuration

15. Installation Progress: The progress bar and status will update until the installation is complete.

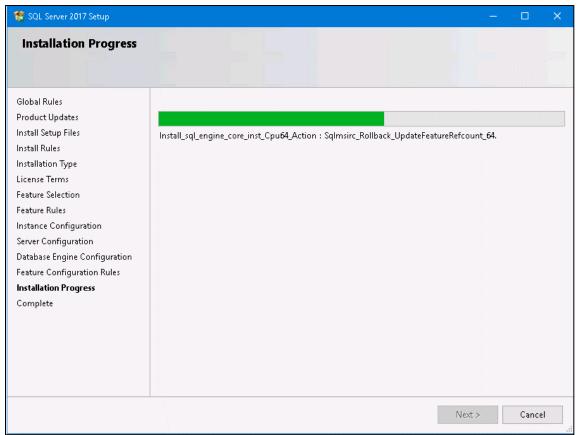


Figure 5-11 SQL Server 2017 Setup – Installation Progress

16. *Complete:* The final screen will confirm that the installation was successful. Click *Close* to close the *Setup* window.

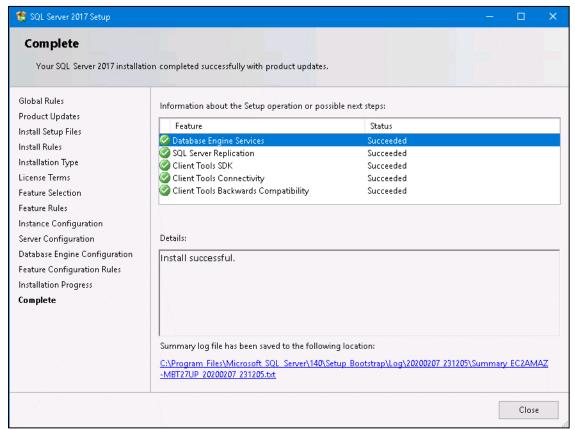


Figure 5-12 SQL Server 2017 Setup - Complete

17. Close the *SQL Server Installation Center* window by clicking the *X* in the top right corner.

5.2.2 SQL Server 2017 - Add Startup Parameter



This step is required in order to use the SQL Server 2017 with AEDT 3c.

- 1. Start the SQL Server 2017 Configuration Manager.
- 2. From the left-pane, select the SQL Server Services.
- 3. From the right-pane, select the SQL Server 2017 instance. The instance name will be different depending on your installation
- 4. Right-click on the SQL Server 2017 instance and choose *Properties*.

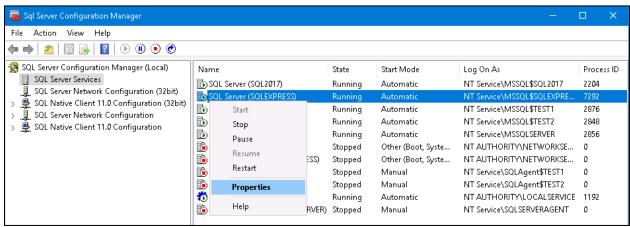


Figure 5-13 SQL Server 2017 Configuration Manager

- 5. In the SQL Server Properties dialog, click the *Startup Parameters* tab.
- 6. Enter -T4631 and click the Add button.
- 7. Click the **Apply** button.

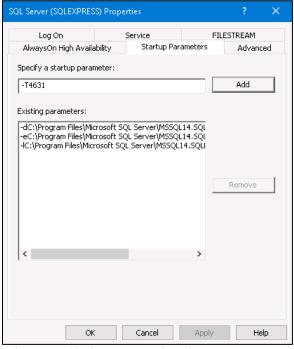


Figure 5-14 SQL Server Properties – Startup Parameters

8. Click OK in the "service must be restarted" warning prompt.



Figure 5-15 SQL Server Service Warning

- 9. Click OK to close the SQL Server Properties dialog.
- 10. Right-click on the SQL Server 2017 instance and choose **Restart**.

5.2.3 Install the Latest Cumulative Update for SQL Server 2017



This step is required in order to use the SQL Server 2017 with AEDT 3c.

Download the **SQL Server 2017 for Microsoft Windows Latest Cumulative Update** (minimum version is Cumulative Update 13) from the following link. Double-click on the executable to open the installation wizard. Accept the default selections and install the update.

https://support.microsoft.com/en-us/help/4047329/sql-server-2017-build-versions

5.2.4 Install Microsoft SQL Server Management Studio



This section is only applicable if you are using SQL Server 2017 for AEDT 3c.

Download the SQL Server Management Studio Express for 64-bit operating systems (minimum version is 17.9.1 or higher) from the following link. Double-click on the executable to open the installer. Accept or update the location and click *Install* to install the software.

https://docs.microsoft.com/en-us/sql/ssms/download-sql-server-management-studio-ssms?view=sql-server-ver15

5.2.5 SQL Server – sysadmin Server Role

As explained in the SQL Server installation instructions (see Figure 5-10 SQL Server 2017 Setup — Database Engine Configuration), both the user who will be installing AEDT (e.g., IT personnel) and the user who will be using AEDT **must be a SQL Server administrator**.

If those users were not added as SQL Server administrator during SQL Server installation, then follow the steps below to add them to the **sysadmin** server role.

- 1. Open SQL Server Management Studio.
- 2. In the *Connect to Server* dialog box, enter or select the SQL Server instance name where AEDT databases are installed.
- 3. Select the appropriate Authentication method, then click the *Connect* button.
- 4. In the Object Explorer, expand the Security folder, then the Server Roles folder.
- 5. Double-click on the sysadmin to open the Server Role Properties dialog.
- 6. Click the Add button and add the desired user account(s), and click OK.

5.2.6 SQL Server - Maximum Server Memory Setting

When running an annual emissions or emissions dispersion analysis, it is important to limit the SQL Server's Maximum server memory. This only applies to standalone configurations where the AEDT application and the database server are located on the same machine. This does not apply to remote database servers.

The maximum recommended server memory depends on the RAM installed on the computer and the type of hard drive – hard disk drive vs. solid state drive (SSD). As specified in the System Requirements, using SSD is highly recommend for running an emissions dispersion analysis.

The recommended range for the Maximum server memory is 25% to 50% of the RAM.

For example, if you have a 32 GB RAM machine, then set the SQL Server Maximum server memory to 8000 MB (8 GB), up to 16000 MB (16 GB).

1. In SQL Server Management Studio, connect to the SQL Server instance where AEDT databases are installed.

- 2. Right-click on the server instance and click *Properties*.
- 3. In the Server Properties dialog box, click the Memory tab on the left.
- 4. Change the *Maximum server memory* option.
- 5. Click *OK* to save your changes.

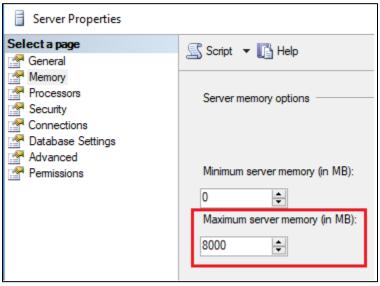


Figure 5-16 SQL Server Properties – Maximum Server Memory

For more details, please review this link: https://www.mssqltips.com/sqlservertip/4182/setting-a-fixed-amount-of-memory-for-sql-server/

5.3 Install AEDT 3c

Follow the instructions below to install AEDT. To install the AEDT application, the user must have administrative rights to the computer.

5.3.1 Older AEDT Installations and AEDT 3c



For users with an older AEDT release (e.g., AEDT 3b) already installed on their computer:

- If you choose the "remove and upgrade older AEDT version" option during AEDT 3c installation, AEDT 3c will be installed into the older AEDT application folder and data folder (e.g., AEDT 3c application files will be installed into the existing AEDT 3b folders).
- In order to avoid this confusion, uninstall the older AEDT version first before installing AEDT 3c.



For users with an older AEDT release (e.g., AEDT 3b) already installed on their computer:

- To install AEDT 3c side-by-side with an older AEDT release (e.g., AEDT 3b), first create a separate SQL Server instance for AEDT 3c databases before installing AEDT 3c
- Select the "install side by side with other versions" option during the AEDT 3c installation.
- ?

What is side-by-side installation?

AEDT 3c can be installed side by side with an older AEDT release (e.g., AEDT 3b). The AEDT databases from two different versions can be installed on the same database server, but on two separate SQL Server instances. Create a new SQL Server instance before proceeding with side-by-side installation of AEDT.

Side-by-side installation supports installing newer AEDT version when an older AEDT version is already installed. It does not support installing an older AEDT on top of newer AEDT version.

5.3.2 Install AEDT 3c



For the standalone installation (see Section 5.1.1), SQL Server 2012 or 2017 must be installed prior to installing AEDT 3c.

To install AEDT application and databases:

- 1. To start the installer, double-click the *Install AEDT 3c.exe* file.
- 2. If the *User Account Control* dialog box appears, click *Yes*.

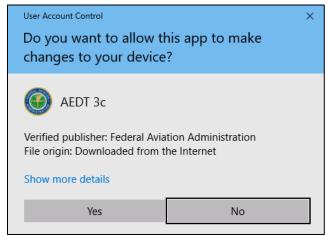


Figure 5-17 User Account Control Dialog Box

Aviation Environmental Design Tool

Installation Manual: 3c

- 3. The setup wizard for AEDT will open. The following software is required to install AEDT. If they are not already installed, the setup wizard will initiate installation of the required software.
 - Microsoft .NET Framework 4.6.1
 - Microsoft Visual C++ 2010 SP2 Redistributable Package (x86)
 - Microsoft Visual C++ 2008 SP2 Redistributable Package (x64)
 - Microsoft Visual C++ Redistributable for Visual Studio 2015 Update 3 (x64)

Accept the license agreements and click *Install* to install the required software.

4. The setup wizard will display the welcome screen. Click Next.

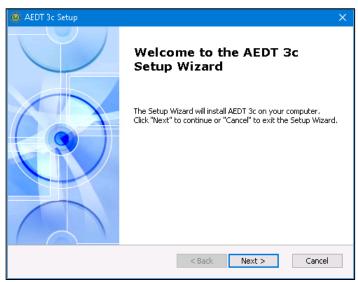


Figure 5-18 AEDT Setup Wizard - Welcome

5. Read the license terms and click *I accept the terms of the license agreement*. Click *Next*.

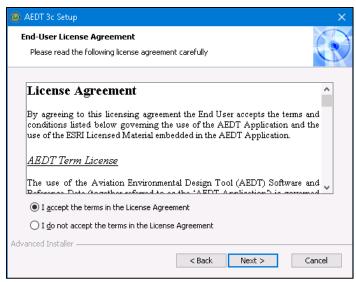


Figure 5-19 AEDT Setup Wizard – License Agreement

Installation Manual: 3c

- 6. If an older AEDT version is already installed, the following screen will be displayed (Figure 5-20).
 - Click Yes to remove the existing version and install AEDT 3c. The same settings of the existing AEDT version will be used for AEDT 3c (SQL Server instance, installation folder, and data folder).
 - Click No to install AEDT 3c alongside with older AEDT version.

Click Next to continue.



This screen is not displayed if an AEDT versions older than 2c SP1 is already installed (e.g., 2c or 2b SP3). Side-by-side installation can be still performed by selecting a different SQL Server instance in subsequent step.

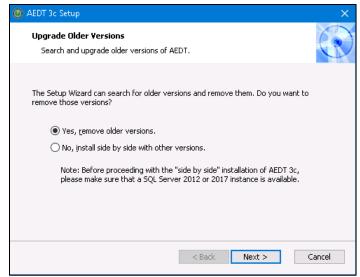


Figure 5-20 AEDT Setup Wizard – Upgrade Older Versions

- 7. Select the *Custom* setup type.
 - Complete: installs all the AEDT components to default locations
 - The following default installation locations are used:
 - AEDT installation folder C:\Program Files\FAA\AEDT
 - AEDT data folder C:\AEDT
 - o If there are files in the default locations at the time of installation, new folders will be created and named based on the AEDT version; for example:
 - AEDT installation folder C:\Program Files\FAA\AEDT3c
 - AEDT data folder C:\AEDT3c
 - Custom: allows users to customize which AEDT component(s) to install and change the locations
 where the software is installed

The *Custom* setup is recommended and described in this section since the locations of the AEDT installation folder and the data folder can be viewed and modified through this path in the installer.

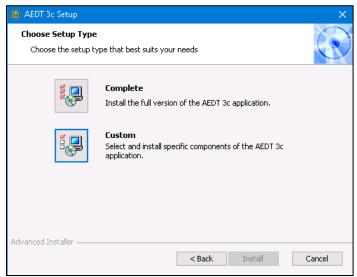


Figure 5-21 AEDT Setup Wizard – Setup Type

8. All the features are selected by default. Click Next.

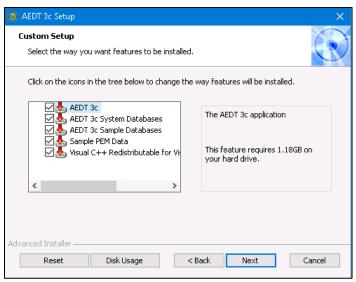


Figure 5-22 AEDT Setup Wizard – Custom Setup

9. Select the Installation folder. Accept the default location or specify a different folder. Click Next.

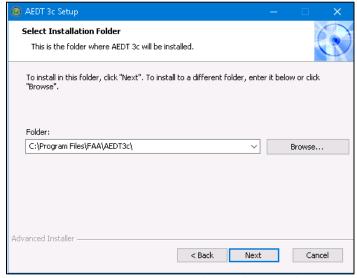


Figure 5-23 AEDT Setup Wizard – Installation Folder

10. Select the Data folder. Accept the default location or specify a different folder. Click Next.



Do not include any spaces in the Data Folder path (e.g. C:\AEDT 3c). Spaces in the Data Folder path may cause problems with contour generation.

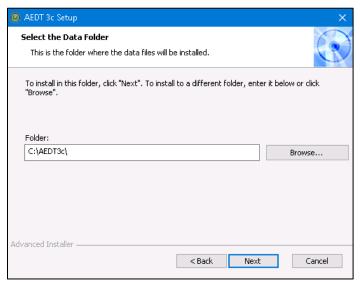


Figure 5-24 AEDT Setup Wizard - Installation Folder

11. Select the desired database server instance from the drop-down menu or type the name of the server in the *Server* field. Click *Next*. The installer will connect to the database server and advance to the next step.



Please make sure to select a SQL Server 2012 or SQL Server 2017 instance in this step.

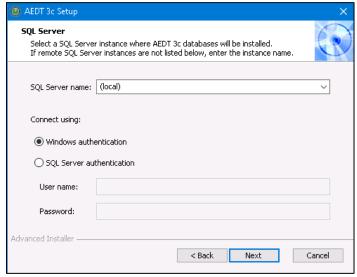


Figure 5-25 AEDT Setup Wizard – SQL Database



The following error message (Figure 5-26) is displayed under the following circumstances:

- The selected SQL Server instance already has AEDT system databases and sample databases (see Section 5.5 for the list). In this case, manually delete the AEDT system and sample databases and continue with the installation.
 or
- Side-by-side installation was selected and the same SQL Server instance that is already
 in use by older version of AEDT was selected. In this case, select a different SQL Server
 instance.

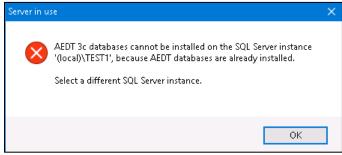


Figure 5-26 AEDT Setup Wizard – Server in Use Error

12. Click *Install* to start the installation. The installation progress will be displayed.

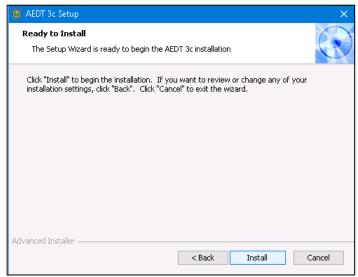


Figure 5-27 AEDT Setup Wizard – Ready to Install



Completing the AEDT 3c Setup Click the "Finish" button to exit the Setup Wizard. < Back Finish Cancel

Figure 5-28 AEDT Setup Wizard – Installation Complete

- 14. A shortcut is created on the Desktop with the name: AEDT 3c.
- 15. AEDT 3c is ready for use.

Distributed Transaction Coordinator Service

13. Click *Finish* when installation is complete.

AEDT Installer will automatically start the Microsoft Distributed Transaction Coordinator (DTC) service if it is not already started on the computer. The DTC provides services designed to ensure successful and complete transactions.

To check DTC settings on your computer:

- 1. Click the Windows Start button. In the "Search programs and files" text box, enter "services.msc".
- 2. Find the service, Distributed Transaction Coordinator, and double-click on it.
- 3. If the *Startup type* is set to *Manual*, change it to *Automatic*.
- 4. Click the Log On tab. The "Log on as" should be set to Network Service. To change to Network Service, select the "This account" option, then click *Browse*.
- 5. In the "Enter the object name to select" field, enter "Network Service", then click OK.
- 6. Restart the service.

Aviation Environmental Design Tool

Installation Manual: 3c

5.3.3 Migrate User-Defined AEDT Study Databases

If there are any user-defined AEDT study databases on a SQL Server 2012 instance, the *Migrate Studies* feature in AEDT 3c application can be used to migrate them to a SQL Server 2017 instance. Follow the instructions in the AEDT User Manual to migrate AEDT study databases.



The migration process does not upgrade the AEDT study version. After migration, upgrade user-defined studies to the most current version, see Section 5.3.4.

5.3.4 Upgrade User-Defined AEDT Study Databases

AEDT 3c supports upgrading studies from study database version 1.43.1 up through and including one version prior to the current version. Follow the instructions in the AEDT User Manual to update a user-defined AEDT study database to the latest version.

5.4 Optional - Install AEDT Distributed Processing Service

Installing the AEDT Distributed Processing Service is optional. The AEDT Distributed Processing Service is also known as the Taskmaster (TM) Service.

AEDT uses distributed computing to provide the ability to run metric results across a number of remote servers to reduce processing time. A distributed processing system is a collection of computers that communicate through a computer network. Up to fifty remote servers running the Distributed Processing service can be networked to a single AEDT client computer running AEDT application. The AEDT application need only be installed on the AEDT client. On the remote servers, the AEDT Distributed Processing Service need to be installed. If a study references terrain and/or weather files, the necessary files must be placed on all remote servers in the same location specified in the *Definitions* tab on AEDT client. The specified file location must be exactly the same for all remote servers.

Each remote server receives a batch of flight operation information from the AEDT client, processes it, returns the resulting data, and awaits the next batch. The AEDT client assigns batches to the remote servers sequentially, as each remote server becomes available.

There are two installation configurations for distributed processing:

- Standalone configuration: AEDT databases reside on the AEDT client computer (see Figure 5-29 where S1, S2, S3, S4, S5, and S6 represent remote servers), or
- Client Server configuration: The databases reside on a separate database server (see Figure 5-30, where S1, S2, S3, S4, S5, and S6 represent remote servers). This configuration reduces memory consumption on the AEDT client due to SQL Server processing. The AEDT client relays all necessary information to the remote servers. The remote servers do not communicate directly with the separate database server.

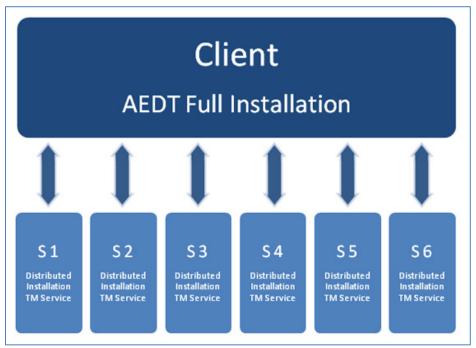


Figure 5-29 Distributed Processing

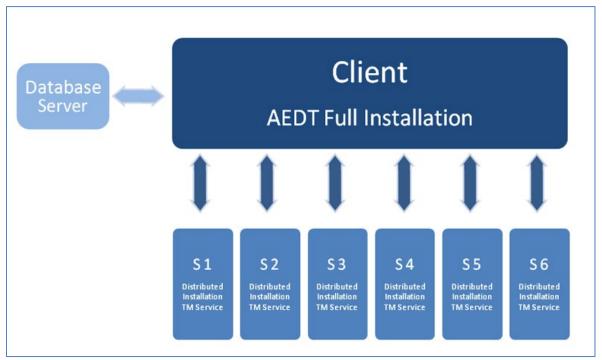


Figure 5-30 Distributed Processing with Separate Database Server

5.4.1 Setup AEDT Client

- 1. Install the entire AEDT system on the AEDT client, including Microsoft SQL Server, AEDT 3c, and AEDT databases. See sections 5.2 and 5.3.
- 2. Verify that the AEDT client can run a study successfully. This is an important verification step. If AEDT is not operational on a single machine, AEDT will not operate in distributed processing mode.

5.4.2 Setup Taskmaster Servers Running Distributed Processing Service

Repeat the following instructions for each remote server that is being utilized for distributed processing.



AEDT Setup will start Microsoft Distributed Transaction Coordinator (DTC) service if it is not already started on the computer. The DTC provides services designed to ensure successful and complete transactions. The DTC service needs to be running on both client and server(s).

To install AEDT distributed processing service:

- 1. To start the installer, double-click the *Install AEDT 3c Distributed Processing.exe* file.
- 2. If the *User Account Control* dialog box appears, click *Yes*.

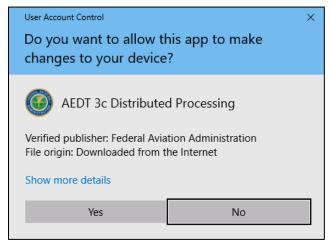


Figure 5-31 User Account Control Dialog Box

3. The Setup Wizard for AEDT will open. Click Next.



Figure 5-32 AEDT Setup Wizard – Welcome

4. Read the license terms and click *I accept the terms of the license agreement*. Click *Next*.

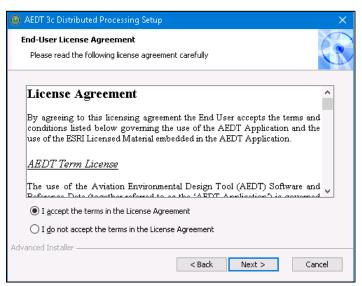


Figure 5-33 AEDT Setup Wizard – License Agreement

5. Specify the user account that will be used to start the AEDT distributed processing service. You can use an existing user account or create a new user account. Click *Next*.



The user account for starting the AEDT Distributed Processing Service can be either a local user or a network user.



The user account for the AEDT Distributed Processing Service must be added to the local *Administrators* group. Please see Step 11 below.

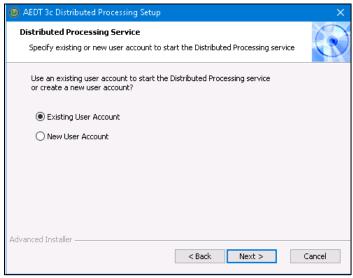


Figure 5-34 AEDT Setup Wizard - Specify Existing or New User Account

6. **Existing User Account:** Enter user name, domain, and password of an existing user account. The user must belong to the local *Administrators* group. Click *Next*. Verifying the account information may take a while.

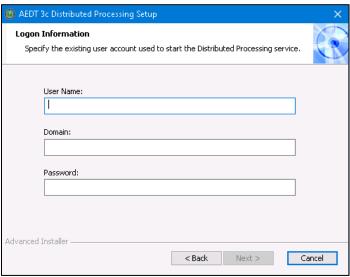


Figure 5-35 AEDT Setup Wizard – Specify Existing User Account

7. Create New User: Enter user name and password for a new local user account. Click Next.

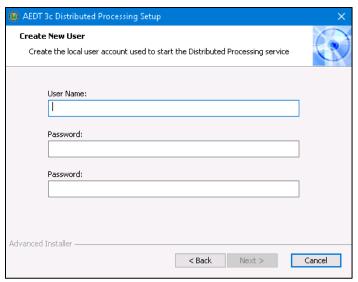


Figure 5-36 AEDT Setup Wizard – Create New User



The password for the local user account must meet the password policy requirements on the local machine. Otherwise, the distributed processing service installation will fail; and you will need to re-start the installation.

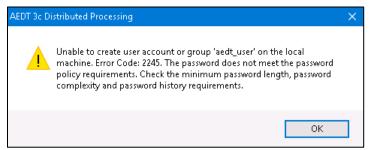
 


Figure 5-37 AEDT Setup Wizard – Unable To Create User Account Error



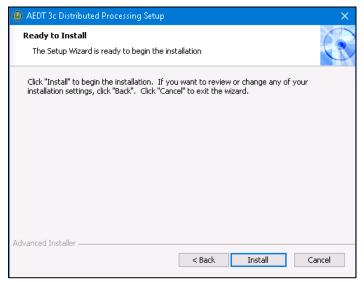


Figure 5-38 AEDT Setup Wizard – Ready to Install

9. Click Finish when installation is complete.



Figure 5-39 AEDT Setup Wizard – Installation Complete

10. The AEDT Distributed Processing Service is installed and automatically started. The files to support the service are installed under C:\Program Files\FAA\AEDT 3c Distributed Processing



The Distributed Processing Service logs are written to the **aedt_TmService.log** under C:\AEDT\Logs folder.

- 11. Add the user account for the AEDT Distributed Processing Service to the local *Administrators* group. Otherwise, using distributed processing to run metric results with terrain will not work.
 - a. Click the Windows Start button, and enter "lusrmgr.msc".
 - b. The Local Users and Groups dialog opens.
 - c. Click the Groups on the left pane.
 - d. Double-click on the *Administrator* group to open it.
 - e. Add the user account for the AEDT Distributed Processing Service to the Administrator group.
 - f. Click OK to save your changes.

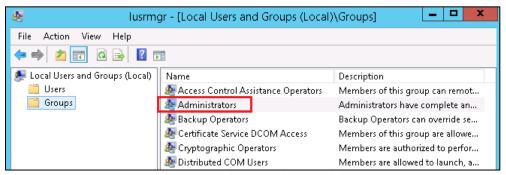


Figure 5-40 Local Users and Groups dialog

- 12. To view the AEDT 3c Distributed Processing Service:
 - a. Click the Windows Start button, and enter "services.msc".
 - b. The Services dialog opens.
 - c. Find the "AEDT 3c Distributed Processing Service".

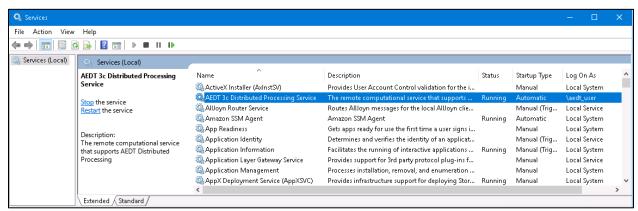


Figure 5-41 Services Dialog

5.5 Manage AEDT Databases

The following AEDT system databases are installed as part of the complete AEDT installation. After installing AEDT, open the SQL Server Management Studio and verify that all the AEDT system databases are listed.

- AIRPORT
- FLEET
- STUDY
- STUDY DULLES
- STUDY_IFSET
- STUDY_INM
- STUDY_NIRS
- STUDY PVD
- STUDY_WXYZ

5.5.1 Connect to SQL Server Instance in SQL Server Management Studio

- 1. Open SQL Server Management Studio.
- 2. In the *Connect to Server* dialog box, enter or select the SQL Server instance name where AEDT databases are installed.
- 3. Select the appropriate Authentication method.
- 4. Click the Connect button.

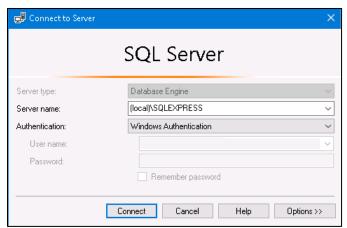


Figure 5-42 Microsoft SQL Server Management Studio – Connect to Server Dialog Box

5.5.2 Verify AEDT System Database Versions

- 1. Open SQL Server Management Studio and connect to the SQL Server instance where AEDT databases are installed.
- 2. From the File menu, select Open, File.
- 3. Navigate to C:\Program Files\FAA\AEDT\Script Files\InstallCheckDBversions.sql and select Open.
- 4. Click the Execute button located on the toolbar.
- 5. Check the database versions displayed in the *Results* tab.

5.5.3 Backup SQL Server Database

- 1. Open SQL Server Management Studio and connect to the SQL Server instance where AEDT databases are installed.
- 2. In the *Object Explorer*, select the study database of interest.
- 3. Right-click on the database, and select *Tasks*, *Back Up...* to open the *Back Up Database* dialog box.
- 4. Verify that the *Backup type* is set to *Full*.
- 5. If an entry has already been added to the *Destination* field, select the entry and click the *Remove* button.
- 6. Click the Add button to open the Select Backup Destination dialog box.
- 7. Click the ... button and browse to the desired location for storing the backup file.
- 8. Enter the desired file name in the File Name field, including the .bak extension. Click OK.
- 9. Click OK to close the Select Backup Destination dialog box.
- 10. Click *OK* to back up the database. A confirmation message will be displayed if the backup was successful.

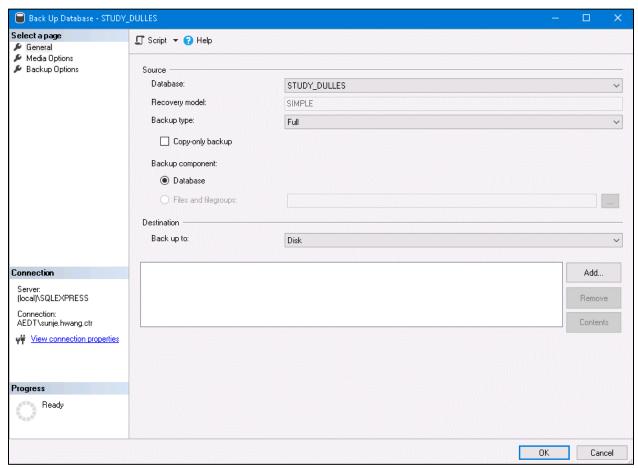


Figure 5-43 Microsoft SQL Server Management Studio – Back Up Database Dialog Box

5.5.4 Restore SQL Server Database

The SQL Server backup files (.bak) of the AEDT system databases are located in *C:\Program Files\FAA\AEDT\DatabaseBackups*.

- 1. Open SQL Server Management Studio and connect to the SQL Server instance where AEDT databases are installed.
- 2. Right-click on the Databases folder, and select *Tasks, Restore, Database...* to open the *Restore Database* dialog box.
- 3. Select the *Device* radio button, then click the ... button to open the *Specify backup* devices dialog box.
- 4. Click the Add button. Browse to the location of the previously stored backup file, and click OK.
- 5. Click OK to close the Specify backup devices dialog box.
- 6. Select the Restore checkbox for the backup file.
- 7. Select the Options page from the left side of the Restore Database dialog box.
- 8. Check the *Overwrite the existing database (WITH REPLACE)* option.
- 9. Click *OK* to restore the database. A confirmation message will be displayed if the restore was successful.

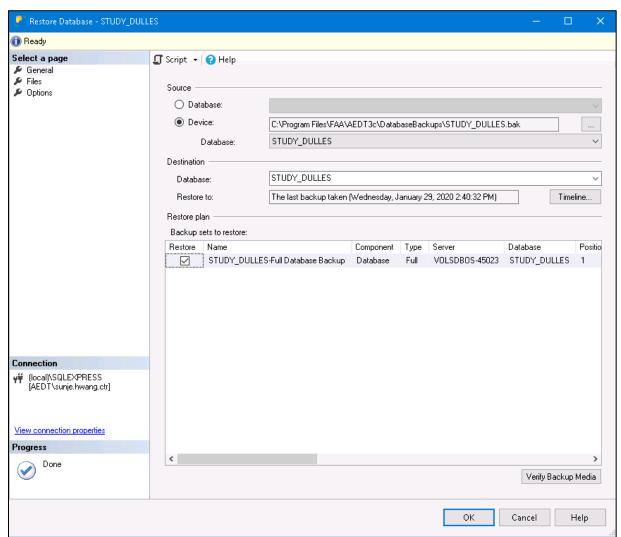


Figure 5-44 Microsoft SQL Server Management Studio – Restore Database Dialog Box

5.5.5 Delete SQL Server Database

AEDT study databases can be deleted in the SQL Server Management Studio. Exit the AEDT application before deleting an AEDT study database.

- 1. Open SQL Server Management Studio and connect to the SQL Server instance where AEDT databases are installed.
- 2. In the Object Explorer, select the database of interest.
- 3. Right-click on the database, and select *Delete* to open the *Delete Object* dialog box.
- 4. The "Delete backup and restore history information for databases" checkbox is selected by default. Change this setting as desired.
- 5. Select the "Close existing connections" checkbox.
- 6. Click OK to delete the database and close the dialog box.

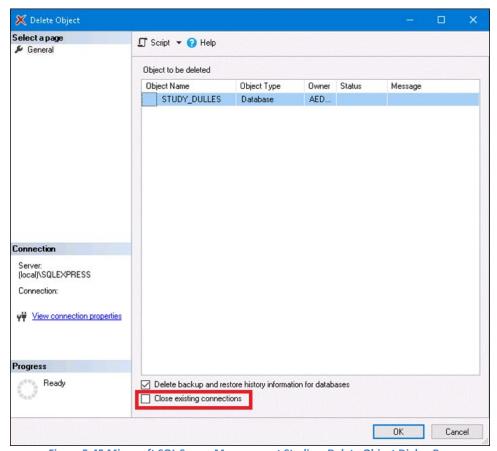


Figure 5-45 Microsoft SQL Server Management Studio – Delete Object Dialog Box

5.6 Steps to Uninstall AEDT



Uninstalling AEDT will also remove the system databases and sample study databases listed below. If you want to preserve any changes you made to the sample studies, create a backup of the database before uninstalling AEDT.

- AIRPORT
- FLEET
- STUDY
- STUDY_DULLES
- STUDY IFSET
- STUDY INM
- STUDY NIRS
- STUDY PVD
- STUDY_WXYZ



Before uninstalling AEDT, save desired files from the AEDT data folder (e.g., C:\AEDT3c) and from the study output directories — C:\AEDT\DATA\[User name]\[Study name]\[SQL Server Instance Name]\Output_Files in a different location.

To uninstall AEDT:

- 1. Navigate to Start, Control Panel, and select Programs and Features.
- 2. Select AEDT 3c from the program list and click Uninstall.
- 3. The Setup Wizard will open. Click Next to continue.

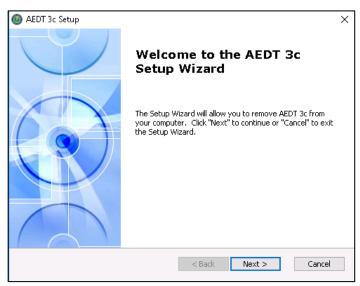


Figure 5-46 AEDT Setup Wizard

4. Click the *Remove* button to continue.

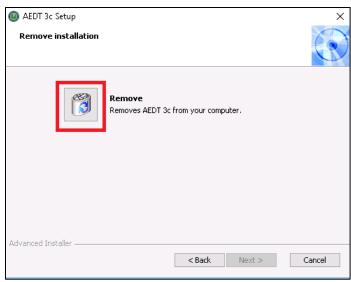


Figure 5-47 AEDT Setup Wizard – Remove Installation

5. Click the *Remove* button to uninstall AEDT from the computer.

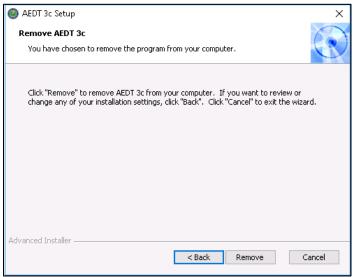


Figure 5-48 AEDT Setup Wizard – Remove

- 6. The installer will prompt to delete the Census data files. This refers to the Census data folder used for the Population Exposure Report (default location is C:\AEDT\demographics_module), and not the ACS data folder used for the Environmental Justice (default location is C:\AEDT\environmentaljustice_module).
 - Click Yes to remove the Census data folder.
 - Click No to preserve the Census data folder.

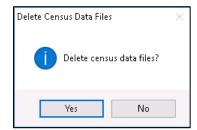


Figure 5-49 AEDT Setup Wizard – Delete Census Data Files Dialog

- 7. The status bar will display an estimated time to finish removing the program.
- 8. When the uninstallation is complete, click the *Finish* button to exit the Setup Wizard.



Figure 5-50 AEDT Setup Wizard - Finish

- 9. Check the following folders and manually delete them as necessary.
 - AEDT installation folder e.g., C:\Program Files\FAA\AEDT or C:\Program Files\FAA\AEDT3c
 - AEDT data folder e.g., C:\AEDT or C:\AEDT3c
- 10. Check the SQL Server instance and verify that the AEDT system and sample databases were removed.
 - a. Open SQL Server Management Studio and connect to the SQL Server instance where AEDT databases were installed.
 - b. In the *Object Explorer*, expand the Databases folder and confirm that the AEDT system and sample databases are no longer listed. If the AEDT system databases remain, delete them.