



U.S. Department
of Transportation
**Federal Aviation
Administration**

Aviation Environmental Design Tool (AEDT)

Version 3f Release

Supplemental Manual
AEDT Standard Input File (ASIF)

December 2023



Table of Contents

1	INTRODUCTION.....	1
1.1	Overview of the ASIF Format.....	1
1.2	ASIF Schema Documentation	1
1.2.1	<i>ASIF Schema Files</i>	1
1.2.2	<i>AsifMerge.html</i>	1
1.3	Importing External Studies	2
2	ASIF IMPORT TYPES.....	3
2.1	Full Study Import	3
2.2	Partial ASIF Import.....	3
2.3	Sample ASIFs.....	4
3	ASIF EXAMPLES.....	5
3.1	Create a Simple Study	5
1.	<i>Create empty study file</i>	5
2.	<i>Populate airport layouts section</i>	6
3.	<i>Create receptor set</i>	7
4.	<i>Create scenario and case hierarchy</i>	7
5.	<i>Populate cases with tracks and air operations</i>	8
6.	<i>Create annualization</i>	10
7.	<i>Full ASIF</i>	10
3.2	Create an Emissions Dispersion Study	15
1.	<i>Create empty study file</i>	16
2.	<i>Populate airport layouts section</i>	16
a)	Define airport layout	16
b)	Define stationary sources.....	16
c)	Define airport gates/terminals.....	17
d)	Define taxiways	18
e)	Define runways	19
f)	Assemble taxipaths	20
g)	Define tracks	21
h)	Define airport operating configurations.....	22
i)	Define operational profiles.....	24
3.	<i>Define receptor set</i>	26
4.	<i>Define scenario and case hierarchy</i>	26
a)	Define scenario properties	26
b)	Define the case for non-aircraft operations	27
c)	Define the case for aircraft operations	27
5.	<i>Full ASIF</i>	30
4	USER-DEFINED ANP AND BADA 4 PROFILES	31
4.1	Overview.....	31
4.2	User-Defined ANP Profiles	32
4.2.1	<i>Key Requirements for a New ANP Profile</i>	32
4.2.2	<i>ANP Profile – Procedure Steps</i>	32
	Sample ASIF for User-Defined ANP Procedural Profile	33
4.2.3	<i>ANP Profile – Fixed-Point</i>	34
	Sample ASIF for User-Defined ANP Fixed-Point Profile	34
4.3	User-Defined BADA 4 Profiles (for Existing BADA 4 Aircraft)	35

AEDT Supplemental Manual

AEDT Standard Input File

4.3.1	<i>Key Requirements for a New BADA 4 Profile</i>	35
	Sample ASIF for User-Defined BADA 4 Profile.....	37
4.4	Create User-Defined ANP and BADA 4 Profiles for New or Existing Aircraft by Using the GUI Export Aircraft Feature	38
4.4.1	<i>Create a New User-Defined Aircraft with Custom Profiles</i>	38
1.	<i>Copy an existing system aircraft to create a new user-defined aircraft.....</i>	38
2.	<i>Export the new aircraft then delete it.....</i>	38
3.	<i>Open and edit the exported ASIF.....</i>	38
4.	<i>Import the ASIF.....</i>	38
4.4.2	<i>Add Custom Profiles to Existing Aircraft.....</i>	39
1.	<i>Export an existing aircraft and its profiles.....</i>	39
2.	<i>Open and edit the exported ASIF.....</i>	39
3.	<i>Import the ASIF.....</i>	39
5	ASIF CONSIDERATION	40
5.1	Airport Layout and Runways	40
5.2	Event Consolidation.....	41
5.3	Control Codes	41
5.4	Assign Default Ground Support Equipment (GSE) to Aircraft Operations.....	43
5.5	Import User-Defined Spectral Class Data	45
5.5.1	<i>Sample ASIF for User-Defined Spectral Class Data</i>	45
5.6	Importing an Older Version of ASIF File.....	46
5.7	ASIF Version 1.2.18 Update for Stationary Sources	46
5.7.1	<i>Deprecated Boiler/Heater and Fuel Tank Sources and Operations</i>	47
	How to View/Edit Intermediate ASIF	47
5.8	ASIF Version 1.2.20 Update for Runup Operations	48
5.9	ASIF Version 1.2.21, 1.2.22, and 1.2.23 Updates to Support Greenhouse Gases Modeling	48
5.9.1	<i>Stationary Sources.....</i>	48
5.9.2	<i>Ground Support Equipment.....</i>	50
5.9.3	<i>Airframe (to support GHG modeling of APUs)</i>	50
6	ASIF SCHEMA DOCUMENTATION.....	51

1 Introduction

The AEDT Standard Input File (ASIF) provides a standard file format to allow for the import of data into AEDT. The ASIF format allows users to create a new study by importing a complete study including airports, scenarios, cases, operations, tracks, and other study definitions. Users can also use the partial ASIF import to import data into an existing AEDT study.

This Manual provides a description of the ASIF format for the **ASIF schema version 1.2.23**. It also provides an overview of ASIF usage and annotated sample studies. The Manual is intended for analysts and programmers who wish to create ASIF.

It is recommended to use the ASIF schema documentation, [AsifMerge.html](#), in conjunction with the Manual. It provides diagrams that illustrate the structure and contents of each XML element as well as rules and properties of each element, see Section 1.2.

1.1 Overview of the ASIF Format

ASIF is based on the XML file format. XML is a text-based file format that is readable by both humans and computers. Data values are tagged with elements and organized in a hierarchical manner such that the elements can contain other elements or data. XML elements can also have attributes which provide metadata that affect how the ASIF importer processes the data in the XML file. This document assumes users have basic familiarity with the XML file format. For additional information about XML, see <http://xmlfiles.com/xml/>.

An ASIF can be created and edited in a standard XML editor. The *XML Notepad* and *Notepad++* are XML editors that can be downloaded for free online.

1.2 ASIF Schema Documentation

1.2.1 ASIF Schema Files

The ASIF schema (.xsd) files are located under *C:\Program Files\FAA\AEDT3f\Examples* directory.

- ASIF.xsd
- ASIF_Airport.xsd
- ASIF_Common.xsd
- ASIF_Fleet.xsd
- ASIF_Receptors.xsd

1.2.2 AsifMerge.html

The ASIF schema documentation, [AsifMerge.html](#), is located under the *C:\Program Files\FAA\AEDT3f\Examples\ASIF Schema Reference* directory. This is a HTML file which contains schema diagrams that illustrate the structure and contents of each XML element. The links in the HTML file facilitates understanding the schema hierarchy and the rules and properties of each element.

The following table describes the notations used in the ASIF schema diagram.

Notation for Schema Diagram

Notation	Icon	Description
Choice indicator		Only one of the elements contained in the selected group can be present
Sequence indicator		Child elements must appear in the specified sequence
Element		Represented by a rectangle with solid or dotted border Solid rectangle – required element Dotted rectangle – optional element
Element with (+) sign		Indicates that the element has child element(s) and/or attribute(s)
Element with min and max bound		Specifies the min/max number of times an element can occur in the parent element

1.3 Importing External Studies

AEDT also supports import of INM and EDMS studies by converting these legacy tools into ASIF format and importing into AEDT. See the AEDT User Manual and the AEDT Supplemental Manual: Quick Start Tutorial for more information on importing legacy studies.

2 ASIF Import Types

There are two types of ASIF import files: a full-study import and a partial-study import. The following sections describe each type of import file.

2.1 Full Study Import

AEDT supports the creation of new studies via ASIF. For a full-study import, the **content** attribute of the **AsifXML** element must be set to “study”.

Please see Section 3 for two sample studies.

2.2 Partial ASIF Import

Partial ASIF is used to import specific pieces of data into an existing AEDT study. A partial ASIF is organized similarly to a full ASIF, except that it contains a single type of data – the **content** attribute of the **AsifXML** element must specify the data type. The data types that can be imported via partial ASIF are listed below:

- airportLayoutSet
- annualization
- case
- fleet
- receptorSets
- scenario
- boundary
- trackOpSet
- runup
- userGroundSupportEquipmentSet
- stationarySourceSet
- operationalProfileSet

The format for a partial ASIF is outlined below. The header is the same as a full ASIF, except that the **content** attribute is not “study”. Instead, the **content** attribute should specify the data element that appears in the file.

```
<AsifXml xmlns:AsifXml="http://www.faa.gov/ASIF"
           xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" version="1.2.20"
           content="ENTER_CONTENT_TYPE_HERE">

    <!-- The content block follows here: -->

    <*content type here*>
    ...
    </*end content type*>

</AsifXml>
```

Note that some of these elements rely on information provided in other data blocks. If this information is not provided by the base study when loading the partial ASIF, an error will be generated. For example, attempting to load a partial ASIF containing scenario data that references an airport that does not exist in the base study will cause an error.

2.3 Sample ASIFs

Sample ASIFs, including full study files and partial ASIFs, are located in *C:\Program Files\FAA\AEDT3f\Examples* directory.

Full study ASIF

- asif_emissions_study.xml
- asif_sensor_path_study.xml
- asif_small.xml

Partial ASIF

- PartialASIF_airportLayoutSet.xml
- PartialASIF_annualization.xml
- PartialASIF_boundary.xml
- PartialASIF_operationalProfileSet.xml
- PartialASIF_receptorSets.xml
- PartialASIF_runup.xml
- PartialASIF_scenario.xml
- PartialASIF_stationarySourceSet.xml
- PartialASIF_userGroundSupportEquipmentSet.xml
- UserDefinedANPProfiles-ProcedureSteps.xml
- UserDefinedANPProfiles-ProfilePoints.xml
- UserDefinedBADA4Profiles.xml
- UserDefinedSpectralClass.xml

3 ASIF Examples

This section provides simple steps to assist in the creation of ASIFs for possible studies. See Section 3.1 on developing an ASIF for a simple study and Section 3.2 for an emissions dispersion study.

3.1 Create a Simple Study

Follow the steps below to create an ASIF for a simple study:

1. Create an empty study file.
2. Populate the airport layout section.
3. Define receptor set.
4. Define scenario and case hierarchy.
5. Populate the case with tracks and air operations.
6. Create annualization.

The following sections provide examples of each of the above steps. This example should be used as an aid for understanding the ASIF format, and not as a data reference.

1. Create empty study file

At a minimum, an ASIF consists of the standard XML declaration, a study section, and study metadata.



Study name must be at least five characters long and must not contain periods (.) or spaces.

```
<AsifXml version="1.2.23" content="study"
xmlns:AsifXml="http://www.faa.gov/ASIF"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">

<study xmlns:asif="http://www.faa.gov/ASIF">
  <!-- User-defined study name -->
  <name>ASIF_example</name>

  <!-- Study type - Emissions, Dispersion, Noise and Emissions, or Noise and
Dispersion -->
  <studyType>Noise and Emissions</studyType>

  <!-- Indicate the units used in the study -->
  <emissionsUnits>Kilograms</emissionsUnits>

  <!-- User-defined study description -->
  <description>A sample study</description>

  <!-- Add airport layouts here -->
  <!-- Add receptors here -->
  <!-- Add scenarios here -->

</study>
</AsifXml>
```

2. Populate airport layouts section

AEDT requires all airports in the study area to be declared. The airport runway definitions are specified using the **runwaySet** element. If runways are not specified in ASIF, then the runway data from the Airport database will be used during the ASIF import.

In the example below, KMDW airport is defined using user-specified runways.

```
<airportLayoutSet>
  <airportLayout>
    <!-- User can specify an airport with user-defined runway -->
    <airportCode type="ICAO">KMDW</airportCode>

    <!-- Airports can have one or more runways defined -->
    <runwaySet>
      <runway>
        <!-- Runway length (in feet) -->
        <length>5932</length>

        <!-- Runway width (in feet) -->
        <width>150</width>

        <!-- One or more runway ends -->
        <runwayEnd>
          <!-- user-defined name for runway end -->
          <name>04R</name>

          <!-- latitude and longitude of runway end -->
          <latitude>41.779496</latitude>
          <longitude>-87.75876</longitude>

          <!-- elevation in feet -->
          <elevation>0.0</elevation>

          <!-- threshold crossing height (in feet) -->
          <threshCrossHeight>50.0</threshCrossHeight>

          <!-- glide slope for an approach to this runway end -->
          <glideSlope>3.0</glideSlope>

          <!-- displaced threshold for departure-->
          <depDispThresh>0.0</depDispThresh>

          <!-- displaced threshold for approach -->
          <appDispThresh>0.0</appDispThresh>

          <!-- Percent change in airport average headwind -->
          <percentWind>0.0</percentWind>
        </runwayEnd>
        <runwayEnd>
          <name>22L</name>
          <latitude>41.791167</latitude>
          <longitude>-87.743554</longitude>
          <elevation>0.0</elevation>
          <threshCrossHeight>50.0</threshCrossHeight>
          <glideSlope>3.0</glideSlope>
    </runwaySet>
  </airportLayout>
</airportLayoutSet>
```

```
<depDispThresh>0.0</depDispThresh>
<appDispThresh>0.0</appDispThresh>
<percentWind>0.0</percentWind>
</runwayEnd>
</runway>
</runwaySet>
</airportLayout>
</airportLayoutSet>
```

3. Create receptor set

If the study includes noise or dispersion analysis, then one or more receptor sets are required. Receptor sets define locations (grid or point) where noise/dispersion measurements are taken. The example below defines a grid type receptor set.

```
<receptorSet>
<!-- user-defined name -->
<name>gridfile_100x100</name>
<grid>
<!-- Latitude and longitude of southwest corner of grid -->
<latitude>41.97872</latitude>
<longitude>-87.90439</longitude>

<!-- Width and height of grid (in nautical miles) -->
<width>100.0</width>
<height>100.0</height>

<!-- Number of points across height and width of grid -->
<numWidth>100</numWidth>
<numHeight>100</numHeight>
</grid>
</receptorSet>
```

4. Create scenario and case hierarchy

Scenarios contain a set of cases (i.e. operation group) that are used to group aircraft tracks and operations.

The following example demonstrates a simple scenario and case structure. A case can contain one or more child cases.

```
<scenario>
<!-- user-defined scenario name and description -->
<name>Baseline_Scenario</name>

<!-- user-defined start time for scenario -->
<startTime>2009-11-10T15:02:00</startTime>

<!-- Duration of scenario (in hours) -->
<duration>24</duration>

<!-- Taxi model for scenario -->
<taxiModel>UserSpecified</taxiModel>

<!-- Aircraft performance model -->
<acftPerfModel>SAE1845</acftPerfModel>
```

```
<!-- Enable/disable bank angle calculations for aircraft performance
modeling -->
<bankAngle>true</bankAngle>

<!-- Sulfur related settings -->
<sulfurConversionRate>0.05</sulfurConversionRate>
<fuelSulfurContent>6.8E-4</fuelSulfurContent>

<!-- A description of the scenario -->
<description>Simple scenario</description>

<!-- List of airports to use for the scenario -->
<scenarioAirportLayoutSet>
  <scenarioAirportLayout>
    <airportLayoutName>KMDW</airportLayoutName>
  </scenarioAirportLayout>
</scenarioAirportLayoutSet>

<caseSet>
  <!-- One or more case elements -->
  <case>
    <!-- sequential case number unique in this scenario -->
    <caseId>0</caseId>

    <!-- user-defined case name -->
    <name>CaseA</name>

    <!-- Noise emissions source -->
    <source>Aircraft</source>

    <!-- Case start time and duration -->
    <startTime>2009-11-10T15:02:00</startTime>
    <duration>24</duration>

    <!-- Add trackOpSet elements here -->
  </case>
</caseSet>
</scenario>
```

5. Populate cases with tracks and air operations

The **trackOpSet** element defines a single track and any number of aircraft operations to be flown on that track. A track can be composed of one or more subtracks with dispersion values. An un-dispersed track has one subtrack with dispersion weight of 1. A dispersed track consists of multiple subtracks. The sum of the dispersion weights for all subtracks within a given track must equal 1. Operations defined for the track will be dispersed based on the dispersion weight amongst any subtracks that make up the track.

```
<trackOpSet>
  <!-- Single track element -->
  <track>
    <!-- user-defined track name -->
    <name>04R_Dep</name>
```

AEDT Supplemental Manual

AEDT Standard Input File

```
<!-- Track operation type: A = Arrival, D = Departure, O = Overflight
-->
<optype>D</optype>

<!-- Airport and runway for this track -->
<airport type="ICAO">KMDW</airport>
<runway>04R</runway>

<!-- tracks can be composed of multiple dispersed subtracks -->
<subtrack>

    <!-- the user-defined ID for the subtrack -->
    <id>0</id>

    <!-- The sum of the dispersionWeights for all subtracks within a
given track must equal 1 -->
    <dispersionWeight>1.0</dispersionWeight>

    <!-- Set of trackNode or trackVector elements, all must be the same
for each subtrack -->
    <trackNodes>
        <trackNode>
            <latitude>40.65640</latitude>
            <longitude>-73.71322</longitude>
        </trackNode>
        <trackNode>
            <latitude>40.65640</latitude>
            <longitude>-53.71322</longitude>
        </trackNode>
    </trackNodes>

    </subtrack>
</track>

<operations>
    <!--operation element represents one or more flights on a track-->
    <operation>
        <!-- user-defined operation id -->
        <id>T9.1</id>

        <!-- AEDT aircraftType for this operation -->
        <aircraftType>
            <airframeModel>Raytheon Beech 1900-C</airframeModel>
            <engineCode>PT67B</engineCode>
            <engineModCode>NONE </engineModCode>
        </aircraftType>

        <!-- number of times to fly this operation -->
        <numOperations>1.0</numOperations>

        <!-- user-defined flight number, optional -->
        <flightNumber>CKE545</flightNumber>

        <!-- user-defined operation type, optional -->
        <userType>MU3001</userType>
    </operation>
</operations>
```

```
<!-- user-defined parameter data, optional -->
<userParam>J</userParam>

<!-- arrival or departure airport and runway -->
<departureAirport type="ICAO">KMDW</departureAirport>
<departureRunway>04R</departureRunway>
<arrivalAirport type="FAA">LIT</arrivalAirport>

<!-- offTime for departures or onTime for arrivals -->
<offTime>2009-11-10T15:02:00</offTime>

<!-- aircraft profile for this operation -->
<saeProfile>STANDARD</saeProfile>
</operation>
</operations>
</trackOpSet>
```

6. Create annualization

Annualization is the process of performing a weighted summation¹ over the noise and emission results from some or all of the cases within a scenario in order to create results that represent noise and emissions exposures over a time period of interest. Each scenario element may contain an annualization element describing the weighted annualization tree.

```
<annualization>
  <!-- user-defined annualization name -->
  <name>Baseline_Annualization</name>

  <!-- Define one or more groups of cases and groups -->
  <annualizationGroup>

    <!-- Define rollup weight for this group -->
    <weight>1.0</weight>
    <!-- Associate scenario case with this annualization group -->
    <annualizationCase>
      <!-- Specify case name -->
      <name>CaseA</name>
      <!-- Define rollup weight for this case -->
      <weight>1.0</weight>
    </annualizationCase>

  </annualizationGroup>
</annualization>
```

7. Full ASIF

The full study ASIF is as follows:

¹ The word ‘summation’ is used figuratively and the actual process of correctly summing or adding together noise or emissions results depends upon the metric being used. For example: energy metric results would not be directly added together for a result since they are logarithmic values, but would rather be log-added.

AEDT Supplemental Manual

AEDT Standard Input File

```
<AsifXml version="1.2.23" content="study"
xmlns:AsifXml="http://www.faa.gov/ASIF"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">

<study xmlns:asif="http://www.faa.gov/ASIF">

    <!-- User-defined study name -->
    <name>ASIF_example</name>

    <!-- Study type - Emissions, Dispersion, Noise and Emissions, or Noise and
Dispersion -->
    <studyType>Noise and Emissions</studyType>

    <!-- Indicate the units used in the study -->
    <emissionsUnits>Kilograms</emissionsUnits>

    <!-- User-defined study description -->
    <description>A sample study</description>

    <airportLayoutSet>
        <airportLayout>
            <!-- User can specify an airport with user-defined runway -->
            <airportCode type="ICAO">KMDW</airportCode>

            <!-- Airports can have one or more runways defined -->
            <runwaySet>
                <runway>
                    <!-- Runway length (in feet) -->
                    <length>5932</length>

                    <!-- Runway width (in feet) -->
                    <width>150</width>

                    <!-- One or more runway ends -->
                    <runwayEnd>
                        <!-- user-defined name for runway end -->
                        <name>04R</name>

                        <!-- latitude and longitude of runway end -->
                        <latitude>41.779496</latitude>
                        <longitude>-87.75876</longitude>

                        <!-- elevation in feet -->
                        <elevation>0.0</elevation>

                        <!-- threshold crossing height (in feet) -->
                        <threshCrossHeight>50.0</threshCrossHeight>

                        <!-- glide slope for an approach to this runway end -->
                        <glideSlope>3.0</glideSlope>

                        <!-- displaced threshold for departure-->
                        <depDispThresh>0.0</depDispThresh>

                        <!-- displaced threshold for approach -->
                        <appDispThresh>0.0</appDispThresh>
                
```

AEDT Supplemental Manual

AEDT Standard Input File

```
<!-- Percent change in airport average headwind -->
<percentWind>0.0</percentWind>
</runwayEnd>
</runwayEnd>
<name>22L</name>
<latitude>41.791167</latitude>
<longitude>-87.743554</longitude>
<elevation>0.0</elevation>
<threshCrossHeight>50.0</threshCrossHeight>
<glideSlope>3.0</glideSlope>
<depDispThresh>0.0</depDispThresh>
<appDispThresh>0.0</appDispThresh>
<percentWind>0.0</percentWind>
</runwayEnd>
</runway>
</runwaySet>
</airportLayout>
</airportLayoutSet>

<receptorSet>
<!-- user-defined name -->
<name>gridfile_100x100</name>
<grid>
<!-- Latitude and longitude of southwest corner of grid -->
<latitude>41.97872</latitude>
<longitude>-87.90439</longitude>

<!-- Width and height of grid (in nautical miles) -->
<width>100.0</width>
<height>100.0</height>

<!-- Number of points across height and width of grid -->
<numWidth>100</numWidth>
<numHeight>100</numHeight>
</grid>
</receptorSet>

<scenario>
<!-- user-defined scenario name and description -->
<name>Baseline_Scenario</name>

<!-- user-defined start time for scenario -->
<startTime>2009-11-10T15:02:00</startTime>

<!-- Duration of scenario (in hours) -->
<duration>24</duration>

<!-- Taxi model for scenario -->
<taxiModel>UserSpecified</taxiModel>

<!-- Aircraft performance model -->
<acftPerfModel>SAE1845</acftPerfModel>

<!-- Enable/disable bank angle calculations for aircraft performance
modeling -->
```

AEDT Supplemental Manual

AEDT Standard Input File

```
<bankAngle>true</bankAngle>

<!-- Sulfur related settings -->
<sulfurConversionRate>0.05</sulfurConversionRate>
<fuelSulfurContent>6.8E-4</fuelSulfurContent>

<!-- A description of the scenario -->
<description>A sample scenario</description>

<!-- List of airports to use for the scenario -->
<scenarioAirportLayoutSet>
  <scenarioAirportLayout>
    <airportLayoutName>KMDW</airportLayoutName>
  </scenarioAirportLayout>
</scenarioAirportLayoutSet>

<caseSet>
  <!-- One or more case elements -->
  <case>
    <!-- sequential case number unique in this scenario -->
    <caseId>0</caseId>

    <!-- user-defined case name -->
    <name>CaseA</name>

    <!-- Noise emissions source -->
    <source>Aircraft</source>

    <!-- Case start time and duration -->
    <startTime>2009-11-10T15:02:00</startTime>
    <duration>24</duration>

    <trackOpSet>
      <!-- Single track element -->
      <track>
        <!-- user-defined track name -->
        <name>04R_Dep</name>
        <!-- Track operation type: A = Arrival, D = Departure, O = Overflight
-->
        <optype>D</optype>

        <!-- Airport and runway for this track -->
        <airport type="ICAO">KMDW</airport>
        <runway>04R</runway>

        <!-- tracks can be composed of multiple dispersed subtracks -->
        <subtrack>

          <!-- the user-defined ID for the subtrack -->
          <id>0</id>

          <!-- The sum of the dispersionWeights for all subtracks within a
given track must equal 1 -->
          <dispersionWeight>1.0</dispersionWeight>
        </subtrack>
      </track>
    </trackOpSet>
  </case>
</caseSet>
```

AEDT Supplemental Manual

AEDT Standard Input File

```
<!-- Set of trackNode or trackVector elements, all must be the same
for each subtrack -->
<trackNodes>
    <trackNode>
        <latitude>40.65640</latitude>
        <longitude>-73.71322</longitude>
    </trackNode>
    <trackNode>
        <latitude>40.65640</latitude>
        <longitude>-53.71322</longitude>
    </trackNode>
</trackNodes>

</subtrack>
</track>

<operations>
    <!--operation element represents one or more flights on a track-->
    <operation>
        <!-- user-defined operation id -->
        <id>T9.1</id>

        <!-- AEDT aircraftType for this operation -->
        <aircraftType>
            <airframeModel>Raytheon Beech 1900-C</airframeModel>
            <engineCode>PT67B</engineCode>
            <engineModCode>NONE </engineModCode>
        </aircraftType>

        <!-- number of times to fly this operation -->
        <numOperations>1.0</numOperations>

        <!-- user-defined flight number, optional -->
        <flightNumber>CKE545</flightNumber>

        <!-- user-defined operation type, optional -->
        <userType>MU3001</userType>

        <!-- user-defined parameter data, optional -->
        <userParam>J</userParam>

        <!-- arrival or departure airport and runway -->
        <departureAirport type="ICAO">KMDW</departureAirport>
        <departureRunway>04R</departureRunway>
        <arrivalAirport type="FAA">LIT</arrivalAirport>

        <!-- offTime for departures or onTime for arrivals -->
        <offTime>2009-11-10T15:02:00</offTime>

        <!-- aircraft profile for this operation -->
        <saeProfile>STANDARD</saeProfile>
    </operation>
</operations>
</trackOpSet>

</case>
```

```
</caseSet>

<annualization>
    <!-- user-defined annualization name -->
    <name>Baseline_Annualization</name>

    <!-- Define one or more groups of cases and groups -->
    <annualizationGroup>

        <!-- Define rollup weight for this group -->
        <weight>1.0</weight>
        <!-- Associate scenario case with this annualization group -->
        <annualizationCase>
            <!-- Specify case name -->
            <name>CaseA</name>
            <!-- Define rollup weight for this case -->
            <weight>1.0</weight>
        </annualizationCase>

    </annualizationGroup>
</annualization>

</scenario>
</study>
</AsifXml>
```

3.2 Create an Emissions Dispersion Study

An emissions dispersion study contains the same core elements as a simple study (Section 3.1). In addition, a typical dispersion study includes additional airport features (gates, taxiways, taxipaths), operational profiles, airport configuration, and stationary sources.

1. Create an empty study file.
2. Populate the airport layout section.
 - a. Basic airport information (airport code and location)
 - b. Stationary sources
 - c. Airport gates/terminals
 - d. Taxiways
 - e. Runways
 - f. Taxipaths
 - g. Tracks
 - h. Airport configurations
3. Create receptor set.
4. Create scenario and case hierarchy.
 - a. Airport scenario properties
 - b. Non-aircraft operations case
 - c. Aircraft operations case

The following sections provide examples of the steps. This ASIF example should be used as an aid for understanding the ASIF format, and not as a data reference. This example is based on the STUDY_PVD study included with AEDT installation; but it has been much simplified for illustrative purposes. Please

note that both the aircraft operations and the non-aircraft operations in this study are defined using operational profiles. When running profile-based aircraft operations, the “Apply Delay & Sequencing Model on Taxi” modeling option must be selected, and operating configuration and taxi network must exist in the airport layout.

1. Create empty study file

At a minimum, an ASIF consists of the standard XML declaration, a study section, and study metadata.



Study name must be at least five characters long and must not contain periods (.) or spaces.

```
<?xml version="1.0" encoding="utf-8"?>
<AsifXml xmlns:xsd="http://www.w3.org/2001/XMLSchema"
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" version="1.2.23" content="study">
  <study>
    <name>PVD2004_small</name>
    <studyType>Dispersion</studyType>
    <emissionsUnits>Kilograms</emissionsUnits>
    <description>A sample emissions study</description>

    <!-- Add airport layouts here -->
    <!-- Add receptors here -->
    <!-- Add scenarios here -->

  </study>
</AsifXml>
```

2. Populate airport layouts section

AEDT requires all airports in the study area to be declared. In addition to runways and tracks, the airport layout section can contain buildings, stationary sources of emissions (such as generators, training fires, or boilers), gates, terminals, taxiways, taxipaths, airport configurations, and operational profiles.

a) Define airport layout

Define the basic airport layout properties including layout name, airport code, and location.

```
<airportLayoutSet>
  <airportLayout>
    <name>Baseline_PVD2004_layout</name>
    <airportCode type="ICAO">KPVD</airportCode>
    <startDate>2004-01-01</startDate>
    <elevation>55</elevation>      <!-- in feet -->
    <taxiInTime>7</taxiInTime>    <!-- in minutes -->
    <taxiOutTime>19</taxiOutTime> <!-- in minutes -->
    <latitude>41.723999</latitude>
    <longitude>-71.428221</longitude>
```

b) Define stationary sources

Define each stationary source with an individual location definition, as well as other properties that describe the nature or amount of emissions. Each stationary source may have different elements associated with it. The example below defines an emergency generator.

```
<stationarySourceSet>
  <stationarySource>
```

```
<name>600kw Emergency Gen-Baseline-KPVD-2004</name>
<pointStationarySource>
  <pointCoord>
    <latitude>41.743248909695488</latitude>
    <longitude>-71.412168090784959</longitude>
  </pointCoord>
  <baseElevation>16.764</baseElevation>      <!-- in meters -->
  <releaseHeight>12.192</releaseHeight>      <!-- in meters -->
  <gasVelocity>15</gasVelocity>            <!-- in meters/sec -->
  <stackDiameter>0.100584</stackDiameter> <!-- in meters -->
  <temperature>400</temperature>          <!-- in Fahrenheit -->
</pointStationarySource>
<categoryGenerator>
  <typeCode>2</typeCode>
  <powerRatingHorsepower>1340</powerRatingHorsepower>
  <CO_EF>3.03</CO_EF>
  <TOC_EF>1.14</TOC_EF>
  <NOx_EF>14</NOx_EF>
  <SOx_EF>0.93</SOx_EF>
  <PM10_EF>0.998</PM10_EF>
  <pollutionControlFactorTOC>0</pollutionControlFactorTOC>
  <pollutionControlFactorCO>0</pollutionControlFactorCO>
  <pollutionControlFactorNOx>0</pollutionControlFactorNOx>
  <pollutionControlFactorSOx>0</pollutionControlFactorSOx>
  <pollutionControlFactorPM10>0</pollutionControlFactorPM10>
  <pm25ToPm10Ratio>1</pm25ToPm10Ratio>
</categoryGenerator>
</stationarySource>
</stationarySourceSet>
```

c) Define airport gates/terminals

Airport gates can be defined as a point or a polygon. In AEDT, a polygon gate is referred as a terminal. For dispersion modeling, gates are modeled in AERMOD as either volume or area sources. A single-point gate (a pair of X/Y coordinates) is modeled as a volume source; while a polygon gate is modeled as an area source.

This example declares a terminal (polygon with eight points) which is defined by a set of latitude and longitude coordinates.

```
<gateSet>
  <gate>
    <name>AC</name>
    <elevation>16.76</elevation>      <!-- in meters -->
    <releaseHeight>1.499616</releaseHeight> <!-- in meters -->
    <sigmaY>0.1</sigmaY>
    <sigmaZ>0.1</sigmaZ>
    <polygonCoords>
      <vertex>
        <latitude>41.745139410943032</latitude>
        <longitude>-71.410155909148983</longitude>
      </vertex>
      <vertex>
        <latitude>41.74454094786433</latitude>
        <longitude>-71.4088479272253</longitude>
      </vertex>
    </polygonCoords>
  </gate>
</gateSet>
```

```
<vertex>
  <latitude>41.739914698711225</latitude>
  <longitude>-71.412700204036113</longitude>
</vertex>
<vertex>
  <latitude>41.740535077085347</latitude>
  <longitude>-71.414048427664284</longitude>
</vertex>
<vertex>
  <latitude>41.742143089180551</latitude>
  <longitude>-71.4130440975597</longitude>
</vertex>
<vertex>
  <latitude>41.741863092089559</latitude>
  <longitude>-71.412435917483549</longitude>
</vertex>
<vertex>
  <latitude>41.743155491944563</latitude>
  <longitude>-71.411380309779929</longitude>
</vertex>
<vertex>
  <latitude>41.74350128931475</latitude>
  <longitude>-71.411515795803126</longitude>
</vertex>
</polygonCoords>
</gate>
</gateSet>
```

d) Define taxiways

Taxiways are line segments that link gates, runways, and other taxiways. They are composed of sequences of latitude and longitude coordinates, and specify the speed of aircraft that use them at each node.

Only the first two taxiways out of 24 are shown here for brevity. The entire taxiways are included in the example file.

```
<taxiwaySet>
  <taxiway>
    <name>A2 to 3</name>
    <dispersionWidth>22.86</dispersionWidth> <!-- in meters -->
    <taxiNodeSet>
      <taxiNode>
        <latitude>41.747442309926434</latitude>
        <longitude>-71.399033659570691</longitude>
        <elevation>16.76</elevation> <!-- in meters -->
        <speed>17</speed> <!-- in mph -->
      </taxiNode>
      <taxiNode>
        <latitude>41.746840990624833</latitude>
        <longitude>-71.397780701750833</longitude>
        <elevation>16.76</elevation>
        <speed>17</speed>
      </taxiNode>
    </taxiNodeSet>
  </taxiway>
</taxiwaySet>
```

```
<taxiway>
  <name>AC inout 1 to 2</name>
  <dispersionWidth>22.86</dispersionWidth>
  <taxiNodeSet>
    <taxiNode>
      <latitude>41.742510604805076</latitude>
      <longitude>-71.411486739128023</longitude>
      <elevation>16.76</elevation>
      <speed>17</speed>
    </taxiNode>
    <taxiNode>
      <latitude>41.742008226242724</latitude>
      <longitude>-71.410307016216962</longitude>
      <elevation>16.76</elevation>
      <speed>17</speed>
    </taxiNode>
  </taxiNodeSet>
</taxiway>

.....
</taxiwaySet>
```

e) Define runways

A runway in AEDT is defined by two runway ends. Runways are used by departing and arriving aircraft, and are linked to gates by taxipaths. The example below defines two runways: 05-23 and 16-34.

```
<runwaySet>
  <runway>
    <length>7069</length> <!-- in feet -->
    <width>150</width> <!-- in feet -->
    <runwayEnd>
      <name>05</name>
      <latitude>41.73040290796537</latitude>
      <longitude>-71.411541169743472</longitude>
      <elevation>54.986876640419943</elevation> <!-- in feet -->
      <glideSlope>3</glideSlope>
    </runwayEnd>
    <runwayEnd>
      <name>23</name>
      <latitude>41.746840990624833</latitude>
      <longitude>-71.397780701750833</longitude>
      <elevation>54.986876640419943</elevation>
      <glideSlope>3</glideSlope>
    </runwayEnd>
  </runway>

  <runway>
    <length>5961</length>
    <width>150</width>
    <runwayEnd>
      <name>16</name>
      <latitude>41.748017908874452</latitude>
      <longitude>-71.4087003031238</longitude>
```

```
<elevation>54.986876640419943</elevation>
<glideSlope>3</glideSlope>
</runwayEnd>
<runwayEnd>
<name>34</name>
<latitude>41.735182619491127</latitude>
<longitude>-71.395155630736014</longitude>
<elevation>54.986876640419943</elevation>
<glideSlope>3</glideSlope>
</runwayEnd>
</runway>
</runwaySet>
```

f) Assemble taxipaths

Taxipaths are a series of taxiways that aircraft takes from a gate to a runway end (outbound) or from a runway end to a gate (inbound). Taxipaths can be composed of multiple taxiway line segments; and separate taxipaths may share taxiways in common as paths across the airport.

Only the first two taxipaths out of eight are shown here for brevity. The entire taxipaths are included in the example file.

```
<taxipathSet>
<taxipath>
<gateName>AC</gateName>
<runwayName>05</runwayName>
<direction>Outbound</direction>
<taxiwayName>AC inout 1 to 2</taxiwayName>
<taxiwayName>T3 to 4</taxiwayName>
<taxiwayName>T4 to 5</taxiwayName>
<taxiwayName>T5 to 6</taxiwayName>
<taxiwayName>E1 to 2</taxiwayName>
<taxiwayName>S2 to 3</taxiwayName>
<taxiwayName>S3 to 4</taxiwayName>
</taxipath>

<taxipath>
<gateName>AC</gateName>
<runwayName>05</runwayName>
<direction>Inbound</direction>
<taxiwayName>N5 to 6</taxiwayName>
<taxiwayName>N4 to 5</taxiwayName>
<taxiwayName>N3 to 4</taxiwayName>
<taxiwayName>N2 to 3</taxiwayName>
<taxiwayName>T1 to 2</taxiwayName>
<taxiwayName>T2 to 3</taxiwayName>
<taxiwayName>AC inout 1 to 2</taxiwayName>
</taxipath>

.....
</taxipathSet>
```

g) Define tracks

Tracks are paths flown by aircraft, and are defined for an aircraft type (fixed-wing or rotary-wing) and an operation type (arrival, departure, or touch & go). This sample ASIF contains a total of 12 tracks consisting of arrival, departure, and touch & go tracks for each of the four runway ends. Only the first three tracks are shown here for brevity.

```
<trackSet>
  <track>
    <name>05_D_FixedWing</name>
    <optype>D</optype>
    <wingtype>F</wingtype>
    <airport type="ICAO">KPVD</airport>
    <runway>05</runway>
    <subtrack>
      <id>0</id>
      <dispersionWeight>1</dispersionWeight>
      <trackNodes>
        <trackNode>
          <latitude>41.73040290796537</latitude>
          <longitude>-71.411541169743472</longitude>
        </trackNode>
        <trackNode>
          <latitude>41.746840990624833</latitude>
          <longitude>-71.397780701750833</longitude>
        </trackNode>
        <trackNode>
          <latitude>43.137117876102565</latitude>
          <longitude>-70.202867639935235</longitude>
        </trackNode>
      </trackNodes>
    </subtrack>
  </track>

  <track>
    <name>23_D_FixedWing</name>
    <optype>D</optype>
    <wingtype>F</wingtype>
    <airport type="ICAO">KPVD</airport>
    <runway>23</runway>
    <subtrack>
      <id>0</id>
      <dispersionWeight>1</dispersionWeight>
      <trackNodes>
        <trackNode>
          <latitude>41.746840990624833</latitude>
          <longitude>-71.397780701750833</longitude>
        </trackNode>
        <trackNode>
          <latitude>41.73040290796537</latitude>
          <longitude>-71.411541169743472</longitude>
        </trackNode>
        <trackNode>
          <latitude>40.32809642691705</latitude>
          <longitude>-72.555207007763542</longitude>
        </trackNode>
      </trackNodes>
    </subtrack>
  </track>
```

```
</subtrack>
</track>

<track>
  <name>05_A_FixedWing</name>
  <optype>A</optype>
  <wingtype>F</wingtype>
  <airport type="ICAO">KPVD</airport>
  <runway>05</runway>
  <subtrack>
    <id>0</id>
    <dispersionWeight>1</dispersionWeight>
    <trackNodes>
      <trackNode>
        <latitude>40.32809642691705</latitude>
        <longitude>-72.555207007763542</longitude>
      </trackNode>
      <trackNode>
        <latitude>41.73040290796537</latitude>
        <longitude>-71.411541169743472</longitude>
      </trackNode>
    </trackNodes>
  </subtrack>
</track>
```

h) Define airport operating configurations

Airport operating configurations specify the weather conditions and times under which particular runway assignments are made for aircraft based on the aircraft weight category (Small, Large, or Heavy). Operating configurations are only used if the Delay and Sequencing Modeling is selected.

A single configuration is defined in this example, but multiple configurations could be defined in an airport layout. Please note that the following `<airportConfig>` section does not contain any activation parameters (such as wind direction, wind speed, hour of day, ceiling, visibility, and temperature). This means that all the activation parameters are set to no bound.

```
<airportConfigSet>
  <airportConfig>
    <configurationName>Configuration</configurationName>
    <useDistribution>false</useDistribution>
    <airportCapacity>
      <capacityPoint>
        <arrivalsPerHour>27</arrivalsPerHour>
        <departuresPerHour>52</departuresPerHour>
      </capacityPoint>
      <capacityPoint>
        <arrivalsPerHour>52</arrivalsPerHour>
        <departuresPerHour>27</departuresPerHour>
      </capacityPoint>
    </airportCapacity>

    <runwayAssignmentSet>
      <runwayAssignment>
        <aircraftSize>S</aircraftSize>
        <runway>16</runway>
        <arrivalPercentage>0.8</arrivalPercentage>
      </runwayAssignment>
    </runwayAssignmentSet>
  </airportConfig>
</airportConfigSet>
```

AEDT Supplemental Manual

AEDT Standard Input File

```
<departurePercentage>1.32</departurePercentage>
<tgoPercentage>0</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
<aircraftSize>S</aircraftSize>
<runway>23</runway>
<arrivalPercentage>50.74</arrivalPercentage>
<departurePercentage>52.33</departurePercentage>
<tgoPercentage>50</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
<aircraftSize>S</aircraftSize>
<runway>34</runway>
<arrivalPercentage>13.04</arrivalPercentage>
<departurePercentage>8.06</departurePercentage>
<tgoPercentage>15</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
<aircraftSize>S</aircraftSize>
<runway>05</runway>
<arrivalPercentage>35.42</arrivalPercentage>
<departurePercentage>38.29</departurePercentage>
<tgoPercentage>35</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
<aircraftSize>L</aircraftSize>
<runway>16</runway>
<arrivalPercentage>0.8</arrivalPercentage>
<departurePercentage>1.32</departurePercentage>
<tgoPercentage>0</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
<aircraftSize>L</aircraftSize>
<runway>23</runway>
<arrivalPercentage>50.74</arrivalPercentage>
<departurePercentage>52.33</departurePercentage>
<tgoPercentage>50</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
<aircraftSize>L</aircraftSize>
<runway>34</runway>
<arrivalPercentage>13.04</arrivalPercentage>
<departurePercentage>8.06</departurePercentage>
<tgoPercentage>15</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
<aircraftSize>L</aircraftSize>
<runway>05</runway>
<arrivalPercentage>35.42</arrivalPercentage>
<departurePercentage>38.29</departurePercentage>
<tgoPercentage>35</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
<aircraftSize>H</aircraftSize>
<runway>16</runway>
<arrivalPercentage>0.8</arrivalPercentage>
<departurePercentage>1.32</departurePercentage>
```

```
<tgoPercentage>0</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
  <aircraftSize>H</aircraftSize>
  <runway>23</runway>
  <arrivalPercentage>50.74</arrivalPercentage>
  <departurePercentage>52.33</departurePercentage>
  <tgoPercentage>50</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
  <aircraftSize>H</aircraftSize>
  <runway>34</runway>
  <arrivalPercentage>13.04</arrivalPercentage>
  <departurePercentage>8.06</departurePercentage>
  <tgoPercentage>15</tgoPercentage>
</runwayAssignment>
<runwayAssignment>
  <aircraftSize>H</aircraftSize>
  <runway>05</runway>
  <arrivalPercentage>35.42</arrivalPercentage>
  <departurePercentage>38.29</departurePercentage>
  <tgoPercentage>35</tgoPercentage>
</runwayAssignment>
</runwayAssignmentSet>
</airportConfig>
</airportConfigSet>
```

i) Define operational profiles

Operational profiles allows the user to define variations in activity throughout a day, week, or year. The three types of operational profiles are Quarter-Hourly, Daily, and Monthly. When using operational profiles in a study, at least one profile for each profile type (Quarter Hourly, Daily, and Monthly) must defined.

These profiles provide a weighting factor that determines how often activity occurs during the time period. Aircraft and non-aircraft sources can all be assigned operational profiles. For this example, the same profiles are used for all both aircraft and non-aircraft sources; but in practice different profiles will be defined for aircraft, GSEs, or stationary sources.

Only the first part of the quarterly-hour profile is shown here for brevity. The entire profile is given in the example file.

```
<quarterHourlyProfileSet>
  <quarterHourlyProfile>
    <profileName>Aircraft-Baseline-KPVD</profileName>
    <temporalFactor startHour="0" startMinutes="0">0.1092</temporalFactor>
    <temporalFactor startHour="0" startMinutes="15">0.0712</temporalFactor>
    <temporalFactor startHour="0" startMinutes="30">0.0452</temporalFactor>
    <temporalFactor startHour="0" startMinutes="45">0.0274</temporalFactor>
    <temporalFactor startHour="1" startMinutes="0">0.0226</temporalFactor>
    <temporalFactor startHour="1" startMinutes="15">0.0144</temporalFactor>
    <temporalFactor startHour="1" startMinutes="30">0.0135</temporalFactor>
    <temporalFactor startHour="1" startMinutes="45">0.0087</temporalFactor>
  ....
```

AEDT Supplemental Manual

AEDT Standard Input File

```
</quarterHourlyProfile>
</quarterHourlyProfileSet>

<dailyProfileSet>
  <dailyProfile>
    <profileName>Aircraft-Baseline-KPVD</profileName>
    <temporalFactorSunday>0.8889</temporalFactorSunday>
    <temporalFactorMonday>0.9354</temporalFactorMonday>
    <temporalFactorTuesday>0.9565</temporalFactorTuesday>
    <temporalFactorWednesday>0.9494</temporalFactorWednesday>
    <temporalFactorThursday>1</temporalFactorThursday>
    <temporalFactorFriday>0.9494</temporalFactorFriday>
    <temporalFactorSaturday>0.8103</temporalFactorSaturday>
  </dailyProfile>
</dailyProfileSet>

<monthlyProfileSet>
  <monthlyProfile>
    <profileName>Aircraft-Baseline-KPVD</profileName>
    <temporalFactorJanuary>0.6097</temporalFactorJanuary>
    <temporalFactorFebruary>0.768</temporalFactorFebruary>
    <temporalFactorMarch>0.7468</temporalFactorMarch>
    <temporalFactorApril>0.6508</temporalFactorApril>
    <temporalFactorMay>0.7803</temporalFactorMay>
    <temporalFactorJune>0.9452</temporalFactorJune>
    <temporalFactorJuly>0.9967</temporalFactorJuly>
    <temporalFactorAugust>1</temporalFactorAugust>
    <temporalFactorSeptember>0.963</temporalFactorSeptember>
    <temporalFactorOctober>0.9657</temporalFactorOctober>
    <temporalFactorNovember>0.8889</temporalFactorNovember>
    <temporalFactorDecember>0.8374</temporalFactorDecember>
  </monthlyProfile>
</monthlyProfileSet>

<activityProfileSet>
  <activityProfile name="ActivityProfile-Baseline-KPVD-0-0-0">
    <quarterHourlyProfile>Aircraft-Baseline-KPVD</quarterHourlyProfile>
    <dailyProfile>Aircraft-Baseline-KPVD</dailyProfile>
    <monthlyProfile>Aircraft-Baseline-KPVD</monthlyProfile>
  </activityProfile>
</activityProfileSet>
```

3. Define receptor set

The receptor set defines a set of points or a grid in which noise or emission concentrations will be modeled. A receptor set is required for dispersion modeling.

```
<receptorSet>
  <name>CartesianReceptors-Baseline-KPVD</name>
  <pointReceptor>
    <name>01</name>
    <latitude>41.755692229957511</latitude>
    <longitude>-71.401734634031868</longitude>
    <elevation>54.986876640419943</elevation>      <!-- in feet -->
  </pointReceptor>

  <pointReceptor>
    <name>05</name>
    <latitude>41.757757081502177</latitude>
    <longitude>-71.387029661597552</longitude>
    <elevation>54.986876640419943</elevation>
  </pointReceptor>

  <pointReceptor>
    <name>11</name>
    <latitude>41.729547105591479</latitude>
    <longitude>-71.399671869272</longitude>
    <elevation>54.986876640419943</elevation>
  </pointReceptor>

  <pointReceptor>
    <name>17</name>
    <latitude>41.727308139168834</latitude>
    <longitude>-71.418091960358765</longitude>
    <elevation>54.986876640419943</elevation>
  </pointReceptor>
</receptorSet>
```

4. Define scenario and case hierarchy

A scenario contains a set of cases, which contain groups of aircraft operations, non-aircraft operations, and runup operations.

a) Define scenario properties

Define the basic scenario properties including airport information, weather data, and study time.

```
<scenario>
  <name>2004-Baseline</name>
  <startTime>2004-01-01T00:00:00</startTime>
  <duration>8784</duration> <!-- in hours -->
  <taxiModel>Sequencing</taxiModel>
  <timeInModeBasis>Performance</timeInModeBasis>
  <acftPerfModel>SAE1845</acftPerfModel>
  <bankAngle>false</bankAngle>
  <sulfurConversionRate>0.005</sulfurConversionRate>
  <description> for year 2004</description>
  <scenarioAirportLayoutSet>
    <scenarioAirportLayout>
      <airportLayoutName>Baseline_PVD2004_layout</airportLayoutName>
```

```
<mixingHeight>2226</mixingHeight> <!-- in feet -->
</scenarioAirportLayout>
</scenarioAirportLayoutSet>
```

b) Define the case for non-aircraft operations

This study contains two cases. The first case contains non-aircraft operations (i.e., stationary source operations). The second case contains aircraft operations and GSEs assigned to those aircraft.

The example below declares the first case (non-aircraft operations). The second case (aircraft operations) is described in the next Step 4c.

```
<caseSet>
  <case>
    <caseId>-1623425151</caseId>
    <name>2004_Baseline_NonAircraft</name>
    <startTime>2004-01-01T00:00:00</startTime>
    <duration>8784</duration>
    <stationarySourceOperationSet>
      <stationarySourceOperation>
        <refName>600kw Emergency Gen-Baseline-KPVD-2004</refName>
        <emissionsUsage>
          <yearlyValue>500</yearlyValue>
          <activityProfile>ActivityProfile-Baseline-KPVD-0-0-0</activityProfile>
        </emissionsUsage>
      </stationarySourceOperation>
    </stationarySourceOperationSet>
  </case>
</caseSet>
```

c) Define the case for aircraft operations

This section defines aircraft operations, as well as GSEs assigned to those aircraft. In this example, a single aircraft type is used with a simplified set of assigned GSEs. In practice, a variety of aircraft types and GSEs would appear in a single study.

```
<case>
  <caseId>466140608</caseId>
  <name>2004_Baseline_Operations</name>
  <startTime>2004-01-01T00:00:00</startTime>
  <duration>8784</duration>
  <operation>
    <id>D_1</id>
    <aircraftType>
      <airframeModel>Airbus A319-100 Series</airframeModel>
      <engineCode>3CM028</engineCode>
      <apuName>APU GTCP 36-300 (80HP)</apuName>
    <groundSupportEquipmentLTOOperationSet>
      <groundSupportEquipmentLTOOperation>
        <gseID>8</gseID>
        <fuelType>Diesel</fuelType>
        <horsepower>88</horsepower>
        <loadFactor>0.8</loadFactor>
        <departureOpTime>3.9</departureOpTime> <!-- in minutes -->
      </groundSupportEquipmentLTOOperation>
      <groundSupportEquipmentLTOOperation>
        <gseID>13</gseID>
        <fuelType>Gasoline</fuelType>
      </groundSupportEquipmentLTOOperation>
    </groundSupportEquipmentLTOOperationSet>
  </operation>
</case>
```

AEDT Supplemental Manual

AEDT Standard Input File

```
<horsepower>107</horsepower>
<loadFactor>0.55</loadFactor>
<departureOpTime>8</departureOpTime>
<arrivalOpTime>8</arrivalOpTime>
</groundSupportEquipmentLTOOperation>
<groundSupportEquipmentLTOOperation>
  <gseID>14</gseID>
  <fuelType>Gasoline</fuelType>
  <horsepower>107</horsepower>
  <loadFactor>0.5</loadFactor>
  <departureOpTime>11</departureOpTime>
  <arrivalOpTime>12</arrivalOpTime>
</groundSupportEquipmentLTOOperation>
<groundSupportEquipmentLTOOperation>
  <gseID>17</gseID>
  <fuelType>Diesel</fuelType>
  <horsepower>210</horsepower>
  <loadFactor>0.53</loadFactor>
  <departureOpTime>9.7</departureOpTime>
</groundSupportEquipmentLTOOperation>
<groundSupportEquipmentLTOOperation>
  <gseID>29</gseID>
  <fuelType>Diesel</fuelType>
  <horsepower>175</horsepower>
  <loadFactor>0.25</loadFactor>
  <departureOpTime>14</departureOpTime>
</groundSupportEquipmentLTOOperation>
<groundSupportEquipmentLTOOperation>
  <gseID>36</gseID>
  <fuelType>Diesel</fuelType>
  <horsepower>56</horsepower>
  <loadFactor>0.25</loadFactor>
  <arrivalOpTime>2.1</arrivalOpTime>
</groundSupportEquipmentLTOOperation>
<groundSupportEquipmentLTOOperation>
  <gseID>41</gseID>
  <fuelType>Diesel</fuelType>
  <horsepower>235</horsepower>
  <loadFactor>0.2</loadFactor>
  <departureOpTime>8</departureOpTime>
  <arrivalOpTime>7</arrivalOpTime>
</groundSupportEquipmentLTOOperation>
</groundSupportEquipmentLTOOperationSet>
</aircraftType>
<numOperations>366</numOperations>
<opType>D</opType>
<departureAirport type="ICAO">KPVD</departureAirport>
<departureGate>AC</departureGate>
<departureApuTime>3.5</departureApuTime> <!-- in minutes -->
<taxiOutDuration>10.72</taxiOutDuration> <!-- in minutes -->
<taxiInDuration>6.24</taxiInDuration> <!-- in minutes -->
<activityProfile>ActivityProfile-Baseline-KPVD-0-0-0</activityProfile>
<actypeWeight>146100</actypeWeight> <!-- in pounds -->
<fuelSulfurContent>0.00068</fuelSulfurContent>
</operation>

<operation>
```

AEDT Supplemental Manual

AEDT Standard Input File

```
<id>A_1</id>
<aircraftType>
    <airframeModel>Airbus A319-100 Series</airframeModel>
    <engineCode>3CM028</engineCode>
    <apuName>APU GTCP 36-300 (80HP)</apuName>
    <groundSupportEquipmentLTOOperationSet>
        <groundSupportEquipmentLTOOperation>
            <gseID>8</gseID>
            <fuelType>Diesel</fuelType>
            <horsepower>88</horsepower>
            <loadFactor>0.8</loadFactor>
            <departureOpTime>3.9</departureOpTime>
        </groundSupportEquipmentLTOOperation>
        <groundSupportEquipmentLTOOperation>
            <gseID>13</gseID>
            <fuelType>Gasoline</fuelType>
            <horsepower>107</horsepower>
            <loadFactor>0.55</loadFactor>
            <departureOpTime>8</departureOpTime>
            <arrivalOpTime>8</arrivalOpTime>
        </groundSupportEquipmentLTOOperation>
        <groundSupportEquipmentLTOOperation>
            <gseID>14</gseID>
            <fuelType>Gasoline</fuelType>
            <horsepower>107</horsepower>
            <loadFactor>0.5</loadFactor>
            <departureOpTime>11</departureOpTime>
            <arrivalOpTime>12</arrivalOpTime>
        </groundSupportEquipmentLTOOperation>
        <groundSupportEquipmentLTOOperation>
            <gseID>17</gseID>
            <fuelType>Diesel</fuelType>
            <horsepower>210</horsepower>
            <loadFactor>0.53</loadFactor>
            <departureOpTime>9.7</departureOpTime>
        </groundSupportEquipmentLTOOperation>
        <groundSupportEquipmentLTOOperation>
            <gseID>29</gseID>
            <fuelType>Diesel</fuelType>
            <horsepower>175</horsepower>
            <loadFactor>0.25</loadFactor>
            <departureOpTime>14</departureOpTime>
        </groundSupportEquipmentLTOOperation>
        <groundSupportEquipmentLTOOperation>
            <gseID>36</gseID>
            <fuelType>Diesel</fuelType>
            <horsepower>56</horsepower>
            <loadFactor>0.25</loadFactor>
            <arrivalOpTime>2.1</arrivalOpTime>
        </groundSupportEquipmentLTOOperation>
        <groundSupportEquipmentLTOOperation>
            <gseID>41</gseID>
            <fuelType>Diesel</fuelType>
            <horsepower>235</horsepower>
            <loadFactor>0.2</loadFactor>
            <departureOpTime>8</departureOpTime>
            <arrivalOpTime>7</arrivalOpTime>
        </groundSupportEquipmentLTOOperation>
    </groundSupportEquipmentLTOOperationSet>
</aircraftType>
```

```
</groundSupportEquipmentLTOOperation>
</groundSupportEquipmentLTOOperationSet>
</aircraftType>
<numOperations>366</numOperations>
<opType>A</opType>
<arrivalAirport type="ICAO">KPVD</arrivalAirport>
<arrivalGate>AC</arrivalGate>
<arrivalApuTime>3.5</arrivalApuTime>
<taxiOutDuration>10.72</taxiOutDuration>
<taxiInDuration>6.24</taxiInDuration>
<activityProfile>ActivityProfile-Baseline-KPVD-0-0-0</activityProfile>
<actypeWeight>137800</actypeWeight>
<fuelSulfurContent>0.00068</fuelSulfurContent>
</operation>
</case>
</caseSet>
```

5. Full ASIF

The full ASIF, *asif_emissions_study.xml*, is located in the directory: C:\Program Files\FAA\AEDT3f\Examples

1. Import the full ASIF in AEDT.
2. Create an annualization.
3. Create a metric result.

Please note that both the aircraft operations and the non-aircraft operations in this study are defined using operational profiles. When running profile-based aircraft operations, the “Apply Delay & Sequencing Model on Taxi” modeling option must be selected, and operating configuration and taxi network must exist in the airport layout.

4 User-Defined ANP and BADA 4 Profiles

4.1 Overview

There are three ways of creating and adding user-defined ANP and BADA 4 profiles in an AEDT study:

- By using the profile editor in the AEDT Graphical User Interface (GUI), Equipment tab (see Section 7.2.1 in AEDT User Manual);
- Creating and importing ASIF partial; and
- Direct database injection.

Of these methods, the first two are preferred because they include application-provided constraint and error checking. The following table provides a feature summary of the the three methods.

This Chapter focuses on the ASIF method and the direct database injection method for adding user-defined profiles

- Section 4.2 and Section 4.3 provide information on creating ASIF files that can be imported using ASIF partial import and provide details that would facilitate direct database injection to create user-defined profiles.
- Section 4.4 describes how the AEDT GUI's export functionality can be used to generate ASIF files that can subsequently be edited by the user to create their own or custom ANP and BADA 4 flight profiles.

Three Different Methods of Adding User-Defined Profiles

	Validation & error checking	ANP procedural profile for fixed-wing aircraft	BADA 4 procedural profile for fixed-wing aircraft	ANP fixed-point profile for fixed-wing aircraft	ANP profiles for helicopters	Overflight profiles
Profile Editor in AEDT GUI	✓	✓	✓			
ASIF	✓	✓	✓	✓	✓	✓
Direct DB Injection		✓	✓	✓	✓	✓



It is expected that users who create and use user-defined profiles are knowledgeable about the physics of flight performance modeling and understand the significance and use of individual profile elements. Users are responsible for entering valid values that are within the expected ranges for each type of parameter. For detailed explanations of flight profiles, please refer to the AEDT Technical Manual and the AEDT User Manual.



Using non-default profiles, for review of FAA federal actions or other FAA regulatory purposes, require prior approval by the FAA office of Environment and Energy (AEE). Please refer to the AEDT User Manual, Appendix J for further information on requesting approval for use of non-default profiles

4.2 User-Defined ANP Profiles

4.2.1 Key Requirements for a New ANP Profile

User-defined ANP profiles can be added to an existing ANP aircraft or created in conjunction with a new ANP aircraft definition. A key requirement for a new profile is that the Profile Name cannot be a duplicate of an existing record for that aircraft type. The primary key that uniquely defines a Profile is composed of the Operation Type, Profile Name, and the Stage Length.

In addition, any user-defined ANP profiles should have a PROFILE_ID value in the FLT_ANP_AIRPLANE_PROFILES table that is both unique and greater than 100,000. When creating user-defined ANP profiles via the AEDT GUI or importing via ASIF, the requirement that the Profile ID be greater than 100,000 is automatically handled. When the user is creating user-defined ANP profiles via manual database injection, the user must ensure that this requirement is met.

ANP profile entries are stored in the FLT_ANP_AIRPLANE_PROFILES table in a study database. Each unique profile entry in this table is determined by the combination of the ANP Aircraft Type, the Operation Type, the Profile Name, and the Stage Length. The integer value for Profile ID also uniquely identifies each entry in this table. The table below provides a mapping of the input ASIF elements for ANP profiles to specific database columns.

ANP Profile – Mapping of ASIF Element to Database Table & Columns

Parameter	ASIF Element Name	Column in Table FLT_ANP_AIRPLANE _PROFILES	Reference Columns (where applicable)
ANP Aircraft Type	anpAirplaneId	ACFT_ID	FLT_ANP_AIRPLANES.ACFT_ID
Operation Type	operationType	OP_TYPE	
Profile Name	profileGroupId	PROF_ID1	
Stage Length	profileStageLength	PROF_ID2	
Profile ID	n/a	PROFILE_ID	
Weight	weight	WEIGHT (lb)	

ANP profiles can consist of either procedure steps or fixed-points. Both types of profiles can be defined for any given ANP aircraft type.

4.2.2 ANP Profile – Procedure Steps

Individual steps for procedural ANP profiles are stored in the FLT_ANP_AIRPLANE PROCEDURES table. Each unique profile in this table is determined by the combination of the ANP Aircraft Type, the Operation Type, the Profile Name, and the Stage Length. Each unique row in this table is determined by the combination of the previous four fields plus the Step Number. The table below provides a mapping of the input ASIF elements for ANP procedural steps to specific database columns.

ANP Profile, Procedural Steps – Mapping of ASIF Elements to Database Table & Columns

Parameter	ASIF Element Name	Column in Table FLT_ANP_AIRPLANE_PROCEDURES	Reference Columns (where applicable)
ANP Aircraft Type	anpAirplaneId	ACFT_ID	FLT_ANP_AIRPLANES.ACFT_ID
Operation Type	operationType	OP_TYPE	FLT_ANP_AIRPLANE_PROFILES.OP_TYPE
Profile Name	profileGroupId	PROF_ID1	FLT_ANP_AIRPLANE_PROFILES.PROF_ID1
Stage Length	profileStageLength	PROF_ID2	FLT_ANP_AIRPLANE_PROFILES.PROF_ID2
Step Number	stepNum	STEP_NUM	
Flap ID	flapId (optional)	FLAP_ID (nullable)	FLT_ANP_AIRPLANE_FLAPS.FLAP_ID
Step Type	stepType (optional)	STEP_TYPE (nullable)	
Thrust Type	thrustType (optional)	THR_TYPE (nullable)	
First Parameter	param1	PARAM1	
Second Parameter	param2	PARAM2	
Third Parameter	param3 (optional)	PARAM3 (nullable)	

Sample ASIF for User-Defined ANP Procedural Profile

Following is a sample ASIF block that allows for the partial import of user-defined ANP procedural profiles. Refer to the accompanying ASIF file named *UserDefinedANPProfiles-ProcedureSteps.xml* for the complete sample file.

```
<fleet>
  <anpProfileSet>
    <anpAirplaneId>1900D</anpAirplaneId>
    <profile>
      <operationType>A</operationType>
      <profileGroupId>USER</profileGroupId>
      <profileStageLength>1</profileStageLength>
      <weight>14000</weight>
      <procedureSteps>
        <step>
          <stepNum>1</stepNum>
          <flapId>ZERO-A</flapId>
          <stepType>D</stepType>
          <param1>6000</param1>
          <param2>160</param2>
          <param3>3</param3>
        </step>
        <step>
          <stepNum>2</stepNum>
          <stepType>B</stepType>
          <thrustType>V</thrustType>
          <param1>515.2</param1>
          <param2>84</param2>
          <param3>40</param3>
        </step>
        <!-- more steps -->
      </procedureSteps>
    </profile>
  </anpProfileSet>
</fleet>
```

```

    </profile>
    <!-- additional profiles -->
</anpProfileSet>
</fleet>

```

4.2.3 ANP Profile – Fixed-Point

The points of fixed-point ANP profiles are stored in the FLT_ANP_AIRPLANE_PROFILE_POINTS table. Each unique profile in this table is determined by the combination of the ANP Aircraft Type, the Operation Type, the Profile Name, and the Stage Length. Each unique row in this table is determined by the combination of the previous four fields plus the Point Number. The table below provides a mapping of the input ASIF elements for ANP fixed-point profiles to specific database columns.

ANP Profile, Fixed-Points – Mapping of ASIF Elements to Database Table & Columns

Parameter	ASIF Element Name	Column in Table FLT_ANP_AIRPLANE_PROFILE_POINTS	Reference Columns (where applicable)
ANP Aircraft Type	anpAirplaneId	ACFT_ID	FLT_ANP_AIRPLANES.ACFT_ID
Operation Type	operationType	OP_TYPE	FLT_ANP_AIRPLANE_PROFILES.OP_TYPE
Profile Name	profileGroupId	PROF_ID1	FLT_ANP_AIRPLANE_PROFILES.PROF_ID1
Stage Length	profileStageLength	PROF_ID2	FLT_ANP_AIRPLANE_PROFILES.PROF_ID2
Point Number	pointNum	PT_NUM	
Distance	distance	DISTANCE (ft)	
Altitude	altitude	ALTITUDE (AFE ft)	
Speed	speed	SPEED (TAS)	
Net Thrust per Engine	thrustSet	THR_SET	
Operation Mode	opMode (optional)	OP_MODE (nullable)	

Sample ASIF for User-Defined ANP Fixed-Point Profile

Following is a sample ASIF block that allows for the partial import of user-defined ANP fixed-point profiles. Refer to the accompanying ASIF file named *UserDefinedANPProfiles-ProfilePoints.xml* for the complete sample file.

```

<fleet>
  <anpProfileSet>
    <anpAirplaneId>1900D</anpAirplaneId>
    <profile>
      <operationType>A</operationType>
      <profileGroupId>USER</profileGroupId>
      <profileStageLength>1</profileStageLength>
      <weight>14000</weight>
      <profilePoints>
        <point>
          <pointNum>1</pointNum>
          <distance>-114487.00</distance>
          <altitude>6000.00</altitude>
          <speed>250.00</speed>
          <thrustSet>520.00</thrustSet>
        
```

```
<opMode>A</opMode>
</point>
<point>
  <pointNum>2</pointNum>
  <distance>-57243.00</distance>
  <altitude>3000.00</altitude>
  <speed>124.00</speed>
  <thrustSet>3560.00</thrustSet>
  <opMode>A</opMode>
</point>

</profilePoints>
</profile>

</anpProfileSet>
</fleet>
```

4.3 User-Defined BADA 4 Profiles (for Existing BADA 4 Aircraft)

4.3.1 Key Requirements for a New BADA 4 Profile

User-defined BADA 4 profiles can be added to an existing BADA 4 aircraft (either system or user-created) or created in conjunction with a new BADA 4 aircraft definition. BADA 4 profile entries are stored in the FltBada4AirplaneProfile table.

A user-defined BADA 4 profile entry has several key identifiers. The first is a unique Profile ID that is a value greater than or equal to 400,000. When creating user-defined BADA 4 profiles via the AEDT GUI, or when importing new profiles via ASIF, the requirement that the Profile ID be greater than or equal to 400,000 is automatically handled. When the user is creating user-defined BADA 4 profiles via manual database injection, the user must ensure that this requirement is met.

The other required identifying components are the reference ANP Aircraft Type and the reference BADA 4 Aircraft Model. These fields are references to an existing ANP Aircraft from the FLT_ANP_AIRPLANES table (ACFT_ID field) and an existing BADA 4 Aircraft from the FLT_BADA4_ACM table (BADA4_ID). In ASIF, the BADA 4 Aircraft reference field is specified with a combination of the BADA 4 Model and the BADA 4 Engine Model from the FLT_BADA4_ACM table that uniquely identify the BADA 4 Aircraft.

The table below provides a mapping of the input ASIF elements for BADA 4 profiles to specific database columns.

BADA 4 Profile – Mapping of ASIF Elements to Database Table & Columns

Parameter	ASIF Element Name	Field Name in Table FltBada4AirplaneProfile	Reference Fields (where applicable)
Profile ID	n/a	ProfileID	
Profile Name	flightProcedure	FlightProcedure	
Reference ANP Aircraft	anpAirplaneId	AnpAirplaneID	FLT_ANP_AIRPLANES.ACFT_ID
Reference BADA4 Aircraft	bada4AirplaneModel	Bada4AirplaneID	FLT_BADA4_ACM.BADA4_ID matched using the MODEL and ENGINE fields from FLT_BADA4_ACM
Reference BADA4 Engine	bada4Engine		

AEDT Supplemental Manual

AEDT Standard Input File

Parameter	ASIF Element Name	Field Name in Table FltBada4AirplaneProfile	Reference Fields (where applicable)
Operation Type	operationType	OperationType	
Weight Class	weightClass	WeightClass	
Weight	weight	Weight (lb)	

Note that unlike the other elements, the bada4AirplaneModel and bada4Engine elements specified in ASIF are only used to determine a specific record match to a BADA4_ID value from the FLT_BADA4_ACM table and are not explicitly persisted as part of the new profile.

In AEDT, only procedural profiles may be defined for user-defined BADA 4 profiles. Individual steps for BADA 4 profiles are stored in the FltBada4AirplaneProcedure table. The records for each unique profile in this table are solely determined by the Profile ID key which references the parent profile in the FltBada4AirplaneProfile table. Each row in this table has a unique identifier in the form of the auto-incremented database field of ProcedureStepID. However, each unique procedure step for any given profile is determined by the combination of the Profile ID and the Step Number.

The table below provides a mapping of the input ASIF elements for BADA 4 procedure steps to specific database columns.

BADA 4 Profile, Procedural Steps – Mapping of ASIF Elements to Database Table & Columns

Parameter	ASIF Element Name	Field Name in Table FltBada4AirplaneProcedure	Reference Fields (where applicable)
Step ID	n/a	ProcedureStepID	
Profile ID	n/a	ProfileID	FltBada4AirplaneProfile.ProfileID
Step Number	stepNumber	StepNumber	
Reference Configuration ID	configId	ConfigurationID	FLT_BADA4_AFCM_CONFIG.CONFIG_ID
Reference ANP Aircraft for Flaps	anpAirplaneId	AnpAirplaneID	FLT_ANP_AIRPLANE_FLAPS.ACFT_ID
Reference ANP Flap Setting	anpFlapId	AnpFlapID	FLT_ANP_AIRPLANE_FLAPS.FLAP_ID
Step Type	stepType	StepType	
Thrust Type	thrustType	ThrustType	
Altitude	altitude	Altitude (AFE ft)	
Calibrated Airspeed	calibratedAirspeed	CalibratedAirspeed (kt)	
Mach Number	mach	MachNumber	
Thrust	thrust	Thrust (lb)	
Angle	angle	Angle (deg)	
Climb Rate	climbRate	ClimbRate (ft/minute)	
Flight Segment Length	distance	Distance (ft)	
Percent Acceleration	percent	Percent	
Gear Down	gearDown	GearDown	

Sample ASIF for User-Defined BADA 4 Profile

Following is a sample ASIF block that allows for the partial import of user-defined BADA 4 profiles. Refer to the accompanying ASIF file named *UserDefinedBADA4Profiles.xml* for the complete sample file.

```
<fleet>
  <bada4ProfileSet>
    <anpAirplaneId>737300</anpAirplaneId>
    <bada4AirplaneModel>737-300</bada4AirplaneModel>
    <bada4Engine>CFM56-3B1 (20K)</bada4Engine>
    <bada4profile>
      <operationType>A</operationType>
      <flightProcedure>UserBADA4_A</flightProcedure>
      <weightClass>1</weightClass>
      <weight>102600</weight>
      <bada4ProcedureSteps>
        <step>
          <stepNumber>1</stepNumber>
          <configId>229</configId>
          <anpAirplaneId>737300</anpAirplaneId>
          <anpFlapId>ZERO</anpFlapId>
          <stepType>D</stepType>
          <altitude>6000</altitude>
          <calibratedAirspeed>250</calibratedAirspeed>
          <mach>0</mach>
          <thrust>0</thrust>
          <angle>3</angle>
          <climbRate>0</climbRate>
          <distance>0</distance>
          <percent>0</percent>
          <gearDown>0</gearDown>
        </step>
        <!-- more steps -->
      </bada4ProcedureSteps>
    </bada4profile>
    <!-- additional profiles -->
  </bada4ProfileSet>
</fleet>
```

4.4 Create User-Defined ANP and BADA 4 Profiles for New or Existing Aircraft by Using the GUI Export Aircraft Feature

AEDT GUI supports adding and editing user-defined ANP and BADA 4 flight profiles of existing fixed-wing aircraft as well as creating new user-defined aircraft. This section explains how to add custom ANP and BADA 4 flight profiles to existing and new aircraft by exporting existing aircraft, modifying the exported ASIF, and reimporting the modified ASIF.

4.4.1 Create a New User-Defined Aircraft with Custom Profiles

Follow the steps below to create a new user-defined aircraft with custom ANP and/or BADA 4 flight profiles:

1. Copy an existing system aircraft to create a new user-defined aircraft

1. In AEDT, go to the *Equipment* tab, *Aircraft*.
2. Select the aircraft to modify and click *Copy*.
3. Enter a suffix and click *Save*.
4. A new user-defined aircraft is created.

2. Export the new aircraft then delete it

1. Select the new aircraft and click *Export Aircraft* button.
2. The aircraft data is exported as a partial ASIF.
3. Click the *Delete* button to delete the new aircraft. This aircraft is no longer needed, because it will be edited in the ASIF and imported back into AEDT.

3. Open and edit the exported ASIF

1. Open the exported ASIF.
2. Under the <anpProfileSet> or the <bada4ProfileSet>, copy and paste one of the existing <profile> or <bada4Profile> sections.
3. Modify the new <profile> and/or <bada4profile> section by editing the profile properties. Ensure that profile names within each section are unique. Refer to the AEDT User Manual Appendix for details on how to define profiles for civil airplanes and helicopters.
4. Add additional profiles as needed.
5. Save the ASIF.

4. Import the ASIF

1. In AEDT, in the *Equipment* tab, click *Import Aircraft* button, select the updated ASIF and click *Open*. The new aircraft is listed in the *Equipment* tab.
2. Select the new aircraft and confirm that custom profiles have been added.

4.4.2 Add Custom Profiles to Existing Aircraft

Follow the steps below to add user-defined ANP and/or BADA 4 flight profiles to existing system or user-defined aircraft:

1. Export an existing aircraft and its profiles

1. In AEDT, go to the *Equipment* tab, *Aircraft*.
2. Select the aircraft to export.
3. Select the new aircraft and click *Export Aircraft* button.
4. The aircraft data is exported as a partial ASIF.

2. Open and edit the exported ASIF

1. Open the exported ASIF.
2. Edit the file to only keep the <anpProfileSet> and/or the <bada4ProfileSet> sections and remove all the other sections.
3. Modify the <profile> or <bada4profile> sections by editing each profile's properties. Ensure that the Profile Name is changed for each profile to be different from any of the profile names that already exist for that aircraft. Refer to the AEDT User Manual Appendix for details on how to define profiles for civil airplanes and helicopters.
4. Add additional profiles as needed.
5. Save the ASIF.

3. Import the ASIF

1. In AEDT, in the *Equipment* tab, click *Import Aircraft* button, select the updated ASIF and click *Open*.
2. Select the relevant aircraft and confirm that custom profiles have been added.

5 ASIF Consideration

5.1 Airport Layout and Runways

When defining an airport under the ***airportLayout*** element, users have the option to specify runway definitions using the ***runwaySet*** element. If runways are not specified in ASIF, then the runway data from the AEDT Airport database will be copied during the ASIF import.

When you add an existing airport to a study in AEDT GUI, AEDT will create a new airport layout for each instance when there has been a runway modification (e.g., extended runways or renamed runways). For example, add the KATL airport in AEDT GUI and confirm that multiple airport layouts are listed, each with different effective - expiration date range.

However, if you import such airport using ASIF without providing runway specifications, then AEDT will copy all the runways (both expired and the latest) from the Airport database into a single airport layout instead of creating multiple layouts. This means that the single airport layout will contain duplicate runway items once such airport is imported into AEDT.

In the example below, KATL is defined without any runway specifications. During ASIF import, AEDT will copy the entire history of KATL runways from the Airport database into the study database.

```
<airportLayout>
  <airportCode type="ICAO">KATL</airportCode>
</airportLayout>
```

The following screenshot shows the single airport layout for the KATL airport in AEDT GUI after importing the above ASIF example. Note that some items are listed twice – runway ends 09L and 27R, runways 09L-27R, and helipad H1.

In such a case, it is recommended to delete the duplicate runway ends and runways from the study. Review the effective date and expiration date of the runway ends/runways in the study database to determine which ones are expired vs. latest. Alternatively, specify runways in the ASIF using the ***runwaySet*** element.

Layout: KATL Effective date: 1/1/1900 Taxi-in time: 0 minutes 0 seconds Expiration date: 6/6/2079 Taxi-out time: 0 minutes 0 seconds			
Ground Elements		Tracks	
Drag a column header and drop it here to group by that column			
Type	ID	Name	
[+]	Runway end	72254	08L
[+]	Runway end	84857	26R
[+]	Runway end	72255	08R
[+]	Runway end	84858	26L
[+]	Runway end	72256	09L
[+]	Runway end	84859	27R
[+]	Runway end	72257	09R
[+]	Runway end	84860	27L
[+]	Runway end	72258	10
[+]	Runway end	84861	28
[+]	Runway end	121432	27R
[+]	Runway end	122606	09L
[+]	Runway	36926	08L - 26R
[+]	Runway	36927	08R - 26L
[+]	Runway	36928	09L - 27R
[+]	Runway	36929	09R - 27L
[+]	Runway	36930	10 - 28
[+]	Runway	36931	H1
[+]	Runway	67816	27R - 09L
[+]	Runway	69090	H1
[+]	Helipad	72259	H1
[+]	Helipad	124455	H1
22 of 22 item(s) shown. 1 item(s) selected.			

5.2 Event Consolidation

AEDT calculates noise for all air operations (e.g. all instances of an aircraft and track) in a given case, which differs from the legacy tool, NIRS. In order to optimize noise modeling performance in AEDT, it is suggested to combine like operations in a case into a representative single air operation for entry into the ASIF.

5.3 Control Codes

The altitude and/or speed of an airplane as it passes over a track node can be controlled to some extent by assigning track controls to that track node. Track controls are an optional feature that are used to specify targets and restrictions on altitude and/or speed on tracks – altitude controls affect airplane altitude; and speed controls affect airplane speed.

Each track control has two components: a value and a code. The value establishes a reference altitude or speed (appropriate to the control type), and the code specifies how that value should be interpreted in flight analysis.

In the ASIF schema, an altitude control is assigned to a ***trackNode*** by providing the control altitude as ***trackNode/altitude***, and the control code as ***trackNode/altitude/control***. Likewise, a speed control is defined by providing ***trackNode/speed***, and the control code as ***trackNode/speed/control***. Note that no control is defined if any of the following are true:

- A value is not provided;
- A code is not provided; or
- The code provided has a value of "0" or "None".

Furthermore, AEDT will ignore the following controls:

- Altitude controls with altitude values below 500 ft. AFE.
- All speed controls, if using the Doc 29/BADA 3 performance model.
- All speed controls, if the operation is an overflight.
- All controls, if the operation is a circuit or touch-and-go.

Also note that if there are any controls defined on an overflight, there must be controls defined (and observed, per the control-ignoring rules above) on the first and last nodes of the track.

AEDT computes performance to the following extents:

- Departure and approach performance is computed between ground roll and the observed control that is trackwise furthest from ground roll.
- Overflight performance is computed from the first track point to the last track point (both of which must have observed controls).

Performance is computed as close as possible to the observed control values, subject to the airplane's performance capabilities, as described in the AEDT Technical Manual. The computed best effort to achieve these targeted values is checked against the restrictions implied by the control codes:

- Control code "1" or "At or Below": the airplane is not allowed above the value
- Control code "2" or "Match": the airplane is not allowed above or below the value
- Control code "3" or "At or Above": the airplane is not allowed below the value

If the best effort fails to comply with the restriction, the flight's performance is discarded by AEDT, logged in the error log, and its impact is excluded from environmental metrics. For more information on track controls, refer to Section 3.9.1 Track Control Flights in the AEDT Technical Manual.

When translating NIRS inputs to ASIF, omitting altitude controls with altitude values below 3000 ft AFE will lead to the most comparable result, as NIRS ignored these controls. When modeling runway to runway operations using sensor path data, define the flight path using the ASIF ***sensorPath*** element rather than the track element. Sensor paths provide more direct control of altitude for an aircraft trajectory.

5.4 Assign Default Ground Support Equipment (GSE) to Aircraft Operations

The **assignDefaultGse** element in the ASIF schema is used to assign default ground support equipment (GSE) to aircraft operation instead of writing out each GSE operation.

In this departure operation example, the **assignDefaultGse** is set to true. This will assign the default GSE for “Airbus A319-100 Series” to the operation. The default GSEs for the Airbus A319-100 Series, departure operation are listed in the table below. The default GSE assignments for airframe is stored in the FLT_GSE_AC_DEFAULTS table.

```
<operation>
  <id>D_1</id>
  <aircraftType>
    <airframeModel>Airbus A319-100 Series</airframeModel>
    <engineCode>3CM028</engineCode>
    <apuName>APU GTCP 36-300 (80HP)</apuName>
    <assignDefaultGse>true</assignDefaultGse>
  </aircraftType>
  <numOperations>1</numOperations>
  <opType>D</opType>
  .....
  .....
```

Default GSEs for Airbus A319-100 Series – Departure Operation

GSE Name	Duration (mins)	Horsepower	Load Factor	Manufacture Year
Electric - None - Air Conditioner	23	0	0.75	NA
Diesel - ACE 180 - Air Start	7	425	0.9	NA
Diesel - Stewart & Stevenson TUG GT-35, Douglas TBL-180 - Aircraft Tractor	8	88	0.8	NA
Gasoline - Stewart & Stevenson TUG MA 50 - Baggage Tractor	38	107	0.55	NA
Gasoline - Stewart & Stevenson TUG 660 - Belt Loader	24	107	0.5	NA
Diesel - Hi-Way F650 - Cabin Service Truck	10	210	0.53	NA
Diesel - Hi-Way F650 - Catering Truck	8	210	0.53	NA
Diesel - F250 / F350 - Hydrant Truck	12	235	0.7	NA
Diesel - TLD 1410 - Lavatory Truck	0	56	0.25	NA
Diesel - F250 / F350 - Service Truck	8	235	0.2	NA
Electric - Gate Service - Water Service	12	0	0.2	NA

AEDT Supplemental Manual

AEDT Standard Input File

To specify individual GSEs for the aircraft operation, use the ***groundSupportEquipmentLT0OperationSet***, as follows:

```
<operation>
  <id>D_1</id>
  <aircraftType>
    <airframeModel>Airbus A319-100 Series</airframeModel>
    <engineCode>3CM028</engineCode>
    <apuName>APU GTCP 36-300 (80HP)</apuName>
    <groundSupportEquipmentLT0OperationSet>
      <groundSupportEquipmentLT0Operation>
        <gseID>8</gseID>
        <fuelType>Diesel</fuelType>
        <horsepower>88</horsepower>
        <loadFactor>0.8</loadFactor>
        <departureOpTime>3.9</departureOpTime>
      </groundSupportEquipmentLT0Operation>
      <groundSupportEquipmentLT0Operation>
        <gseID>13</gseID>
        <fuelType>Gasoline</fuelType>
        <horsepower>107</horsepower>
        <loadFactor>0.55</loadFactor>
        <departureOpTime>8</departureOpTime>
        <arrivalOpTime>8</arrivalOpTime>
      </groundSupportEquipmentLT0Operation>
      <groundSupportEquipmentLT0Operation>
        <gseID>14</gseID>
        <fuelType>Gasoline</fuelType>
        <horsepower>107</horsepower>
        <loadFactor>0.5</loadFactor>
        <departureOpTime>11</departureOpTime>
        <arrivalOpTime>12</arrivalOpTime>
      </groundSupportEquipmentLT0Operation>
      <groundSupportEquipmentLT0Operation>
        <gseID>17</gseID>
        <fuelType>Diesel</fuelType>
        <horsepower>210</horsepower>
        <loadFactor>0.53</loadFactor>
        <departureOpTime>9.7</departureOpTime>
      </groundSupportEquipmentLT0Operation>
      <groundSupportEquipmentLT0Operation>
        <gseID>29</gseID>
        <fuelType>Diesel</fuelType>
        <horsepower>175</horsepower>
        <loadFactor>0.25</loadFactor>
        <departureOpTime>14</departureOpTime>
      </groundSupportEquipmentLT0Operation>
      <groundSupportEquipmentLT0Operation>
        <gseID>36</gseID>
        <fuelType>Diesel</fuelType>
        <horsepower>56</horsepower>
        <loadFactor>0.25</loadFactor>
        <arrivalOpTime>2.1</arrivalOpTime>
      </groundSupportEquipmentLT0Operation>
```

```
<groundSupportEquipmentLT0Operation>
  <gseID>41</gseID>
  <fuelType>Diesel</fuelType>
  <horsepower>235</horsepower>
  <loadFactor>0.2</loadFactor>
  <departureOpTime>8</departureOpTime>
  <arrivalOpTime>7</arrivalOpTime>
</groundSupportEquipmentLT0Operation>
</groundSupportEquipmentLT0OperationSet>
</aircraftType>
<numOperations>1</numOperations>
<opType>D</opType>
.....
.....
```

5.5 Import User-Defined Spectral Class Data

5.5.1 Sample ASIF for User-Defined Spectral Class Data

Following is a sample ASIF block that allows for the partial import of user-defined spectral class data. Refer to the accompanying ASIF file named *UserDefinedSpectralClass.xml* for the complete sample file, which is located in *C:\Program Files\FAA\AEDT3f\Examples* directory.

```
<fleet>
  <spectralClass>
    <!--ID -->
    <spectralClassId>20000</spectralClassId>
    <flightTypes>AL</flightTypes>
    <frequencyBand17>25.1</frequencyBand17>
    <frequencyBand18>26.1</frequencyBand18>
.....
.....
```

- The **spectralClassId** element specifies the user-defined Spectral Class ID. Valid value is in the range of 20,000 to 30,000 - inclusive.
- The **flightTypes** element is used to indicate flight types: A (arrival), D (departure), L (Level/Afterburner), or U (Unknown). In the example above, the **flightTypes** is set to “AL”, indicating Arrival and Level/Afterburner.

To import this file:

- In the Equipment tab, *Aircraft* screen, then click the *Import Aircraft* button.
- Select this file and click *Open*.
- The Equipment list will be refreshed.

To assign the user-defined spectral classes to an aircraft:

- Select an aircraft and click the *Copy* button to create a user-defined aircraft.
- Go to the *ANP Airplane, Noise* screen (for a helicopter, go to the *ANP Helicopter, Noise* screen).
- From the *Spectral class approach* dropdown menu, select the desired user-defined class ID.
- From the *Spectral class departure* dropdown menu, select the desired user-defined class ID.
- Enter a Suffix for the new aircraft and make other changes, then click the *Save* button.

5.6 Importing an Older Version of ASIF File

When importing an older version of ASIF file, AEDT will upgrade the file to the latest ASIF version by applying intermediate version updates in sequence. During this process, AEDT will generate ASIF files for each intermediate version. An intermediate ASIF file will have the ASIF version number added as a suffix to the file name.

For example, the ASIF schema version in AEDT 3f is **1.2.23**. Importing an ASIF version 1.2.17 file in AEDT 3f will generate six intermediate ASIF files for version 1.2.18, 1.2.19, 1.2.20, 1.2.21, 1.2.22, and 1.2.23.

These intermediate files are saved in the **AsifImport** directory under the AEDT data folder (e.g., **C:\AEDT3f\AsifImport**). Please note that these files are temporary; they will be deleted before the next ASIF import.

5.7 ASIF Version 1.2.18 Update for Stationary Sources

Stationary sources modeling methodology updates in the AEDT 3e release affect fuel tank, boiler/heater, solvent degreaser, and sand/salt pile sources and operations. This also resulted in a major change to stationary sources schema in ASIF version 1.2.18.



Due to significant changes in stationary sources input data and modeling methodology, users are strongly encouraged to **review the intermediate files**, created by the ASIF update process, that are saved in the **AsifImport** directory under the AEDT data folder (e.g., **C:\AEDT3f\AsifImport**) and **review comments** contained within the intermediate ASIF files, logging stationary source upgrade actions.

Importing an older version of ASIF file in AEDT 3e/3f will upgrade the file to the latest ASIF version. The following list summarizes ASIF schema changes that are applied during this upgrade process:

- Stationary sources where input data and modeling methodology was not changed will be migrated from earlier ASIF versions to version 1.2.18 and higher as-is.
- Stationary sources where a superset of existing input data is required in AEDT 3e/3f as a result of the change in modeling methodology, AEDT will fill in new input parameters with default values (based on AP-42) when upgrading an older ASIF file to ASIF version 1.2.18 or higher. These actions will be noted as comments in the intermediate ASIF file(s). For example:

```
<!--ASIF update added PM10_EI field with a value of 0.239652854-->
<!--ASIF update removed the ashTermPm10 element-->
```
- Stationary sources where different input data is required in AEDT 3e/3f as a result of an incompatible change in the modeling methodology and/or the input parameters, AEDT will remove such stationary sources when upgrading an older ASIF file to ASIF version 1.2.18 or higher. These actions will be noted as comments in the intermediate ASIF file(s). For example:

```
<!--ASIF update removed the categoryBoilerHeater block with typeCode 14-->
<!--ASIF update removed the categoryFuelTank block with typeCode 10-->
```

5.7.1 Deprecated Boiler/Heater and Fuel Tank Sources and Operations

While the ASIF upgrade process will remove deprecated stationary sources from an older ASIF file, it will not automatically locate and remove any operations referencing or using those sources. As a result, ASIF import may fail with bad data integrity error (see Figure 5-1) if it contains any orphaned operations that reference stationary source that have been removed during the upgrade. Figure 5-2 displays sample error messages that get logged to aedt.log file when importing such ASIF file with orphaned operations.

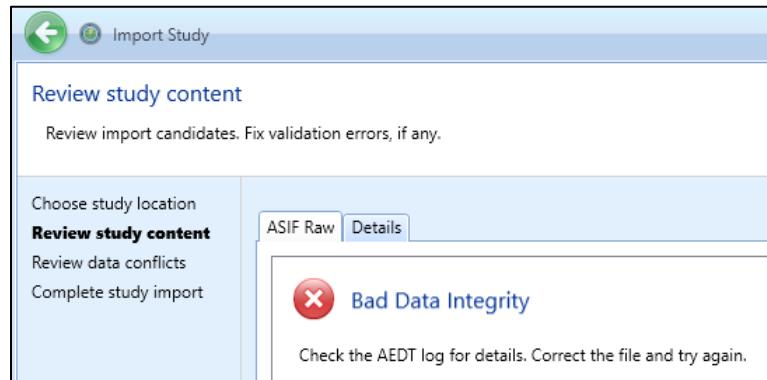


Figure 5-1 AEDT Import Study Dialog, Bad Data Integrity Error Message

```
ASIF Data Error: # Errors:16 - Message: An invalid stationary source reference name was specified.  
ERROR #1: (Parent Name)=Baseline - (Stationary source reference name)=Boiler14-Baseline -  
ERROR #2: (Parent Name)=Baseline - (Stationary source reference name)=Boiler28-Baseline -  
ERROR #3: (Parent Name)=Baseline - (Stationary source reference name)=Boiler29-Baseline -  
ERROR #4: (Parent Name)=Baseline - (Stationary source reference name)=Boiler30-Baseline -  
ERROR #5: (Parent Name)=Baseline - (Stationary source reference name)=Boiler31-Baseline -  
ERROR #6: (Parent Name)=Baseline - (Stationary source reference name)=Boiler32-Baseline -  
ERROR #7: (Parent Name)=Baseline - (Stationary source reference name)=Boiler33-Baseline -  
ERROR #8: (Parent Name)=Baseline - (Stationary source reference name)=Boiler34-Baseline -  
ERROR #9: (Parent Name)=Baseline - (Stationary source reference name)=Boiler37-Baseline -  
ERROR #10: (Parent Name)=Baseline - (Stationary source reference name)=Boiler38-Baseline -  
ERROR #11: (Parent Name)=Baseline - (Stationary source reference name)=Boiler39-Baseline -  
ERROR #12: (Parent Name)=Baseline - (Stationary source reference name)=FuelTank10-Baseline -  
ERROR #13: (Parent Name)=Baseline - (Stationary source reference name)=FuelTank6-Baseline -  
ERROR #14: (Parent Name)=Baseline - (Stationary source reference name)=FuelTank7-Baseline -  
ERROR #15: (Parent Name)=Baseline - (Stationary source reference name)=FuelTank8-Baseline -  
ERROR #16: (Parent Name)=Baseline - (Stationary source reference name)=FuelTank9-Baseline -
```

Figure 5-2 Invalid Stationary Source Reference Errors in AEDT Log File

How to View/Edit Intermediate ASIF

Follow the steps below to manually edit the intermediate ASIF file and to import it into AEDT:

1. View the ASIF data error messages in the aedt.log file and note invalid stationary source reference names.
2. Locate the last intermediate ASIF file (e.g., ASIF version 1.2.20) saved in the C:\AEDT3f\AsifImport folder.
3. In the ASIF file, search for the stationary source reference names then manually remove matching operations from the ASIF file.

4. Import the manually edited ASIF file into AEDT.
5. Re-create new operations to replace those sources in AEDT GUI.

5.8 ASIF Version 1.2.20 Update for Runup Operations

In AEDT 3f, the existing runup operation feature has been expanded to support emissions dispersion modeling and to harmonize noise and emissions inputs for runups. Following changes were made in ASIF schema version 1.2.20 to support this feature.

- For the “runup” complex type in ASIF schema:
 - Replaced thrust with thrust per engine (thrustPerEngine); and
 - Added number of engines used (numEnginesUsed).

5.9 ASIF Version 1.2.21, 1.2.22, and 1.2.23 Updates to Support Greenhouse Gases Modeling

Expanded coverage of greenhouse gas (GHG) modeling in AEDT 3f release resulted in changes to the ASIF schema in versions 1.2.21, 1.2.22, and 1.2.23. These schema changes are summarized in the following sections.



Due to significant changes in stationary sources, GSE, and airframe input data and modeling methodology, users are strongly encouraged to **review the intermediate/final ASIF files**, created by the ASIF update process, that are saved in the AsifImport directory under the AEDT data folder (e.g., C:\AEDT3f\AsifImport).

5.9.1 Stationary Sources

- Stationary sources where input data and modeling methodology was not changed will be migrated from earlier ASIF versions to version 1.2.23 and higher as-is. These include:
 - Salt/Sand Piles
 - Solvent Degreasing
 - Surface Coating
 - Deicing
 - Fuel Tanks
- For stationary sources where a superset of existing input data is required in AEDT 3f, as a result of changes in modeling methodology, AEDT will fill in new input parameters with default values (based on AP-42 and EPA’s GHG Emissions Factors’ Hub) when upgrading an older ASIF file to ASIF version 1.2.21 or higher.
 - Boiler/Space Heater
 - Added CO2_EI
 - Added pollutionControlFactorCO2
 - Added CH4_EI
 - Added pollutionControlFactorCH4

AEDT Supplemental Manual

AEDT Standard Input File

- Emergency Generator
 - Added CO2_EF
 - Added CH4_EF
 - Added CO2_EI
 - Added CH4_EI
 - Added pollutionControlFactorCO2
 - Added pollutionControlFactorCH4
- Incinerator
 - Added CO2_EI
 - Added pollutionControlFactorCO2
 - Added CH4_EI
 - Added pollutionControlFactorCH4
 - Renamed VOC_EI to TOC_EI
- Other
 - Added CO2_EI
 - Added pollutionControlFactorCO2
 - Added CH4_EI
 - Added pollutionControlFactorCH4
 - Added PM25_EI
 - Added pollutionControlFactorPM25
 - Renamed pollutionControlFactorHC to pollutionControlFactorTHC
 - Removed pm25ToPm10Ratio
- Training Fire
 - Added CO2_EI
 - Added CH4_EI
 - Added PM25_EI
 - Renamed CO to CO_EI
 - Renamed VOC to VOC_EI
 - Renamed NOx to NOx_EI
 - Renamed SOx to SOx_EI
 - Renamed PM10 to PM10_EI

5.9.2 Ground Support Equipment

Expanded the emissionFactorSet for GSE to include:

- CO2;
- CH4; and
- PM25

5.9.3 Airframe (to support GHG modeling of APUs)

Added "maxSeats" element to complexType airframe.

6 ASIF Schema Documentation

Click on the following links to view descriptions for ASIF elements, groups, complex types and simple types.

Schema AsifMerge.xsd

schema location: [AsifMerge\AsifMerge.xsd](#)

attributeFormDefault: unqualified

elementFormDefault: qualified

Elements

[activityProfile](#)
[activityProfileSet](#)
[airportCapacity](#)
[airportConfig](#)
[airportConfigSet](#)
[airportLayoutSet](#)
[airportWeather](#)
[airportWeatherStation](#)
[annualization](#)
[annualizationCase](#)
[annualizationGroup](#)
[areaStationarySource](#)
[AsifKml](#)
[backbone](#)
[backboneNode](#)
[backboneNodes](#)
[boilerHeaterTypeCode](#)
[boundary](#)
[building](#)
[buildingSet](#)
[capacityPoint](#)
[case](#)
[caseSet](#)
[categoryAircraftEngine](#)
[categoryBoilerHeater](#)
[categoryDeicingArea](#)
[categoryFuelTank](#)
[categoryGenerator](#)
[categoryIncinerator](#)
[categoryOther](#)
[categoryRecordCode](#)
[categorySandSaltPile](#)
[categorySolventDegreaser](#)
[categorySurfaceCoatingPainting](#)
[categoryTrainingFire](#)
[centroid](#)
[climate](#)
[dailyProfile](#)
[dailyProfileSet](#)
[dispersionWeight](#)
[emissionsUsage](#)
[engineModeEmissionFactors](#)
[gate](#)
[gateSet](#)
[grid](#)
[groundSupportEquipmentGateAssignment](#)
[groundSupportEquipmentGateAssignmentSet](#)
[groundSupportEquipmentTOOperation](#)
[groundSupportEquipmentTOOperationSet](#)
[groundSupportEquipmentPopulationOperation](#)
[groundSupportEquipmentPopulationOperationSet](#)
[monthlyProfile](#)
[monthlyProfileSet](#)
[operation](#)
[operationalProfileSet](#)
[operations](#)
[options](#)
[parkingFacility](#)
[parkingFacilityOperation](#)
[parkingFacilityOperationSet](#)
[parkingFacilitySet](#)
[pointReceptor](#)
[pointStationarySource](#)
[polarGrid](#)
[polarReceptor](#)
[quarterHourlyProfile](#)
[quarterHourlyProfileSet](#)
[receptorSet](#)
[recordCode](#)
[roadway](#)
[roadwayOperation](#)
[roadwayOperationSet](#)
[roadwaySet](#)
[runway](#)
[runwayAssignment](#)
[runwayAssignmentSet](#)
[runwaySet](#)
[scenario](#)
[scenarioAirportLayoutSet](#)
[sensorNode](#)
[sensorPath](#)
[stationarySource](#)
[stationarySourceOperation](#)
[stationarySourceOperationSet](#)
[stationarySourceSet](#)
[study](#)
[subtract](#)
[taxiNode](#)
[taxiNodeSet](#)

Groups

[airportActivityGroup](#)
[annualizationGroupCase](#)
[coord2DGroup](#)
[latlonCoordGroup](#)
[nodeIdGroup](#)
[oneOrThreeCoords2DGroupSet](#)
[pm10TermGroup](#)
[receptorGroup](#)
[thcElGroup](#)
[tnmcElGroup](#)
[tocElGroup](#)
[utmCoordGroup](#)
[vocElGroup](#)

Complex types

[aircraft](#)
[aircraftEngine](#)
[aircraftEngineMod](#)
[aircraftType](#)
[airframe](#)
[airport](#)
[airportCode](#)
[airportLayoutType](#)
[airplane](#)
[anpFlaps](#)
[anpFlapsSet](#)
[anpHelicopter](#)
[anpHeloDirectivity](#)
[anpHeloDirectivitySet](#)
[anpHeloNoiseGroup](#)
[anpHeloNPDCurve](#)
[anpHeloNPDCurves](#)
[anpHeloProcedureStep](#)
[anpHeloProfile](#)
[anpHeloProfileSet](#)
[anpNoiseGroup](#)
[anpNPDCurve](#)
[anpNPDCurves](#)
[anpProcedureStep](#)
[anpProcedureSteps](#)
[anpProfile](#)
[anpProfilePoint](#)
[anpProfilePoints](#)
[anpProfileSet](#)
[anpThrustGeneral](#)
[anpThrustJet](#)
[anpThrustProp](#)
[anpThrustSet](#)
[anpTfcCoefficients](#)
[auxiliaryPowerUnit](#)
[bada4ProcedureStep](#)
[bada4ProcedureSteps](#)
[bada4Profile](#)
[bada4ProfileSet](#)
[badaAirplane](#)
[badaAltitudeDistribution](#)
[badaAltitudeDistributionSet](#)
[badaConfig](#)
[badaConfigSet](#)
[badaFuel](#)
[badaProfile](#)
[badaProfileSet](#)
[badaThrust](#)
[coord2DType](#)
[coord3DElevationType](#)
[dispersionWeight1Type](#)
[dispersionWeight3Type](#)
[dispersionWeight5Type](#)
[dispersionWeight7Type](#)
[dispersionWeight9Type](#)
[emissionFactorSet](#)
[energyShare](#)
[engineModeEmissions](#)
[fleet](#)
[latitudeDecimalType](#)
[longitudeDecimalType](#)
[polygon2DType](#)
[polygon3DElevationType](#)
[profiles](#)
[runup](#)
[runwayEnd](#)
[scenarioAirportLayoutType](#)
[spectralClass](#)

Simple types

[aircraftPerformanceModelType](#)
[AircraftSizeType](#)
[airframeModel](#)
[airportCodeType](#)
[anpAirlaneId](#)
[anpCoefType](#)
[anpFlapId](#)
[anpHeloDirectId](#)
[anpHeloDirectivityId](#)
[anpHeloGroundType](#)
[anpHeloId](#)
[anpHeloNoiseld](#)
[anpHeloSideType](#)
[anpNoiseld](#)
[anpNpdNoiseType](#)
[anpNqdOpMode](#)
[anpOwnerType](#)
[anpSizeCode](#)
[apuName](#)
[bada4AirplaneModel](#)
[bada4Engine](#)
[bada4Suffix](#)
[badaAirlaneId](#)
[badaPhaseType](#)
[badaWakeType](#)
[directionType](#)
[doubleExclusive0Inclusive10](#)
[doubleExclusive10](#)
[doubleExclusive100](#)
[doubleExclusive1000](#)
[doubleExclusive10000](#)
[doubleExclusive2000](#)
[doubleExclusiveRange100](#)
[doubleInclusive1](#)
[doubleInclusive100](#)
[doubleInclusive1000](#)
[doubleInclusive10000](#)
[doubleInclusive2000](#)
[doubleInclusive24](#)
[doubleInclusive4000](#)
[doubleInclusive500](#)
[doubleInclusiveRange0to600](#)
[doubleInclusiveRange1to30](#)
[doubleMin0](#)
[emissionsSourceType](#)
[emissionsUnitsType](#)
[empty_string](#)
[engineCode](#)
[engineModCode](#)
[engineModel](#)
[engineType](#)
[floatExclusive0Inclusive10](#)
[floatExclusive10](#)
[floatExclusive100](#)
[floatExclusive1000](#)
[floatExclusive10000](#)
[floatExclusive2000](#)
[floatExclusive24](#)
[floatExclusive4000](#)
[floatInclusive1](#)
[floatInclusive100](#)
[floatInclusive1000](#)
[floatInclusive2000](#)
[floatInclusive24](#)
[floatInclusive4000](#)
[floatInclusiveRange1to30](#)
[fuelType](#)
[groundVehicleType](#)
[int0to23](#)
[int0to360](#)
[int0to5](#)
[int0to87](#)
[int1to13](#)
[int1to15](#)
[int1to2](#)
[int1to25](#)
[int1to4](#)
[int1to5](#)
[int1to8](#)
[int1to93](#)
[int1to9999](#)
[int5to15](#)
[int5to65](#)
[int6to13](#)
[int89to148](#)
[latitudeDMSType](#)
[longitudeDMSType](#)
[nodeControlType](#)

[taxiPath](#)
[taxiPathSet](#)
[taxiTime](#)
[taxiway](#)
[taxiwaySet](#)
[track](#)
[trackNode](#)
[trackNodes](#)
[trackOpSet](#)
[trackRef](#)
[trackSet](#)
[trackVector](#)
[trackVectors](#)
[userDefinedAirportSet](#)
[userGroundSupportEquipment](#)
[userGroundSupportEquipmentSet](#)
[vehicleEmissionFactors](#)
[volumeStationarySource](#)
[weatherData](#)
[windRose](#)
[windRoseData](#)
[windRoseStation](#)

[opType](#)
[originSourceType](#)
[profileType](#)
[quarterHourMinutes](#)
[spectralClassId](#)
[spectralFlightType](#)
[string1](#)
[string10](#)
[string100](#)
[string1024](#)
[string11](#)
[string12](#)
[string14](#)
[string15](#)
[string16](#)
[string2](#)
[string20](#)
[string200](#)
[string25](#)
[string255](#)
[string3](#)
[string30](#)
[string32](#)
[string4](#)
[string40](#)
[string42](#)
[string5](#)
[string50](#)
[string6](#)
[string64](#)
[string66](#)
[string7](#)
[string8](#)
[string9](#)
[studyType](#)
[taxiModelType](#)
[timeInModeBasisType](#)
[trackType](#)
[trainingFireFuelType](#)
[vectorTrackType](#)
[weatherDataYear](#)
[wingType](#)
[yesNoType](#)

element activityProfile

diagram	<pre> classDiagram class activityProfile { attribute name } class quarterHourlyProfile { <<Defines scaling factors for operations during a particular quarter-hour.>> } class dailyProfile { <<Defines scaling factors for operations on a particular day.>> } class monthlyProfile { <<Defines scaling factors for operations during a particular month.>> } activityProfile < -- quarterHourlyProfile activityProfile < -- dailyProfile activityProfile < -- monthlyProfile </pre>												
properties	content complex												
children	quarterHourlyProfile dailyProfile monthlyProfile												
used by	element activityProfileSet												
attributes	<table> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> <tr> <td>name</td> <td>string100</td> <td>required</td> <td></td> <td></td> <td></td> </tr> </table>	Name	Type	Use	Default	Fixed	Annotation	name	string100	required			
Name	Type	Use	Default	Fixed	Annotation								
name	string100	required											
annotation	<p>documentation</p> <p>Supports definitions of combinations of QUARTER_HOURLY_PROFILES, DAILY_PROFILES, and MONTHLY_PROFILES.</p>												

attribute activityProfile/@name

type	string100									
properties	use required									
facets	<table> <tr> <td>Kind</td> <td>Value</td> <td>Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>100</td> <td></td> </tr> </table>	Kind	Value	Annotation	minLength	0		maxLength	100	
Kind	Value	Annotation								
minLength	0									
maxLength	100									

element activityProfile/quarterHourlyProfile

diagram	<pre> classDiagram class activityProfile { class quarterHourlyProfile { <<Defines scaling factors for operations during a particular quarter-hour.>> } } </pre>
type	string100
properties	content simple
used by	element quarterHourlyProfileSet

facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation Defines scaling factors for operations during a particular quarter-hour.

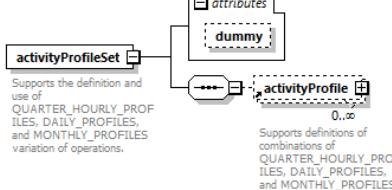
element **activityProfile/dailyProfile**

diagram	 Defines scaling factors for operations on a particular day.
type	string100
properties	content simple
used by	element dailyProfileSet
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation Defines scaling factors for operations on a particular day.

element **activityProfile/monthlyProfile**

diagram	 Defines scaling factors for operations during a particular month.
type	string100
properties	content simple
used by	element monthlyProfileSet
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation Defines scaling factors for operations during a particular month.

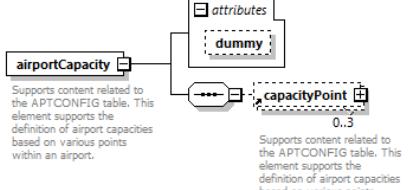
element **activityProfileSet**

diagram	 Supports the definition and use of QUARTER_HOURLY_PROFILES, DAILY_PROFILES, and MONTHLY_PROFILES variation of operations. activityProfileSet activityProfile Supports definitions of combinations of QUARTER_HOURLY_PROFILES, DAILY_PROFILES, and MONTHLY_PROFILES.
properties	content complex
children	activityProfile
used by	element operationalProfileSet complexType airportLayoutType
attributes	Name Type Use Default Fixed Annotation dummy , xs:int optional
annotation	documentation Supports the definition and use of QUARTER_HOURLY_PROFILES, DAILY_PROFILES, and MONTHLY_PROFILES variation of operations.

attribute **activityProfileSet/@dummy**

type	xs:int
properties	use optional

element **airportCapacity**

diagram	 Supports content related to the APTCONFIG table. This element supports the definition of airport capacities based on various points within an airport. airportCapacity capacityPoint Supports content related to the APTCONFIG table. This element supports the definition of airport capacities based on various points within an airport.
properties	content complex
children	capacityPoint
used by	element airportConfig complexTypes airportLayoutType scenarioAirportLayoutType
attributes	Name Type Use Default Fixed Annotation

	<p>dummy <code>xs:int</code> optional</p>
annotation	<p>documentation Supports content related to the APTCONFIG table. This element supports the definition of airport capacities based on various points within an airport.</p>
attribute <code>airportCapacity/@dummy</code>	
type	<code>xs:int</code>
properties	use optional
element <code>airportConfig</code>	
diagram	<pre> graph LR airportConfig[airportConfig] --- configurationName[configurationName] airportConfig --- useDistribution[useDistribution] airportConfig --- weight[weight] airportConfig --- startWindAngle[startWindAngle] airportConfig --- endWindAngle[endWindAngle] airportConfig --- minWindSpeed[minWindSpeed] airportConfig --- maxWindSpeed[maxWindSpeed] airportConfig --- startHour[startHour] airportConfig --- endHour[endHour] airportConfig --- minCeiling[minCeiling] airportConfig --- maxCeiling[maxCeiling] airportConfig --- minVisibility[minVisibility] airportConfig --- maxVisibility[maxVisibility] airportConfig --- minTemperature[minTemperature] airportConfig --- maxTemperature[maxTemperature] airportConfig --- airportCapacity[airportCapacity] airportConfig --- runwayAssignmentSet[runwayAssignmentSet] </pre> <p>configurationName Runway configuration name.</p> <p>useDistribution Flag to use a distribution for the configuration.</p> <p>weight Runway configuration weight factor.</p> <p>startWindAngle Start wind angle. Valid values: 0.00 to 359.00. UNITS: decimal degrees</p> <p>endWindAngle End wind angle. Valid values: 0.00 to 359.00. UNITS: decimal degrees</p> <p>minWindSpeed Minimum wind speed. Valid values: 0.00 to 100.00. UNITS: knots</p> <p>maxWindSpeed Maximum wind speed. Valid values: 0.00 to 100.00. UNITS: knots</p> <p>startHour Start hour. Valid values: 0.00 to 23.00.</p> <p>endHour End hour. Valid values: 0.00 to 23.00.</p> <p>minCeiling Minimum ceiling AFE. Valid values: 0.00 to 100000.00. UNITS: feet</p> <p>maxCeiling Maximum ceiling AFE. Valid values: 0.00 to 100000.00. UNITS: feet</p> <p>minVisibility Minimum visibility. Valid values: 0.00 to 100.00. UNITS: statute miles</p> <p>maxVisibility Maximum visibility. Valid values: 0.00 to 100.00. UNITS: statute miles</p> <p>minTemperature Minimum temperature. Valid values: -100.00 to 150.00. (°F)</p> <p>maxTemperature Maximum temperature. Valid values: -100.00 to 150.00. (°F)</p> <p>airportCapacity Airport runway capacity points.</p> <p>runwayAssignmentSet The runway assignments.</p>
properties	content complex
children	configurationName useDistribution weight startWindAngle endWindAngle minWindSpeed maxWindSpeed startHour endHour minCeiling maxCeiling minVisibility maxVisibility minTemperature maxTemperature airportCapacity runwayAssignmentSet
used by	element airportConfigSet
annotation	<p>documentation Supports content relating to the APTCONFIG table. This element supports the definition of airports and their runway configurations for a given scenario layout. Airports operate under different configurations (the pattern of aircraft arrivals and departures on specific runways) over the course of a year depending on the weather, capacity, and noise abatement issues.</p>

element `airportConfig/configurationName`


diagram	<pre> graph LR configurationName[configurationName] </pre> <p>configurationName Runway configuration name.</p>
type	<code>string100</code>

properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation Runway configuration name.


element **airportConfig/useDistribution**

diagram	 Flag to use a distribution for the configuration.
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Flag to use a distribution for the configuration.


element **airportConfig/weight**

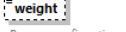diagram	 Runway configuration weight factor.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Runway configuration weight factor.


element **airportConfig/startWindAngle**

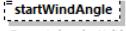diagram	 Start wind angle. Valid values: 0.00 to 359.00, UNITS: decimal degrees
type	int0to360
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxExclusive 360
annotation	documentation Start wind angle. Valid values: 0.00 to 359.00. UNITS: decimal degrees

element **airportConfig/endWindAngle**

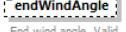diagram	 End wind angle. Valid values: 0.00 to 359.00, UNITS: decimal degrees
type	int0to360
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxExclusive 360
annotation	documentation End wind angle. Valid values: 0.00 to 359.00. UNITS: decimal degrees

element **airportConfig/minWindSpeed**

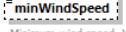diagram	 Minimum wind speed. Valid values: 0.00 to 100.00, UNITS: knots
type	doubleExclusive100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Minimum wind speed. Valid values: 0.00 to 100.00. UNITS: knots

element **airportConfig/maxWindSpeed**

diagram	<p>maxWindSpeed Maximum wind speed. Valid values: 0.00 to 100.00. UNITS: knots</p>
type	doubleExclusive100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Maximum wind speed. Valid values: 0.00 to 100.00. UNITS: knots

element airportConfig/startHour

diagram	<p>startHour Start hour. Valid values: 0.00 to 23.00.</p>
type	doubleInclusive24
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 24
annotation	documentation Start hour. Valid values: 0.00 to 23.00.

element airportConfig/endHour

diagram	<p>endHour End hour. Valid values: 0.00 to 23.00.</p>
type	doubleInclusive24
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 24
annotation	documentation End hour. Valid values: 0.00 to 23.00.

element airportConfig/minCeiling

diagram	<p>minCeiling Minimum ceiling AFE. Valid values: 0.00 to 100000.00. UNITS: feet</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Minimum ceiling AFE. Valid values: 0.00 to 100000.00. UNITS: feet

element airportConfig/maxCeiling

diagram	<p>maxCeiling Maximum ceiling AFE. Valid values: 0.00 to 100000.00. UNITS: feet</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Maximum ceiling AFE. Valid values: 0.00 to 100000.00. UNITS: feet

element airportConfig/minVisibility

diagram	<p>minVisibility Minimum visibility. Valid values: 0.00 to 100.00. UNITS: statute miles</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

annotation	documentation Minimum visibility. Valid values: 0.00 to 100.00. UNITS: statute miles
------------	---

element **airportConfig/maxVisibility**

diagram	 Maximum visibility. Valid values: 0.00 to 100.00. UNITS: statute miles
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Maximum visibility. Valid values: 0.00 to 100.00. UNITS: statute miles

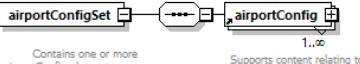
element **airportConfig/minTemperature**

diagram	 Minimum temperature. Valid values: -100.00 to 150.00. (*F)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Minimum temperature. Valid values: -100.00 to 150.00. (*F)

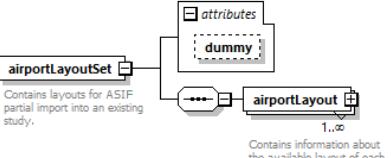
element **airportConfig/maxTemperature**

diagram	 Maximum temperature. Valid values: -100.00 to 150.00. (*F)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Maximum temperature. Valid values: -100.00 to 150.00. (*F)

element **airportConfigSet**

diagram	 Contains one or more airportConfig elements.
properties	content complex
children	airportConfig
used by	complexTypes airportLayoutType scenarioAirportLayoutType
annotation	documentation Contains one or more airportConfig elements.

element **airportLayoutSet**


diagram	 Contains layouts for ASIF partial import into an existing study.
properties	content complex
children	airportLayout
used by	elements AsifXml_study .
attributes	Name Type Use Default Fixed Annotation dummy xs:int optional
annotation	documentation Contains layouts for ASIF partial import into an existing study.

attribute **airportLayoutSet/@dummy**

type	xs:int
properties	use optional

element **airportLayoutSet/airportLayout**

diagram

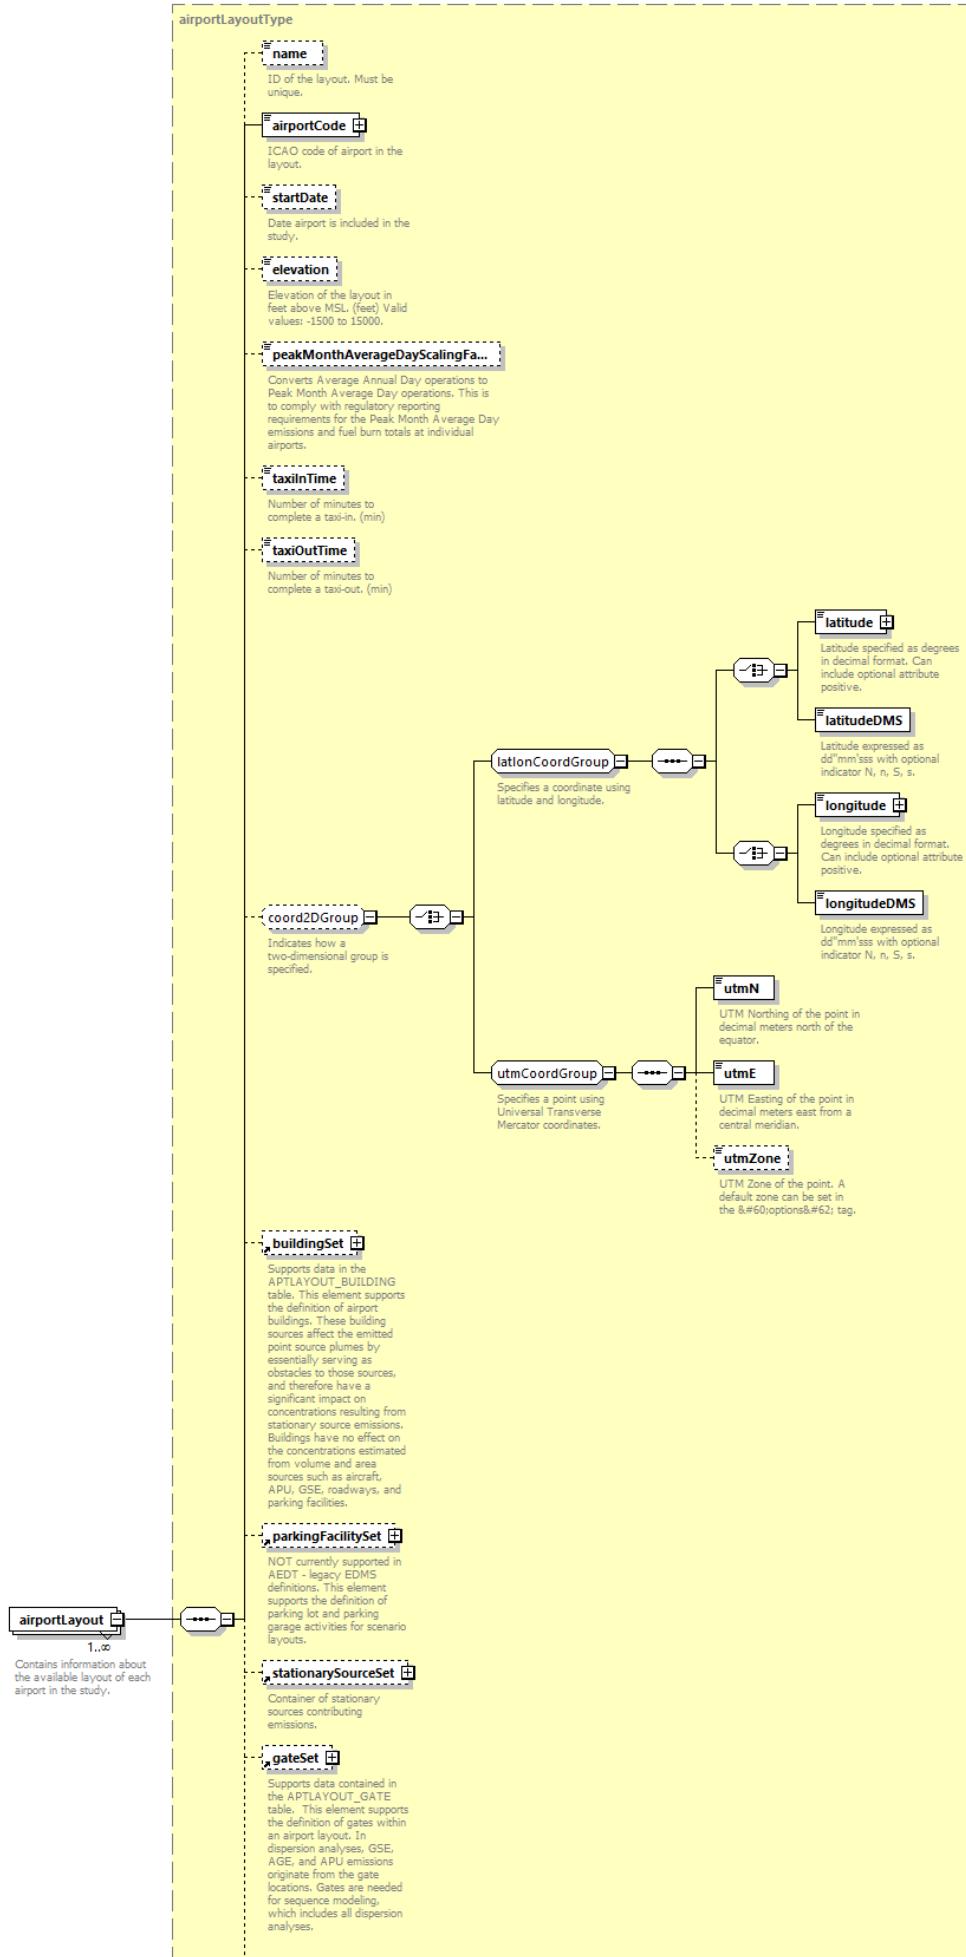



	type airportLayoutType
properties	minOcc 1 maxOcc unbounded content complex
children	name airportCode startDate elevation peakMonthAverageDayScalingFactor taxiInTime latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone buildingSet parkingFacilitySet stationarySourceSet gateSet roadwaySet taxiwaySet runwaySet taxipathSet trackSet airportConfigSet airportCapacity , quarterHourlyProfileSet dailyProfileSet monthlyProfileSet activityProfileSet
annotation	documentation Contains information about the available layout of each airport in the study.

element **airportWeather**


diagram	
properties	content complex
children	airportWeatherStationId airportWeatherStation
used by	complexType airport

element **airportWeather/airportWeatherStationId**

diagram	
type	xs:int

properties	content simple
------------	----------------

element **airportWeatherStation**

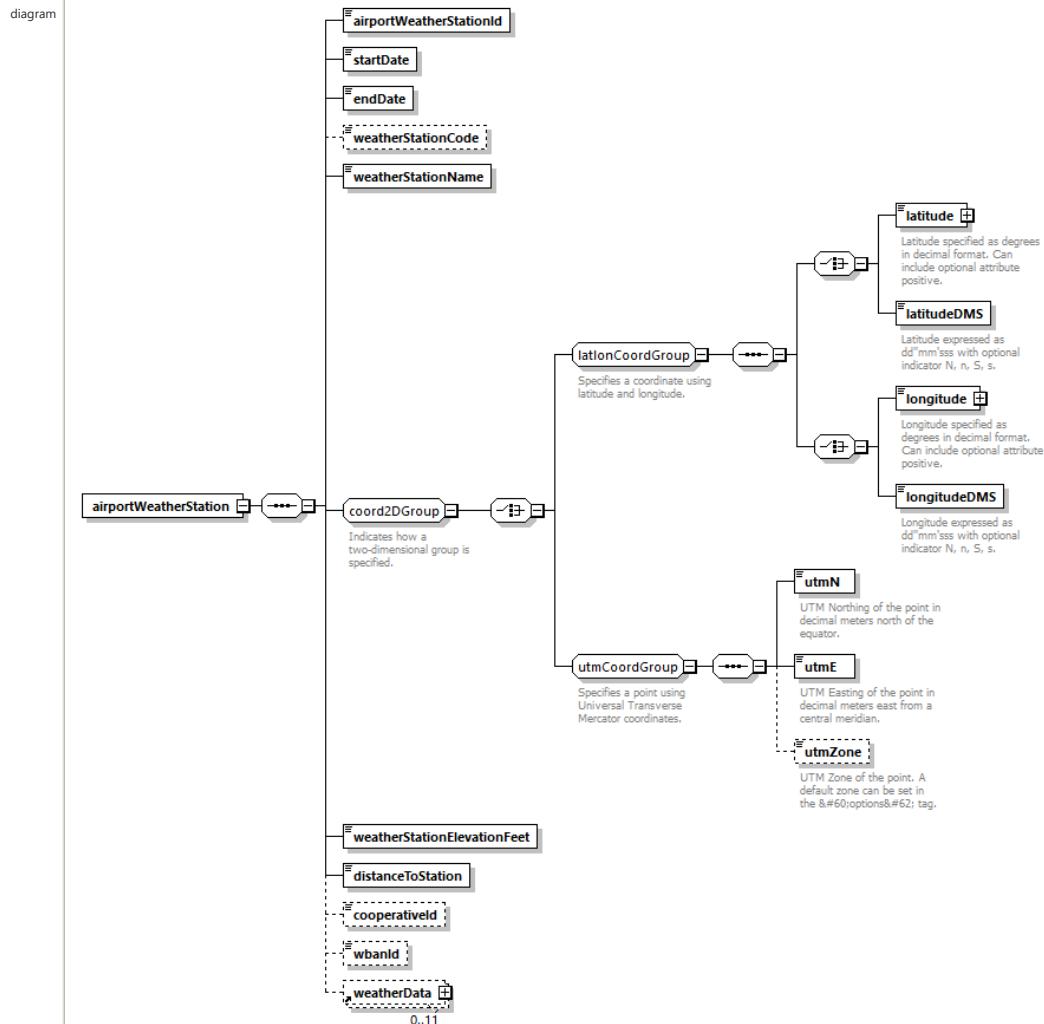

properties	content complex
------------	-----------------

children	<code>airportWeatherStationId</code> <code>startDate</code> <code>endDate</code> <code>weatherStationCode</code> <code>weatherStationName</code> <code>latitude</code> <code>latitudeDMS</code> <code>longitude</code> <code>longitudeDMS</code> <code>utmN</code> <code>utmE</code> <code>utmZone</code> <code>weatherStationElevationFeet</code> <code>distanceToStation</code> <code>cooperativeld</code> <code>wbnid</code> <code>weatherData</code>
----------	--

used by	element airportWeather
---------	--

element **airportWeatherStation/airportWeatherStationId**

diagram	<code>airportWeatherStationId</code>
---------	--------------------------------------

type	<code>xs:int</code>
------	---------------------

properties	content simple
------------	----------------

element **airportWeatherStation/startDate**

diagram	<code>startDate</code>
---------	------------------------

type	<code>xs:date</code>
------	----------------------

properties	content simple
------------	----------------

element **airportWeatherStation/endDate**

diagram	<code>endDate</code>
---------	----------------------

type	<code>xs:date</code>
------	----------------------

properties	content simple
------------	----------------

element **airportWeatherStation/weatherStationCode**


diagram	<code>weatherStationCode</code>
---------	---------------------------------

type	<code>string5</code>
------	----------------------

properties	minOcc 0 maxOcc 1
------------	----------------------

	content simple
facets	Kind Value Annotation minLength 0 maxLength 5

element **airportWeatherStation/weatherStationName**

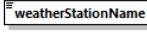diagram	
type	string25
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 25

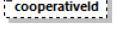
element **airportWeatherStation/weatherStationElevationFeet**

diagram	
type	xs:int
properties	content simple

element **airportWeatherStation/distanceToStation**

diagram	
type	xs:double
properties	content simple

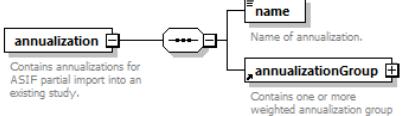
element **airportWeatherStation/cooperativelId**

diagram	
type	string6
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 6

element **airportWeatherStation/wbanId**

diagram	
type	string5
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 5

element **annualization**

diagram	 <p>Contains annualizations for ASIP partial import into an existing study.</p>
properties	content complex
children	name annualizationGroup
used by	elements AsifXml scenario
annotation	documentation Contains annualizations for ASIP partial import into an existing study.

element **annualization/name**

diagram	
	Name of annualization.
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Name of annualization.

element **annualizationCase**

diagram	<pre> graph LR AC[annualizationCase] --- name[name] AC --- weight[weight] AC --- scaleFactor[scaleFactor] </pre> <p>annualizationCase Collection of study cases whose results are weighted in the scenario annualization rollup.</p> <p>name Description of the case.</p> <p>weight Weight associated with the case.</p> <p>scaleFactor Scale factor applied to results for the case.</p>
properties	content complex
children	name weight scaleFactor
used by	group annualizationGroupCase
annotation	documentation Collection of study cases whose results are weighted in the scenario annualization rollup.

element **annualizationCase/name**

diagram	<pre> graph LR ANNAME[name] </pre> <p>name Description of the case.</p>
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Description of the case.

element **annualizationCase/weight**

diagram	<pre> graph LR ANWEIGHT[weight] </pre> <p>weight Weight associated with the case.</p>
type	xs:double
properties	content simple
annotation	documentation Weight associated with the case.

element **annualizationCase/scaleFactor**

diagram	<pre> graph LR ANSCALEFACTOR[scaleFactor] </pre> <p>scaleFactor Scale factor applied to results for the case.</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation Scale factor applied to results for the case.

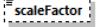
element **annualizationGroup**

diagram	<pre> graph LR AG[annualizationGroup] --- weight[weight] AG --- scaleFactor[scaleFactor] AG --- AGCASE[annualizationGroupCase] AGCASE --- AGC[annualizationCase] </pre> <p>annualizationGroup Contains one or more weighted annualization group cases.</p> <p>weight Weight associated with the annualization group.</p> <p>scaleFactor Scale factor applied to results for the annualization group.</p> <p>annualizationGroupCase Allows for grouping cases into groups, and groups into parent groups.</p> <p>annualizationCase Collection of study cases whose results are weighted in the scenario annualization rollup.</p>
properties	content complex
children	weight scaleFactor annualizationGroup annualizationCase
used by	element annualization group annualizationGroupCase
annotation	documentation Contains one or more weighted annualization group cases.

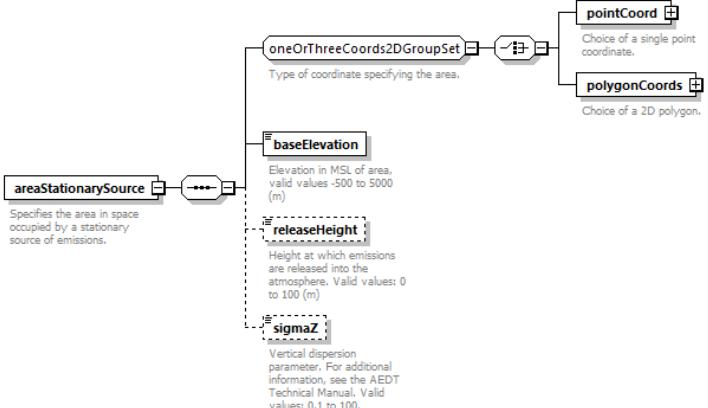
element **annualizationGroup/weight**

diagram	 weight Weight associated with the annualization group.
type	xs:double
properties	content simple
annotation	documentation Weight associated with the annualization group.

element **annualizationGroup/scaleFactor**

diagram	 scaleFactor Scale factor applied to results for the annualization group.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation Scale factor applied to results for the annualization group.

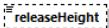
element **areaStationarySource**

diagram	
properties	content complex
children	pointCoord polygonCoords baseElevation releaseHeight sigmaZ
used by	element stationarySource
annotation	Specifies the area in space occupied by a stationary source of emissions.

element **areaStationarySource/baseElevation**

diagram	 baseElevation Elevation in MSL of area, valid values -500 to 5000 (m)
type	xs:double
properties	content simple
annotation	Elevation in MSL of area, valid values -500 to 5000 (m)


element **areaStationarySource/releaseHeight**

diagram	 releaseHeight Height at which emissions are released into the atmosphere. Valid values: 0 to 100 (m)
type	doubleInclusive100
properties	minOcc 0 maxOcc 1 content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Height at which emissions are released into the atmosphere. Valid values: 0 to 100 (m)

element **areaStationarySource/sigmaZ**

diagram	<p>sigmaZ</p> <p>Vertical dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: 0.1 to 100.</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Vertical dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: 0.1 to 100.

element AsifXml

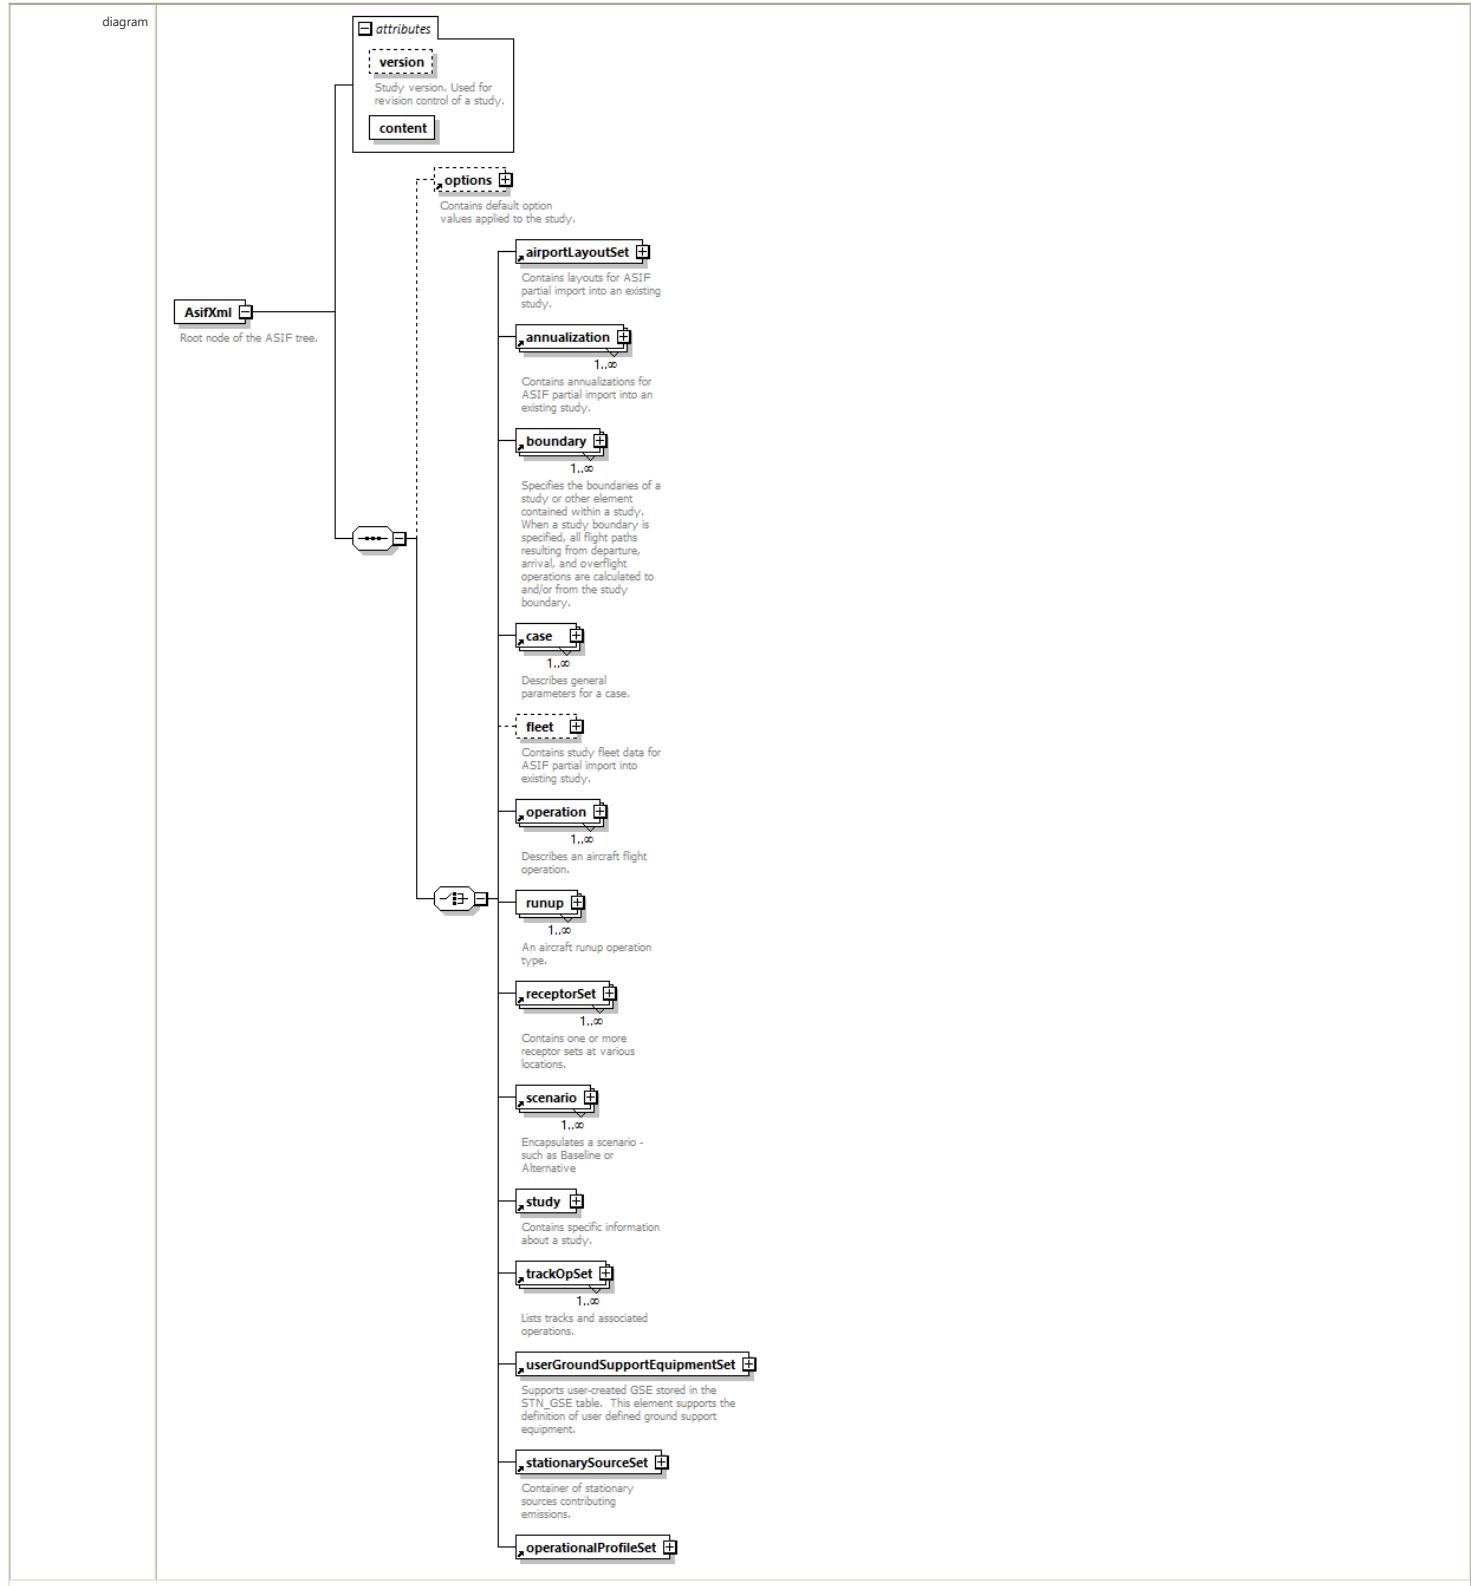

properties	content complex				
children	options airportLayoutSet annualization boundary case fleet operation runup receptorSet scenario study trackOpSet userGroundSupportEquipmentSet stationarySourceSet operationalProfileSet				
attributes	Name version	Type string16	Use optional	Default	Fixed
	content	derived by: xs:string	required		Annotation documentation Study version. Used for revision control of a study.

attribute **AsifXml/@version**


type	string16
properties	use optional
facets	Kind Value Annotation minLength 0 maxLength 16
annotation	documentation Study version. Used for revision control of a study.


attribute **AsifXml/@content**

type	restriction of xs:string
properties	use required
facets	Kind Value Annotation enumeration airportLayoutSet enumeration annualization enumeration case enumeration fleet enumeration receptorSets enumeration scenario enumeration study enumeration boundary enumeration trackOpSet enumeration runup enumeration userGroundSupportEquipmentSet enumeration stationarySourceSet enumeration operationalProfileSet

element **AsifXml/fleet**

diagram

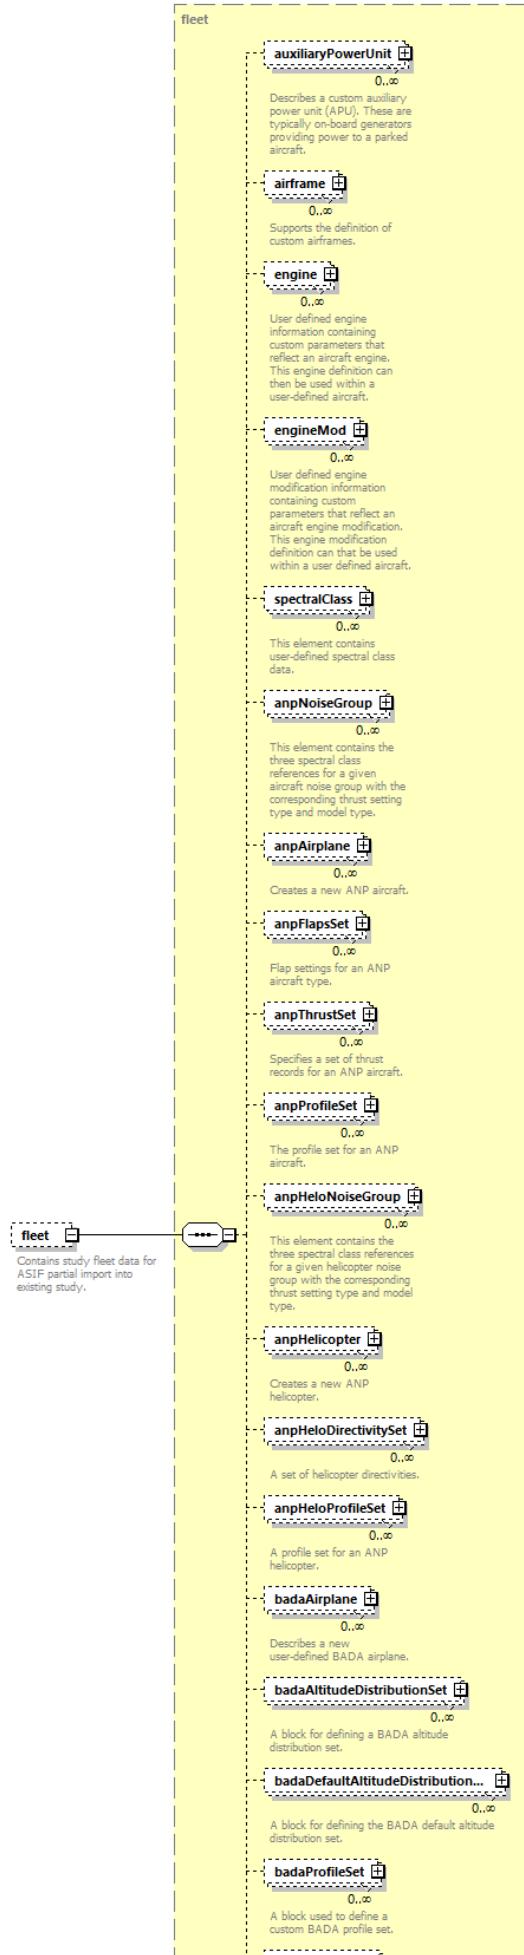

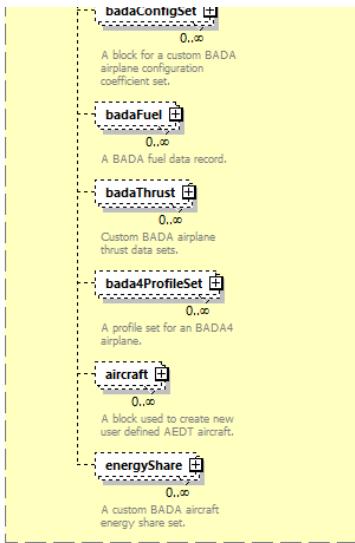

type	fleet
properties	minOcc 0 maxOcc 1 content complex
children	auxiliaryPowerUnit airframe engine engineMod spectralClass anpNoiseGroup anpAirplane anpFlapsSet anpThrustSet anpProfileSet anpHeloNoiseGroup anpHelicopter anpHeloDirectivitySet anpHeloProfileSet badaAirplane badaAltitudeDistributionSet badaDefaultAltitudeDistributionSet badaProfileSet badaConfigSet badaFuel badaThrust bada4ProfileSet aircraft energyShare
annotation	documentation Contains study fleet data for ASIF partial import into existing study.

element **AsifXml/runup**

diagram	<pre> classDiagram class runup { attributes dummy id aircraftType flightNumber tailNumber numOperations airport latitude longitude coord2DGroup lationCoordGroup utmCoordGroup opTime duration heading numEnginesUsed isPreFlight thrustPerEngine } association runup "1..>" runup association runup "1..>" lationCoordGroup association runup "1..>" utmCoordGroup } </pre>												
type	<code>runup</code>												
properties	minOcc 1 maxOcc unbounded content complex												
children	<code>id</code> <code>aircraftType</code> <code>flightNumber</code> <code>tailNumber</code> <code>numOperations</code> <code>airport</code> <code>latitude</code> <code>longitude</code> <code>coord2DGroup</code> <code>lationCoordGroup</code> <code>utmCoordGroup</code> <code>opTime</code> <code>duration</code> <code>heading</code> <code>numEnginesUsed</code> <code>isPreFlight</code> <code>thrustPerEngine</code>												
attributes	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td><code>dummy</code></td> <td><code>xint</code></td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	<code>dummy</code>	<code>xint</code>	optional			
Name	Type	Use	Default	Fixed	Annotation								
<code>dummy</code>	<code>xint</code>	optional											
annotation	<p>documentation</p> <p>An aircraft runup operation type.</p>												

element **backbone**

diagram	<p>backbone Represents the centerline of a set of dispersed tracks.</p> <p>dispersionWeight Dispersion weights associated with the subtracks for this backbone. Subtracks are numbered in increasing order from the backbone outward. The allowable number of subtracks for a backbone are 1, 3, 5, 7 and 9. Valid dispersion weight values are greater than one and less than or equal to 1. The sum of the dispersion weights for this backbone must equal 1.</p> <p>backboneNodes The set of 3D nodes for the backbone.</p>
properties	content complex
children	dispersionWeight backboneNodes
used by	element track
annotation	<p>documentation</p> <p>Represents the centerline of a set of dispersed tracks.</p>

element **backboneNode**

diagram	<p>backboneNode A 3D node that is part of a backbone.</p> <p>trackNode A flight track node.</p> <p>halfwidth Halfwidth in nautical miles. (nmi)</p>
properties	content complex
children	trackNode halfwidth
used by	element backboneNodes
annotation	<p>documentation</p> <p>A 3D node that is part of a backbone.</p>

element **backboneNode/halfwidth**

diagram	<p>halfwidth Halfwidth in nautical miles. (nmi)</p>
type	xs:double
properties	content simple
annotation	<p>documentation</p> <p>Halfwidth in nautical miles. (nmi)</p>

element **backboneNodes**

diagram	<p>backboneNodes The set of 3D nodes for the backbone.</p> <p>backboneNode A 3D node that is part of a backbone.</p>
properties	content complex
children	backboneNode
used by	element backbone
annotation	<p>documentation</p> <p>The set of 3D nodes for the backbone.</p>

element **boilerHeaterTypeCode**

diagram	<p>boilerHeaterTypeCode An integer value for the Boiler/Heater type represented. This value comes from the SUBCATEGORY_ID column of the STN_CATEGORY table in the AEDT FLEET database. Valid values: 1 to 27, 33 to 34, 38 to 62, 69 to 75, 80 to 91.</p>
type	union of (restriction of xs:int , restriction of xs:int , restriction of xs:int , restriction of xs:int , restriction of xs:int)
properties	content simple
used by	element categoryBoilerHeater
annotation	<p>documentation</p> <p>An integer value for the Boiler/Heater type represented. This value comes from the SUBCATEGORY_ID column of the STN_CATEGORY table in the AEDT FLEET database. Valid values: 1 to 27, 33 to 34, 38 to 62, 69 to 75, 80 to 91.</p>

element **boundary**

diagram	<pre> classDiagram boundary "boundary" --> attributes "attributes" attributes "dummy" --> boundary boundary "boundary" --> polygon "polygon" polygon "*" --> note "Set of coordinates defining the boundary." </pre>												
properties	content complex												
children	polygon												
used by	elements AsifXml_study .												
attributes	<table> <tr> <td>Name</td><td>Type</td><td>Use</td><td>Default</td><td>Fixed</td><td>Annotation</td></tr> <tr> <td>dummy</td><td>xs:int</td><td>optional</td><td></td><td></td><td></td></tr> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	<p>documentation</p> <p>Specifies the boundaries of a study or other element contained within a study. When a study boundary is specified, all flight paths resulting from departure, arrival, and overflight operations are calculated to and/or from the study boundary.</p>												

attribute boundary/@dummy

type	xs:int
properties	use optional

element boundary/polygon

diagram	<pre> classDiagram boundary "boundary" --> polygon "polygon" polygon "1..∞" --> polygon2DType "polygon2DType" polygon2DType --> boundary "boundary" polygon2DType --> dummy "dummy" polygon2DType --> vertex "vertex" dummy "*" --> note "A list of vertices defining the polygon." </pre>
type	polygon2DType
properties	minOcc 1 maxOcc unbounded content complex
children	dummy vertex
annotation	<p>documentation</p> <p>Set of coordinates defining the boundary.</p>

element building

diagram	<pre> classDiagram building "building" --> name "name" building "building" --> elevation "elevation" building "building" --> height "height" building "building" --> releaseHeight "releaseHeight" building "building" --> oneOrThreeCoords2DGroupSet "oneOrThreeCoords2DGroupSet" oneOrThreeCoords2DGroupSet --> pointCoord "pointCoord" oneOrThreeCoords2DGroupSet --> polygonCoords "polygonCoords" </pre> <p>Supports data in the APTLAYOUT_BUILDING table. This element supports the definition of airport buildings. These building sources affect the emitted point source plumes by essentially serving as obstacles to those sources, and therefore have a significant impact on concentrations resulting from stationary source emissions. Buildings have no effect on the concentrations estimated from volume and area sources such as aircraft, APU, GSE, roadways, and parking facilities.</p>
properties	content complex
children	name elevation height releaseHeight pointCoord polygonCoords
used by	element buildingSet
annotation	<p>documentation</p> <p>Supports data in the APTLAYOUT_BUILDING table. This element supports the definition of airport buildings. These building sources affect the emitted point source plumes by essentially serving as obstacles to those sources, and therefore have a significant impact on concentrations resulting from stationary source emissions. Buildings have no effect on the concentrations estimated from volume and area sources such as aircraft, APU, GSE, roadways, and parking facilities.</p>

element building/name

diagram	<pre> classDiagram building "building" --> name "name" </pre> <p>Name of the building.</p>
type	string255
properties	content simple

facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Name of the building.

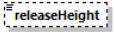
element **building/elevation**

diagram	 elevation Elevation of building. Valid values: -500 to 5000. (m)
type	xs:double
properties	content simple
annotation	documentation Elevation of building. Valid values: -500 to 5000. (m)

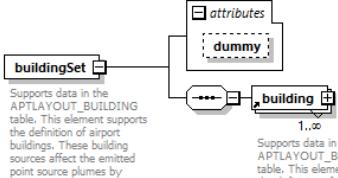
element **building/height**

diagram	 height Height of building. Valid values: 0 to 100 (m)
type	xs:double
properties	content simple
annotation	documentation Height of building. Valid values: 0 to 100 (m)

element **building/releaseHeight**

diagram	 releaseHeight Height at which emissions are released into the atmosphere. Valid values 0 to 100 (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Height at which emissions are released into the atmosphere. Valid values 0 to 100 (m)

element **buildingSet**

diagram	 buildingSet Supports data in the APTLAYOUT_BUILDING table. This element supports the definition of airport buildings. These building sources affect the emitted point source plumes by essentially serving as obstacles to those sources, and therefore have a significant impact on concentrations resulting from stationary source emissions. Buildings have no effect on the concentrations estimated from volume and area sources such as aircraft, APU, GSE, roadways, and parking facilities. attributes dummy building 1..00 Supports data in the APTLAYOUT_BUILDING table. This element supports the definition of airport buildings. These building sources affect the emitted point source plumes by essentially serving as obstacles to those sources, and therefore have a significant impact on concentrations resulting from stationary source emissions. Buildings have no effect on the concentrations estimated from volume and area sources such as aircraft, APU, GSE, roadways, and parking facilities.
properties	content complex
children	building
used by	complexType airportLayoutType
attributes	Name Type Use Default Fixed Annotation dummy , xs:int optional
annotation	documentation Supports data in the APTLAYOUT_BUILDING table. This element supports the definition of airport buildings. These building sources affect the emitted point source plumes by essentially serving as obstacles to those sources, and therefore have a significant impact on concentrations resulting from stationary source emissions. Buildings have no effect on the concentrations estimated from volume and area sources such as aircraft, APU, GSE, roadways, and parking facilities.

attribute **buildingSet/@dummy**

type	xs:int
properties	use optional

element **capacityPoint**

diagram	<pre> classDiagram class capacityPoint class arrivalsPerHour class departuresPerHour capacityPoint "1..>" arrivalsPerHour capacityPoint "1..>" departuresPerHour </pre> <p>capacityPoint Supports content related to the APTCONFIG table. This element supports the definition of airport capacities based on various points within an airport.</p> <p>arrivalsPerHour Number of arrivals per hour. Valid values: 0.00 to 400.00. (operations per hour)</p> <p>departuresPerHour Number of departures per hour. Valid values: 0.00 to 400.00. (operations per hour)</p>
properties	content complex
children	arrivalsPerHour departuresPerHour
used by	element airportCapacity
annotation	<p>documentation</p> <p>Supports content related to the APTCONFIG table. This element supports the definition of airport capacities based on various points within an airport.</p>

element capacityPoint/arrivalsPerHour

diagram	<pre> classDiagram class arrivalsPerHour </pre> <p>arrivalsPerHour Number of arrivals per hour. Valid values: 0.00 to 400.00. (operations per hour)</p>
type	xs:double
properties	content simple
annotation	<p>documentation</p> <p>Number of arrivals per hour. Valid values: 0.00 to 400.00. (operations per hour)</p>

element capacityPoint/departuresPerHour

diagram	<pre> classDiagram class departuresPerHour </pre> <p>departuresPerHour Number of departures per hour. Valid values: 0.00 to 400.00. (operations per hour)</p>
type	xs:double
properties	content simple
annotation	<p>documentation</p> <p>Number of departures per hour. Valid values: 0.00 to 400.00. (operations per hour)</p>

element case

diagram	<pre> classDiagram class Case { caseld name source startTime duration climateld hourlyWxFile hourlyWxMDS description } class case class trackOpSet class operation class runup class airportActivityGroup class parkingFacilityOperationSet class roadwayOperationSet class stationarySourceOperationSet class groundSupportEquipmentPopulationOperationSet class reference Case "1..*" --> "1..*" case Case "1..*" --> "1..*" trackOpSet Case "1..*" --> "1..*" operation Case "1..*" --> "1..*" runup Case "1..*" --> "1..*" airportActivityGroup Case "1..*" --> "1..*" parkingFacilityOperationSet Case "1..*" --> "1..*" roadwayOperationSet Case "1..*" --> "1..*" stationarySourceOperationSet Case "1..*" --> "1..*" groundSupportEquipmentPopulationOperationSet Case "1..*" --> "1..*" reference </pre>
properties	content complex
children	caseld name source startTime duration climateld hourlyWxFile hourlyWxMDS description case trackOpSet operation runup parkingFacilityOperationSet roadwayOperationSet stationarySourceOperationSet groundSupportEquipmentPopulationOperationSet reference
used by	elements AsifXml case caseSet

annotation	documentation Describes general parameters for a case.
------------	---

element **case/caseld**

diagram	 caseld Case ID.
type	xs:int
properties	content simple
annotation	documentation Case ID.

element **case/name**

diagram	 name The name of the case (must be unique within the scenario).
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The name of the case (must be unique within the scenario).

element **case/source**

diagram	 source
type	emissionsSourceType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation enumeration Container enumeration Aircraft enumeration GSE Population enumeration Parking Facilities enumeration Roadways enumeration Stationary Sources

element **case/startTime**

diagram	 startTime Case's start time. If not defined, the value specified in the scenario element will be used. Must match the value for startTime for the scenario. Accepts dateTime string.
type	xs:dateTime
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Case's start time. If not defined, the value specified in the scenario element will be used. Must match the value for startTime for the scenario. Accepts dateTime string.

element **case/duration**


diagram	 duration Case's duration. If not defined, the value specified in the scenario element will be used. Must match the value for duration for the scenario. For AEDT this is restricted to 24 hours (1 day). All cases within a scenario must have the same duration as the scenario. (hr).
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Case's duration. If not defined, the value specified in the scenario element will be used. Must match the value for duration for the scenario. For AEDT this is restricted to 24 hours (1 day). All cases within a scenario must have the same duration as the scenario. (hr).

element **case/climateId**

diagram	 climateId ID of a climate condition.
type	string8

properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation ID of a climate condition.

element **case/hourlyWxFile**

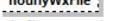diagram	 <p>The file containing the hourly weather data used for emissions calculations. This element is not supported in AEDT.</p>
type	string255
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The file containing the hourly weather data used for emissions calculations. This element is not supported in AEDT.


element **case/hourlyWxMD5**

diagram	 <p>The weather file's MD5 checksum. If not present, the MD5 checksum will be computed for the user at the time of importing the ASIF. This element is not supported in AEDT.</p>
type	string16
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 16
annotation	documentation The weather file's MD5 checksum. If not present, the MD5 checksum will be computed for the user at the time of importing the ASIF. This element is not supported in AEDT.

element **case/description**

diagram	 <p>Description of the case.</p>
type	string255
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Description of the case.

element **case/runup**

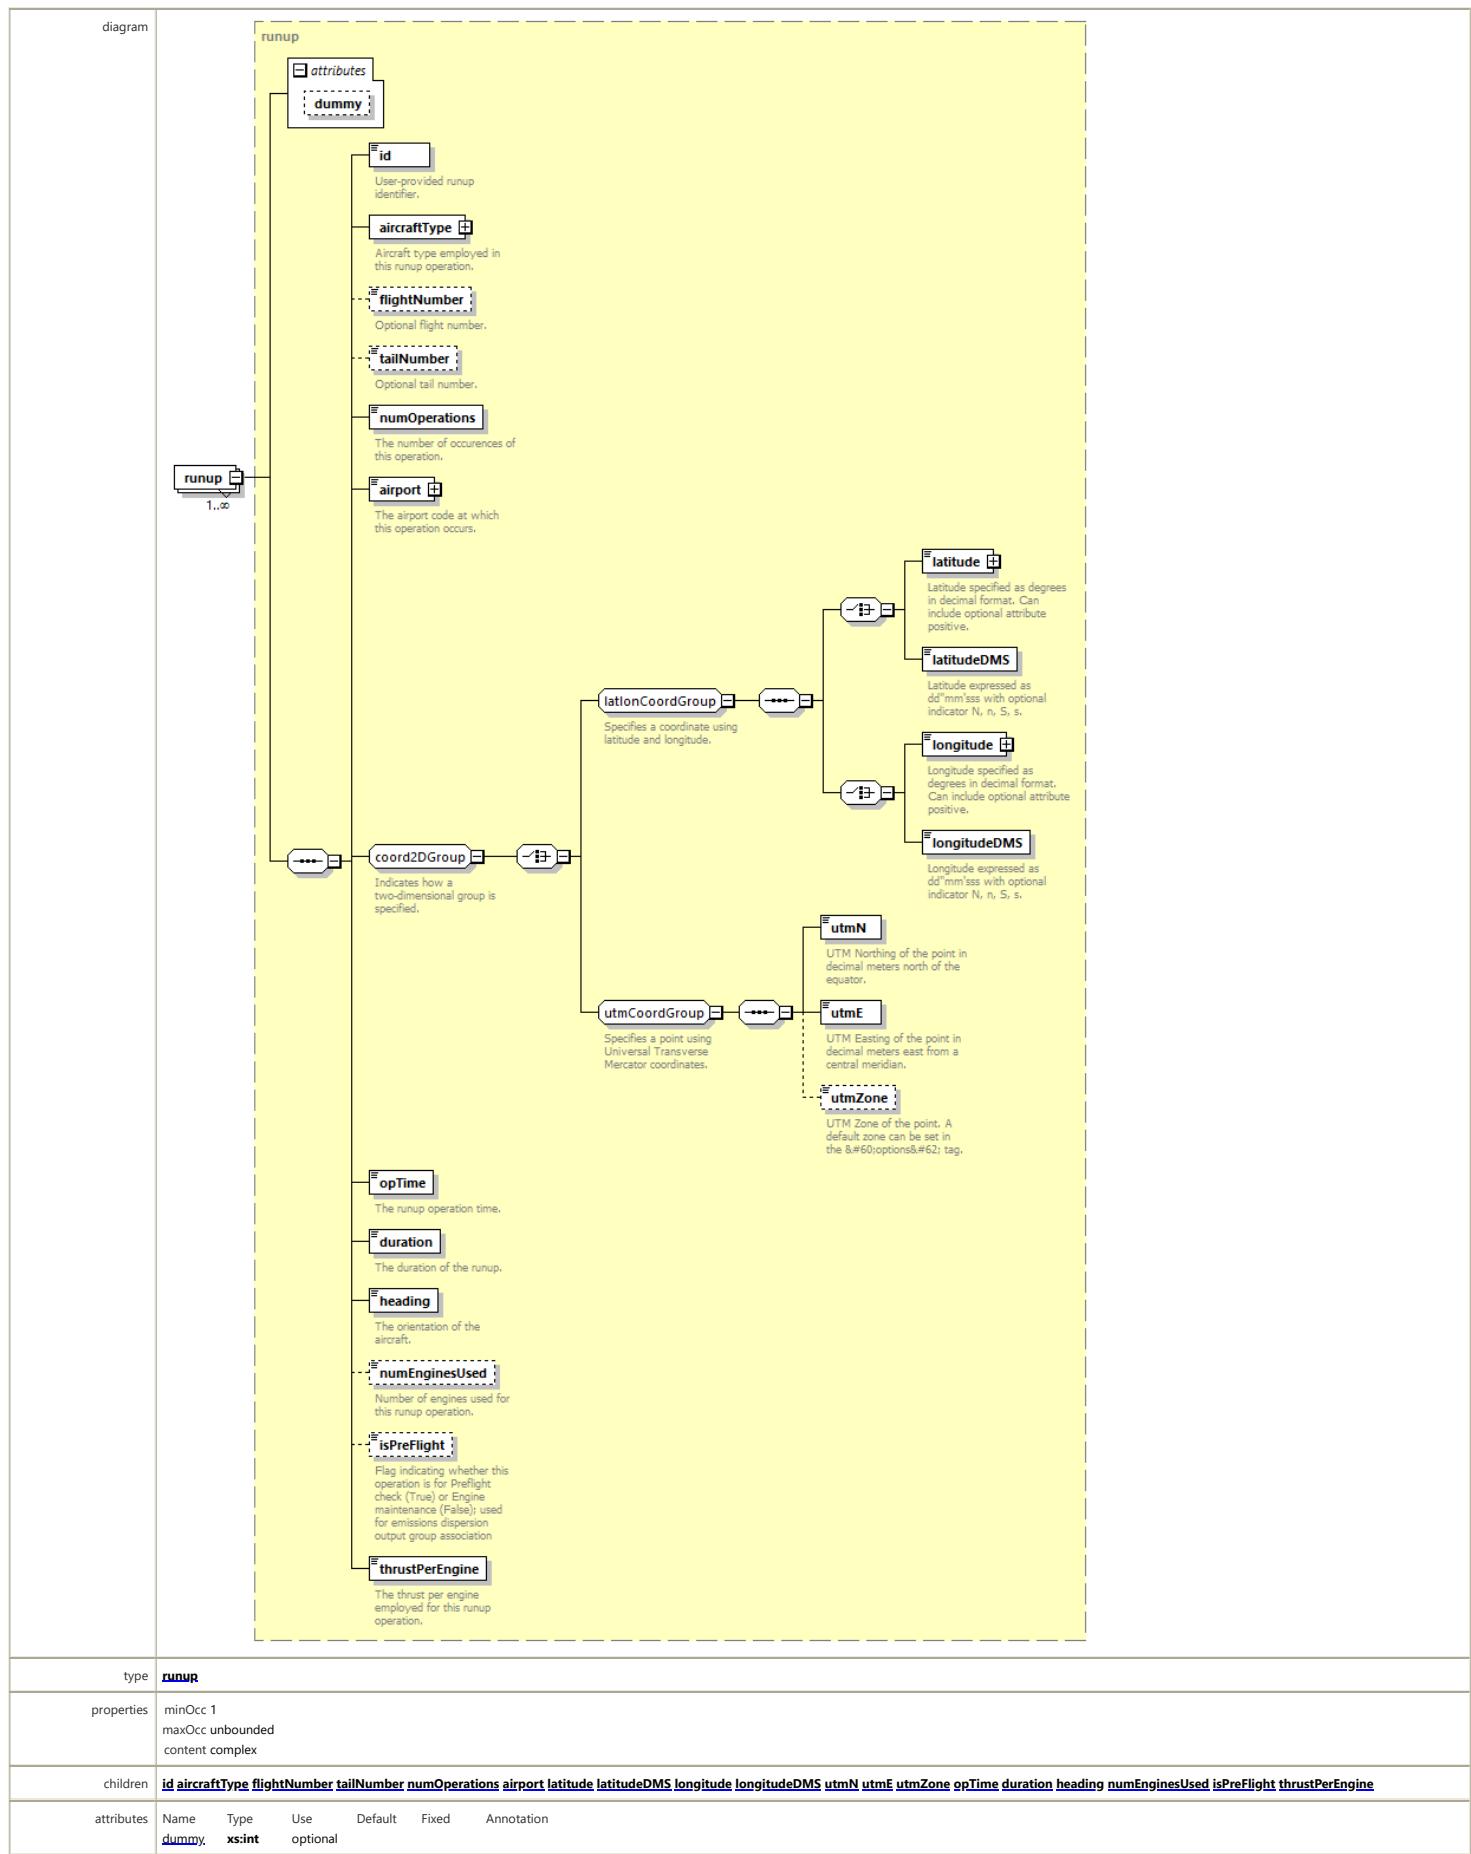

type **runup**

properties
minOcc 1
maxOcc unbounded
content complex

children **id aircraftType flightNumber tailNumber numOperations airport latitude longitudeDMS utmN utmE utmZone opTime duration heading numEnginesUsed isPreFlight thrustPerEngine**

attributes
Name Type Use Default Fixed Annotation
dummy xsint optional

element **case/reference**

diagram	<p>reference</p> <p>Refers to a case by its scenario name and case name. Conditions required: a) all airport layouts in the referenced scenario must be assigned to the target scenario, and b) the referenced case must have a unique name in the new scenario.</p> <p>refScenario</p> <p>Scenario under which an existing case appears.</p> <p>refCase</p> <p>Existing case that appears under the refScenario.</p>
properties	content complex
children	refScenario refCase
annotation	<p>documentation</p> <p>Refers to a case by its scenario name and case name. Conditions required: a) all airport layouts in the referenced scenario must be assigned to the target scenario, and b) the referenced case must have a unique name in the new scenario.</p>

element **case/reference/refScenario**

diagram	<p>refScenario</p> <p>Scenario under which an existing case appears.</p>									
type	string255									
properties	content simple									
facets	<table> <tr> <td>Kind</td> <td>Value</td> <td>Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>255</td> <td></td> </tr> </table>	Kind	Value	Annotation	minLength	0		maxLength	255	
Kind	Value	Annotation								
minLength	0									
maxLength	255									
annotation	<p>documentation</p> <p>Scenario under which an existing case appears.</p>									

element **case/reference/refCase**

diagram	<p>refCase</p> <p>Existing case that appears under the refScenario.</p>									
type	string255									
properties	content simple									
facets	<table> <tr> <td>Kind</td> <td>Value</td> <td>Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>255</td> <td></td> </tr> </table>	Kind	Value	Annotation	minLength	0		maxLength	255	
Kind	Value	Annotation								
minLength	0									
maxLength	255									
annotation	<p>documentation</p> <p>Existing case that appears under the refScenario.</p>									

element **caseSet**

diagram	<p>caseSet</p> <p>Placeholder for one or more cases.</p> <p>attributes</p> <p>dummy</p> <p>case</p> <p>1..∞</p> <p>Describes general parameters for a case.</p>												
properties	content complex												
children	case												
used by	element scenario												
attributes	<table> <tr> <td>Name</td> <td>Type</td> <td>Use</td> <td>Default</td> <td>Fixed</td> <td>Annotation</td> </tr> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	<p>documentation</p> <p>Placeholder for one or more cases.</p>												

attribute **caseSet/@dummy**

type	xs:int
properties	use optional

element **categoryAircraftEngine**

diagram	<pre> classDiagram categoryAircraftEngine "Describes a category for the time an aircraft engine is at various power levels." --> engineCode engineCode "Time at which engine is operating at 7% (taxi) power. Valid values: 0 to 1000. (min)" --> timePercentPower7 engineCode "Time at which engine is operating at 30% (approach) power. Valid values: 0 to 1000. (min)" --> timePercentPower30 engineCode "Time at which engine is operating at 85% (climbout) power. Valid values: 0 to 1000. (min)" --> timePercentPower85 engineCode "Time at which engine is operating at 100% (takeoff) power. Valid values: 0 to 1000. (min)" --> timePercentPower100 </pre>
properties	content complex
children	engineCode timePercentPower7 timePercentPower30 timePercentPower85 timePercentPower100
used by	element stationarySource
annotation	<p>documentation</p> <p>Describes a category for the time an aircraft engine is at various power levels.</p>

element categoryAircraftEngine/engineCode

diagram	
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255

element categoryAircraftEngine/timePercentPower7

diagram	
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation Time at which engine is operating at 7% (taxi) power. Valid values: 0 to 1000. (min)

element categoryAircraftEngine/timePercentPower30

diagram	
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation Time at which engine is operating at 30% (approach) power. Valid values: 0 to 1000. (min)

element categoryAircraftEngine/timePercentPower85

diagram	
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation


Time at which engine is operating at 85% (climbout) power. Valid values: 0 to 1000. (min)


element **categoryAircraftEngine/timePercentPower85**

diagram	timePercentPower85 Time at which engine is operating at 85% (climbout) power. Valid values: 0 to 1000. (min)
type	doubleExclusive85
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation Time at which engine is operating at 85% (climbout) power. Valid values: 0 to 1000. (min)

element **categoryBoilerHeater**

diagram

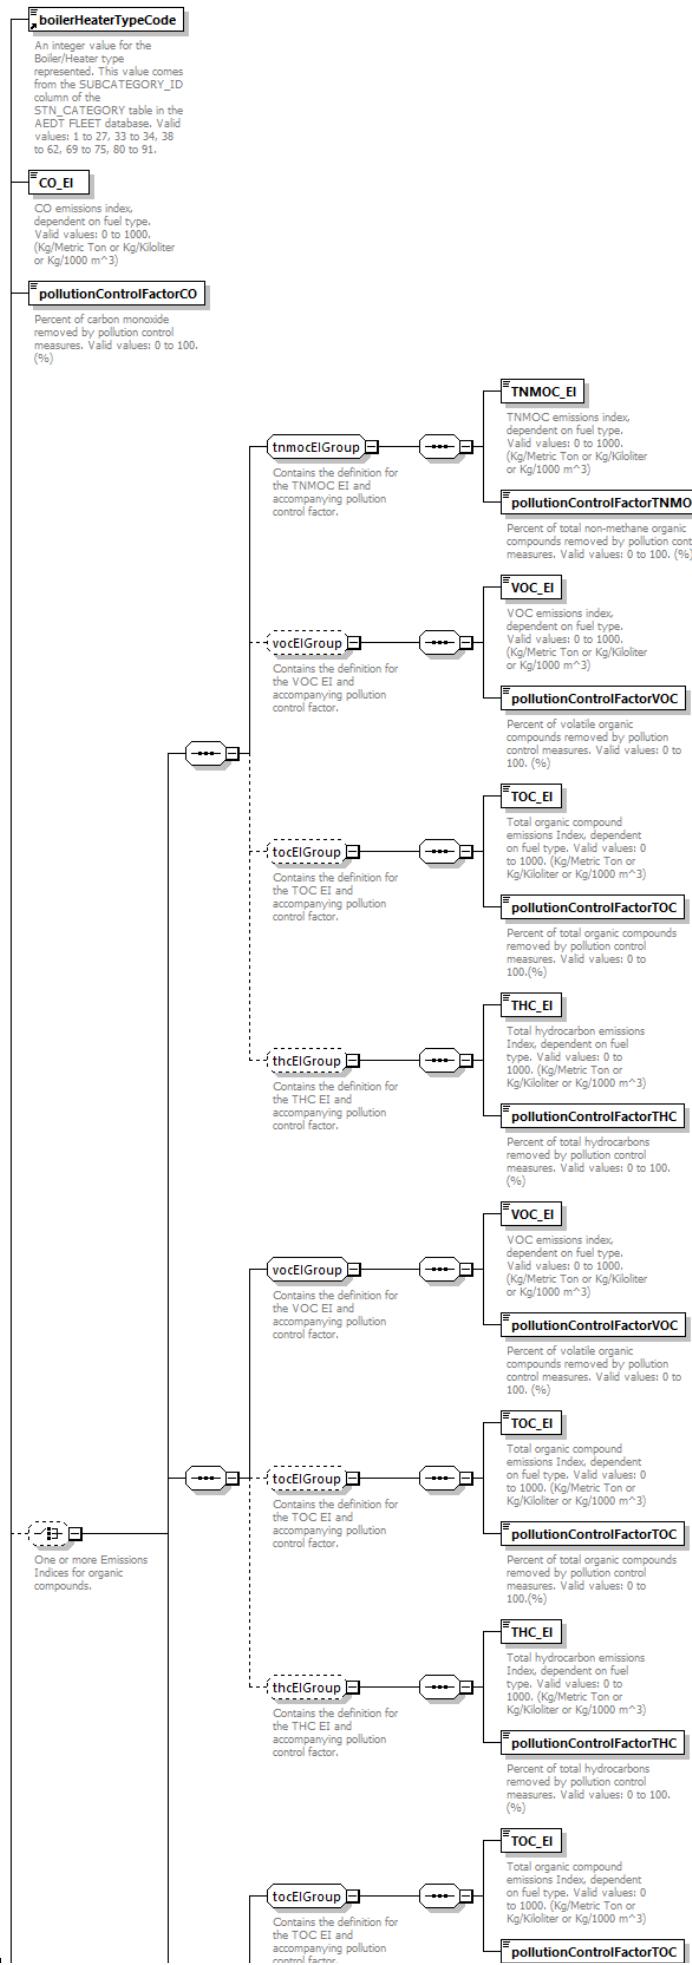

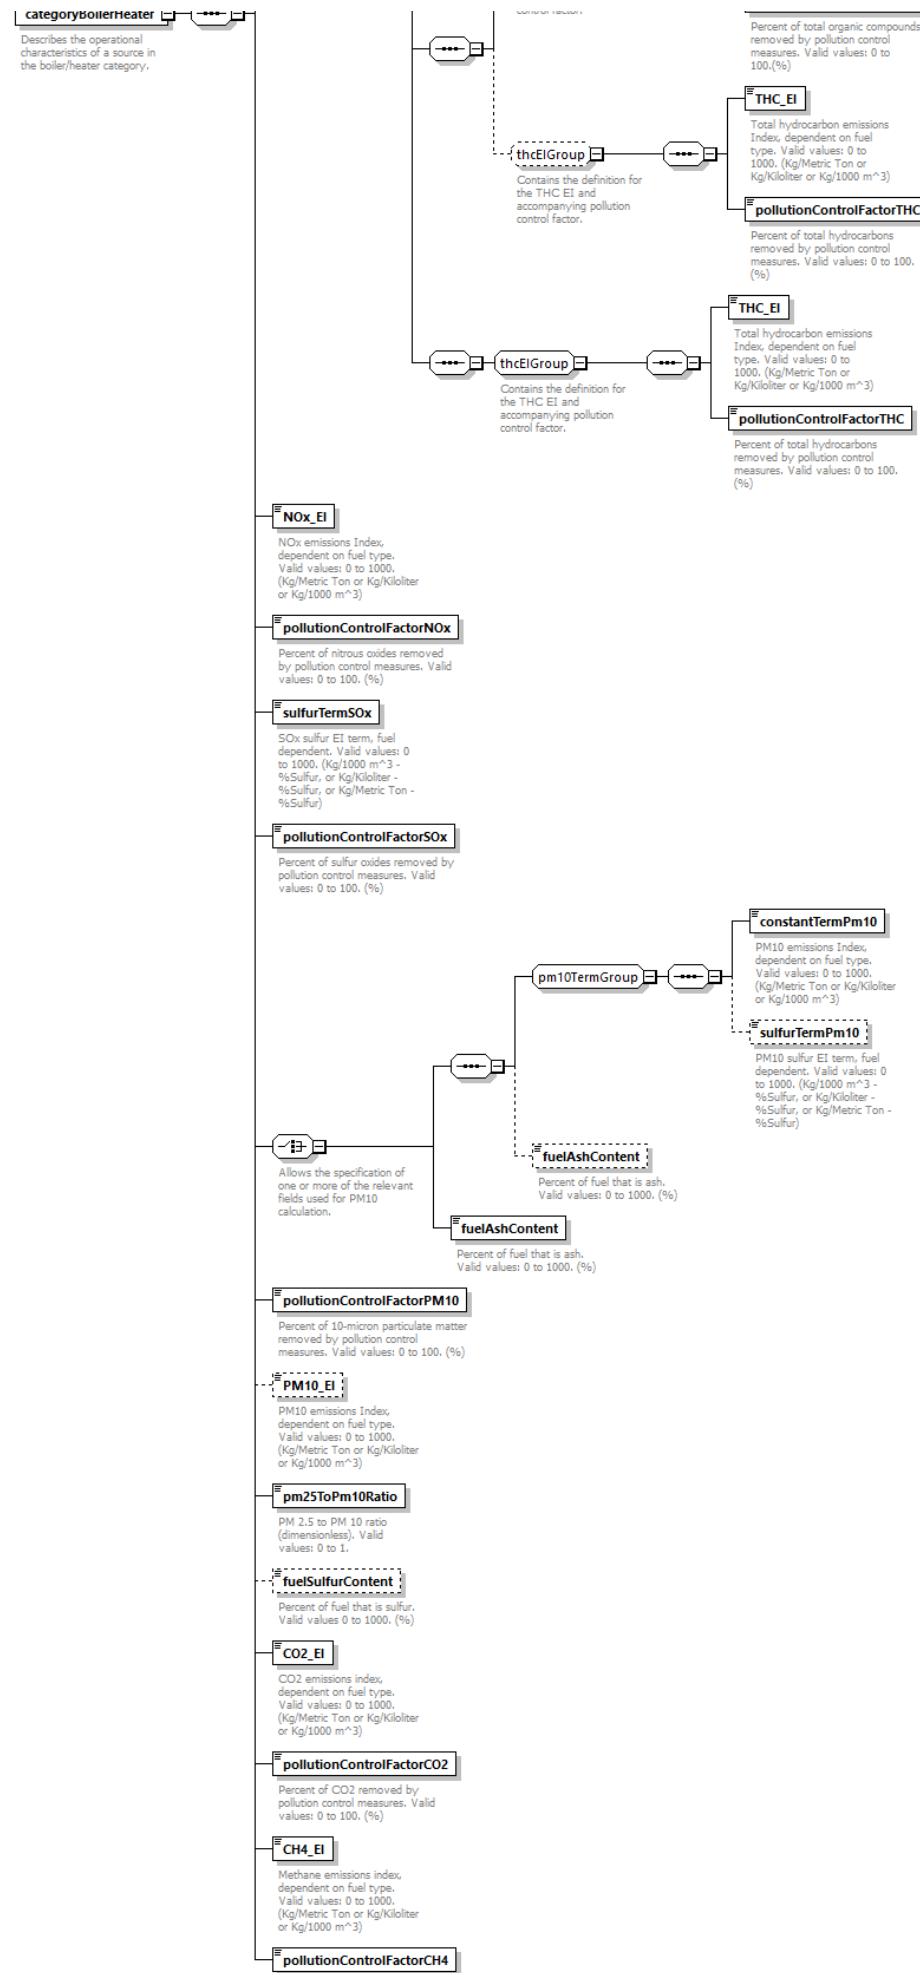

properties	content complex	Percent of CH ₄ removed by pollution control measures. Valid values: 0 to 100. (%)
children		boilerHeaterTypeCode CO_EI pollutionControlFactorCO TNMOC_EI pollutionControlFactorTNMOC VOC_EI pollutionControlFactorVOC TOC_EI pollutionControlFactorTOC THC_EI pollutionControlFactorTHC NOx_EI pollutionControlFactorNOx sulfurTermSOx pollutionControlFactorSOx constantTermPm10 sulfurTermPm10 fuelAshContent fuelAshContent pollutionControlFactorPM10 PM10_EI pm25ToPm10Ratio fuelSulfurContent CO2_EI pollutionControlFactorCO2 CH4_EI pollutionControlFactorCH4
used by	element stationarySource	
annotation	documentation	Describes the operational characteristics of a source in the boiler/heater category.

element categoryBoilerHeater/CO_EI

diagram	 CO_EI	CO emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m ³)
type	doubleInclusive1000	
properties	content simple default 0	
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000	
annotation	documentation CO emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m ³)	

element categoryBoilerHeater/pollutionControlFactorCO

diagram	 pollutionControlFactorCO	Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100	
properties	content simple default 0	
facets	Kind Value Annotation minInclusive 0 maxInclusive 100	
annotation	documentation Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)	

element categoryBoilerHeater/NOx_EI

diagram	 NOx_EI	NOx emissions Index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m ³)
type	doubleInclusive1000	
properties	content simple default 0	
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000	
annotation	documentation NOx emissions Index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m ³)	

element categoryBoilerHeater/pollutionControlFactorNOx

diagram	 pollutionControlFactorNOx	Percent of nitrous oxides removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100	
properties	content simple default 0	
facets	Kind Value Annotation minInclusive 0 maxInclusive 100	
annotation	documentation Percent of nitrous oxides removed by pollution control measures. Valid values: 0 to 100. (%)	

element categoryBoilerHeater/sulfurTermSOx

diagram	 sulfurTermSOx	S _x sulfur EI term, fuel dependent. Valid values: 0 to 1000. (Kg/1000 m ³) - %Sulfur, or Kg/Kiloliter - %Sulfur, or Kg/Metric Ton - %Sulfur
type	doubleInclusive1000	

properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation SOx sulfur EI term, fuel dependent. Valid values: 0 to 1000. (Kg/1000 m^3 - %Sulfur, or Kg/Kiloliter - %Sulfur, or Kg/Metric Ton - %Sulfur)

element **categoryBoilerHeater/pollutionControlFactorSOx**

diagram	 pollutionControlFactorSOx Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryBoilerHeater/fuelAshContent**

diagram	 fuelAshContent Percent of fuel that is ash. Valid values: 0 to 1000. (%)
type	doubleExclusive100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Percent of fuel that is ash. Valid values: 0 to 1000. (%)

element **categoryBoilerHeater/fuelAshContent**

diagram	 fuelAshContent Percent of fuel that is ash. Valid values: 0 to 1000. (%)
type	doubleExclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Percent of fuel that is ash. Valid values: 0 to 1000. (%)

element **categoryBoilerHeater/pollutionControlFactorPM10**

diagram	 pollutionControlFactorPM10 Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryBoilerHeater/PM10_EI**

diagram	 PM10_EI PM10 emissions Index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	minOcc 0 maxOcc 1 content simple default 0
facets	Kind Value Annotation

	minInclusive 0 maxInclusive 1000
annotation	documentation PM10 emissions Index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryBoilerHeater/pm25ToPm10Ratio**

diagram	 PM 2.5 to PM 10 ratio (dimensionless). Valid values: 0 to 1.
type	doubleInclusive1
properties	content simple default 1
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation PM 2.5 to PM 10 ratio (dimensionless). Valid values: 0 to 1.

element **categoryBoilerHeater/fuelSulfurContent**

diagram	 Percent of fuel that is sulfur. Valid values 0 to 1000. (%)
type	doubleExclusive100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Percent of fuel that is sulfur. Valid values 0 to 1000. (%)

element **categoryBoilerHeater/CO2_EI**

diagram	 CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryBoilerHeater/pollutionControlFactorCO2**

diagram	 Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)

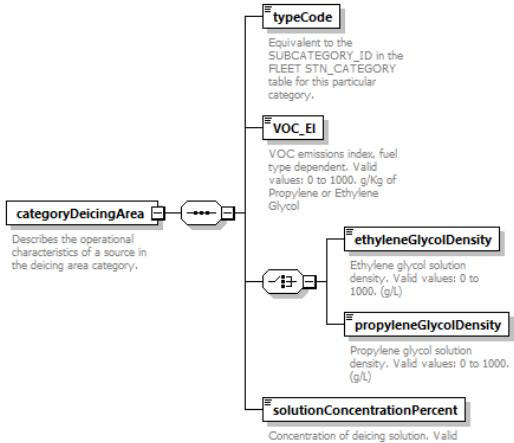
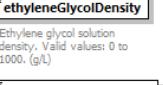
element **categoryBoilerHeater/CH4_EI**

diagram	 Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation

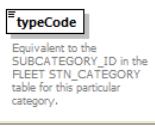
element categoryBoilerHeater/pollutionControlFactorCH4

diagram	
	Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)

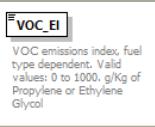
element categoryDeicingArea

diagram	
	Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.
	
	VOC emissions index, fuel type dependent. Valid values: 0 to 1000, g/Kg of Propylene or Ethylene Glycol
	
	Ethylene glycol solution density. Valid values: 0 to 1000. (g/L)
	
	Propylene glycol solution density. Valid values: 0 to 1000. (g/L)
	
	Concentration of deicing solution. Valid values: 0 to 1000. (%)
properties	content complex
children	typeCode VOC_EI ethyleneGlycolDensity propyleneGlycolDensity solutionConcentrationPercent
used by	element stationarySource
annotation	documentation Describes the operational characteristics of a source in the deicing area category.

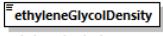
element categoryDeicingArea/typeCode

diagram	
	Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.
type	int1to4
properties	content simple
facets	Kind Value Annotation minInclusive 1 maxInclusive 4
annotation	Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.

element categoryDeicingArea/VOC_EI

diagram	
	VOC emissions index, fuel type dependent. Valid values: 0 to 1000, g/Kg of Propylene or Ethylene Glycol
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation VOC emissions index, fuel type dependent. Valid values: 0 to 1000. g/Kg of Propylene or Ethylene Glycol

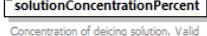
element categoryDeicingArea/ethyleneGlycolDensity

diagram	
	Ethylene glycol solution density. Valid values: 0 to 1000. (g/L)
type	doubleExclusive2000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 2000
annotation	documentation Ethylene glycol solution density. Valid values: 0 to 1000. (g/L)

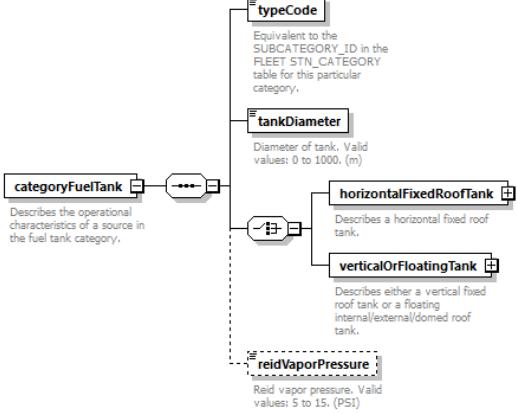
element **categoryDeicingArea/propyleneGlycolDensity**

diagram	
	Propylene glycol solution density. Valid values: 0 to 1000. (g/L)
type	doubleExclusive2000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 2000
annotation	documentation Propylene glycol solution density. Valid values: 0 to 1000. (g/L)

element **categoryDeicingArea/solutionConcentrationPercent**

diagram	
	Concentration of deicing solution. Valid values: 0 to 1000. (%)
type	doubleExclusive100
properties	content simple default 50
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Concentration of deicing solution. Valid values: 0 to 1000. (%)

element **categoryFuelTank**

diagram	 <pre> graph LR CT[categoryFuelTank] --- TC[typeCode] TC --- TD[tankDiameter] TC --- HFR[horizontalFixedRoofTank] TC --- VOF[verticalOrFloatingTank] TC --- RVP[reidVaporPressure] TD --- D["Diameter of tank. Valid values: 0 to 1000. (m)"] HFR --- DH["Describes a horizontal fixed roof tank."] VOF --- DV["Describes either a vertical fixed roof tank or a floating internal/external/domed roof tank."] RVP --- DR["Reid vapor pressure. Valid values: 5 to 15. (PSI)"] </pre> <p>categoryFuelTank Describes the operational characteristics of a source in the fuel tank category.</p> <p>typeCode Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.</p> <p>tankDiameter Diameter of tank. Valid values: 0 to 1000. (m)</p> <p>horizontalFixedRoofTank Describes a horizontal fixed roof tank.</p> <p>verticalOrFloatingTank Describes either a vertical fixed roof tank or a floating internal/external/domed roof tank.</p> <p>reidVaporPressure Reid vapor pressure. Valid values: 5 to 15. (PSI)</p>
properties	content complex
children	typeCode tankDiameter horizontalFixedRoofTank verticalOrFloatingTank reidVaporPressure
used by	element stationarySource
annotation	documentation Describes the operational characteristics of a source in the fuel tank category.

element **categoryFuelTank/typeCode**

diagram	
	Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.
type	int1to25
properties	content simple

	maxInclusive 25
annotation	documentation Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.

element **categoryFuelTank/tankDiameter**

diagram	<p>tankDiameter Diameter of tank. Valid values: 0 to 1000. (m)</p>
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation Diameter of tank. Valid values: 0 to 1000. (m)

element **categoryFuelTank/horizontalFixedRoofTank**

diagram	<p>horizontalFixedRoofTank → tankLength Describes a horizontal fixed roof tank. tankLength → annualIncreaseInLiquidLevel Length of tank. Valid values: 0 to 1000. (m) Annual sum of increases in liquid level. Valid values: >= 0 (ft/year)</p>
properties	content complex
children	tankLength annualIncreaseInLiquidLevel
annotation	documentation Describes a horizontal fixed roof tank.

element **categoryFuelTank/horizontalFixedRoofTank/tankLength**

diagram	<p>tankLength Length of tank. Valid values: 0 to 1000. (m)</p>
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation Length of tank. Valid values: 0 to 1000. (m)

element **categoryFuelTank/horizontalFixedRoofTank/annualIncreaseInLiquidLevel**

diagram	<p>annualIncreaseInLiquidLevel Annual sum of increases in liquid level. Valid values: >= 0 (ft/year)</p>
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple default 0
facets	Kind Value Annotation minInclusive 0
annotation	documentation Annual sum of increases in liquid level. Valid values: >= 0 (ft/year)

element **categoryFuelTank/verticalOrFloatingTank**

diagram	<p>verticalOrFloatingTank → verticalFixedRoofTank Describes either a vertical fixed roof tank or a floating internal/external/domed roof tank. verticalFixedRoofTank → maximumSolutionLevel Describes a vertical fixed roof tank. maximumSolutionLevel → tankHeight Maximum height of solution inside the tank. Valid values: 0 to 1000. (m) tankHeight → averageSolutionLevel Height of tank. Valid values: 0 to 1000. (m) averageSolutionLevel → meanWindSpeed Average height of solution inside the tank. Valid values: 0 to 1000. (m) meanWindSpeed</p>
---------	--

properties	content complex
children	verticalFixedRoofTank maximumSolutionLevel tankHeight averageSolutionLevel meanWindSpeed
annotation	documentation Describes either a vertical fixed roof tank or a floating internal/external/domed roof tank.

element **categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank**

diagram	<pre> classDiagram class verticalFixedRoofTank { <<Describes a vertical fixed roof tank.>> } class coneRoof { <<A vertical fixed tank with a cone roof.>> } class domeRoof { <<A vertical fixed roof tank with a dome roof.>> } verticalFixedRoofTank "1" --> "1" annualIncreaseInLiquidLevel coneRoof "1" --> "1" annualIncreaseInLiquidLevel domeRoof "1" --> "1" annualIncreaseInLiquidLevel </pre>
properties	minOcc 0 maxOcc 1 content complex
children	annualIncreaseInLiquidLevel coneRoof domeRoof
annotation	documentation Describes a vertical fixed roof tank.

element **categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank/annualIncreaseInLiquidLevel**

diagram	<pre> classDiagram class verticalFixedRoofTank { <<Describes a vertical fixed roof tank.>> <<Annual sum of increases in liquid level. Valid values: >= 0 (ft/year)>> <<doubleMin0>> } </pre>
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple default 0
facets	Kind Value Annotation minInclusive 0
annotation	documentation Annual sum of increases in liquid level. Valid values: >= 0 (ft/year)

element **categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank/coneRoof**

diagram	<pre> classDiagram class coneRoof { <<A vertical fixed tank with a cone roof.>> } class verticalFixedRoofTank { <<Describes a vertical fixed roof tank.>> } coneRoof "1" --> "1" roofSlope </pre>
properties	content complex
children	roofSlope
annotation	documentation A vertical fixed tank with a cone roof

element **categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank/coneRoof/roofSlope**

diagram	<pre> classDiagram class coneRoof { <<A vertical fixed tank with a cone roof.>> <<Slope of the cone roof. Default of 0.0625>> <<doubleInclusive1>> } </pre>
type	doubleInclusive1
properties	content simple default 0.0625
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation Slope of the cone roof. Default of 0.0625

element **categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank/domeRoof**

diagram	<pre> classDiagram class domeRoof { <<A vertical fixed roof tank with a dome roof.>> } class verticalFixedRoofTank { <<Describes a vertical fixed roof tank.>> } domeRoof "1" --> "1" domeRadius </pre>
properties	content complex
children	domeRadius
annotation	documentation A vertical fixed roof tank with a dome roof

element **categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank/domeRoof/domeRadius**

diagram	 domeRadius Radius of the dome roof in meters. Default value can be assumed to be the tank radius.
type	doubleInclusive500
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 500
annotation	documentation Radius of the dome roof in meters. Default value can be assumed to be the tank radius.

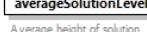
element **categoryFuelTank/verticalOrFloatingTank/maximumSolutionLevel**

diagram	 maximumSolutionLevel Maximum height of solution inside the tank. Valid values: 0 to 1000. (m)
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation Maximum height of solution inside the tank. Valid values: 0 to 1000. (m)

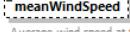
element **categoryFuelTank/verticalOrFloatingTank/tankHeight**

diagram	 tankHeight Height of tank. Valid values: 0 to 1000. (m)
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation Height of tank. Valid values: 0 to 1000. (m)

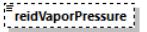
element **categoryFuelTank/verticalOrFloatingTank/averageSolutionLevel**

diagram	 averageSolutionLevel Average height of solution inside the tank. Valid values: 0 to 1000. (m)
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation Average height of solution inside the tank. Valid values: 0 to 1000. (m)

element **categoryFuelTank/verticalOrFloatingTank/meanWindSpeed**

diagram	 meanWindSpeed Average wind speed at the tank. Valid values: 0 to 100. (m/s)
type	doubleExclusive100
properties	minOcc 0 maxOcc 1 content simple default 5
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Average wind speed at the tank. Valid values: 0 to 100. (m/s)


element **categoryFuelTank/reidVaporPressure**

diagram	 reidVaporPressure Reid vapor pressure. Valid values: 5 to 15. (PSI)
type	int5to15

properties	minOcc 0 maxOcc 1 content simple default 10
facets	Kind Value Annotation minInclusive 5 maxInclusive 15
annotation	documentation Reid vapor pressure. Valid values: 5 to 15. (PSI)

element **categoryGenerator**

diagram

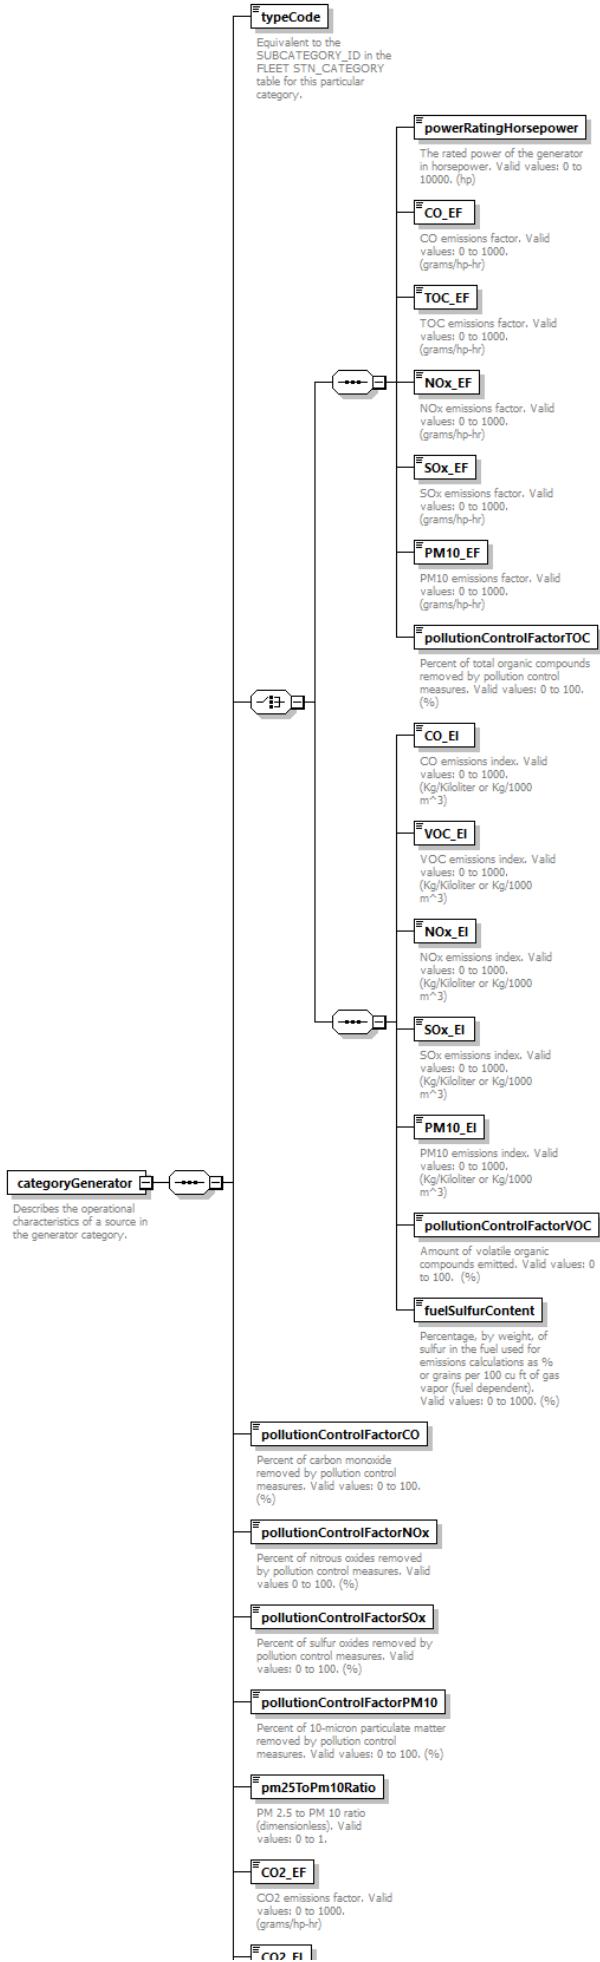

	<p>CO2_EI</p> <p>CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p> <p>pollutionControlFactorCO2</p> <p>Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)</p> <p>CH4_EF</p> <p>Methane emissions factor. Valid values: 0 to 1000. (grams/hp-hr)</p> <p>CH4_EI</p> <p>Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p> <p>pollutionControlFactorCH4</p> <p>Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)</p>
properties	content complex
children	typeCode powerRatingHorsepower CO_EI TOC_EI NOx_EF SOx_EF PM10_EF pollutionControlFactorTOC CO_EI VOC_EI NOx_EI SOx_EI PM10_EI pollutionControlFactorVOC fuelSulfurContent pollutionControlFactorCO pollutionControlFactorNOx pollutionControlFactorSOx pollutionControlFactorPM10 pm25ToPm10Ratio CO2_EF CO2_EI pollutionControlFactorCO2 CH4_EF CH4_EI pollutionControlFactorCH4
used by	element stationarySource
annotation	<p>documentation</p> <p>Describes the operational characteristics of a source in the generator category.</p>

element categoryGenerator/typeCode

diagram	<p>typeCode</p> <p>Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.</p>
type	int1to8
properties	content simple
facets	<p>Kind Value Annotation</p> <p>minInclusive 1</p> <p>maxInclusive 8</p>
annotation	<p>documentation</p> <p>Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.</p>

element categoryGenerator/powerRatingHorsepower

diagram	<p>powerRatingHorsepower</p> <p>The rated power of the generator in horsepower. Valid values: 0 to 10000. (hp)</p>
type	doubleInclusive10000
properties	content simple
facets	<p>Kind Value Annotation</p> <p>minInclusive 0</p> <p>maxInclusive 10000</p>
annotation	<p>documentation</p> <p>The rated power of the generator in horsepower. Valid values: 0 to 10000. (hp)</p>

element categoryGenerator/CO_EF

diagram	<p>CO_EF</p> <p>CO emissions factor. Valid values: 0 to 1000. (grams/hp-hr)</p>
type	doubleInclusive1000
properties	content simple
facets	<p>Kind Value Annotation</p> <p>minInclusive 0</p> <p>maxInclusive 1000</p>
annotation	<p>documentation</p> <p>CO emissions factor. Valid values: 0 to 1000. (grams/hp-hr)</p>

element categoryGenerator/TOC_EF

diagram	<p>TOC_EF</p> <p>TOC emissions factor. Valid values: 0 to 1000. (grams/hp-hr)</p>
type	doubleInclusive1000
properties	content simple

	default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation TOC emissions factor. Valid values: 0 to 1000. (grams/hp-hr)

element categoryGenerator/NOx_EF

diagram	 NOx_EF NOx emissions factor. Valid values: 0 to 1000. (grams/hp-hr)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation NOx emissions factor. Valid values: 0 to 1000. (grams/hp-hr)

element categoryGenerator/SOx_EF

diagram	 SOx_EF SOx emissions factor. Valid values: 0 to 1000. (grams/hp-hr)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation SOx emissions factor. Valid values: 0 to 1000. (grams/hp-hr)

element categoryGenerator/PM10_EF

diagram	 PM10_EF PM10 emissions factor. Valid values: 0 to 1000. (grams/hp-hr)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation PM10 emissions factor. Valid values: 0 to 1000. (grams/hp-hr)

element categoryGenerator/pollutionControlFactorTOC

diagram	 pollutionControlFactorTOC Percent of total organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of total organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)

element categoryGenerator/CO_EI

diagram	 CO_EI CO emissions index. Valid values: 0 to 1000. (Kg/kilometer or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000

annotation	documentation CO emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)
------------	---

element categoryGenerator/VOC_EI

diagram	 VOC emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation VOC emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)

element categoryGenerator/NOx_EI

diagram	 NOx emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation NOx emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)

element categoryGenerator/SOx_EI

diagram	 SOx emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation SOx emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)

element categoryGenerator/PM10_EI

diagram	 PM10 emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation PM10 emissions index. Valid values: 0 to 1000. (Kg/Kiloliter or Kg/1000 m^3)

element categoryGenerator/pollutionControlFactorVOC

diagram	 Amount of volatile organic compounds emitted. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Amount of volatile organic compounds emitted. Valid values: 0 to 100. (%)

element categoryGenerator/fuelSulfurContent

diagram	<p>fuelSulfurContent</p> <p>Percentage, by weight, of sulfur in the fuel used for emissions calculations as % or grains per 100 cu ft of gas vapor (fuel dependent). Valid values: 0 to 1000. (%)</p>
type	doubleExclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Percentage, by weight, of sulfur in the fuel used for emissions calculations as % or grains per 100 cu ft of gas vapor (fuel dependent). Valid values: 0 to 1000. (%)

element categoryGenerator/pollutionControlFactorCO

diagram	<p>pollutionControlFactorCO</p> <p>Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)

element categoryGenerator/pollutionControlFactorNOx

diagram	<p>pollutionControlFactorNOx</p> <p>Percent of nitrous oxides removed by pollution control measures. Valid values 0 to 100. (%)</p>
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of nitrous oxides removed by pollution control measures. Valid values 0 to 100. (%)

element categoryGenerator/pollutionControlFactorSOx

diagram	<p>pollutionControlFactorSOx</p> <p>Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)

element categoryGenerator/pollutionControlFactorPM10

diagram	<p>pollutionControlFactorPM10</p> <p>Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)

element categoryGenerator/pm25ToPm10Ratio

diagram	pm25ToPm10Ratio PM 2.5 to PM 10 ratio (dimensionless). Valid values: 0 to 1.
type	doubleInclusive1
properties	content simple default 1
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation PM 2.5 to PM 10 ratio (dimensionless). Valid values: 0 to 1.

element **categoryGenerator/CO2_EF**

diagram	CO2_EF CO2 emissions factor. Valid values: 0 to 1000. (grams/hp-hr)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation CO2 emissions factor. Valid values: 0 to 1000. (grams/hp-hr)

element **categoryGenerator/CO2_EI**

diagram	CO2_EI CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryGenerator/pollutionControlFactorCO2**

diagram	pollutionControlFactorCO2 Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryGenerator/CH4_EF**

diagram	CH4_EF Methane emissions factor. Valid values: 0 to 1000. (grams/hp-hr)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation Methane emissions factor. Valid values: 0 to 1000. (grams/hp-hr)

element **categoryGenerator/CH4_EI**

diagram	<div style="border: 1px solid black; padding: 2px;">CH4_EI</div> <p>Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p>
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryGenerator/pollutionControlFactorCH4**

diagram	<div style="border: 1px solid black; padding: 2px;">pollutionControlFactorCH4</div> <p>Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryIncinerator**

diagram	<pre> classDiagram class categoryIncinerator { <<Describes the operational characteristics of a source in the incinerator category.>> } class typeCode { <<Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.>> } class CO_EI { <<CO emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)>> } class TOC_EI { <<Total organic compound emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)>> } class NOx_EI { <<NOx emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)>> } class SOx_EI { <<SOx emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)>> } class PM10_EI { <<PM10 emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)>> } class pollutionControlFactorCO { <<Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)>> } class pollutionControlFactorTOC { <<Percent of total organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)>> } class pollutionControlFactorNOx { <<Percent of nitrous oxides removed by pollution control measures. Valid values: 0 to 100. (%)>> } class pollutionControlFactorSOx { <<Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)>> } class pollutionControlFactorPM10 { <<Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)>> } class pm25ToPm10Ratio { <<PM2.5 to PM10 ratio (dimensionless). Valid values: 0 to 1.>> } class CO2_EI { <<CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)>> } class pollutionControlFactorCO2 { <<Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)>> } class CH4_EI { <<Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)>> } class pollutionControlFactorCH4 { <<Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)>> } categoryIncinerator "1" -- "*" typeCode categoryIncinerator "1" -- "*" CO_EI categoryIncinerator "1" -- "*" TOC_EI categoryIncinerator "1" -- "*" NOx_EI categoryIncinerator "1" -- "*" SOx_EI categoryIncinerator "1" -- "*" PM10_EI categoryIncinerator "1" -- "*" pollutionControlFactorCO categoryIncinerator "1" -- "*" pollutionControlFactorTOC categoryIncinerator "1" -- "*" pollutionControlFactorNOx categoryIncinerator "1" -- "*" pollutionControlFactorSOx categoryIncinerator "1" -- "*" pollutionControlFactorPM10 categoryIncinerator "1" -- "*" pm25ToPm10Ratio categoryIncinerator "1" -- "*" CO2_EI categoryIncinerator "1" -- "*" pollutionControlFactorCO2 categoryIncinerator "1" -- "*" CH4_EI categoryIncinerator "1" -- "*" pollutionControlFactorCH4 </pre>
properties	content complex
children	typeCode CO_EI TOC_EI NOx_EI SOx_EI PM10_EI pollutionControlFactorCO pollutionControlFactorTOC pollutionControlFactorNOx pollutionControlFactorSOx pollutionControlFactorPM10 pm25ToPm10Ratio CO2_EI pollutionControlFactorCO2 CH4_EI pollutionControlFactorCH4
used by	element stationarySource
annotation	documentation Describes the operational characteristics of a source in the incinerator category.

element categoryIncinerator/typeCode

diagram	<pre> classDiagram class typeCode { <<Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.>> } </pre>
type	int1to2
properties	content simple
facets	Kind Value Annotation

	minInclusive 1 maxInclusive 2
annotation	documentation Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.

element **categoryIncinerator/CO_EI**

diagram	 CO_EI CO emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation CO emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)

element **categoryIncinerator/TOC_EI**

diagram	 TOC_EI Total organic compound emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation Total organic compound emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryIncinerator/NOx_EI**

diagram	 NOx_EI NOx emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation NOx emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)

element **categoryIncinerator/SOx_EI**

diagram	 SOx_EI SOx emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation SOx emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)

element **categoryIncinerator/PM10_EI**

diagram	 PM10_EI PM10 emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation PM10 emissions index. Valid values: 0 to 1000. (Kg/Metric Ton)

element **categoryIncinerator/pollutionControlFactorCO**

diagram	 Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryIncinerator/pollutionControlFactorTOC**

diagram	 Percent of total organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of total organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)

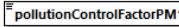
element **categoryIncinerator/pollutionControlFactorNOx**

diagram	 Percent of nitrous oxides removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of nitrous oxides removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryIncinerator/pollutionControlFactorSOx**

diagram	 Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryIncinerator/pollutionControlFactorPM10**

diagram	 Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryIncinerator/pm25ToPm10Ratio**

diagram	pm25ToPm10Ratio PM2.5 to PM10 ratio (dimensionless). Valid values: 0 to 1.
type	doubleInclusive1
properties	content simple default 1
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation PM2.5 to PM10 ratio (dimensionless). Valid values: 0 to 1.

element **categoryIncinerator/CO2_EI**

diagram	CO2_EI CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryIncinerator/pollutionControlFactorCO2**

diagram	pollutionControlFactorCO2 Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryIncinerator/CH4_EI**

diagram	CH4_EI Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryIncinerator/pollutionControlFactorCH4**

diagram	pollutionControlFactorCH4 Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryOther**

diagram	<pre> graph TD fuelUnits[fuelUnits] fuelUnits --- CO_EI[CO_EI] fuelUnits --- THC_EI[THC_EI] fuelUnits --- NOx_EI[NOx_EI] fuelUnits --- SOx_EI[SOx_EI] fuelUnits --- PM10_EI[PM10_EI] fuelUnits --- pollutionControlFactorCO[pollutionControlFactorCO] fuelUnits --- pollutionControlFactorTHC[pollutionControlFactorTHC] fuelUnits --- pollutionControlFactorNOx[pollutionControlFactorNOx] fuelUnits --- pollutionControlFactorSOx[pollutionControlFactorSOx] fuelUnits --- pollutionControlFactorPM10[pollutionControlFactorPM10] fuelUnits --- CO2_EI[CO2_EI] fuelUnits --- pollutionControlFactorCO2[pollutionControlFactorCO2] fuelUnits --- CH4_EI[CH4_EI] fuelUnits --- pollutionControlFactorCH4[pollutionControlFactorCH4] fuelUnits --- PM25_EI[PM25_EI] fuelUnits --- pollutionControlFactorPM25[pollutionControlFactorPM25] categoryOther[categoryOther] --- pollutionControlFactorCO categoryOther --- pollutionControlFactorNOx categoryOther --- pollutionControlFactorSOx categoryOther --- pollutionControlFactorPM10 categoryOther --- CO2_EI categoryOther --- pollutionControlFactorCO2 categoryOther --- CH4_EI categoryOther --- PM25_EI </pre> <p>categoryOther Describes the operational characteristics of a source in the "other" category.</p>
properties	content complex
children	fuelUnits CO_EI THC_EI NOx_EI SOx_EI PM10_EI pollutionControlFactorCO pollutionControlFactorTHC pollutionControlFactorNOx pollutionControlFactorSOx pollutionControlFactorPM10 CO2_EI pollutionControlFactorCO2 CH4_EI pollutionControlFactorCH4 PM25_EI pollutionControlFactorPM25
used by	element stationarySource
annotation	<p>documentation</p> <p>Describes the operational characteristics of a source in the "other" category.</p>

element **categoryOther/fuelUnits**

diagram	 fuelUnits Defines fuel units. Also defined in the STN_FUEL_UNITS table in FLEET. Valid values: 0 = Metric Tons, 1=Kiloliters, 2 = 1000s of m3, 3 = Hours, 4 = Test Cycles, 5 = Gallons.
type	<u>int0to5</u>
properties	minOcc 0 maxOcc 1 content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 5
annotation	documentation Defines fuel units. Also defined in the STN_FUEL_UNITS table in FLEET. Valid values: 0 = Metric Tons, 1=Kiloliters, 2 = 1000s of m3, 3 = Hours, 4 = Test Cycles, 5 = Gallons.

element **categoryOther/CO_EI**

diagram	 CO_EI CO emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)
type	<u>doubleInclusive1000</u>
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation CO emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)

element **categoryOther/THC_EI**

diagram	 THC_EI Hydrocarbon emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)
type	<u>doubleInclusive1000</u>
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation Hydrocarbon emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)

element **categoryOther/NOx_EI**

diagram	 NOx_EI NOx emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)
type	<u>doubleInclusive1000</u>
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation NOx emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)

element **categoryOther/SOx_EI**

diagram	 SOx_EI SOx emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)
type	<u>doubleInclusive1000</u>
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation SOx emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)

element **categoryOther/PM10_EI**

diagram	PM10_EI PM10 emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation PM10 emissions index per unit of fuel. Valid values: 0 to 1000. (kg/unit)

element **categoryOther/pollutionControlFactorCO**

diagram	pollutionControlFactorCO Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of carbon monoxide removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryOther/pollutionControlFactorTHC**

diagram	pollutionControlFactorTHC Percent of total hydrocarbons removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of total hydrocarbons removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryOther/pollutionControlFactorNOx**

diagram	pollutionControlFactorNOx Percent of nitrous oxides removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of nitrous oxides removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryOther/pollutionControlFactorSOx**

diagram	pollutionControlFactorSOx Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of sulfur oxides removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryOther/pollutionControlFactorPM10**

diagram	pollutionControlFactorPM10 Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)
annotation	documentation Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)

type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of 10-micron particulate matter removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryOther/CO2_EI**

diagram	 CO2_EI CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryOther/pollutionControlFactorCO2**

diagram	 pollutionControlFactorCO2 Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of CO2 removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryOther/CH4_EI**

diagram	 CH4_EI Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryOther/pollutionControlFactorCH4**

diagram	 pollutionControlFactorCH4 Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of CH4 removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryOther/PM25_EI**

diagram	 PM25_EI PM 2.5 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	minOcc 0

	maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation PM 2.5 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **categoryOther/pollutionControlFactorPM25**

diagram	<p>pollutionControlFactorPM25</p> <p>Percent of PM 2.5 removed by pollution control measures. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of PM 2.5 removed by pollution control measures. Valid values: 0 to 100. (%)

element **categoryRecordCode**

diagram	<p>categoryRecordCode</p> <p>An integer value for a category to use as the basis of a new stationary source operation. This value comes from the CATEGORY_REC_ID column in the STN_CATEGORY table in the AEDT FLEET database. Valid values: 0 to 67, 89 to 148.</p> <p>recordCode</p> <p>An integer value for a category to use as the basis of a new stationary source operation. This value comes from the CATEGORY_REC_ID column in the STN_CATEGORY table in the AEDT FLEET database. Valid values: 0 to 67, 89 to 148.</p>
properties	content complex
children	recordCode
used by	element stationarySource
annotation	documentation An integer value for a category to use as the basis of a new stationary source operation. This value comes from the CATEGORY_REC_ID column in the STN_CATEGORY table in the AEDT FLEET database.

element **categorySandSaltPile**

diagram	<p>categorySandSaltPile</p> <p>Describes the emissions characteristics of a source in the sand or salt pile category.</p> <p>typeCode</p> <p>Equivalent to the SUBCATEGORY_ID in the FLEET STN_CATEGORY table for this particular category.</p> <p>surfaceWindSpeedFraction</p> <p>Surface wind speed fraction (dimensionless). Valid values: 0 to 1.</p> <p>surfaceRoughness</p> <p>The surface roughness of the pile. Valid values: 0 to 1000. (cm)</p> <p>frictionVelocity</p> <p>Friction velocity. Valid values: 0 to 1000. (m/s)</p> <p>fastestMileOfWind</p> <p>Fastest mile of wind. Valid values: 0 to 1000. (m/s)</p> <p>meanWindSpeed</p> <p>Average wind speed at sand or salt pile. Valid values: 0 to 1000. (m/s)</p> <p>moistureContent</p> <p>Percentage of sand or salt pile that is moisture. Valid values: 0 to 1000. (%)</p> <p>massDisturbedPerDisturbance</p> <p>The mass disturbed per disturbance. Valid values: 0 to 1000. (Metric Tons)</p> <p>erodedSurfaceArea</p> <p>Eroded surface area of pile. Valid values: 0 to 1000. (meters²)</p>
properties	content complex
children	typeCode surfaceWindSpeedFraction surfaceRoughness frictionVelocity fastestMileOfWind meanWindSpeed moistureContent massDisturbedPerDisturbance erodedSurfaceArea
used by	element stationarySource
annotation	documentation Describes the emissions characteristics of a source in the sand or salt pile category.

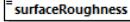
element **categorySandSaltPile/typeCode**

diagram	 typeCode Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.
type	int1to5
properties	content simple
facets	Kind Value Annotation minInclusive 1 maxInclusive 5
annotation	documentation Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.

element **categorySandSaltPile/surfaceWindSpeedFraction**

diagram	 surfaceWindSpeedFraction Surface wind speed fraction (dimensionless). Valid values: 0 to 1.
type	doubleInclusive1
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation Surface wind speed fraction (dimensionless). Valid values: 0 to 1.

element **categorySandSaltPile/surfaceRoughness**

diagram	 surfaceRoughness The surface roughness of the pile. Valid values: 0 to 1000. (cm)
type	doubleExclusiveRange100
properties	content simple default 0.01
facets	Kind Value Annotation minExclusive 0 maxExclusive 100
annotation	documentation The surface roughness of the pile. Valid values: 0 to 1000. (cm)

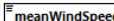
element **categorySandSaltPile/frictionVelocity**

diagram	 frictionVelocity Friction velocity. Valid values: 0 to 1000. (m/s)
type	doubleExclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Friction velocity. Valid values: 0 to 1000. (m/s)

element **categorySandSaltPile/fastestMileOfWind**

diagram	 fastestMileOfWind Fastest mile of wind. Valid values: 0 to 1000. (m/s)
type	doubleExclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Fastest mile of wind. Valid values: 0 to 1000. (m/s)

element **categorySandSaltPile/meanWindSpeed**

diagram	 meanWindSpeed Average wind speed at sand or salt pile. Valid values: 0 to 1000. (m/s)
---------	---

type	doubleExclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation Average wind speed at sand or salt pile. Valid values: 0 to 1000. (m/s)

element **categorySandSaltPile/moistureContent**

diagram	<p>moistureContent Percentage of sand or salt pile that is moisture. Valid values: 0 to 1000. (%)</p>
type	doubleExclusiveRange100
properties	content simple default 0.01
facets	Kind Value Annotation minExclusive 0 maxExclusive 100
annotation	documentation Percentage of sand or salt pile that is moisture. Valid values: 0 to 1000. (%)

element **categorySandSaltPile/massDisturbedPerDisturbance**

diagram	<p>massDisturbedPerDisturbance The mass disturbed per disturbance. Valid values: 0 to 1000. (Metric Tons)</p>
type	doubleExclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation The mass disturbed per disturbance. Valid values: 0 to 1000. (Metric Tons)

element **categorySandSaltPile/erodedSurfaceArea**

diagram	<p>erodedSurfaceArea Eroded surface area of pile. Valid values: 0 to 1000. (meters²)</p>
type	doubleExclusive10000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 10000
annotation	documentation Eroded surface area of pile. Valid values: 0 to 1000. (meters ²)

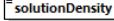
element **categorySolventDegreaser**

diagram	<p>categorySolventDegreaser Describes the operational characteristics of a source in the solvent degreaser category.</p> <p>typeCode Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.</p> <p>solutionDensity Density of the deicing solution. Valid values: 0 to 1000. (g/L)</p> <p>percentSolventDisposed Percentage of solvent removed by environmental controls. Valid values: 0 to 1000. (%)</p> <p>pollutionControlFactor Percent of emissions removed by pollution control measures. Valid values: 0 to 100. (%)</p>
properties	content complex
children	typeCode solutionDensity percentSolventDisposed pollutionControlFactor
used by	element stationarySource
annotation	documentation Describes the operational characteristics of a source in the solvent degreaser category.

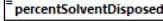
element **categorySolventDegreaser/typeCode**

diagram	 typeCode Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.
type	int1to13
properties	content simple
facets	Kind Value Annotation minInclusive 1 maxInclusive 13
annotation	documentation Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.

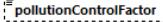
element **categorySolventDegreaser/solutionDensity**

diagram	 solutionDensity Density of the deicing solution. Valid values: 0 to 1000. (g/L)
type	doubleExclusive2000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxExclusive 2000
annotation	documentation Density of the deicing solution. Valid values: 0 to 1000. (g/L)

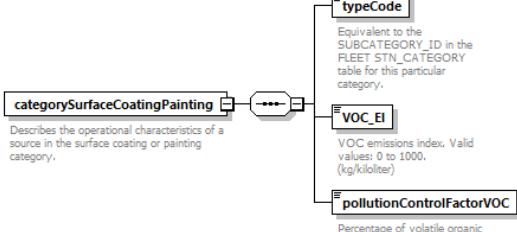
element **categorySolventDegreaser/percentSolventDisposed**

diagram	 percentSolventDisposed Percentage of solvent removed by environmental controls. Valid values: 0 to 1000. (%)
type	xs:double
properties	content simple default 0
annotation	documentation Percentage of solvent removed by environmental controls. Valid values: 0 to 1000. (%)

element **categorySolventDegreaser/pollutionControlFactor**

diagram	 pollutionControlFactor Percent of emissions removed by pollution control measures. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	minOcc 0 maxOcc 1 content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of emissions removed by pollution control measures. Valid values: 0 to 100. (%)

element **categorySurfaceCoatingPainting**

diagram	 <pre> graph LR A[categorySurfaceCoatingPainting] --- B(()) B --- C["typeCode Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category."] B --- D["VOC_EI VOC emissions index. Valid values: 0 to 1000. (kg/kilometer)"] B --- E["pollutionControlFactorVOC Percentage of volatile organic compounds removed by environmental controls. Valid values: 0 to 100. (%)"] </pre> <p>Describes the operational characteristics of a source in the surface coating or painting category.</p>
properties	content complex
children	typeCode VOC_EI pollutionControlFactorVOC
used by	element stationarySource
annotation	documentation Describes the operational characteristics of a source in the surface coating or painting category.

element **categorySurfaceCoatingPainting/typeCode**

diagram	typeCode Equivalent to the SUBCATEGORY_ID in the FLEET STN_CATEGORY table for this particular category.
type	int1to8
properties	content simple
facets	Kind Value Annotation minInclusive 1 maxInclusive 8
annotation	documentation Equivalent to the SUBCATEGORY_ID in the FLEET STN_CATEGORY table for this particular category.

element **categorySurfaceCoatingPainting/VOC_EI**

diagram	VOC_EI VOC emissions index. Valid values: 0 to 1000. (kg/kiloliter)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation VOC emissions index. Valid values: 0 to 1000. (kg/kiloliter)

element **categorySurfaceCoatingPainting/pollutionControlFactorVOC**

diagram	pollutionControlFactorVOC Percentage of volatile organic compounds removed by environmental controls. Valid values: 0 to 100. (%)
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percentage of volatile organic compounds removed by environmental controls. Valid values: 0 to 100. (%)

element **categoryTrainingFire**

diagram	<pre> classDiagram categoryTrainingFire "1" -- "*" typeCode typeCode "*" -- "*" CO_EI typeCode "*" -- "*" VOC_EI typeCode "*" -- "*" NOx_EI typeCode "*" -- "*" SOx_EI typeCode "*" -- "*" PM10_EI typeCode "*" -- "*" CO2_EI typeCode "*" -- "*" CH4_EI typeCode "*" -- "*" PM25_EI </pre> <p>typeCode Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.</p> <p>CO_EI Carbon monoxide emissions index. Valid values: 0 to 10. (kg/gal)</p> <p>VOC_EI Volatile organic compounds emissions index. Valid values: 0 to 10. (kg/gal)</p> <p>NOx_EI Nitrous oxides emissions index. Valid values: 0 to 10. (kg/gal)</p> <p>SOx_EI Sulfur oxides emissions index. Valid values: 0 to 10. (kg/gal)</p> <p>PM10_EI 10-micron particulate matter emissions index. Valid values: 0 to 10. (kg/gal)</p> <p>CO2_EI CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p> <p>CH4_EI Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p> <p>PM25_EI PM 2.5 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p>
properties	content complex
children	typeCode CO_EI VOC_EI NOx_EI SOx_EI PM10_EI CO2_EI CH4_EI PM25_EI
used by	element stationarySource
annotation	<p>documentation</p> <p>Supports data in the STN_TRAINING_FIRE table. This element supports the definition of training fires for scenario layouts. Training fire data are used in both emissions and dispersion analyses.</p>

element categoryTrainingFire/typeCode

diagram	<p>typeCode</p> <p>Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.</p>
type	int1to5
properties	content simple
facets	Kind Value Annotation minInclusive 1 maxInclusive 5
annotation	<p>documentation</p> <p>Equivalent to the SUBCATEGORY_ID in the FLEET_STN_CATEGORY table for this particular category.</p>

element categoryTrainingFire/CO_EI

diagram	<p>CO_EI</p> <p>Carbon monoxide emissions index. Valid values: 0 to 10. (kg/gal)</p>
type	xs:double
properties	content simple
annotation	<p>documentation</p> <p>Carbon monoxide emissions index. Valid values: 0 to 10. (kg/gal)</p>

element categoryTrainingFire/VOC_EI

diagram	<p>VOC_EI</p> <p>Volatile organic compounds emissions index. Valid values: 0 to 10. (kg/gal)</p>
type	xs:double
properties	content simple
annotation	<p>documentation</p>

element categoryTrainingFire/NOx_EI

diagram	 NOx_EI Nitrous oxides emissions index. Valid values: 0 to 10. (kg/gal)
type	xs:double
properties	content simple
annotation	Nitrous oxides emissions index. Valid values: 0 to 10. (kg/gal)

element categoryTrainingFire/SOx_EI

diagram	 SOx_EI Sulfur oxides emissions index. Valid values: 0 to 10. (kg/gal)
type	xs:double
properties	content simple
annotation	Sulfur oxides emissions index. Valid values: 0 to 10. (kg/gal)

element categoryTrainingFire/PM10_EI

diagram	 PM10_EI 10-micron particulate matter emissions index. Valid values: 0 to 10. (kg/gal)
type	xs:double
properties	content simple
annotation	10-micron particulate matter emissions index. Valid values: 0 to 10. (kg/gal)

element categoryTrainingFire/CO2_EI

diagram	 CO2_EI CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	CO2 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element categoryTrainingFire/CH4_EI

diagram	 CH4_EI Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	Methane emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element categoryTrainingFire/PM25_EI

diagram	 PM25_EI PM 2.5 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000

annotation	documentation PM 2.5 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m ³)
------------	--

element **centroid**

diagram	<pre> classDiagram class centroid { stateFips countyFips blockId bnaId centroid coord2DGroup elevation count latlonCoordGroup utmCoordGroup } class stateFips { Optional census state identifier. } class countyFips { Optional census county identifier. } class blockId { Optional census BLOCK ID. } class bnaId { Optional census BNA ID. } class centroid { <<Describes the geometric center of a polygon.>> } class coord2DGroup { <<Indicates how a two-dimensional group is specified.>> } class elevation { <<The centroid's elevation above MSL (ft) if terrain not used. If not specified, AEDT will use elevation of operation airport.>> } class count { <<The population count of the centroid. Valid values: 0 to 999999.>> } class latlonCoordGroup { <<Specifies a coordinate using latitude and longitude.>> } class utmCoordGroup { <<Specifies a point using Universal Transverse Mercator coordinates.>> } class latitude { <<Latitude specified as degrees in decimal format. Can include optional attribute positive.>> } class latitudeDMS { <<Latitude expressed as dd°mm'sss with optional indicator N, n, S, s.>> } class longitude { <<Longitude specified as degrees in decimal format. Can include optional attribute positive.>> } class longitudeDMS { <<Longitude expressed as dd°mm'sss with optional indicator N, n, S, s.>> } class utmN { <<UTM Northing of the point in decimal meters north of the equator.>> } class utmE { <<UTM Easting of the point in decimal meters east from a central meridian.>> } class utmZone { <<UTM Zone of the point. A default zone can be set in the <code><utmOptions></utmOptions></code> tag.>> } class receptorGroup </pre>
properties	content complex
children	stateFips countyFips blockId bnaId latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone elevation count
used by	group receptorGroup
annotation	<p>documentation</p> <p>Describes the geometric center of a polygon.</p>

element **centroid/stateFips**

diagram	 stateFips Optional census state identifier.
type	xs:int
properties	content simple
annotation	documentation Optional census state identifier.

element **centroid/countyFips**

diagram	 countyTips Optional census county identifier.
type	xs:int
properties	content simple
annotation	documentation Optional census county identifier.

element **centroid/blockId**

diagram	 blockId Optional census BLOCK ID.
type	xs:int
properties	content simple
annotation	documentation Optional census BLOCK ID.

element centroid/bnald

diagram	 bnald Optional census BNA ID.
type	string6
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 6
annotation	documentation Optional census BNA ID.

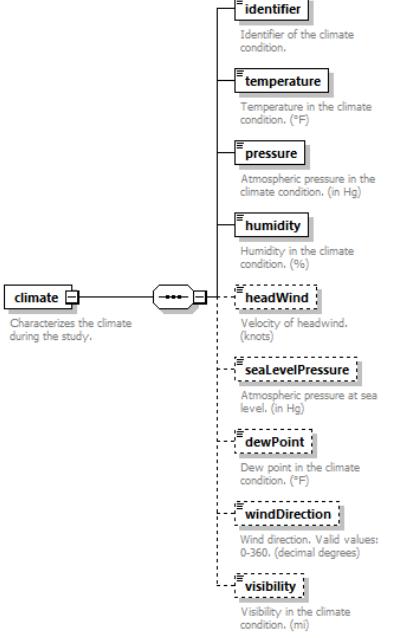
element centroid/elevation

diagram	 elevation The centroid's elevation above MSL (ft) if terrain not used. If not specified, AEDT will use elevation of operation airport.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The centroid's elevation above MSL (ft) if terrain not used. If not specified, AEDT will use elevation of operation airport.

element centroid/count

diagram	 count The population count of the centroid. Valid values: 0 to 999999.
type	xs:int
properties	content simple
annotation	documentation The population count of the centroid. Valid values: 0 to 999999.

element climate

diagram	 <pre> graph LR climate[climate] --> identifier[identifier] climate --> temperature[temperature] climate --> pressure[pressure] climate --> humidity[humidity] climate --> headWind[headWind] climate --> seaLevelPressure[seaLevelPressure] climate --> dewPoint[dewPoint] climate --> windDirection[windDirection] climate --> visibility[visibility] </pre> <p>The diagram illustrates the structure of the 'climate' element. It consists of a main 'climate' box connected to several child elements via dashed lines. The children are: 'identifier', 'temperature', 'pressure', 'humidity', 'headWind', 'seaLevelPressure', 'dewPoint', 'windDirection', and 'visibility'. Each child element has its own descriptive text below it.</p>
properties	content complex
children	identifier temperature pressure humidity headWind seaLevelPressure dewPoint windDirection visibility
used by	element study .
annotation	documentation

Characterizes the climate during the study.

element climate/identifier

diagram	 Identifier Identifier of the climate condition.
type	string8
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation Identifier of the climate condition.

element climate/temperature

diagram	 temperature Temperature in the climate condition. (°F)
type	xs:float
properties	content simple
annotation	documentation Temperature in the climate condition. (°F)

element climate/pressure

diagram	 pressure Atmospheric pressure in the climate condition. (in Hg)
type	xs:float
properties	content simple
annotation	documentation Atmospheric pressure in the climate condition. (in Hg)

element climate/humidity

diagram	 humidity Humidity in the climate condition. (%)
type	xs:double
properties	content simple
annotation	documentation Humidity in the climate condition. (%)

element climate/headWind

diagram	 headWind Velocity of headwind. (knots)
type	xs:float
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Velocity of headwind. (knots)

element climate/seaLevelPressure


diagram	 seaLevelPressure Atmospheric pressure at sea level. (in Hg)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Atmospheric pressure at sea level. (in Hg)

element climate/dewPoint

diagram	 dewPoint Dew point in the climate condition. (°F)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

annotation	documentation Dew point in the climate condition. (*F)
------------	---

element **climate/windDirection**

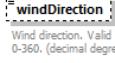diagram	 Wind direction. Valid values: 0-360. (decimal degrees)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Wind direction. Valid values: 0-360. (decimal degrees)

element **climate/visibility**

diagram	 Visibility in the climate condition. (mi)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Visibility in the climate condition. (mi)

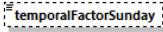
element **dailyProfile**

diagram	<p>Supports data in the APTPROFILE_DAILY. This element supports the definition of temporal factors on a daily operational basis.</p>
properties	content complex
children	profileName temporalFactorSunday temporalFactorMonday temporalFactorTuesday temporalFactorWednesday temporalFactorThursday temporalFactorFriday temporalFactorSaturday
used by	element dailyProfileSet
annotation	documentation Supports data in the APTPROFILE_DAILY. This element supports the definition of temporal factors on a daily operational basis.

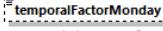
element **dailyProfile/profileName**

diagram	 Name of profile.
type	string100
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation Name of profile.

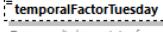
element **dailyProfile/temporalFactorSunday**

diagram	 Factor applied to activity for operations on Sundays. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations on Sundays. Valid values: 0.0000 to 1.0000.

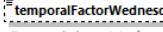
element **dailyProfile/temporalFactorMonday**

diagram	 Factor applied to activity for operations on Mondays. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations on Mondays. Valid values: 0.0000 to 1.0000.

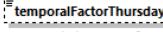
element **dailyProfile/temporalFactorTuesday**

diagram	 Factor applied to activity for operations on Tuesdays. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations on Tuesdays. Valid values: 0.0000 to 1.0000.

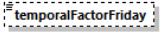
element **dailyProfile/temporalFactorWednesday**

diagram	 Factor applied to activity for operations on Wednesdays. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations on Wednesdays. Valid values: 0.0000 to 1.0000.

element **dailyProfile/temporalFactorThursday**

diagram	 Factor applied to activity for operations on Thursdays. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations on Thursdays. Valid values: 0.0000 to 1.0000.

element **dailyProfile/temporalFactorFriday**


diagram	 Factor applied to activity for operations on Fridays. Valid values: 0.0000 to 1.0000.
type	doubleMin0

properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations on Fridays. Valid values: 0.0000 to 1.0000.

element dailyProfile/temporalFactorSaturday

diagram	 Factor applied to activity for operations on Saturdays. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations on Saturdays. Valid values: 0.0000 to 1.0000.


element dailyProfileSet

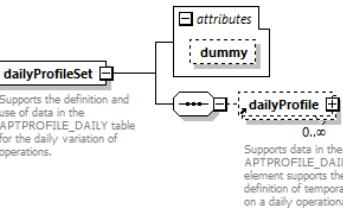diagram	 Supports the definition and use of data in the APTPROFILE_DAILY table for the daily variation of operations. dailyProfileSet Supports data in the APTPROFILE_DAILY. This element supports the definition of temporal factors on a daily operational basis. ... dailyProfile
properties	content complex
children	dailyProfile
used by	element operationalProfileSet complexType airportLayoutType
attributes	Name Type Use Default Fixed Annotation <u>dummy</u> , xs:int optional
annotation	documentation Supports the definition and use of data in the APTPROFILE_DAILY table for the daily variation of operations.


attribute dailyProfileSet/@dummy

type	xs:int
properties	use optional

element dispersionWeight

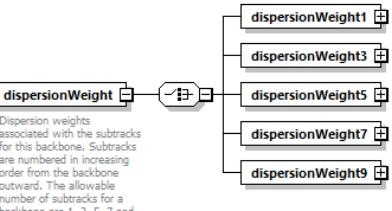diagram	 Dispersion weights associated with the subtracks for this backbone. Subtracks are numbered in increasing order from the backbone outward. The allowable number of subtracks for a backbone are 1, 3, 5, 7 and 9. Valid dispersion weight values are greater than one and less than or equal to 1. The sum of the dispersion weights for this backbone must equal 1. dispersionWeight dispersionWeight1 dispersionWeight3 dispersionWeight5 dispersionWeight7 dispersionWeight9
properties	content complex
children	dispersionWeight1 dispersionWeight3 dispersionWeight5 dispersionWeight7 dispersionWeight9
used by	element backbone
annotation	documentation Dispersion weights associated with the subtracks for this backbone. Subtracks are numbered in increasing order from the backbone outward. The allowable number of subtracks for a backbone are 1, 3, 5, 7 and 9. Valid dispersion weight values are greater than one and less than or equal to 1. The sum of the dispersion weights for this backbone must equal 1.

element dispersionWeight/dispersionWeight1

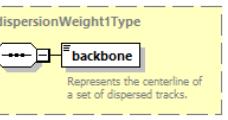diagram	 Represents the centerline of a set of dispersed tracks. dispersionWeight1 dispersionWeight1Type backbone
type	dispersionWeight1Type

properties	content complex
children	backbone

element **dispersionWeight/dispersionWeight3**

diagram	<pre> graph LR dispersionWeight3[dispersionWeight3] --- dispersionWeight3Type[dispersionWeight3Type] dispersionWeight3Type --- backbone[backbone] dispersionWeight3Type --- weightl1[weightl1] dispersionWeight3Type --- weightr1_1[weightr1] dispersionWeight3Type --- weightr1_2[weightr1] </pre>
type	dispersionWeight3Type
properties	content complex
children	backbone weightl1 weightr1 weightr1

element **dispersionWeight/dispersionWeight5**

diagram	<pre> graph LR dispersionWeight5[dispersionWeight5] --- dispersionWeight5Type[dispersionWeight5Type] dispersionWeight5Type --- backbone[backbone] dispersionWeight5Type --- weightl1[weightl1] dispersionWeight5Type --- weightr1_1[weightr1] dispersionWeight5Type --- weightl2[weightl2] dispersionWeight5Type --- weightr1_2[weightr1] dispersionWeight5Type --- weightr2[weightr2] </pre>
type	dispersionWeight5Type
properties	content complex
children	backbone weightl1 weightr1 weightl2 weightr2

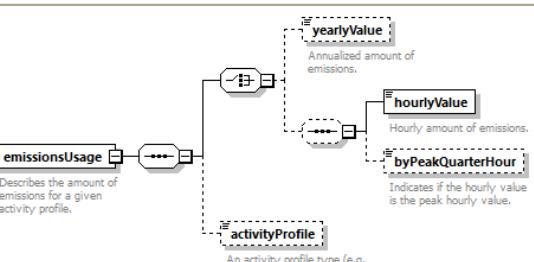
element **dispersionWeight/dispersionWeight7**

diagram	<pre> graph LR dispersionWeight7[dispersionWeight7] --- dispersionWeight7Type[dispersionWeight7Type] dispersionWeight7Type --- backbone[backbone] dispersionWeight7Type --- weightl1[weightl1] dispersionWeight7Type --- weightr1_1[weightr1] dispersionWeight7Type --- weightl2[weightl2] dispersionWeight7Type --- weightr1_2[weightr1] dispersionWeight7Type --- weightl3[weightl3] dispersionWeight7Type --- weightr1_3[weightr1] dispersionWeight7Type --- weightr3[weightr3] </pre>
type	dispersionWeight7Type
properties	content complex
children	backbone weightl1 weightr1 weightl2 weightr1 weightl3 weightr3

element **dispersionWeight/dispersionWeight9**

diagram	
type	dispersionWeight9Type
properties	content complex
children	backbone weightl1 weightr1 weightl2 weightr2 weightl3 weightr3 weightl4 weightr4

element **emissionsUsage**

diagram	
properties	content complex
children	yearlyValue hourlyValue byPeakQuarterHour activityProfile
used by	elements parkingFacilityOperation roadwayOperation stationarySourceOperation
annotation	documentation Describes the amount of emissions for a given activity profile.

element **emissionsUsage/yearlyValue**

diagram	
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Annualized amount of emissions.

element **emissionsUsage/hourlyValue**

diagram	
type	xs:double

properties	content simple
annotation	documentation Hourly amount of emissions.

element **emissionsUsage/byPeakQuarterHour**

diagram	
	Indicates if the hourly value is the peak hourly value.
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false
annotation	documentation Indicates if the hourly value is the peak hourly value.

element **emissionsUsage/activityProfile**

diagram	
	An activity profile type (e.g. reference to one of hourlyProfile, dailyProfile or weeklyProfile).
type	string40
properties	minOcc 0 maxOcc 1 content simple
used by	element activityProfileSet
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation An activity profile type (e.g. reference to one of hourlyProfile, dailyProfile or weeklyProfile).

element **engineModeEmissionFactors**

diagram	<p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of custom emission factor elements.</p> <pre> graph LR E[engineModeEmissionFactors] --> T[time] E --> F[fuel] E --> CO[CO] E --> HC[HC] E --> NOx[NOx] E --> PM[PM] E --> SN[SN] </pre>
properties	content complex
children	time fuel CO HC NOx PM SN
annotation	documentation NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of custom emission factor elements.

element **engineModeEmissionFactors/time**

diagram	
	Time engine operates in a given mode. Valid values: nonnegative. (minutes)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Time engine operates in a given mode. Valid values: nonnegative. (minutes)

element **engineModeEmissionFactors/fuel**

diagram	 fuel Rate of fuel burn in given mode. Valid values: nonnegative. (kg/s)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Rate of fuel burn in given mode. Valid values: nonnegative. (kg/s)

element **engineModeEmissionFactors/CO**

diagram	 CO Amount of carbon monoxide emitted. Valid values: nonnegative. (kg/s)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Amount of carbon monoxide emitted. Valid values: nonnegative. (kg/s)

element **engineModeEmissionFactors/HC**

diagram	 HC Amount of hydrocarbons emitted. Valid values: nonnegative. (kg/s)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Amount of hydrocarbons emitted. Valid values: nonnegative. (kg/s)

element **engineModeEmissionFactors/NOx**

diagram	 NOx Amount of nitrous oxide emitted. Valid values: nonnegative. (kg/s)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Amount of nitrous oxide emitted. Valid values: nonnegative. (kg/s)

element **engineModeEmissionFactors/PM**

diagram	 PM Amount of particulate matter emitted. Valid values: nonnegative. (kg/s)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Amount of particulate matter emitted. Valid values: nonnegative. (kg/s)

element **engineModeEmissionFactors/SN**

diagram	 SN Smoke number for the engine mode. Valid values: nonnegative. (kg/s)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation

Smoke number for the engine mode. Valid values: nonnegative. (kg/s)

element gate

diagram	<pre> classDiagram class gate { name elevation releaseHeight sigmaY sigmaZ oneOrThreeCoords2DGroupSet pointCoord polygonCoords } gate < -- gate gate --> oneOrThreeCoords2DGroupSet gate --> pointCoord gate --> polygonCoords </pre> <p>Supports data contained in the APTLAYOUT_GATE table. This element supports the definition of gates within an airport layout. In dispersion analyses, GSE, AGE, and APU emissions originate from the gate locations. Gates are needed for sequence modeling, which includes all dispersion analyses.</p>
properties	content complex
children	name elevation releaseHeight sigmaY sigmaZ pointCoord polygonCoords
used by	element gateSet
annotation	<p>documentation</p> <p>Supports data contained in the APTLAYOUT_GATE table. This element supports the definition of gates within an airport layout. In dispersion analyses, GSE, AGE, and APU emissions originate from the gate locations. Gates are needed for sequence modeling, which includes all dispersion analyses.</p>

element gate/name

diagram	<pre> attributeDiagram attribute name { Identifying name of gate. } </pre>						
type	string40						
properties	content simple						
facets	<table> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>40</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	40
Kind	Value Annotation						
minLength	0						
maxLength	40						
annotation	<p>documentation</p> <p>Identifying name of gate.</p>						

element gate/elevation

diagram	<pre> attributeDiagram attribute elevation { Gate's elevation above mean sea level in meters. Valid values: -500 to 5000. (m) } </pre>						
type	xs:double						
properties	<table> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content simple</td> <td></td> </tr> </table>	minOcc	0	maxOcc	1	content simple	
minOcc	0						
maxOcc	1						
content simple							
annotation	<p>documentation</p> <p>Gate's elevation above mean sea level in meters. Valid values: -500 to 5000. (m)</p>						

element gate/releaseHeight

diagram	<pre> attributeDiagram attribute releaseHeight { Height above ground level at which emissions are released into the atmosphere. Valid values: Variable, by airport. (m) } </pre>						
type	xs:double						
properties	<table> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content simple</td> <td></td> </tr> </table>	minOcc	0	maxOcc	1	content simple	
minOcc	0						
maxOcc	1						
content simple							
annotation	<p>documentation</p> <p>Height above ground level at which emissions are released into the atmosphere. Valid values: Variable, by airport. (m)</p>						

element gate/sigmaY

diagram	 sigmaY Horizontal dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: Variable, by airport. (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Horizontal dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: Variable, by airport. (m)

element **gate/sigmaZ**

diagram	 sigmaZ Vertical dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: Variable, by airport. (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Vertical dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: Variable, by airport. (m)

element **gateSet**

diagram	 gateSet Supports data contained in the APTLAYOUT_GATE table. This element supports the definition of gates within an airport layout. In dispersion analyses, GSE, AGE, and APU emissions originate from the gate locations. Gates are needed for sequence modeling, which includes all dispersion analyses.  gate 1..∞ Supports data contained in the APTLAYOUT_GATE table. This element supports the definition of gates within an airport layout. In dispersion analyses, GSE, AGE, and APU emissions originate from the gate locations. Gates are needed for sequence modeling, which includes all dispersion analyses.
properties	content complex
children	gate
used by	complexType airportLayoutType
annotation	documentation Supports data contained in the APTLAYOUT_GATE table. This element supports the definition of gates within an airport layout. In dispersion analyses, GSE, AGE, and APU emissions originate from the gate locations. Gates are needed for sequence modeling, which includes all dispersion analyses.

element **grid**

diagram	<pre> classDiagram class dynamic { dynamic Marks the grid as either a dynamic grid or a receptor grid. } class grid { grid Describes a grid of points. } class elevation { elevation The grid's elevation above MSL (ft) if terrain not used. If not specified, AEDT will use elevation of operation airport. } class width { width Width of the grid. (nmi). } class height { height Height of the grid (nmi). } class numWidth { numWidth Number of points to spread across the width of the grid. The total number of points in the grid is numWidth * numHeight. Points will be located along width of grid using the formula i * (width / numWidth) where i is the index of the point (0 <= i < numWidth). Valid values: 1 to 999. } class numHeight { numHeight Number of points to spread across the height of the grid. The total number of points in the grid is numWidth * numHeight. Points will be located along height of grid using the formula: i * (height / numHeight) where i is the index of the point (0 <= i < height). Valid values: 1 to 999. } class xroffset { xroffset The X-offset of the receptor grid in nautical miles. } class ydoffset { ydoffset The Y-offset of the receptor grid in nautical miles. } class latitude { latitude Latitude specified as degrees in decimal format. Can include optional attribute positive. } class longitude { longitude Longitude specified as degrees in decimal format. Can include optional attribute positive. } class latitudeDMS { latitudeDMS Latitude expressed as dd' mm' ss with optional indicator N, n, S, s. } class longitudeDMS { longitudeDMS Longitude expressed as dd' mm' ss with optional indicator N, n, S, s. } class utmN { utmN UTM Northing of the point in decimal meters north of the equator. } class utmE { utmE UTM Easting of the point in decimal meters east from a central meridian. } class utmZone { utmZone UTM Zone of the point. A default zone can be set in the &#60;options&#62; tag. } dynamic "1" -- "1" grid dynamic "1" -- "1" elevation dynamic "1" -- "1" width dynamic "1" -- "1" height dynamic "1" -- "1" numWidth dynamic "1" -- "1" numHeight dynamic "1" -- "1" xroffset dynamic "1" -- "1" ydoffset grid "*" -- "1" elevation grid "*" -- "1" width grid "*" -- "1" height grid "*" -- "1" numWidth grid "*" -- "1" numHeight grid "*" -- "1" xroffset grid "*" -- "1" ydoffset elevation "*" -- "1" latitude elevation "*" -- "1" longitude width "*" -- "1" latitude width "*" -- "1" longitude height "*" -- "1" latitude height "*" -- "1" longitude numWidth "*" -- "1" latitude numWidth "*" -- "1" longitude numHeight "*" -- "1" latitude numHeight "*" -- "1" longitude xroffset "*" -- "1" latitude xroffset "*" -- "1" longitude ydoffset "*" -- "1" latitude ydoffset "*" -- "1" longitude latitude "*" -- "1" latitudeDMS latitude "*" -- "1" longitudeDMS longitude "*" -- "1" latitudeDMS longitude "*" -- "1" longitudeDMS latitudeDMS "*" -- "1" utmN latitudeDMS "*" -- "1" utmE longitudeDMS "*" -- "1" utmN longitudeDMS "*" -- "1" utmE utmN "*" -- "1" utmZone utmE "*" -- "1" utmZone </pre>
properties	content complex
children	dynamic latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone elevation width height numWidth numHeight xroffset ydoffset
used by	group receptorGroup
annotation	documentation Describes a grid of points.

element grid/dynamic

diagram	<pre> classDiagram class dynamic { dynamic Marks the grid as either a dynamic grid or a receptor grid. } class xsboolean { xsboolean } dynamic "1" -- "1" xsboolean </pre>
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false

annotation	documentation Marks the grid as either a dynamic grid or a receptor grid.
------------	--

element grid/elevation

diagram	 elevation The grid's elevation above MSL (ft) if terrain not used. If not specified, AEDT will use elevation of operation airport.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The grid's elevation above MSL (ft) if terrain not used. If not specified, AEDT will use elevation of operation airport.

element grid/width

diagram	 width Width of the grid. (nmi).
type	xs:double
properties	content simple
annotation	documentation Width of the grid. (nmi).

element grid/height

diagram	 height Height of the grid (nmi).
type	xs:double
properties	content simple
annotation	documentation Height of the grid (nmi).

element grid/numWidth

diagram	 numWidth Number of points to spread across the width of the grid. The total number of points in the grid is numWidth × numHeight. Points will be located along width of grid using the formula i × (width÷numWidth) where i is the index of the point (0 … numWidth − 1). Valid values: 1 to 999.
type	xs:int
properties	content simple
annotation	documentation Number of points to spread across the width of the grid. The total number of points in the grid is numWidth × numHeight. Points will be located along width of grid using the formula i × (width÷numWidth) where i is the index of the point (0 … numWidth − 1). Valid values: 1 to 999.

element grid/numHeight

diagram	 numHeight Number of points to spread across the height of the grid. The total number of points in the grid is numWidth × numHeight. Points will be located along height of grid using the formula: i × (width÷numHeight) where i is the index of the point (0 … numHeight − 1). Valid values: 1 to 999.
type	xs:int
properties	content simple
annotation	documentation Number of points to spread across the height of the grid. The total number of points in the grid is numWidth × numHeight. Points will be located along height of grid using the formula: i × (width÷numHeight) where i is the index of the point (0 … numHeight − 1). Valid values: 1 to 999.

element grid/xrOffset

diagram	 xrOffset The X-offset of the receptor grid in nautical miles.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

	default 0
annotation	documentation The X-offset of the receptor grid in nautical miles.

element **grid/ydOffset**

diagram	
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation The Y-offset of the receptor grid in nautical miles.

element **groundSupportEquipmentGateAssignment**

diagram	
properties	content complex
children	gate fractionAssigned
used by	element groundSupportEquipmentGateAssignmentSet
annotation	documentation Supports gate assignments for GSE operations the STN_OP_GSE table. This element supports the definition of user defined ground support equipment.

element **groundSupportEquipmentGateAssignment/gate**

diagram	
type	string20
properties	content simple
used by	element gateSet
facets	Kind Value Annotation minLength 0 maxLength 20
annotation	documentation Gate to which GSE is assigned.

element **groundSupportEquipmentGateAssignment/fractionAssigned**

diagram	
type	doubleInclusive1
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation Fraction of GSE assigned to this gate. Must sum to 1.0 for all gate assignments for the GSE. Valid values: 0.0 to 1.0.

element **groundSupportEquipmentGateAssignmentSet**

diagram	
properties	content complex
children	groundSupportEquipmentGateAssignment
used by	element groundSupportEquipmentPopulationOperation
attributes	Name Type Use Default Fixed Annotation dummy xs:int optional

annotation	documentation Supports gate assignments for GSE operations in the STN_OP_GSE table. This element supports the definition of gate to ground support equipment assignments.
------------	--

attribute **groundSupportEquipmentGateAssignmentSet/@dummy**

type	xs:int
properties	use optional

element **groundSupportEquipmentLTOOperation**

diagram	<pre> graph LR A[groundSupportEquipmentLTOOp...] --- B[gseID] A --- C[fuelType] A --- D[horsepower] A --- E[loadFactor] A --- F[manufactureYear] A --- G[departureOpTime] A --- H[arrivalOpTime] </pre> <p>Describes operation of GSE operation.</p>
properties	content complex
children	gseID fuelType horsepower loadFactor manufactureYear departureOpTime arrivalOpTime
used by	element groundSupportEquipmentLTOOperationSet
annotation	documentation Describes operation of GSE operation.

element **groundSupportEquipmentLTOOperation/gseID**

diagram	<pre> graph LR A[gseID] --- B[The GSE ID.] </pre>
type	xs:int
properties	content simple
annotation	documentation The GSE ID.

element **groundSupportEquipmentLTOOperation/fuelType**

diagram	<pre> graph LR A[fuelType] --- B[Annotation] </pre>
type	fuelType
properties	content simple
facets	Kind Value pattern G Gasoline D Diesel C Compressed Natural Gas L Liquefied Petroleum Gas E Electric

element **groundSupportEquipmentLTOOperation/horsepower**


diagram	<pre> graph LR A[horsepower] --- B[GSE horsepower in bore hp. Valid values: 0.00 to 10000.00. (hp)] </pre>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation GSE horsepower in bore hp. Valid values: 0.00 to 10000.00. (hp)

element **groundSupportEquipmentLTOOperation/loadFactor**


diagram	<pre> graph LR A[loadFactor] --- B[Load factor of GSE (will be empty for APU). Valid values: 0.00 to 100.00.] </pre>
type	xs:double

properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Load factor of GSE (will be empty for APU). Valid values: 0.00 to 100.00.


element **groundSupportEquipmentLTOOperation/manufactureYear**

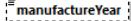diagram	 <p>The manufacture year and age of the equipment, if not using system defaults. Valid values: 1940 to 2050. (Latest valid year will the year of the study.)</p>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The manufacture year and age of the equipment, if not using system defaults. Valid values: 1940 to 2050. (Latest valid year will the year of the study.)


element **groundSupportEquipmentLTOOperation/departureOpTime**

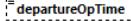diagram	 <p>The number of minutes used for a departure aircraft operation. Valid values: 0.00 to 480.00. (min)</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The number of minutes used for a departure aircraft operation. Valid values: 0.00 to 480.00. (min)

element **groundSupportEquipmentLTOOperation/arrivalOpTime**

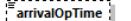diagram	 <p>The number of minutes used for an arrival aircraft operation. Valid values: 0.00 to 480.00. (min)</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The number of minutes used for an arrival aircraft operation. Valid values: 0.00 to 480.00. (min)

element **groundSupportEquipmentLTOOperationSet**

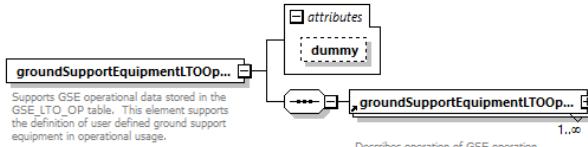diagram	 <p>Supports GSE operational data stored in the GSE_LTO_OP table. This element supports the definition of user defined ground support equipment in operational usage.</p> <p>Describes operation of GSE operation.</p>												
properties	content complex												
children	groundSupportEquipmentLTOOperation												
used by	complexType aircraftType												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	documentation Supports GSE operational data stored in the GSE_LTO_OP table. This element supports the definition of user defined ground support equipment in operational usage.												

attribute **groundSupportEquipmentLTOOperationSet/@dummy**

type	xs:int
properties	use optional

element **groundSupportEquipmentPopulationOperation**

diagram	<pre> classDiagram class groundSupportEquipmentPopulationOperation { gseID fuelType gseType numUnits annualOpTime pkQtrHourOpTime activityProfile horsepower loadFactor useNonRoad manufactureYear groundSupportEquipmentGateAssignmentSet } groundSupportEquipmentPopulationOperation "Supports GSE operational data in the STN_OP_GSE table. This element supports the definition of user defined ground support equipment in operational usage." as note </pre>
properties	content complex
children	gseID fuelType gseType numUnits annualOpTime pkQtrHourOpTime activityProfile horsepower loadFactor useNonRoad manufactureYear groundSupportEquipmentGateAssignmentSet
used by	element groundSupportEquipmentPopulationOperationSet
annotation	<p>documentation</p> <p>Supports GSE operational data in the STN_OP_GSE table. This element supports the definition of user defined ground support equipment in operational usage.</p>

element [groundSupportEquipmentPopulationOperation/gseID](#)

diagram	
type	xs:int
properties	content simple
annotation	<p>documentation</p> <p>The GSE ID.</p>

element [groundSupportEquipmentPopulationOperation/fuelType](#)

diagram							
type	fuelType						
properties	content simple						
facets	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; padding-right: 20px;">Kind</th> <th style="padding-left: 20px;">Value</th> <th style="text-align: right; padding-right: 20px;">Annotation</th> </tr> </thead> <tbody> <tr> <td style="text-align: left; padding-right: 20px;">pattern</td> <td style="padding-left: 20px;">G Gasoline D Diesel C Compressed Natural Gas L Liquefied Petroleum Gas E Electric</td> <td style="text-align: right; padding-right: 20px;"></td> </tr> </tbody> </table>	Kind	Value	Annotation	pattern	G Gasoline D Diesel C Compressed Natural Gas L Liquefied Petroleum Gas E Electric	
Kind	Value	Annotation					
pattern	G Gasoline D Diesel C Compressed Natural Gas L Liquefied Petroleum Gas E Electric						

element [groundSupportEquipmentPopulationOperation/gseType](#)


diagram	
type	xs:string
properties	content simple
annotation	<p>documentation</p> <p>The type of GSE.</p>

element [groundSupportEquipmentPopulationOperation/numUnits](#)

diagram	
type	xs:double

properties	content simple
annotation	documentation GSE number of units. Valid values: 0 to 10000.

element **groundSupportEquipmentPopulationOperation/annualOpTime**

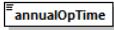diagram	 <p>annualOpTime Operation time, yearly. Valid values: 0 to 8784. (hr)</p>
type	xs:double
properties	content simple
annotation	documentation Operation time, yearly. Valid values: 0 to 8784. (hr)

element **groundSupportEquipmentPopulationOperation/pkQtrHourOpTime**

diagram	 <p>pkQtrHourOpTime Peak quarter hour operation time. Valid values: 0 to 15. (min/hr)</p>
type	xs:double
properties	content simple
annotation	documentation Peak quarter hour operation time. Valid values: 0 to 15. (min/hr)

element **groundSupportEquipmentPopulationOperation/activityProfile**

diagram	 <p>activityProfile Activity profile; (quarterly, daily, monthly).</p>
type	string40
properties	content simple
used by	element activityProfileSet
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Activity profile; (quarterly, daily, monthly).

element **groundSupportEquipmentPopulationOperation/horsepower**

diagram	 <p>horsepower Horsepower is in hp units. Valid values: 0 to 10000. (hp)</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Horsepower is in hp units. Valid values: 0 to 10000. (hp)

element **groundSupportEquipmentPopulationOperation/loadFactor**

diagram	 <p>loadFactor Load factor of GSE. (Will be empty for APU.) Valid values: 0 to 100.</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Load factor of GSE. (Will be empty for APU.) Valid values: 0 to 100.

element **groundSupportEquipmentPopulationOperation/useNonRoad**

diagram	 <p>useNonRoad User non-road version flag.</p>
type	xs:boolean
properties	content simple
annotation	documentation User non-road version flag.

element **groundSupportEquipmentPopulationOperation/manufactureYear**

diagram	<pre>graph TD; manufactureYear[manufactureYear]; manufactureYear --- doc["The manufacture year and age of the equipment, if not using system defaults. Valid values: 1900 to 2050. (Latest valid date will be the year of the study.)"]</pre>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The manufacture year and age of the equipment, if not using system defaults. Valid values: 1900 to 2050. (Latest valid date will be the year of the study.)

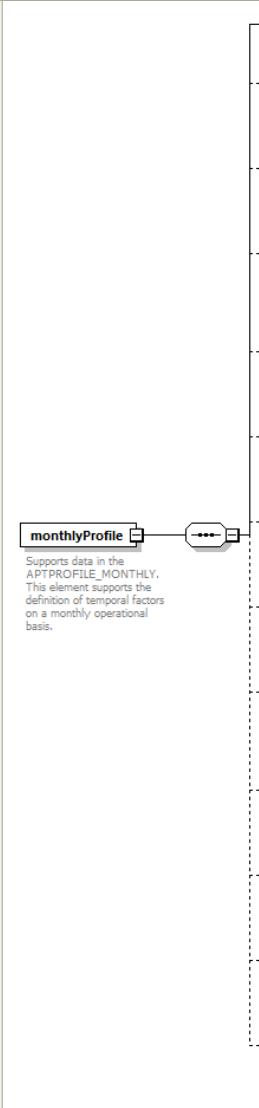
element **groundSupportEquipmentPopulationOperationSet**

diagram	<pre>graph LR; subgraph groundSupportEquipmentPopul... [groundSupportEquipmentPopul...]; attributes[attributes]; dummy[dummy]; end; groundSupportEquipmentPopul... -.-> dummy;</pre> <p>Supports GSE operational data in the STN_OP_GSE table. This element supports the definition of user defined ground support equipment in operational usage.</p>												
properties	content complex												
children	groundSupportEquipmentPopulationOperation												
used by	group airportActivityGroup												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	documentation Supports GSE operational data in the STN_OP_GSE table. This element supports the definition of user defined ground support equipment in operational usage.												

attribute **groundSupportEquipmentPopulationOperationSet/@dummy**

type	xs:int
properties	use optional

element **monthlyProfile**

diagram	 <p>monthlyProfileSet</p> <p>Supports data in the APTPROFILE_MONTHLY. This element supports the definition of temporal factors on a monthly operational basis.</p> <p>profileName</p> <p>Name of profile.</p> <p>temporalFactorJanuary</p> <p>Factor applied to activity for operations during January. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorFebruary</p> <p>Factor applied to activity for operations during February. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorMarch</p> <p>Factor applied to activity for operations during March. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorApril</p> <p>Factor applied to activity for operations during April. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorMay</p> <p>Factor applied to activity for operations during May. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorJune</p> <p>Factor applied to activity for operations during June. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorJuly</p> <p>Factor applied to activity for operations during July. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorAugust</p> <p>Factor applied to activity for operations during August. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorSeptember</p> <p>Factor applied to activity for operations during September. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorOctober</p> <p>Factor applied to activity for operations during October. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorNovember</p> <p>Factor applied to activity for operations during November. Valid values: 0.0000 to 1.0000.</p> <p>temporalFactorDecember</p> <p>Factor applied to activity for operations during December. Valid values: 0.0000 to 1.0000.</p>
properties	content complex
children	profileName temporalFactorJanuary temporalFactorFebruary temporalFactorMarch temporalFactorApril temporalFactorMay temporalFactorJune temporalFactorJuly temporalFactorAugust temporalFactorSeptember temporalFactorOctober temporalFactorNovember temporalFactorDecember
used by	element monthlyProfileSet
annotation	<p>documentation</p> <p>Supports data in the APTPROFILE_MONTHLY. This element supports the definition of temporal factors on a monthly operational basis.</p>

element **monthlyProfile/profileName**


diagram	<p>profileName</p> <p>Name of profile.</p>
type	string100
properties	content simple
facets	<p>Kind Value Annotation</p> <p>minLength 0</p> <p>maxLength 100</p>
annotation	<p>documentation</p> <p>Name of profile.</p>

element **monthlyProfile/temporalFactorJanuary**


diagram	<p>temporalFactorJanuary</p> <p>Factor applied to activity for operations during January. Valid values: 0.0000 to 1.0000.</p>
type	doubleMin0
properties	<p>minOcc 0</p> <p>maxOcc 1</p> <p>content simple</p>
facets	<p>Kind Value Annotation</p> <p>minInclusive 0</p>

annotation	documentation Factor applied to activity for operations during January. Valid values: 0.0000 to 1.0000.
------------	--


element **monthlyProfile/temporalFactorFebruary**

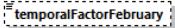diagram	 temporalFactorFebruary Factor applied to activity for operations during February. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during February. Valid values: 0.0000 to 1.0000.


element **monthlyProfile/temporalFactorMarch**

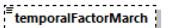diagram	 temporalFactorMarch Factor applied to activity for operations during March. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during March. Valid values: 0.0000 to 1.0000.


element **monthlyProfile/temporalFactorApril**

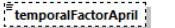diagram	 temporalFactorApril Factor applied to activity for operations during April. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during April. Valid values: 0.0000 to 1.0000.


element **monthlyProfile/temporalFactorMay**

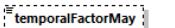diagram	 temporalFactorMay Factor applied to activity for operations during May. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during May. Valid values: 0.0000 to 1.0000.

element **monthlyProfile/temporalFactorJune**

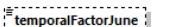diagram	 temporalFactorJune Factor applied to activity for operations during June. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during June. Valid values: 0.0000 to 1.0000.


element **monthlyProfile/temporalFactorJuly**

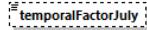diagram	 Factor applied to activity for operations during July. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during July. Valid values: 0.0000 to 1.0000.


element monthlyProfile/temporalFactorAugust

diagram	 Factor applied to activity for operations during August. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during August. Valid values: 0.0000 to 1.0000.


element monthlyProfile/temporalFactorSeptember

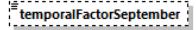diagram	 Factor applied to activity for operations during September. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during September. Valid values: 0.0000 to 1.0000.


element monthlyProfile/temporalFactorOctober

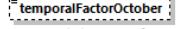diagram	 Factor applied to activity for operations during October. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during October. Valid values: 0.0000 to 1.0000.

element monthlyProfile/temporalFactorNovember

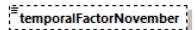diagram	 Factor applied to activity for operations during November. Valid values: 0.0000 to 1.0000.
type	doubleMin0
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during November. Valid values: 0.0000 to 1.0000.

element monthlyProfile/temporalFactorDecember

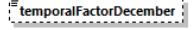diagram	 Factor applied to activity for operations during December. Valid values: 0.0000 to 1.0000.
type	doubleMin0

properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0
annotation	documentation Factor applied to activity for operations during December. Valid values: 0.0000 to 1.0000.

element monthlyProfileSet

diagram	<pre> classDiagram class monthlyProfileSet { <<Supports the definition and use of data in the APTPROFILE_MONTHLY table for the monthly variation of operations.>> } class monthlyProfile { <<Supports data in the APTPROFILE_MONTHLY. This element supports the definition of temporal factors on a monthly operational basis.>> } monthlyProfileSet "0..infinity" *--> monthlyProfile monthlyProfileSet <<Attributes>> { dummy } </pre>												
properties	content complex												
children	monthlyProfile												
used by	element operationalProfileSet complexType airportLayoutType												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>dummy</td> <td>xs:int</td> <td></td> <td></td> <td>optional</td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int			optional	
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int			optional									
annotation	documentation Supports the definition and use of data in the APTPROFILE_MONTHLY table for the monthly variation of operations.												

attribute monthlyProfileSet/@dummy

type	xs:int
properties	use optional

element operation

diagram

id

User specified identifier for the operation. One purpose served by this field is to allow the user to tie the AEDT AirOperation back to some original data source by setting the id field to an identifying identifier from the original data source. Another purpose is to set each ID to a project-specific value for each AirOperation. The ID field is used in several AEDT lists and reports that print out the AirOperations. In addition, the Impact Evaluation dialog uses the ID field to distinguish AirOperations when allowing the user to pick and choose operations to be moved to alternative flight tracks. If, however, the user has no outside data sources that need to be tied to the AEDT AirOperations, or if each AirOperation is identical in the sense that no specific AirOperation is more valuable than another or that there will be no intent to distinguish one AirOperation over another, then the suggested approach is to just set the UserID field to a unique number or set of characters. This will allow the user to distinguish the AirOperations if the need ever arises. Nevertheless, one can leave all the id fields empty or non-unique set of ids; however, in doing so, the user will have to use other identifying fields of the AirOperation if they should ever want to distinguish between AirOperations.

aircraftType

Type of aircraft in the flight.

cruiseAltitude

Override aircraft cruise altitude MSL for this operation. UNITS: feet.

numOperations

Number of operations comprising this operation.

opType

carrier

Carrier flying the flight. Not fully supported in AEDT.

flightNumber

Flight number. Not fully supported in AEDT.

tailNumber

Flight's tail number. Not fully supported in AEDT.

userType

User-defined aircraft type. Cannot be an aircraftType. Not fully supported in AEDT.

userParam

User-defined parameter associated with the operation. Not fully supported in AEDT.

departureAirport

Departure airport's ICAO code. Required if the operation is used with a <flight&gt or <operation&gt element. Also required if used with a <trackOpSet&gt modeling departures, circuits, runups, or touch-and-goes.

departureRunway

Airport's departure runway ID. Required if the operation is used with a <flight&gt or a <trackOpSet&gt modeling departures, circuits, runups, or touch-and-goes.

departureGate

Airport's departure gate. Not fully supported in AEDT.


departureApuTime

Number of minutes the auxiliary power unit is attached to a departing aircraft. (min)

arrivalAirport

Arrival airport's ICAO code. Required if the operation is used with a <flight&gt or <operation&gt element. Also required if used with a <trackOpSet&gt modeling arrivals, circuits, runups, or touch-and-goes.

serialNumber

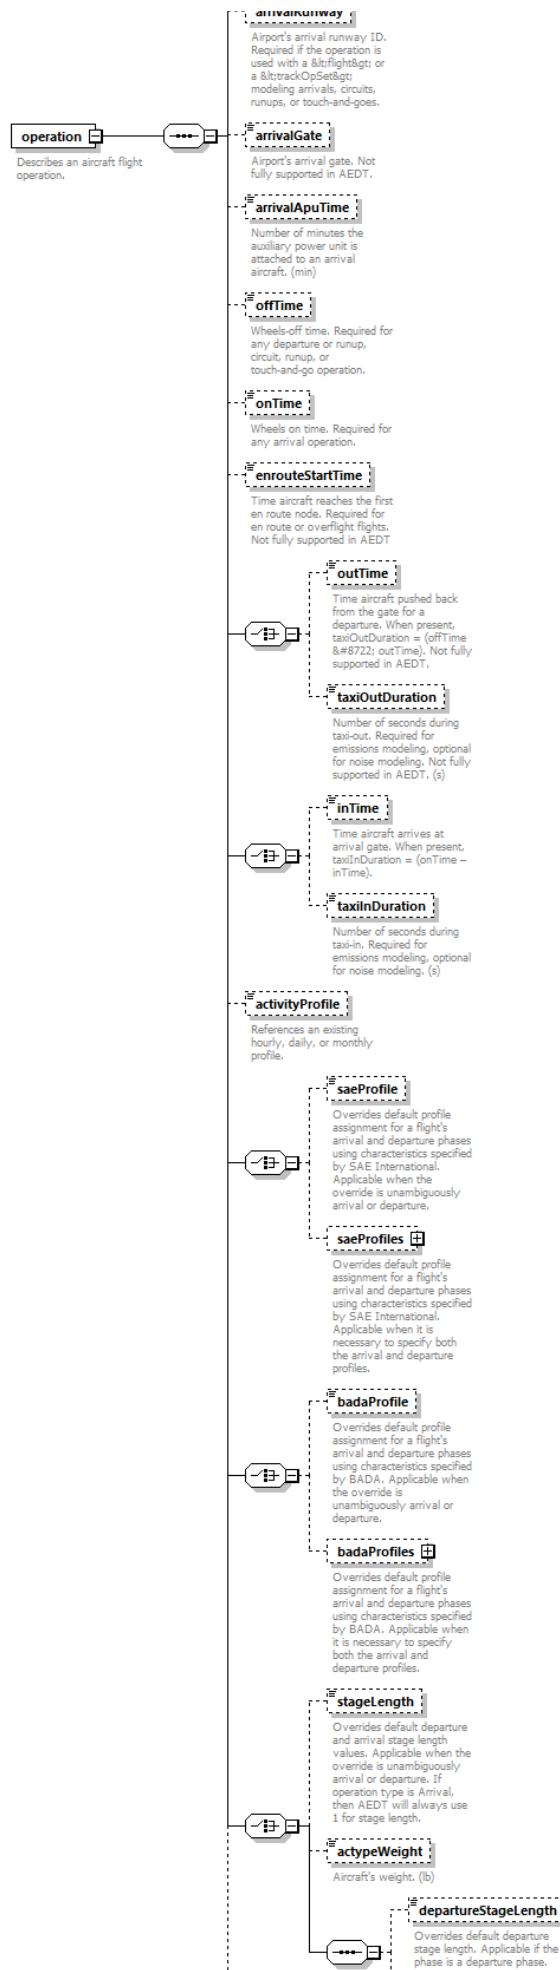

properties	content complex	
children	<code>id aircraftType cruiseAltitude numOperations opType carrier flightNumber tailNumber userParam departureAirport departureRunway departureGate departureApuTime arrivalAirport arrivalRunway arrivalGate arrivalApuTime offTime onTime enrouteStartTime outTime taxiOutDuration inTime taxInDuration activityProfile saeProfile saeProfiles badaProfile badaProfiles stageLength actypeWeight departureStageLength arrivalStageLength glideSlope fuelSulfurContent</code>	Overrides default arrival. Arrival, then AEDT will always use 1 for stage length.
used by	elements AsifXml case operations	
annotation	documentation Describes an aircraft flight operation.	
element operation/id		
diagram	<pre> graph TD id[id] --- apnAircraftId[apnAircraftId] id --- airframeModel[airframeModel] id --- engineCode/engineCode id --- engineModCode/engineModCode id --- apuName/apuName id --- gse[groundSupportEquipmentLTOOP...] id --- assignDefaultGse[assignDefaultGse] </pre> <p>The diagram illustrates the structure of the <code>operation/id</code> element. It consists of several child elements: <code>apnAircraftId</code>, <code>airframeModel</code>, <code>engineCode</code>, <code>engineModCode</code>, <code>apuName</code>, <code>gse</code>, and <code>assignDefaultGse</code>. Each child element is represented by a box with its name and a detailed description below it.</p>	
	id User specified identifier for the operation. One purpose served by this field is to allow the user to tie the AEDT AirOperations back to some original data source by setting the id field to an identifying identifier from the original data source. Another purpose is to set each ID to a project-specific value for each AirOperation. The ID field is used in several AEDT lists and reports that print out the AirOperations. In addition, the Impact Evaluation dialog uses the ID as its main method of distinguishing AirOperations when allowing the user to pick and choose operations to be moved to alternative flight tracks. If, however, the user has no outside data sources that need to be tied to the AEDT AirOperations, or if each AirOperation is identical in the sense that no specific AirOperation is more valuable than another or that there will be no intent to distinguish one AirOperation over another, then the suggested approach is to just set the UserID field to unique number or set of characters. This will allow the user to distinguish the AirOperations if the need ever arises. Nevertheless, one can leave all the id fields empty or non-unique set of ids; however, in doing so, the user will be forced to use other identifying fields of the AirOperation if they should ever want to distinguish between AirOperations.	
type	<code>string16</code>	
properties	content simple	
facets	Kind Value Annotation minLength 0 maxLength 16	
annotation	documentation User specified identifier for the operation. One purpose served by this field is to allow the user to tie the AEDT AirOperations back to some original data source by setting the id field to an identifying identifier from the original data source. Another purpose is to set each ID to a project-specific value for each AirOperation. The ID field is used in several AEDT lists and reports that print out the AirOperations. In addition, the Impact Evaluation dialog uses the ID as its main method of distinguishing AirOperations when allowing the user to pick and choose operations to be moved to alternative flight tracks. If, however, the user has no outside data sources that need to be tied to the AEDT AirOperations, or if each AirOperation is identical in the sense that no specific AirOperation is more valuable than another or that there will be no intent to distinguish one AirOperation over another, then the suggested approach is to just set the UserID field to unique number or set of characters. This will allow the user to distinguish the AirOperations if the need ever arises. Nevertheless, one can leave all the id fields empty or non-unique set of ids; however, in doing so, the user will be forced to use other identifying fields of the AirOperation if they should ever want to distinguish between AirOperations.	

element operation/aircraftType	
diagram	<pre> graph TD aircraftType[aircraftType] --- apnAircraftId[apnAircraftId] aircraftType --- airframeModel[airframeModel] aircraftType --- engineCode/engineCode aircraftType --- engineModCode/engineModCode aircraftType --- apuName/apuName aircraftType --- gse[groundSupportEquipmentLTOOP...] aircraftType --- assignDefaultGse[assignDefaultGse] </pre> <p>The diagram illustrates the structure of the <code>operation/aircraftType</code> element. It consists of several child elements: <code>apnAircraftId</code>, <code>airframeModel</code>, <code>engineCode</code>, <code>engineModCode</code>, <code>apuName</code>, <code>gse</code>, and <code>assignDefaultGse</code>. Each child element is represented by a box with its name and a detailed description below it.</p>
type	<code>aircraftType</code>

properties	content complex
children	anpAircraftId airframeModel engineCode engineModCode apuName groundSupportEquipment LTOperationSet assignDefaultGse
annotation	documentation Type of aircraft in the flight.

element operation/cruiseAltitude

diagram	cruiseAltitude Override aircraft cruise altitude MSL for this operation. UNITS: feet.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Override aircraft cruise altitude MSL for this operation. UNITS: feet.

element operation/numOperations

diagram	numOperations Number of operations comprising this operation.
type	xs:double
properties	content simple
annotation	documentation Number of operations comprising this operation.

element operation/opType

diagram	opType
type	opType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern A Arrival D Departure V Overflight F Circuit T TouchAndGo R Runup W RunwayToRunway L LTO LandingTakoff X Taxi

element operation/carrier

diagram	carrier Carrier flying the flight. Not fully supported in AEDT.
type	string4
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 4
annotation	documentation Carrier flying the flight. Not fully supported in AEDT.

element operation/flightNumber

diagram	flightNumber Flight number. Not fully supported in AEDT.
type	string16
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 16
annotation	documentation Flight number. Not fully supported in AEDT.

element operation/tailNumber

diagram	tailNumber Flight's tail number. Not fully supported in AEDT.
type	string8
properties	minOcc 0 maxOcc 1 content simple

facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation Flight's tail number. Not fully supported in AEDT.

element **operation/userType**

diagram	 userType User-defined aircraft type. Cannot be an aircraftType. Not fully supported in AEDT.
type	string12
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 12
annotation	documentation User-defined aircraft type. Cannot be an aircraftType. Not fully supported in AEDT.

element **operation/userParam**

diagram	 userParam User-defined parameter associated with the operation. Not fully supported in AEDT.
type	string16
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 16
annotation	documentation User-defined parameter associated with the operation. Not fully supported in AEDT.

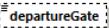
element **operation/departureAirport**

diagram	 departureAirport Departure airport's ICAO code. Required if the operation is used with a <flight&gt or <operation&gt element. Also required if used with a <trackOpSet&gt modeling departures, circuits, runups, or touch-and-goes.
type	airportCode
properties	minOcc 0 maxOcc 1 content complex
facets	Kind Value Annotation minLength 0 maxLength 4
attributes	Name Type Use Default Fixed Annotation type airportCodeType optional ANY country string3 optional ANY
annotation	documentation Departure airport's ICAO code. Required if the operation is used with a <flight&gt or <operation&gt element. Also required if used with a <trackOpSet&gt modeling departures, circuits, runups, or touch-and-goes.

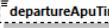
element **operation/departureRunway**

diagram	 departureRunway Airport's departure runway ID. Required if the operation is used with a <flight&gt or a <trackOpSet&gt modeling departures, circuits, runups, or touch-and-goes.
type	string8
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation Airport's departure runway ID. Required if the operation is used with a <flight&gt or a <trackOpSet&gt modeling departures, circuits, runups, or touch-and-goes.

element **operation/departureGate**

diagram	 departureGate Airport's departure gate. Not fully supported in AEDT.
type	string40
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Airport's departure gate. Not fully supported in AEDT.

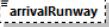
element **operation/departureApuTime**

diagram	 departureApuTime Number of minutes the auxiliary power unit is attached to a departing aircraft. (min)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Number of minutes the auxiliary power unit is attached to a departing aircraft. (min)

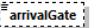
element **operation/arrivalAirport**

diagram	 arrivalAirport Arrival airport's ICAO code. Required if the operation is used with a <flight&gt or <operation&gt element. Also required if used with a <trackOpSet&gt modeling arrivals, circuits, runups, or touch-and-goes.
type	airportCode
properties	minOcc 0 maxOcc 1 content complex
facets	Kind Value Annotation minLength 0 maxLength 4
attributes	Name Type Use Default Annotation <u>type</u> airportCodeType optional ANY <u>country</u> string3 optional ANY
annotation	documentation Arrival airport's ICAO code. Required if the operation is used with a <flight&gt or <operation&gt element. Also required if used with a <trackOpSet&gt modeling arrivals, circuits, runups, or touch-and-goes.

element **operation/arrivalRunway**


diagram	 arrivalRunway Airport's arrival runway ID. Required if the operation is used with a <flight&gt or a <trackOpSet&gt modeling arrivals, circuits, runups, or touch-and-goes.
type	string8
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation Airport's arrival runway ID. Required if the operation is used with a <flight&gt or a <trackOpSet&gt modeling arrivals, circuits, runups, or touch-and-goes.

element **operation/arrivalGate**

diagram	 arrivalGate Airport's arrival gate. Not fully supported in AEDT.
type	string40
properties	minOcc 0 maxOcc 1 content simple

facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Airport's arrival gate. Not fully supported in AEDT.

element **operation/arrivalApuTime**

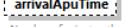diagram	 Number of minutes the auxiliary power unit is attached to an arrival aircraft. (min)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Number of minutes the auxiliary power unit is attached to an arrival aircraft. (min)

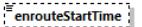
element **operation/offTime**

diagram	 Wheels-off time. Required for any departure or runup, circuit, runup, or touch-and-go operation.
type	xs:dateTime
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Wheels-off time. Required for any departure or runup, circuit, runup, or touch-and-go operation.

element **operation/onTime**

diagram	 Wheels on time. Required for any arrival operation.
type	xs:dateTime
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Wheels on time. Required for any arrival operation.

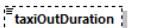
element **operation/enrouteStartTime**

diagram	 Time aircraft reaches the first en route node. Required for en route or overflight flights. Not fully supported in AEDT
type	xs:dateTime
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Time aircraft reaches the first en route node. Required for en route or overflight flights. Not fully supported in AEDT

element **operation/outTime**

diagram	 Time aircraft pushed back from the gate for a departure. When present, taxiOutDuration = (offTime − outTime). Not fully supported in AEDT.
type	xs:dateTime
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Time aircraft pushed back from the gate for a departure. When present, taxiOutDuration = (offTime − outTime). Not fully supported in AEDT.

element **operation/taxiOutDuration**

diagram	 Number of seconds during taxi-out. Required for emissions modeling, optional for noise modeling. Not fully supported in AEDT. (\$)
type	xs:double

properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Number of seconds during taxi-out. Required for emissions modeling, optional for noise modeling. Not fully supported in AEDT. (s)

element **operation/inTime**

diagram	 <p>Time aircraft arrives at arrival gate. When present, taxilnDuration = (onTime – inTime).</p>
type	xs:dateTime
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Time aircraft arrives at arrival gate. When present, taxilnDuration = (onTime – inTime).

element **operation/taxilnDuration**

diagram	 <p>Number of seconds during taxi-in. Required for emissions modeling, optional for noise modeling. (s)</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Number of seconds during taxi-in. Required for emissions modeling, optional for noise modeling. (s)

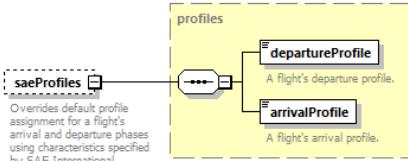
element **operation/activityProfile**

diagram	 <p>References an existing hourly, daily, or monthly profile.</p>
type	string100
properties	minOcc 0 maxOcc 1 content simple
used by	element activityProfileSet
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation References an existing hourly, daily, or monthly profile.

element **operation/saeProfile**

diagram	 <p>Overrides default profile assignment for a flight's arrival and departure phases using characteristics specified by SAE International. Applicable when the override is unambiguously arrival or departure.</p>
type	profileType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Overrides default profile assignment for a flight's arrival and departure phases using characteristics specified by SAE International. Applicable when the override is unambiguously arrival or departure.

element **operation/saeProfiles**

diagram	 <p>Overrides default profile assignment for a flight's arrival and departure phases using characteristics specified by SAE International. Applicable when it is necessary to specify both the arrival and departure profiles.</p>
type	profiles

properties	minOcc 0 maxOcc 1 content complex
children	departureProfile arrivalProfile
annotation	documentation Overrides default profile assignment for a flight's arrival and departure phases using characteristics specified by SAE International. Applicable when it is necessary to specify both the arrival and departure profiles.

element operation/badaProfile

diagram	<p>The diagram illustrates the structure of the badaProfile element. It is a dashed box labeled "badaProfile". An arrow points from this box to a dashed box labeled "profiles". Another arrow points from "badaProfile" to a solid box labeled "departureProfile" with the annotation "A flight's departure profile.". A third arrow points from "badaProfile" to a solid box labeled "arrivalProfile" with the annotation "A flight's arrival profile.".</p>
type	profileType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Overrides default profile assignment for a flight's arrival and departure phases using characteristics specified by BADA. Applicable when the override is unambiguously arrival or departure.

element operation/badaProfiles

diagram	<p>The diagram illustrates the structure of the badaProfiles element. It is a dashed box labeled "badaProfiles". An arrow points from this box to a dashed box labeled "profiles". Inside "profiles", there are two solid boxes: "departureProfile" (with annotation "A flight's departure profile.") and "arrivalProfile" (with annotation "A flight's arrival profile.").</p>
type	profiles
properties	minOcc 0 maxOcc 1 content complex
children	departureProfile arrivalProfile
annotation	documentation Overrides default profile assignment for a flight's arrival and departure phases using characteristics specified by BADA. Applicable when it is necessary to specify both the arrival and departure profiles.

element operation/stageLength

diagram	<p>The diagram illustrates the structure of the stageLength element. It is a dashed box labeled "stageLength". An arrow points from this box to a dashed box labeled "profiles". Inside "profiles", there are two solid boxes: "departureProfile" (with annotation "A flight's departure profile.") and "arrivalProfile" (with annotation "A flight's arrival profile.").</p>
type	string1
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Overrides default departure and arrival stage length values. Applicable when the override is unambiguously arrival or departure. If operation type is Arrival, then AEDT will always use 1 for stage length.

element operation/actypeWeight

diagram	<p>The diagram illustrates the structure of the actypeWeight element. It is a dashed box labeled "actypeWeight". An arrow points from this box to a dashed box labeled "profiles". Inside "profiles", there are two solid boxes: "departureProfile" (with annotation "A flight's departure profile.") and "arrivalProfile" (with annotation "A flight's arrival profile.").</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Aircraft's weight. (lb)

element operation/departureStageLength

diagram	<p>The diagram illustrates the structure of the departureStageLength element. It is a dashed box labeled "departureStageLength". An arrow points from this box to a dashed box labeled "profiles". Inside "profiles", there are two solid boxes: "departureProfile" (with annotation "A flight's departure profile.") and "arrivalProfile" (with annotation "A flight's arrival profile.").</p>
annotation	documentation Overrides default departure stage length. Applicable if the phase is a departure phase.

type	string1
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Overrides default departure stage length. Applicable if the phase is a departure phase.

element operation/arrivalStageLength

diagram	<p>The diagram shows the <code>arrivalStageLength</code> element highlighted with a dashed border. A tooltip below it provides the documentation: "Overrides default arrival stage length. Applicable if the phase is an arrival phase. If operation type is Arrival, then AEDT will always use 1 for stage length."</p>
type	string1
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Overrides default arrival stage length. Applicable if the phase is an arrival phase. If operation type is Arrival, then AEDT will always use 1 for stage length.

element operation/glideSlope

diagram	<p>The diagram shows the <code>glideSlope</code> element highlighted with a dashed border. A tooltip below it provides the documentation: "Glide slope angle for this operation. (decimal degrees)"</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Glide slope angle for this operation. (decimal degrees)

element operation/fuelSulfurContent

diagram	<p>The diagram shows the <code>fuelSulfurContent</code> element highlighted with a dashed border. A tooltip below it provides the documentation: "Sulfur content of the fuel used in this operation. (%)"</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Sulfur content of the fuel used in this operation. (%)

element operationalProfileSet

diagram	<p>The diagram shows the <code>operationalProfileSet</code> element highlighted with a dashed border. It has three child elements: <code>quarterHourlyProfileSet</code>, <code>dailyProfileSet</code>, and <code>monthlyProfileSet</code>. Each child element is also highlighted with a dashed border and has its own tooltip describing its purpose.</p> <ul style="list-style-type: none"> <code>quarterHourlyProfileSet</code>: Supports the definition and use of QUARTER_HOURLY_PROFILE_SET for the quarter hourly variation of operations. <code>dailyProfileSet</code>: Supports the definition and use of data in the APTPROFILE_DAILY table for the daily variation of operations. <code>monthlyProfileSet</code>: Supports the definition and use of data in the APTPROFILE_MONTHLY table for the monthly variation of operations. <code>activityProfileSet</code>: Supports the definition and use of QUARTER_HOURLY_PROFILES, DAILY_PROFILES, and MONTHLY_PROFILES variation of operations.
properties	content complex
children	quarterHourlyProfileSet dailyProfileSet monthlyProfileSet activityProfileSet
used by	element AsifXml

element operations

diagram	<pre> classDiagram operations "Contains a list of aircraft flight operations." dummy "Attributes" dummy "operation" *--> "1..oo Describes an aircraft flight operation." </pre>												
properties	content complex												
children	operation												
used by	element trackOpSet												
attributes	<table> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	<p>documentation</p> <p>Contains a list of aircraft flight operations.</p>												

attribute **operations/@dummy**

type	xs:int
properties	use optional

element **options**

diagram	<pre> classDiagram options "Contains default option values applied to the study." utmZoneDefault "Attributes" </pre>
properties	content complex
children	utmZoneDefault
used by	element AsifXml
annotation	<p>documentation</p> <p>Contains default option values applied to the study.</p>

element **options/utmZoneDefault**

diagram	<pre> classDiagram utmZoneDefault "Default UTM zone number." </pre>
type	xs:int
properties	content simple default -1
annotation	<p>documentation</p> <p>Default UTM zone number.</p>

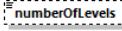
element **parkingFacility**

diagram	<pre> classDiagram parkingFacility "NOT currently supported in AEDT - legacy EDMS definitions for parking lots. This element supports the definition of parking lot and parking garage geometries for scenario layouts." name "Identifying name of parking facility." numberOfLevels "Number of levels in the parking facility. Valid values: 1 to 20." topReleaseHeight "Height AGL at which emissions are released into the atmosphere. Valid values 0 to 100 (m)." spacing "Distance between two parking spaces. (m)." elevation "Elevation of parking facility in MSL. Valid values: range of 0 - 328, airport specific.(m)." pointCoord "Choice of a single point coordinate." polygonCoords "Choice of a 2D polygon." oneOrThreeCoords2DGroupSet "Type of coordinate specifying the area." </pre>
properties	content complex
children	name numberOfLevels topReleaseHeight spacing elevation pointCoord polygonCoords
used by	element parkingFacilitySet
annotation	<p>documentation</p> <p>NOT currently supported in AEDT - legacy EDMS definitions for parking lots. This element supports the definition of parking lot and parking garage geometries for scenario layouts.</p>

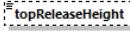
element **parkingFacility/name**

diagram	 name Identifying name of parking facility.
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Identifying name of parking facility.

element parkingFacility/numberOfLevels

diagram	 numberOfLevels Number of levels in the parking facility. Valid values: 1 to 20.
type	xs:int
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation Number of levels in the parking facility. Valid values: 1 to 20.

element parkingFacility/topReleaseHeight

diagram	 topReleaseHeight Height AGL at which emissions are released into the atmosphere. Valid values 0 to 100 (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Height AGL at which emissions are released into the atmosphere. Valid values 0 to 100 (m)

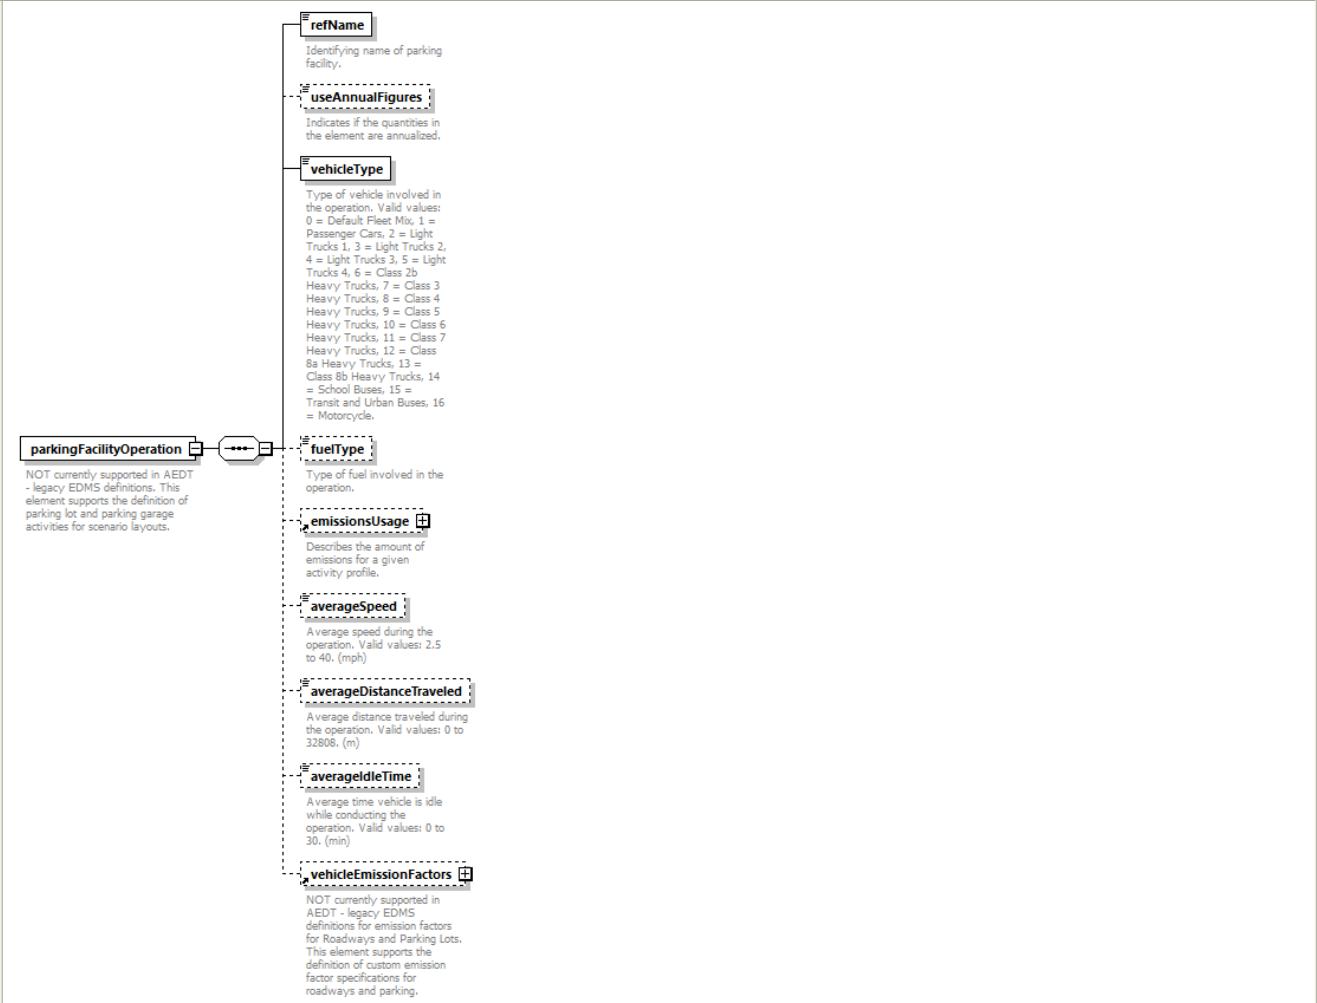
element parkingFacility/spacing

diagram	 spacing Distance between two parking spaces. (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Distance between two parking spaces. (m)

element parkingFacility/elevation

diagram	 elevation Elevation of parking facility in MSL. Valid values: range of 0 - 328, airport specific.(m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Elevation of parking facility in MSL. Valid values: range of 0 - 328, airport specific.(m)

element parkingFacilityOperation

diagram	 <p>refName Identifying name of parking facility.</p> <p>useAnnualFigures Indicates if the quantities in the element are annualized.</p> <p>vehicleType Type of vehicle involved in the operation. Valid values: 0 = Default Fleet Mru, 1 = Passenger Cars, 2 = Light Trucks, 1, 3 = Light Trucks 2, 4 = Light Trucks 3, 5 = Light Trucks 4, 6 = Class 2b Heavy Trucks, 7 = Class 3 Heavy Trucks, 8 = Class 4 Heavy Trucks, 9 = Class 5 Heavy Trucks, 10 = Class 6 Heavy Trucks, 11 = Class 7 Heavy Trucks, 12 = Class 8a Heavy Trucks, 13 = Class 8b Heavy Trucks, 14 = School Buses, 15 = Transit and Urban Buses, 16 = Motorcycle.</p> <p>parkingFacilityOperation NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of parking lot and parking garage activities for scenario layouts.</p> <p>fuelType Type of fuel involved in the operation.</p> <p>emissionsUsage Describes the amount of emissions for a given activity profile.</p> <p>averageSpeed Average speed during the operation. Valid values: 2.5 to 40. (mph)</p> <p>averageDistanceTraveled Average distance traveled during the operation. Valid values: 0 to 32808. (m)</p> <p>averageIdleTime Average time vehicle is idle while conducting the operation. Valid values: 0 to 30. (min)</p> <p>vehicleEmissionFactors NOT currently supported in AEDT - legacy EDMS definitions for parking lots and parking garages. This element supports the definition of custom emission factor specifications for roadways and parking.</p>
properties	content complex
children	refName useAnnualFigures vehicleType fuelType emissionsUsage averageSpeed averageDistanceTraveled averageIdleTime vehicleEmissionFactors
used by	element parkingFacilityOperationSet
annotation	<p>documentation</p> <p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of parking lot and parking garage activities for scenario layouts.</p>

element **parkingFacilityOperation/refName**

diagram	<p>refName Identifying name of parking facility.</p>
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	<p>documentation</p> <p>Identifying name of parking facility.</p>

element **parkingFacilityOperation/useAnnualFigures**

diagram	<p>useAnnualFigures Indicates if the quantities in the element are annualized.</p>
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false
annotation	<p>documentation</p> <p>Indicates if the quantities in the element are annualized.</p>

element **parkingFacilityOperation/vehicleType**

diagram	vehicleType Type of vehicle involved in the operation. Valid values: 0 = Default Fleet Mix, 1 = Passenger Cars, 2 = Light Trucks 1, 3 = Light Trucks 2, 4 = Light Trucks 3, 5 = Light Trucks 4, 6 = Class 2b Heavy Trucks, 7 = Class 3 Heavy Trucks, 8 = Class 4 Heavy Trucks, 9 = Class 5 Heavy Trucks, 10 = Class 6 Heavy Trucks, 11 = Class 7 Heavy Trucks, 12 = Class 8 Heavy Trucks, 13 = Class 8b Heavy Trucks, 14 = School Buses, 15 = Transit and Urban Buses, 16 = Motorcycle.
type	groundVehicleType
properties	content simple
facets	Kind Value pattern 0 Default Fleet Mix 1 Passenger Cars 2 Light Trucks 1 3 Light Trucks 2 4 Light Trucks 3 5 Light Trucks 4 6 Class 2b Heavy Trucks 7 Class 3 Heavy Trucks 8 Class 4 Heavy Trucks 9 Class 5 Heavy Trucks 10 Class 6 Heavy Trucks 11 Class 7 Heavy Trucks 12 Class 8a Heavy Trucks 13 Class 8b Heavy Trucks 14 School Busses 15 Transit and Urban Buses 16 Motorcycle
annotation	documentation Type of vehicle involved in the operation. Valid values: 0 = Default Fleet Mix, 1 = Passenger Cars, 2 = Light Trucks 1, 3 = Light Trucks 2, 4 = Light Trucks 3, 5 = Light Trucks 4, 6 = Class 2b Heavy Trucks, 7 = Class 3 Heavy Trucks, 8 = Class 4 Heavy Trucks, 9 = Class 5 Heavy Trucks, 10 = Class 6 Heavy Trucks, 11 = Class 7 Heavy Trucks, 12 = Class 8a Heavy Trucks, 13 = Class 8b Heavy Trucks, 14 = School Buses, 15 = Transit and Urban Buses, 16 = Motorcycle.

element parkingFacilityOperation/fuelType

diagram	fuelType Type of fuel involved in the operation.
type	fuelType
properties	minOcc 0 maxOcc 1 content simple default G
facets	Kind Value pattern G Gasoline D Diesel C Compressed Natural Gas L Liquefied Petroleum Gas E Electric

element parkingFacilityOperation/averageSpeed

diagram	averageSpeed Average speed during the operation. Valid values: 2.5 to 40. (mph)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 10
annotation	documentation Average speed during the operation. Valid values: 2.5 to 40. (mph)

element parkingFacilityOperation/averageDistanceTraveled

diagram	averageDistanceTraveled Average distance traveled during the operation. Valid values: 0 to 32808. (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Average distance traveled during the operation. Valid values: 0 to 32808. (m)

element parkingFacilityOperation/averageIdleTime

diagram	averageIdleTime Average time vehicle is idle while conducting the operation. Valid values: 0 to 30. (min)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Average time vehicle is idle while conducting the operation. Valid values: 0 to 30. (min)

element parkingFacilityOperationSet

diagram	<p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of parking lot and parking garage activities for scenario layouts.</p> <p>1..*</p> <p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of parking lot and parking garage activities for scenario layouts.</p>												
properties	content complex												
children	parkingFacilityOperation												
used by	group airportActivityGroup												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td><u>dummy</u></td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	<u>dummy</u>	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
<u>dummy</u>	xs:int	optional											
annotation	<p>documentation</p> <p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of parking lot and parking garage activities for scenario layouts.</p>												

attribute **parkingFacilityOperationSet/@dummy**

type	xs:int
properties	use optional

element **parkingFacilitySet**

diagram	<p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of parking lot and parking garage activities for scenario layouts.</p> <p>1..*</p> <p>NOT currently supported in AEDT - legacy EDMS definitions for parking lots. This element supports the definition of parking lot and parking garage geometries for scenario layouts.</p>												
properties	content complex												
children	parkingFacility												
used by	complexType airportLayoutType												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td><u>dummy</u></td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	<u>dummy</u>	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
<u>dummy</u>	xs:int	optional											
annotation	<p>documentation</p> <p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of parking lot and parking garage activities for scenario layouts.</p>												

attribute **parkingFacilitySet/@dummy**

type	xs:int
properties	use optional

element **pointReceptor**

<p>diagram</p>	<pre> classDiagram pointReceptor < -- name name --> elevation pointReceptor --> coord2DGroup pointReceptor --> latlonCoordGroup pointReceptor --> utmCoordGroup coord2DGroup --> latitude coord2DGroup --> longitude latlonCoordGroup --> latitudeDMS latlonCoordGroup --> longitudeDMS utmCoordGroup --> utmN utmCoordGroup --> utmE utmCoordGroup --> utmZone elevation --> noiseOffsetHeight </pre> <p>pointReceptor Element specification for a point receptor.</p> <p>name</p> <p>elevation Elevation of the receptor above MSL (ft.)</p> <p>noiseOffsetHeight Height of the receptor above ground (ft.)</p> <p>coord2DGroup Indicates how a two-dimensional group is specified.</p> <p>latlonCoordGroup Specifies a coordinate using latitude and longitude.</p> <p>latitude Latitude specified as degrees in decimal format. Can include optional attribute positive.</p> <p>latitudeDMS Latitude expressed as dd'm'm'ss with optional indicator N, n, S, s.</p> <p>longitude Longitude specified as degrees in decimal format. Can include optional attribute positive.</p> <p>longitudeDMS Longitude expressed as dd'm'm'ss with optional indicator N, n, S, s.</p> <p>utmCoordGroup Specifies a point using Universal Transverse Mercator coordinates.</p> <p>utmN UTM Northing of the point in decimal meters north of the equator.</p> <p>utmE UTM Easting of the point in decimal meters east from a central meridian.</p> <p>utmZone UTM Zone of the point. A default zone can be set in the &#60;options&#62; tag.</p>
properties	content complex
children	name latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone elevation noiseOffsetHeight
used by	group receptorGroup
annotation	<p>documentation</p> <p>Element specification for a point receptor.</p>

element pointReceptor/name

diagram							
type	string255						
properties	content simple						
facets	<table border="1"> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>255</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	255
Kind	Value Annotation						
minLength	0						
maxLength	255						

element pointReceptor/elevation

diagram							
type	xs:double						
properties	<table border="1"> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> </table>	minOcc	0	maxOcc	1	content	simple
minOcc	0						
maxOcc	1						
content	simple						
annotation	<p>documentation</p> <p>Elevation of the receptor above MSL (ft.)</p>						

element pointReceptor/noiseOffsetHeight

diagram							
type	xs:double						
properties	<table border="1"> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> </table>	minOcc	0	maxOcc	1	content	simple
minOcc	0						
maxOcc	1						
content	simple						
annotation	<p>documentation</p> <p>Height of the receptor above ground (ft.)</p>						

element pointStationarySource

diagram	<pre> classDiagram class pointStationarySource { <<Specifies the point in space occupied by a stationary source of emissions.>> } class pointCoord { <<Type of 2-D coordinates specifying the point.>> } class baseElevation { <<Elevation of point. Valid values: -500 to 5000. (m)>> } class releaseHeight { <<Height above ground level at which emissions are released into the atmosphere. Valid values 0 to 100 (m)>> } class gasVelocity { <<Velocity at which gas escapes from the source (m/s)>> } class stackDiameter { <<Diameter of stack where gas escapes from the source. Valid values: 0.1 to 50 (m)>> } class temperature { <<Temperature at point (*F)>> } class aboveAmbientTemperature { <<Indicates if temperature is absolute (False) or if temperature is relative to current ambient temperature (True).>> } pointStationarySource "1" -- "*" pointCoord : pointStationarySource "*" -- "*" baseElevation : pointStationarySource "*" -- "*" releaseHeight : pointStationarySource "*" -- "*" gasVelocity : pointStationarySource "*" -- "*" stackDiameter : pointStationarySource "*" -- "*" temperature : pointStationarySource "*" -- "*" aboveAmbientTemperature : </pre>
properties	content complex
children	pointCoord baseElevation releaseHeight gasVelocity stackDiameter temperature aboveAmbientTemperature
used by	element stationarySource
annotation	<p>documentation</p> <p>Specifies the point in space occupied by a stationary source of emissions.</p>

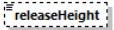
element pointStationarySource/pointCoord

diagram	<pre> classDiagram class pointCoord { <<Type of 2-D coordinates specifying the point.>> } class coord2DType { <<Specifies a coordinate using latitude and longitude or Universal Transverse Mercator coordinates.>> } class lationCoordGroup { <<Specifies a coordinate using latitude and longitude.>> } class utmCoordGroup { <<Specifies a point using Universal Transverse Mercator coordinates.>> } class latitude { <<Latitude specified as degrees in decimal format. Can include optional attribute positive.>> } class latitudeDMS { <<Latitude expressed as dd' mm''ss with optional indicator N, n, S, s.>> } class longitude { <<Longitude specified as degrees in decimal format. Can include optional attribute positive.>> } class longitudeDMS { <<Longitude expressed as dd' mm''ss with optional indicator N, n, S, s.>> } class utmN { <<UTM Northing of the point in decimal meters north of the equator.>> } class utmE { <<UTM Easting of the point in decimal meters east from a central meridian.>> } class utmZone { <<UTM Zone of the point. A default zone can be set in the &#60;options&#62; tag.>> } pointCoord "*" -- "*" coord2DType : coord2DType "*" -- "*" lationCoordGroup : coord2DType "*" -- "*" utmCoordGroup : lationCoordGroup "*" -- "*" latitude : lationCoordGroup "*" -- "*" longitude : utmCoordGroup "*" -- "*" utmN : utmCoordGroup "*" -- "*" utmE : utmZone "*" -- "*" utmN : utmZone "*" -- "*" utmE : </pre>
type	coord2DType
properties	content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone
annotation	<p>documentation</p> <p>Type of 2-D coordinates specifying the point.</p>

element pointStationarySource/baseElevation

diagram	<pre> classDiagram class baseElevation { <<Elevation of point. Valid values: -500 to 5000. (m)>> } baseElevation "*" -- "*" xsdouble : </pre>
type	xs:double
properties	content simple
annotation	<p>documentation</p> <p>Elevation of point. Valid values: -500 to 5000. (m)</p>

element pointStationarySource/releaseHeight

diagram	 Height above ground level at which emissions are released into the atmosphere. Valid values 0 to 100 (m)
type	doubleInclusive100
properties	minOcc 0 maxOcc 1 content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Height above ground level at which emissions are released into the atmosphere. Valid values 0 to 100 (m)

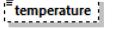
element pointStationarySource/gasVelocity

diagram	 Velocity at which gas escapes from the source (m/s)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation Velocity at which gas escapes from the source (m/s)

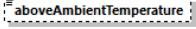
element pointStationarySource/stackDiameter

diagram	 Diameter of stack where gas escapes from the source. Valid values: 0.1 to 50 (m)
type	doubleExclusive0Inclusive10
properties	minOcc 0 maxOcc 1 content simple default 0.1
facets	Kind Value Annotation maxInclusive 10 minExclusive 0
annotation	documentation Diameter of stack where gas escapes from the source. Valid values: 0.1 to 50 (m)

element pointStationarySource/temperature

diagram	 Temperature at point (*F)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 32
annotation	documentation Temperature at point (*F)

element pointStationarySource/aboveAmbientTemperature

diagram	 Indicates if temperature is absolute (False) or if temperature is relative to current ambient temperature (True).
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false
annotation	documentation Indicates if temperature is absolute (False) or if temperature is relative to current ambient temperature (True).

element polarGrid

diagram	<pre> classDiagram class latitudeCoordGroup { <<Specifies a coordinate using latitude and longitude.>> } class coord2DGroup { <<Indicates how a two-dimensional group is specified.>> } class utmCoordGroup { <<Specifies a point using Universal Transverse Mercator coordinates.>> } class polarGrid { <<Currently not supported by AEDT. Carryover from legacy EDMS studies relating to the NETWORK_POLAR_RECEP TORS table. Two-Dimensional grid of individual receptors over an annular sector (polar) of the airport or study area.>> } class originSource { <<(m)>> } class originName { <<Refers to an existing gate, parking facility, roadway, runway, stationary source, taxiway, or training fire.>> } class elevation { <<Altitude of point (meters).>> } class height { <<Height of point (meters).>> } class ringStart { <<Initial radius of first ring from center point.>> } class ringSpacing { <<Spacing between rings starting from the first ring. Valid values: 0 to 1000.>> } class ringCount { <<Total number of rings, including first ring. Valid values: 0 to 100.>> } class vectorStart { <<Angle of point along a ring: 0 = north. Valid values: 0 to 360. (degrees)>> } class vectorSpacing { <<Number of degrees between receptors. Valid values: 1 to 90. (degrees)>> } class vectorCount { <<Number of receptors along the ring. Valid values: 1 to 36.>> } class xOffset { <<The X-offset of the receptor grid in nautical miles.>> } class yOffset { <<The Y-offset of the receptor grid in nautical miles.>> } latitudeCoordGroup < -- latitude latitudeCoordGroup < -- latitudeDMS coord2DGroup < -- originSource coord2DGroup < -- originName utmCoordGroup < -- utmN utmCoordGroup < -- utmE utmCoordGroup < -- utmZone polarGrid < -- ringStart polarGrid < -- ringSpacing polarGrid < -- ringCount polarGrid < -- vectorStart polarGrid < -- vectorSpacing polarGrid < -- vectorCount polarGrid < -- xOffset polarGrid < -- yOffset </pre>
properties	content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone originSource originName elevation height ringStart ringSpacing ringCount vectorStart vectorSpacing vectorCount xOffset yOffset
used by	group receptorGroup
annotation	Currently not supported by AEDT. Carryover from legacy EDMS studies relating to the NETWORK_POLAR_RECEP TORS table. Two-Dimensional grid of individual receptors over an annular sector (polar) of the airport or study area.

element polarGrid/originSource

diagram	<pre> classDiagram class originSource { <<(m)>> } </pre>
type	originSourceType
properties	content simple
facets	Kind Value pattern Gate Parking Facility Roadway Runway Stationary Source Taxiway Training Fire Annotation

annotation	documentation (m)
------------	----------------------

element **polarGrid/originName**

diagram	 originName Refers to an existing gate, parking facility, roadway, runway, stationary source, taxiway, or training fire.
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Refers to an existing gate, parking facility, roadway, runway, stationary source, taxiway, or training fire.

element **polarGrid/elevation**

diagram	 elevation Altitude of point (meters).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Altitude of point (meters).

element **polarGrid/height**

diagram	 height Height of point (meters).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Height of point (meters).

element **polarGrid/ringStart**

diagram	 ringStart Initial radius of first ring from center point.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation Initial radius of first ring from center point.

element **polarGrid/ringSpacing**

diagram	 ringSpacing Spacing between rings starting from the first ring. Valid values: 0 to 1000.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation Spacing between rings starting from the first ring. Valid values: 0 to 1000.

element **polarGrid/ringCount**

diagram	 ringCount Total number of rings, including first ring. Valid values: 0 to 100.
type	xs:int
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation

Total number of rings, including first ring. Valid values: 0 to 100.

element polarGrid/vectorStart

diagram	 vectorStart Angle of point along a ring, 0 = north. Valid values: 0 to 360. (degrees)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Angle of point along a ring. 0 = north. Valid values: 0 to 360. (degrees)

element polarGrid/vectorSpacing

diagram	 vectorSpacing Number of degrees between receptors. Valid values: 1 to 90. (degrees)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation Number of degrees between receptors. Valid values: 1 to 90. (degrees)

element polarGrid/vectorCount

diagram	 vectorCount Number of receptors along the ring. Valid values: 1 to 36.
type	xs:int
properties	minOcc 0 maxOcc 1 content simple default 1
annotation	documentation Number of receptors along the ring. Valid values: 1 to 36.

element polarGrid/xrOffset

diagram	 xrOffset The X-offset of the receptor grid in nautical miles.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation The X-offset of the receptor grid in nautical miles.

element polarGrid/ydOffset

diagram	 ydOffset The Y-offset of the receptor grid in nautical miles.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation The Y-offset of the receptor grid in nautical miles.

element polarReceptor

diagram	<pre> classDiagram class polarReceptor { <<Currently not supported by AEDT. Carryover from legacy EDMS studies relating to the NETWORK_POLAR_RECEPATORS and DISCRETE_POLAR_RECEPATORS table. Defines receptor points within a polar grid.>> } class coord2DGroup { <<Indicates how a two-dimensional group is specified.>> } class latlonCoordGroup { <<Specifies a coordinate using latitude and longitude.>> } class utmCoordGroup { <<Specifies a point using Universal Transverse Mercator coordinates.>> } class latitude { <<Latitude specified as degrees in decimal format. Can include optional attribute positive.>> } class longitude { <<Longitude specified as degrees in decimal format. Can include optional attribute positive.>> } class utmN { <<UTM Northing of the point in decimal meters north of the equator.>> } class utmE { <<UTM Easting of the point in decimal meters east from a central meridian.>> } class utmZone { <<UTM Zone of the point. A default zone can be set in the @options#62; tag.>> } class originSource { <<Refers to an existing gate, parking facility, roadway, runway, stationary source, taxiway, or training fire.>> } class originName { <<Refers to an existing gate, parking facility, roadway, runway, stationary source, taxiway, or training fire.>> } class distanceFromSource { <<Distance of point from polar origin. Valid values: 0 through 999999.99999. (ft)>> } class directionFromSource { <<Direction of point from polar origin. Valid values: 0 through 360. (degrees)>> } class elevation { <<Altitude of point. (meters).>> } class height { <<Height of point. (meters).>> } polarReceptor --> coord2DGroup coord2DGroup --> latlonCoordGroup latlonCoordGroup --> latitude latlonCoordGroup --> longitude coord2DGroup --> utmCoordGroup utmCoordGroup --> utmN utmCoordGroup --> utmE utmCoordGroup --> utmZone originSource --> polarReceptor originName --> polarReceptor distanceFromSource --> polarReceptor directionFromSource --> polarReceptor elevation --> polarReceptor height --> polarReceptor </pre>
properties	content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone originSource originName distanceFromSource directionFromSource elevation height
used by	group receptorGroup
annotation	documentation Currently not supported by AEDT. Carryover from legacy EDMS studies relating to the NETWORK_POLAR_RECEPtors and DISCRETE_POLAR_RECEPtors table. Defines receptor points within a polar grid.

element **polarReceptor/originSource**

diagram	originSource
type	originSourceType
properties	content simple
facets	Kind Value Annotation pattern Gate Parking Facility Roadway Runway Stationary Source Taxiway Training Fire

element **polarReceptor/originName**


diagram	originName
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Refers to an existing gate, parking facility, roadway, runway, stationary source, taxiway, or training fire.

element **polarReceptor/distanceFromSource**

diagram	distanceFromSource
	Distance of point from polar origin. Valid values: 0 through 999999.99999. (ft)

type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Distance of point from polar origin. Valid values: 0 through 999999.999999. (ft)

element **polarReceptor/directionFromSource**

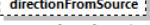diagram	 <p>Direction of point from polar origin. Valid values: 0 through 360. (degrees)</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Direction of point from polar origin. Valid values: 0 through 360. (degrees)

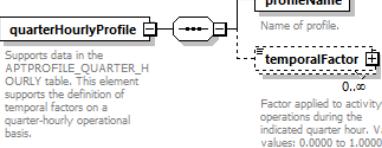
element **polarReceptor/elevation**

diagram	 <p>Altitude of point. (meters).</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Altitude of point. (meters).

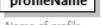
element **polarReceptor/height**

diagram	 <p>Height of point. (meters).</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Height of point. (meters).

element **quarterHourlyProfile**

diagram	 <p>Supports data in the APTPROFILE_QUARTER_H hourly table. This element supports the definition of temporal factors on a quarter-hourly operational basis.</p>
properties	content complex
children	profileName temporalFactor
used by	element quarterHourlyProfileSet
annotation	documentation Supports data in the APTPROFILE_QUARTER_H hourly table. This element supports the definition of temporal factors on a quarter-hourly operational basis.

element **quarterHourlyProfile/profileName**

diagram	 <p>Name of profile.</p>
type	string100
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation Name of profile.

element **quarterHourlyProfile/temporalFactor**

diagram	<pre> classDiagram class temporalFactor { <<0..>> <<attributes>> startHour startMinutes } </pre> <p>The starting hour as an integer between 0 and 23.</p> <p>The starting quarter-hourly minute value as either 0, 15, 30, or 45.</p>																		
type	extension of doubleMin0																		
properties	minOcc 0 maxOcc unbounded content complex																		
facets	Kind Value Annotation minInclusive 0																		
attributes	<table> <tr> <td>Name</td> <td>Type</td> <td>Use</td> <td>Default</td> <td>Fixed</td> <td>Annotation</td> </tr> <tr> <td>startHour</td> <td>int0to23</td> <td>required</td> <td></td> <td></td> <td>The starting hour as an integer between 0 and 23.</td> </tr> <tr> <td>startMinutes</td> <td>quarterHourMinutes</td> <td>required</td> <td></td> <td></td> <td>The starting quarter-hourly minute value as either 0, 15, 30, or 45.</td> </tr> </table>	Name	Type	Use	Default	Fixed	Annotation	startHour	int0to23	required			The starting hour as an integer between 0 and 23.	startMinutes	quarterHourMinutes	required			The starting quarter-hourly minute value as either 0, 15, 30, or 45.
Name	Type	Use	Default	Fixed	Annotation														
startHour	int0to23	required			The starting hour as an integer between 0 and 23.														
startMinutes	quarterHourMinutes	required			The starting quarter-hourly minute value as either 0, 15, 30, or 45.														
annotation	documentation Factor applied to activity for operations during the indicated quarter hour. Valid values: 0.0000 to 1.0000.																		

attribute [quarterHourlyProfile/temporalFactor/@startHour](#)

type	int0to23
properties	use required
facets	Kind Value Annotation minInclusive 0 maxInclusive 23
annotation	documentation The starting hour as an integer between 0 and 23.

attribute [quarterHourlyProfile/temporalFactor/@startMinutes](#)

type	quarterHourMinutes
properties	use required
facets	Kind Value Annotation enumeration 0 enumeration 15 enumeration 30 enumeration 45
annotation	documentation The starting quarter-hourly minute value as either 0, 15, 30, or 45.

element [quarterHourlyProfileSet](#)

diagram	<pre> classDiagram class quarterHourlyProfileSet { <<0..>> <<attributes>> dummy quarterHourlyProfile } </pre> <p>Supports the definition and use of QUARTER_HOURLY_PROFILE S for the quarter hourly variation of operations.</p> <p>Supports data in the APTPROFILE_QUARTER_HOURLY table. This element supports the definition of temporal factors on a quarter-hourly operational basis.</p>												
properties	content complex												
children	quarterHourlyProfile												
used by	element operationalProfileSet complexType airportLayoutType												
attributes	<table> <tr> <td>Name</td> <td>Type</td> <td>Use</td> <td>Default</td> <td>Fixed</td> <td>Annotation</td> </tr> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	documentation Supports the definition and use of QUARTER_HOURLY_PROFILES for the quarter hourly variation of operations.												

attribute [quarterHourlyProfileSet/@dummy](#)

type	xs:int
properties	use optional

element [receptorSet](#)

diagram	<pre> classDiagram name "Descriptive name of the receptor set." receptorSet "Contains one or more receptor sets at various locations." receptorGroup "Description of a receptor group." centroid "1..∞ Describes the geometric center of a polygon." pointReceptor "1..∞ Element specification for a point receptor." grid "Describes a grid of points." polarReceptor "1..∞ Currently not supported by AEDT. Carryover from legacy EDMS studies relating to the NETWORK_POLAR_RECEP TORS and DISCRETE_POLAR_RECEP TORS table. Defines receptor points within a polar grid." polarGrid "Currently not supported by AEDT. Carryover from legacy EDMS studies relating to the NETWORK_POLAR_RECEP TORS table. Two-Dimensional grid of individual receptors over an annular sector (polar) of the airport or study area." receptorSet --> receptorGroup receptorGroup --> centroid receptorGroup --> pointReceptor receptorGroup --> grid receptorGroup --> polarReceptor receptorGroup --> polarGrid </pre>
properties	content complex
children	name centroid pointReceptor grid polarReceptor polarGrid
used by	elements AsifXml study
annotation	<p>documentation</p> <p>Contains one or more receptor sets at various locations.</p>

element receptorSet/name

diagram	<pre> classDiagram name "Descriptive name of the receptor set." receptorSet "Contains one or more receptor sets at various locations." receptorGroup "Description of a receptor group." centroid "1..∞ Describes the geometric center of a polygon." pointReceptor "1..∞ Element specification for a point receptor." grid "Describes a grid of points." polarReceptor "1..∞ Currently not supported by AEDT. Carryover from legacy EDMS studies relating to the NETWORK_POLAR_RECEP TORS and DISCRETE_POLAR_RECEP TORS table. Defines receptor points within a polar grid." polarGrid "Currently not supported by AEDT. Carryover from legacy EDMS studies relating to the NETWORK_POLAR_RECEP TORS table. Two-Dimensional grid of individual receptors over an annular sector (polar) of the airport or study area." receptorSet --> receptorGroup receptorGroup --> centroid receptorGroup --> pointReceptor receptorGroup --> grid receptorGroup --> polarReceptor receptorGroup --> polarGrid </pre>						
type	string255						
properties	content simple						
facets	<table border="1"> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>255</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	255
Kind	Value Annotation						
minLength	0						
maxLength	255						
annotation	<p>documentation</p> <p>Descriptive name of the receptor set.</p>						

element recordCode

diagram	<pre> classDiagram recordCode "An integer value for a category to use as the basis of a new stationary source operation. This value comes from the CATEGORY_REC_ID column in the STN_CATEGORY table in the AEDT FLEET database. Valid values: 0 to 87, 89 to 148." name "Identifying name for the recordCode." recordCode --> name </pre>
type	union of (restriction of xs:int , restriction of xs:int)
properties	content simple
used by	element categoryRecordCode
annotation	<p>documentation</p> <p>An integer value for a category to use as the basis of a new stationary source operation. This value comes from the CATEGORY_REC_ID column in the STN_CATEGORY table in the AEDT FLEET database. Valid values: 0 to 87, 89 to 148.</p>

element roadway

diagram	<pre> classDiagram roadway "NOT currently supported in AEDT - legacy EDMS definition. This element supports the definition of vehicle geometry on roadway for scenario layouts." name "Identifying name for the roadway." width "Roadway's width. Valid values: 1 to 99. (m)" coordinates "Set of three-dimensional coordinates describing the roadway." roadway --> name name --> width name --> coordinates </pre>
properties	content complex
children	name width coordinates

used by	element roadwaySet
annotation	documentation NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle geometry on roadways for scenario layouts.

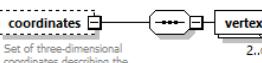
element roadway/name

diagram	 Identifying name for the roadway.
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Identifying name for the roadway.

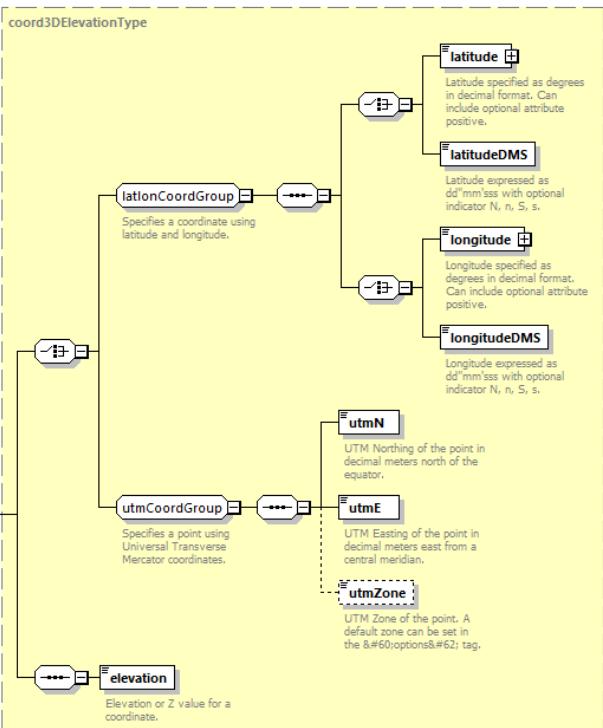
element roadway/width

diagram	 Roadway's width. Valid values: 1 to 99. (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Roadway's width. Valid values: 1 to 99. (m)

element roadway/coordinates

diagram	 Set of three-dimensional coordinates describing the roadway.  A point representing one of the coordinates.
properties	minOcc 0 maxOcc 1 content complex
children	vertex
annotation	documentation Set of three-dimensional coordinates describing the roadway.

element roadway/coordinates/vertex

diagram	 A point representing one of the coordinates.
type	coord3DElevationType
properties	minOcc 2 maxOcc unbounded content complex

children	latitude longitudeDMS longitude longitudeDMS utmN utmE utmZone elevation
annotation	documentation A point representing one of the coordinates.

element **roadwayOperation**

diagram	<pre> classDiagram class roadwayOperation { <<NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.>> } class refName { <<Identifying name of roadway operation.>> } class useAnnualFigures { <<Indicates if the quantities in the element are annualized.>> } class vehicleType { <<Type of vehicle involved in the operation. Valid values (the numeral) corresponds to the text value; either are valid: 0 = Default Fleet, 1 = Passenger Cars, 2 = Light Trucks, 3 = Light Trucks, 4 = Light Trucks, 5 = Light Trucks, 6 = Class 2b Heavy Trucks, 7 = Class 3 Heavy Trucks, 8 = Class 4 Heavy Trucks, 9 = Class 5 Heavy Trucks, 10 = Class 6 Heavy Trucks, 11 = Class 7 Heavy Trucks, 12 = Class 8a Heavy Trucks, 13 = Class 8b Heavy Trucks, 14 = School Buses, 15 = Transit and Urban Buses, 16 = Motorcycle.>> } class fuelType { <<Type of fuel involved in the operation. Valid values: G = gasoline, D = diesel.>> } class emissionsUsage { <<Describes the amount of emissions for a given activity profile.>> } class vehicleEmissionFactors { <<NOT currently supported in AEDT - legacy EDMS definitions for emission factors for Roadways and Parking Lots. This element supports the definition of custom emission factor specifications for roadways and parking.>> } class speed { <<Speed during the operation. Valid values: 5 to 65. (mph)>> } class roundTripDistance { <<Round trip vehicle distance. (mi)>> } roadwayOperation <--> refName roadwayOperation <--> useAnnualFigures roadwayOperation <--> vehicleType roadwayOperation <--> fuelType roadwayOperation <--> emissionsUsage roadwayOperation <--> vehicleEmissionFactors roadwayOperation <--> speed roadwayOperation <--> roundTripDistance </pre>
properties	content complex
children	refName useAnnualFigures vehicleType fuelType emissionsUsage vehicleEmissionFactors speed roundTripDistance
used by	element roadwayOperationSet
annotation	documentation NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.

element **roadwayOperation/refName**

diagram	<pre> classDiagram class refName { <<Identifying name of roadway operation.>> } class roadwayOperation { <<NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.>> } refName <--> roadwayOperation </pre>
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Identifying name of roadway operation.

element **roadwayOperation/useAnnualFigures**

diagram	<pre> classDiagram class useAnnualFigures { <<Indicates if the quantities in the element are annualized.>> } class roadwayOperation { <<NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.>> } useAnnualFigures <--> roadwayOperation </pre>
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false
annotation	documentation Indicates if the quantities in the element are annualized.

element **roadwayOperation/vehicleType**

diagram	vehicleType Type of vehicle involved in the operation. Valid values (the numeral corresponds to the text value; either are valid): 0 = Default Fleet Mix 1 = Passenger Cars, 2 = Light Trucks 1, 3 = Light Trucks 2, 4 = Light Trucks 3, 5 = Light Trucks 4, 6 = Class 2b Heavy Trucks, 7 = Class 3 Heavy Trucks, 8 = Class 4 Heavy Trucks, 9 = Class 5 Heavy Trucks, 10 = Class 6 Heavy Trucks, 11 = Class 7 Heavy Trucks, 12 = Class 8a Heavy Trucks, 13 = Class 8b Heavy Trucks, 14 = School Busses, 15 = Transit and Urban Busses, 16 = Motorcycle.
type	groundVehicleType
properties	content simple
facets	Kind Value pattern 0 Default Fleet Mix 1 Passenger Cars 2 Light Trucks 1 3 Light Trucks 2 4 Light Trucks 3 5 Light Trucks 4 6 Class 2b Heavy Trucks 7 Class 3 Heavy Trucks 8 Class 4 Heavy Trucks 9 Class 5 Heavy Trucks 10 Class 6 Heavy Trucks 11 Class 7 Heavy Trucks 12 Class 8a Heavy Trucks 13 Class 8b Heavy Trucks 14 School Busses 15 Transit and Urban Busses 16 Motorcycle
annotation	documentation Type of vehicle involved in the operation. Valid values (the numeral corresponds to the text value; either are valid): 0 = Default Fleet Mix, 1 = Passenger Cars, 2 = Light Trucks 1, 3 = Light Trucks 2, 4 = Light Trucks 3, 5 = Light Trucks 4, 6 = Class 2b Heavy Trucks, 7 = Class 3 Heavy Trucks, 8 = Class 4 Heavy Trucks, 9 = Class 5 Heavy Trucks, 10 = Class 6 Heavy Trucks, 11 = Class 7 Heavy Trucks, 12 = Class 8a Heavy Trucks, 13 = Class 8b Heavy Trucks, 14 = School Busses, 15 = Transit and Urban Busses, 16 = Motorcycle.

element roadwayOperation/fuelType

diagram	fuelType Type of fuel involved in the operation. Valid values: G = gasoline, D = diesel.
type	fuelType
properties	minOcc 0 maxOcc 1 content simple default G
facets	Kind Value Annotation pattern G Gasoline D Diesel C Compressed Natural Gas L Liquefied Petroleum Gas E Electric

element roadwayOperation/speed

diagram	speed Speed during the operation. Valid values: 5 to 65. (mph)
type	int5to65
properties	minOcc 0 maxOcc 1 content simple default 35
facets	Kind Value Annotation minInclusive 5 maxInclusive 65
annotation	documentation Speed during the operation. Valid values: 5 to 65. (mph)

element roadwayOperation/roundTripDistance

diagram	roundTripDistance Round trip vehicle distance. (mi)
type	doubleInclusive4000
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 4000
annotation	documentation Round trip vehicle distance. (mi)

element roadwayOperationSet

diagram	<p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.</p> <p>roadwayOperationSet</p> <p>roadwayOperation</p> <p>1..∞</p> <p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.</p>												
properties	content complex												
children	roadwayOperation												
used by	group airportActivityGroup												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	<p>documentation</p> <p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.</p>												

attribute **roadwayOperationSet/@dummy**

type	xs:int
properties	use optional

element **roadwaySet**

diagram	<p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.</p> <p>roadwaySet</p> <p>roadway</p> <p>1..∞</p> <p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle geometry on roadways for scenario layouts.</p>												
properties	content complex												
children	roadway												
used by	complexType airportLayoutType												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	<p>documentation</p> <p>NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.</p>												

attribute **roadwaySet/@dummy**

type	xs:int
properties	use optional

element **runway**

diagram	<p>Describes dimensions of a runway.</p> <p>runway</p> <p>length</p> <p>width</p> <p>runwayEnd</p> <p>1..2</p> <p>Characterizes the runway's endpoint.</p>
properties	content complex
children	length width runwayEnd
used by	element runwaySet
annotation	<p>documentation</p> <p>Describes dimensions of a runway.</p>


element **runway/length**

diagram	<p>Length of runway. Valid values: nonnegative. (feet)</p> <p>length</p>
type	xs:short
properties	content simple
annotation	<p>documentation</p> <p>Length of runway. Valid values: nonnegative. (feet)</p>

element **runway/width**

diagram	<p>width</p> <p>Width of runway. Valid values: nonnegative. (feet)</p>
type	xs:short
properties	content simple
annotation	Width of runway. Valid values: nonnegative. (feet)

element runway/runwayEnd

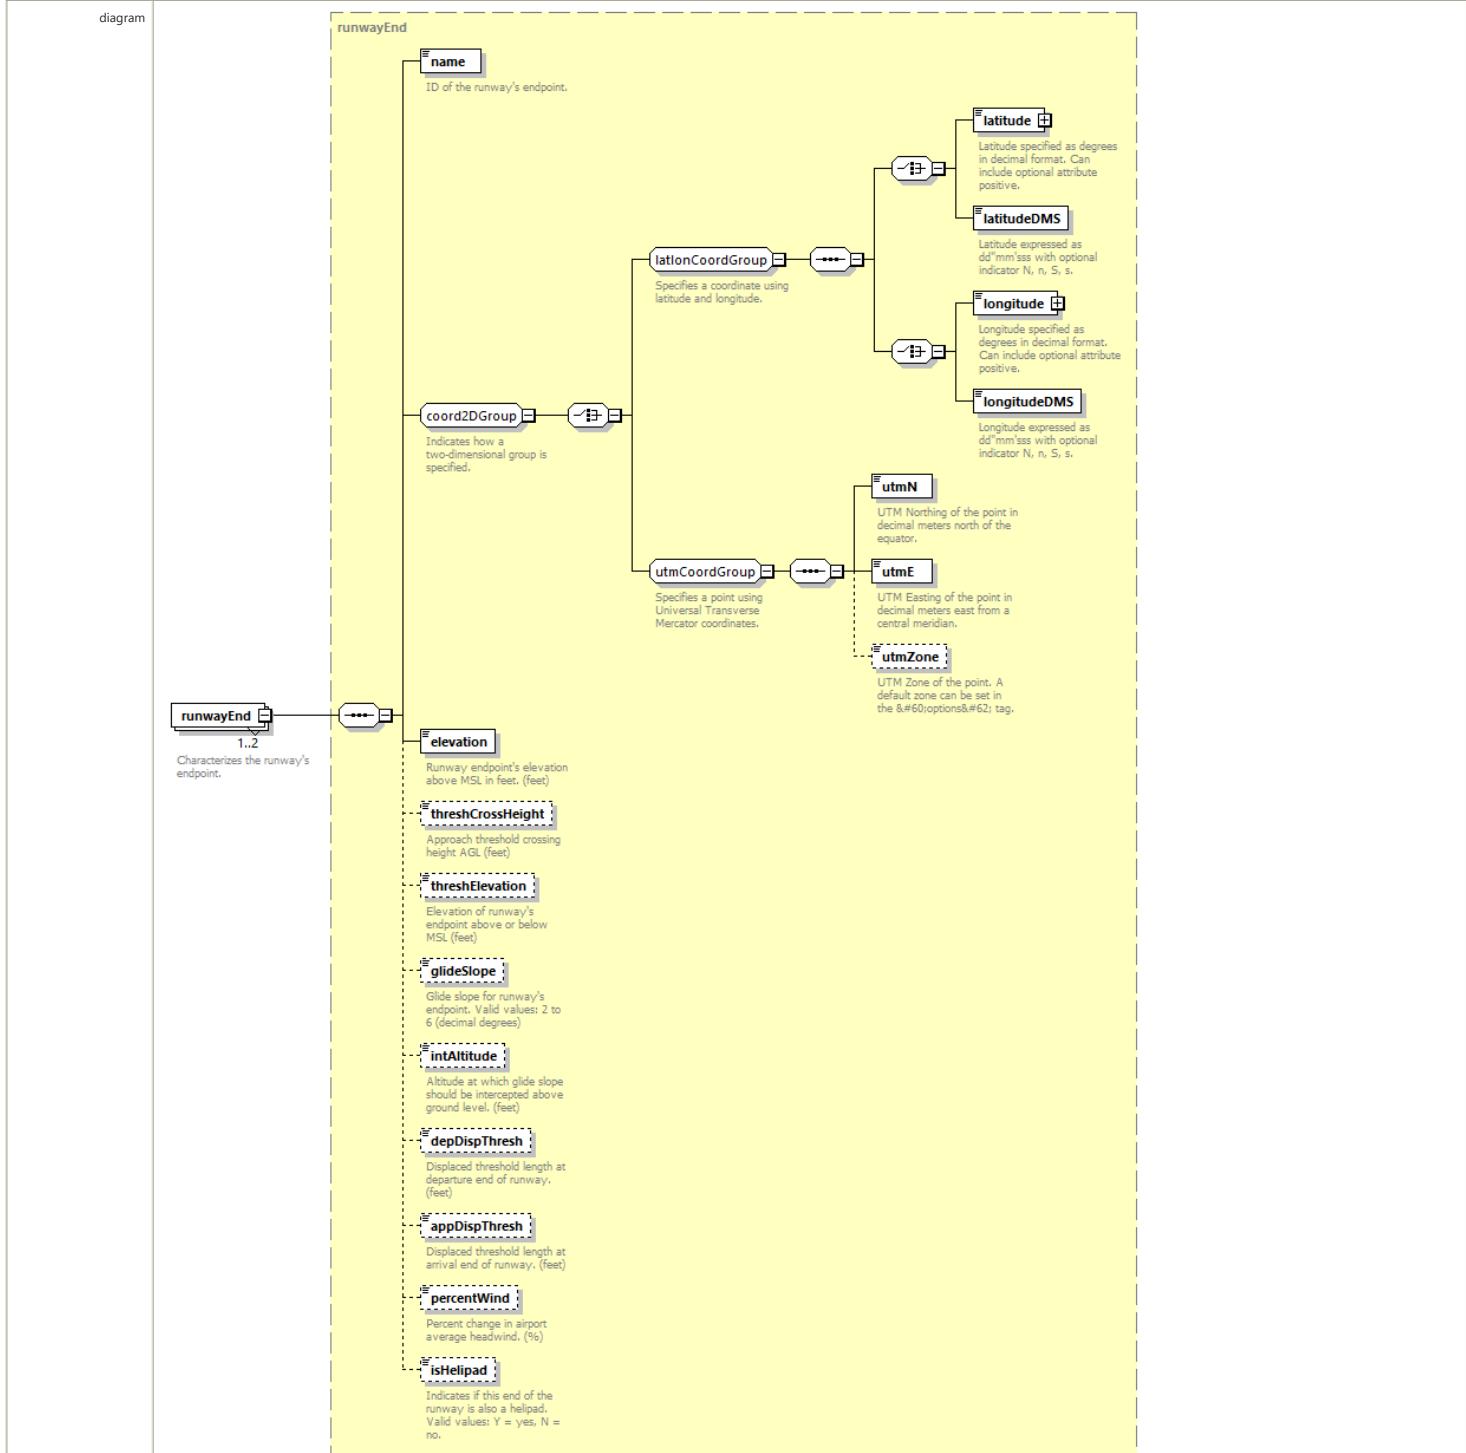

type	runwayEnd
properties	minOcc 1 maxOcc 2 content complex
children	name latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone elevation threshCrossHeight threshElevation glideSlope intAltitude depDispThresh appDispThresh percentWind isHelpad
annotation	Characterizes the runway's endpoint.

element **runwayAssignment**

diagram	<pre> classDiagram runwayAssignment "1..>" runway runwayAssignment "1..>" arrivalPercentage runwayAssignment "1..>" departurePercentage runwayAssignment "1..>" tgoPercentage runwayAssignment "1..>" aircraftSize </pre> <p>Defines a assignment of operations to runways, by aircraft size.</p> <p>Size of the aircraft. Valid values: Small, Large, Heavy.</p>
properties	content complex
children	aircraftSize runway arrivalPercentage departurePercentage tgoPercentage
used by	element runwayAssignmentSet
annotation	<p>documentation</p> <p>Defines a assignment of operations to runways, by aircraft size.</p>

element **runwayAssignment/aircraftSize**

diagram	<pre> classDiagram aircraftSize </pre>
type	AircraftSizeType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation enumeration S enumeration L enumeration H

element **runwayAssignment/runway**

diagram	<pre> classDiagram runway </pre> <p>Name of the runway.</p>
type	string8
properties	content simple
used by	element runwaySet
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	<p>documentation</p> <p>Name of the runway.</p>

element **runwayAssignment/arrivalPercentage**

diagram	<pre> classDiagram arrivalPercentage </pre> <p>Percentage of arrivals of the given aircraft size using this runway. Valid values: 0 to 100.(%)</p>
type	doubleInclusive100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	<p>documentation</p> <p>Percentage of arrivals of the given aircraft size using this runway. Valid values: 0 to 100.(%)</p>

element **runwayAssignment/departurePercentage**

diagram	<pre> classDiagram departurePercentage </pre> <p>Percentage of departures of the given aircraft size using this runway. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation

	minInclusive 0 maxInclusive 100
annotation	documentation Percentage of departures of the given aircraft size using this runway. Valid values: 0 to 100. (%)

element **runwayAssignment/tgoPercentage**

diagram	<p>tgoPercentage Percentage of touch and gos of the given aircraft size using this runway. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percentage of touch and gos of the given aircraft size using this runway. Valid values: 0 to 100. (%)

element **runwayAssignmentSet**

diagram	<p>runwayAssignmentSet Contains a set of runway assignments.</p>
properties	content complex
children	runwayAssignment
used by	element airportConfig
annotation	documentation Contains a set of runway assignments.

element **runwaySet**

diagram	<p>runwaySet Container for runways.</p>
properties	content complex
children	runway
used by	complexType airportLayoutType
annotation	documentation Container for runways.

element **scenario**

diagram	<pre> classDiagram class scenario { name startTime duration taxiModel timeInModeBasis acftPerfModel bankAngle altitudeCutoff sulfurConversionRate fuelSulfurContent description scenarioAirportLayoutSet caseSet annualization } scenario < -- scenario </pre> <p>scenario</p> <p>Encapsulates a scenario - such as Baseline or Alternative</p> <p>name: Description of scenario.</p> <p>startTime: Start time of scenario. Accepts dateTime string.</p> <p>duration: Scenario's duration (hr).</p> <p>taxiModel: Taxi model for scenario.</p> <p>timeInModeBasis: Scenario's duration (hr).</p> <p>acftPerfModel: Aircraft performance model.</p> <p>bankAngle: Indicates if bank angle calculations should be included in calculations. NOTE! AEDT ignores this value and treats all scenarios as if their bank angle value was set to true.</p> <p>altitudeCutoff: Altitude in MSL (feet) to cutoff trajectory modeling for this scenario. The scenario altitude cutoff only affects noise impact calculation in AEDT. Fuel burn and emissions will be calculated until a flight reaches the study boundary.</p> <p>sulfurConversionRate: Portion of sulfur in the fuel that, when combusted, becomes sulfuric acid used for emissions calculations. (%)</p> <p>fuelSulfurContent: Percentage, by weight, of sulfur in the fuel used for emissions calculations. Default Values: 0.0006 (0.06%) (%)</p> <p>description: A description of the scenario.</p> <p>scenarioAirportLayoutSet: Contains a set of airport layout types.</p> <p>caseSet: Placeholder for one or more cases.</p> <p>annualization: Contains annualizations for ASIF partial import into an existing study.</p>
properties	content complex
children	name startTime duration taxiModel timeInModeBasis acftPerfModel bankAngle altitudeCutoff sulfurConversionRate fuelSulfurContent description scenarioAirportLayoutSet caseSet annualization
used by	elements AsifXml study
annotation	documentation Encapsulates a scenario - such as Baseline or Alternative

element scenario/name

diagram	<p>name</p> <p>Description of scenario.</p>
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Description of scenario.

element scenario/startTime

diagram	<p>startTime</p> <p>Start time of scenario. Accepts dateTime string.</p>
type	xs:dateTime
properties	content.simple
annotation	documentation Start time of scenario. Accepts dateTime string.

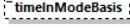
element scenario/duration

diagram	 Scenario's duration (hr).
type	xs:int
properties	content simple
annotation	documentation Scenario's duration (hr).

element scenario/taxiModel

diagram	 Taxi model for scenario.
type	taxiModelType
properties	content simple
facets	Kind Value Annotation enumeration UserSpecified enumeration Delayed enumeration Sequencing
annotation	documentation Taxi model for scenario.

element scenario/timeInModeBasis

diagram	
type	timeInModeBasisType
properties	minOcc 0 maxOcc 1 content simple default ICAO
facets	Kind Value Annotation enumeration Performance enumeration ICAO

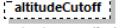
element scenario/acftPerfModel

diagram	 Aircraft performance model.
type	aircraftPerformanceModelType
properties	content simple
facets	Kind Value Annotation enumeration ICAO enumeration SAE1845
annotation	documentation Aircraft performance model.

element scenario/bankAngle

diagram	 Indicates if bank angle calculations should be included in calculations. NOTE: AEDT ignores this value and treats all scenarios as if their bank angle value was set to true.
type	xs:boolean
properties	content simple
annotation	documentation Indicates if bank angle calculations should be included in calculations. NOTE: AEDT ignores this value and treats all scenarios as if their bank angle value was set to true.

element scenario/altitudeCutoff

diagram	 Altitude in MSL (feet) to cutoff trajectory modeling for this scenario. The scenario altitude cutoff only affects noise impact calculation in AEDT. Fuel burn and emissions will be calculated until a flight reaches the study boundary.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 18000
annotation	documentation Altitude in MSL (feet) to cutoff trajectory modeling for this scenario. The scenario altitude cutoff only affects noise impact calculation in AEDT. Fuel burn and emissions will be calculated until a flight reaches the study boundary.

element scenario/sulfurConversionRate

diagram	<p>sulfurConversionRate Portion of sulfur in the fuel that, when combusted, becomes sulfuric acid used for emissions calculations. (%)</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Portion of sulfur in the fuel that, when combusted, becomes sulfuric acid used for emissions calculations. (%)

element scenario/fuelSulfurContent

diagram	<p>fuelSulfurContent Percentage, by weight, of sulfur in the fuel used for emissions calculations. Default Values: 0.0006 (0.06%) (%)</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Percentage, by weight, of sulfur in the fuel used for emissions calculations. Default Values: 0.0006 (0.06%) (%)

element scenario/description

diagram	<p>A description of the scenario.</p>
type	string255
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation A description of the scenario.


element scenarioAirportLayoutSet

diagram	<p>scenarioAirportLayoutSet Contains a set of airport layout types.</p>
properties	content complex
children	scenarioAirportLayout
used by	element scenario
attributes	Name Type Use Default Fixed Annotation <u>dummy</u> , xs:int optional
annotation	documentation Contains a set of airport layout types.

attribute scenarioAirportLayoutSet/@dummy

type	xs:int
properties	use optional

element scenarioAirportLayoutSet/scenarioAirportLayout

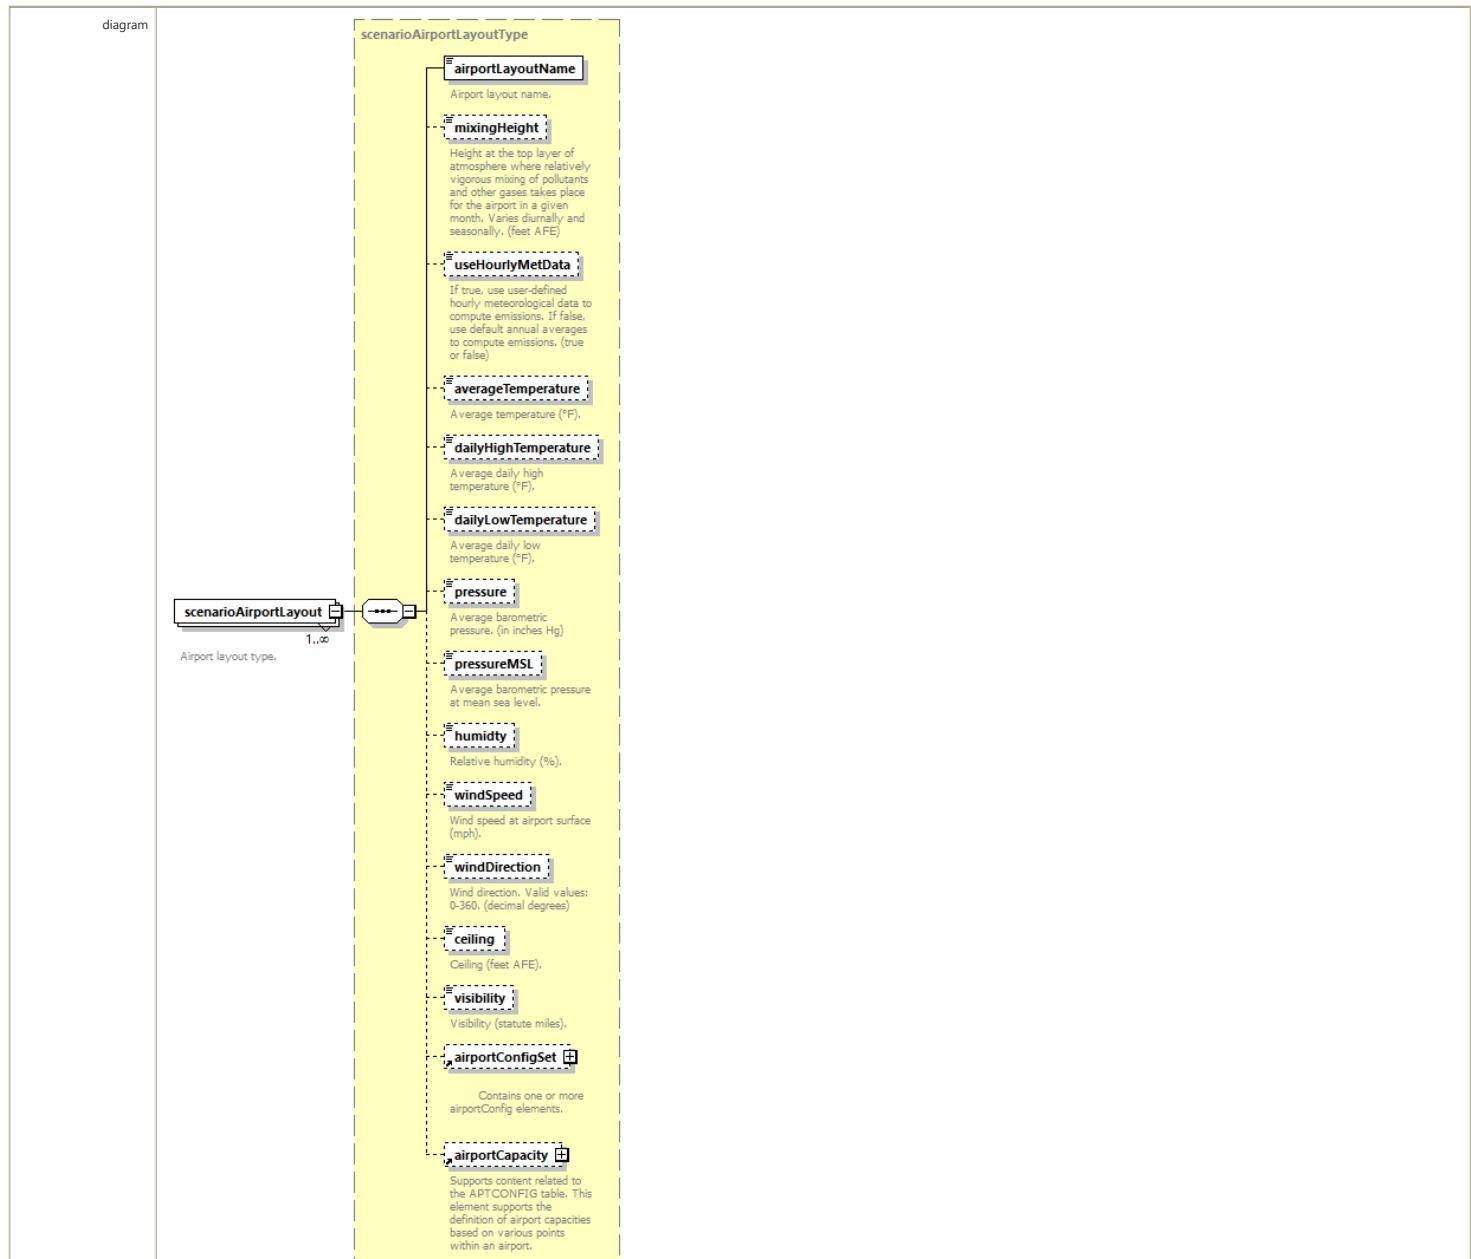

type	scenarioAirportLayoutType
properties	minOcc 1 maxOcc unbounded content complex
children	airportLayoutName mixingHeight useHourlyMetData averageTemperature dailyHighTemperature dailyLowTemperature pressure pressureMSL humidity windSpeed windDirection ceiling visibility airportConfigSet airportCapacity
annotation	documentation Airport layout type.

element **sensorNode**

diagram	<pre> graph LR sensorNode[sensorNode] --> lat[lat] lat --> long[long] long --> altitude[altitude] altitude --> messageTime[messageTime] messageTime --> sequenceNum[sequenceNum] sequenceNum --> speed[speed] speed --> thrust[thrust] thrust --> source[source] </pre> <p>sensorNode Describes a single node of a radar flight path.</p>
properties	content complex
children	lat long altitude messageTime sequenceNum speed thrust source
used by	element sensorPath
annotation	documentation Describes a single node of a radar flight path.

element **sensorNode/lat**

diagram	<p>lat Latitude for this location (decimal degrees).</p>
type	xs:double
properties	content simple
annotation	documentation Latitude for this location (decimal degrees).

element **sensorNode/long**

diagram	<p>long Longitude for this location (decimal degrees).</p>
type	xs:double
properties	content simple
annotation	documentation Longitude for this location (decimal degrees).

element **sensorNode/altitude**

diagram	<p>altitude Altitude in MSL at this location. UNITS: feet</p>
type	xs:double
properties	content simple
annotation	documentation Altitude in MSL at this location. UNITS: feet

element **sensorNode/messageTime**

diagram	<p>messageTime Time aircraft reaches this location. NOTE: Not used in AEDT.</p>
type	xs:dateTime
properties	content simple
annotation	documentation Time aircraft reaches this location. NOTE: Not used in AEDT.

element **sensorNode/sequenceNum**

diagram	<p>sequenceNum Order of this location in node list.</p>
---------	--

	type	xs:int
	properties	content simple
	annotation	documentation Order of this location in node list.

element sensorNode/speed

diagram	 speed Ground speed of aircraft at this location. UNITS: knots.
type	xs:double
properties	content simple
annotation	documentation Ground speed of aircraft at this location. UNITS: knots.

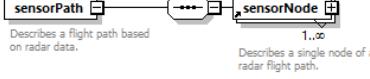
element sensorNode/thrust

diagram	 thrust Thrust of aircraft at this location. NOTE: Not used in AEDT. (lb)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Thrust of aircraft at this location. NOTE: Not used in AEDT. (lb)

element sensorNode/source

diagram	 source Source of the data for this node. NOTE: Not used in AEDT.
type	string255
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Source of the data for this node. NOTE: Not used in AEDT.

element sensorPath

diagram	 Describes a flight path based on radar data. 1.. Describes a single node of a radar flight path.
properties	content complex
children	sensorNode
used by	element trackOpSet
annotation	documentation Describes a flight path based on radar data.

element stationarySource

diagram	<pre> classDiagram class stationarySource { name } class pointStationarySource { "Identifying name of the stationary source." } class areaStationarySource { "Specifies the area in space occupied by a stationary source of emissions." } class volumeStationarySource { "Specifies the volume in space occupied by a stationary source of emissions." } class categoryRecordCode { "An integer value for a category to use as the basis of a new stationary source operation. This value comes from the CATEGORY_REC_ID column in the STN_CATEGORY table in the AEDT FLEET database." } class categoryBoilerHeater { "Describes the operational characteristics of a source in the boiler/heater category." } class categoryGenerator { "Describes the operational characteristics of a source in the generator category." } class categoryIncinerator { "Describes the operational characteristics of a source in the incinerator category." } class categoryAircraftEngine { "Describes a category for the time an aircraft engine is at various power levels." } class categoryFuelTank { "Describes the operational characteristics of a source in the fuel tank category." } class categorySurfaceCoatingPainting { "Describes the operational characteristics of a source in the surface coating or painting category." } class categoryDeicingArea { "Describes the operational characteristics of a source in the deicing area category." } class categorySolventDegreaser { "Describes the operational characteristics of a source in the solvent degreaser category." } class categorySandSaltPile { "Describes the emissions characteristics of a source in the sand or salt pile category." } class categoryTrainingFire { "Supports data in the STN_TRAINING_FIRE table. This element supports the definition of training fires for scenario layouts. Training fire data are used in both emissions and dispersion analyses." } class categoryOther { "Describes the operational characteristics of a source in the 'other' category." } stationarySource < -- pointStationarySource stationarySource < -- areaStationarySource stationarySource < -- volumeStationarySource pointStationarySource < -- categoryRecordCode areaStationarySource < -- categoryRecordCode volumeStationarySource < -- categoryRecordCode categoryRecordCode < -- categoryBoilerHeater categoryRecordCode < -- categoryGenerator categoryRecordCode < -- categoryIncinerator categoryRecordCode < -- categoryAircraftEngine categoryRecordCode < -- categoryFuelTank categoryRecordCode < -- categorySurfaceCoatingPainting categoryRecordCode < -- categoryDeicingArea categoryRecordCode < -- categorySolventDegreaser categoryRecordCode < -- categorySandSaltPile categoryRecordCode < -- categoryTrainingFire categoryRecordCode < -- categoryOther </pre>
properties	content complex
children	name pointStationarySource areaStationarySource volumeStationarySource categoryRecordCode categoryBoilerHeater categoryGenerator categoryIncinerator categoryAircraftEngine categoryFuelTank categorySurfaceCoatingPainting categoryDeicingArea categorySolventDegreaser categorySandSaltPile categoryTrainingFire categoryOther
used by	element stationarySourceSet
annotation	documentation Specifies a stationary source.

element **stationarySource/name**

diagram	<p> name Identifying name of the stationary source. </p>
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0

	maxLength 40
annotation	documentation Identifying name of the stationary source.

element **stationarySourceOperation**

diagram	<pre> graph LR A[stationarySourceOperation] --> B[refName] A --> C[elevation] A --> D[PointCoord] A --> E[emissionsUsage] </pre> <p>Defines an operation at a stationary source that generates emissions.</p>
properties	content complex
children	refName elevation pointCoord emissionsUsage
used by	element stationarySourceOperationSet
annotation	documentation Defines an operation at a stationary source that generates emissions.

element **stationarySourceOperation/refName**

diagram	<pre> graph LR A[refName] </pre> <p>Identifier of the operation.</p>
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation Identifier of the operation.

element **stationarySourceOperation/elevation**

diagram	<pre> graph LR A[elevation] </pre>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

element **stationarySourceOperation/pointCoord**

diagram	<pre> graph TD A[pointCoord] --> B[coord2DType] B --> C[latlonCoordGroup] C --> D[latitude] C --> E[latitudeDMS] C --> F[longitude] C --> G[longitudeDMS] B --> H[utmCoordGroup] H --> I[utmN] H --> J[utmE] H --> K[utmZone] </pre> <p>Specifies a coordinate using latitude and longitude.</p> <p>Specifies a point using Universal Transverse Mercator coordinates.</p>
type	coord2DType
properties	minOcc 0 maxOcc 1 content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone

element **stationarySourceOperationSet**

diagram	<pre> classDiagram class stationarySourceOperationSet { attributes dummy } class stationarySourceOperation { <<Defines an operation at a stationary source that generates emissions.>> } stationarySourceOperationSet "1..infinity" --> "1" stationarySourceOperation note left of stationarySourceOperation: Container of operations conducted at a stationary source contributing emissions. </pre>												
properties	content complex												
children	stationarySourceOperation												
used by	group airportActivityGroup												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	<p>documentation</p> <p>Container of operations conducted at a stationary source contributing emissions.</p>												

attribute **stationarySourceOperationSet/@dummy**

type	xs:int
properties	use optional

element **stationarySourceSet**

diagram	<pre> classDiagram class stationarySourceSet { attributes dummy } class stationarySource { <<Specifies a stationary source.>> } stationarySourceSet "1..infinity" --> "1" stationarySource note left of stationarySource: Container of stationary sources contributing emissions. </pre>												
properties	content complex												
children	stationarySource												
used by	element AsifXml complexType airportLayoutType												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>dummy</td> <td>xs:int</td> <td>optional</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	dummy	xs:int	optional			
Name	Type	Use	Default	Fixed	Annotation								
dummy	xs:int	optional											
annotation	<p>documentation</p> <p>Container of stationary sources contributing emissions.</p>												

attribute **stationarySourceSet/@dummy**

type	xs:int
properties	use optional

element **study**

diagram	<pre> classDiagram class study { name studyType emissionsUnits description boundary "0..oo" climate "0..oo" study "1..1" userDefinedAirportSet "1..1" airportLayoutSet "1..1" terrainFiles "1..1" receptorSet "0..oo" fleet "1..1" userGroundSupportEquipmentSet "1..1" scenario "0..oo" } </pre>
properties	content complex
children	name studyType emissionsUnits description boundary climate userDefinedAirportSet airportLayoutSet terrainFiles receptorSet fleet userGroundSupportEquipmentSet scenario
used by	element AsifXml
annotation	<p>documentation</p> <p>Contains specific information about a study.</p>

element study/name

diagram	<pre> attributeDiagram attribute name { type string255 description "Name of the study." } </pre>									
type	string255									
properties	content simple									
facets	<table> <tr> <td>Kind</td> <td>Value</td> <td>Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>255</td> <td></td> </tr> </table>	Kind	Value	Annotation	minLength	0		maxLength	255	
Kind	Value	Annotation								
minLength	0									
maxLength	255									
annotation	<p>documentation</p> <p>Name of the study.</p>									

element study/studyType

diagram	<pre> attributeDiagram attribute studyType { type studyType description "studyType" } </pre>															
type	studyType															
properties	content simple															
facets	<table> <tr> <td>Kind</td> <td>Value</td> <td>Annotation</td> </tr> <tr> <td>enumeration</td> <td>Emissions</td> <td></td> </tr> <tr> <td>enumeration</td> <td>Dispersion</td> <td></td> </tr> <tr> <td>enumeration</td> <td>Noise and Emissions</td> <td></td> </tr> <tr> <td>enumeration</td> <td>Noise and Dispersion</td> <td></td> </tr> </table>	Kind	Value	Annotation	enumeration	Emissions		enumeration	Dispersion		enumeration	Noise and Emissions		enumeration	Noise and Dispersion	
Kind	Value	Annotation														
enumeration	Emissions															
enumeration	Dispersion															
enumeration	Noise and Emissions															
enumeration	Noise and Dispersion															

element study/emissionsUnits

diagram																			
type	emissionsUnitsType																		
properties	content simple																		
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>enumeration</td> <td>MetricTonnes</td> <td></td> </tr> <tr> <td>enumeration</td> <td>Kilograms</td> <td></td> </tr> <tr> <td>enumeration</td> <td>Grams</td> <td></td> </tr> <tr> <td>enumeration</td> <td>ImperialTons</td> <td></td> </tr> <tr> <td>enumeration</td> <td>Pounds</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	enumeration	MetricTonnes		enumeration	Kilograms		enumeration	Grams		enumeration	ImperialTons		enumeration	Pounds	
Kind	Value	Annotation																	
enumeration	MetricTonnes																		
enumeration	Kilograms																		
enumeration	Grams																		
enumeration	ImperialTons																		
enumeration	Pounds																		

element **study/description**


diagram										
	Optional description of the study.									
type	string255									
properties	minOcc 0 maxOcc 1 content simple									
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>255</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	minLength	0		maxLength	255	
Kind	Value	Annotation								
minLength	0									
maxLength	255									
annotation	documentation Optional description of the study.									

element **study/terrainFiles**

diagram										
	List of files containing descriptions of terrain.									
type	string255									
properties	minOcc 0 maxOcc 1 content simple									
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>255</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	minLength	0		maxLength	255	
Kind	Value	Annotation								
minLength	0									
maxLength	255									
annotation	documentation List of files containing descriptions of terrain.									

element **study/fleet**

diagram

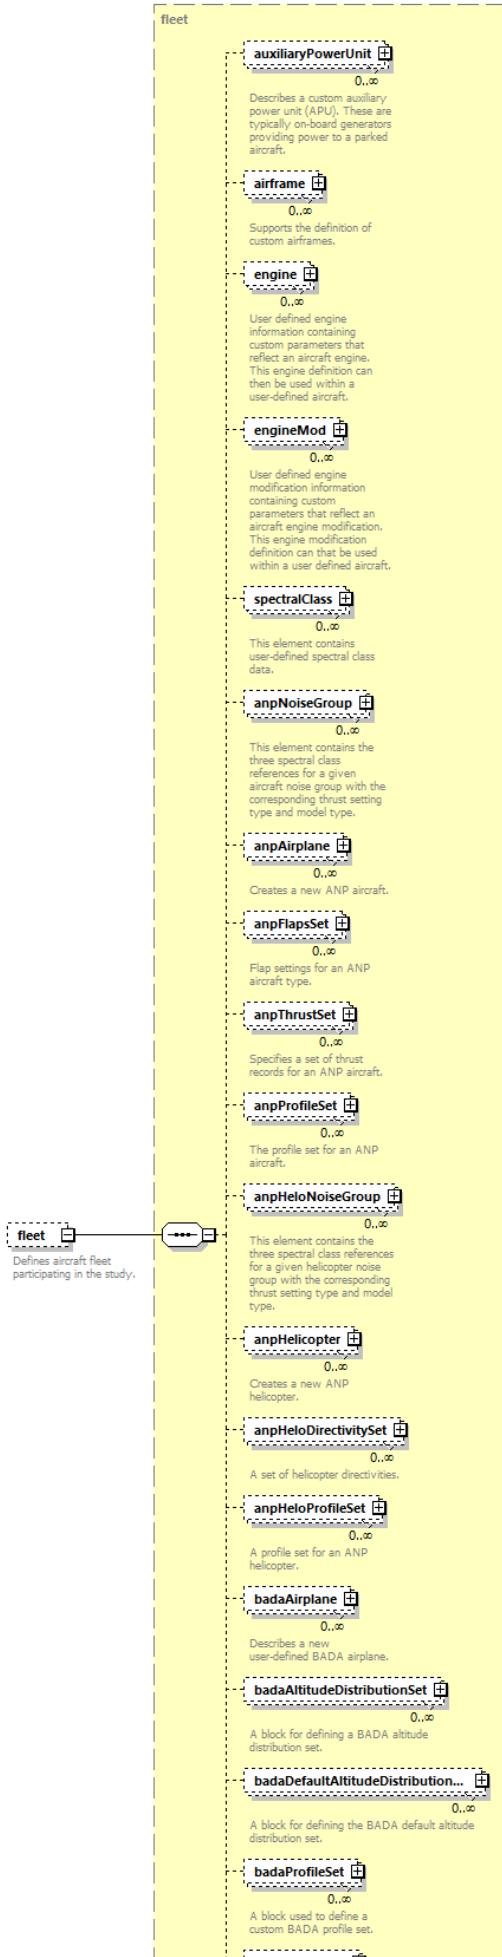



	<p>type fleet</p> <p>properties minOcc 0 maxOcc 1 content complex</p> <p>children auxiliaryPowerUnit airframe engine engineMod spectralClass anpNoiseGroup anpAirplane anpFlapsSet anpThrustSet anpProfileSet anpHeloNoiseGroup anpHeloHelicopter anpHeloDirectivitySet anpHeloProfileSet badaAirplane badaAltitudeDistributionSet badaDefaultAltitudeDistributionSet badaProfileSet badaConfigSet badaFuel badaThrust bada4ProfileSet aircraft energyShare</p> <p>annotation documentation Defines aircraft fleet participating in the study.</p>
--	--

element subtrack

<p>diagram</p> <pre> subtrack [] Intended to represent a dispersed child track of a parent track. id [] ID for a subtrack. dispersionWeight [] dispersion weight value; must be greater than one and less than or equal to 1. trackVectors [] A list of flight track vectors. trackNodes [] A set of flight track nodes </pre>	
properties	content complex
children	id dispersionWeight trackVectors trackNodes
used by	element track
annotation	documentation Intended to represent a dispersed child track of a parent track.

element subtrack/id

<p>diagram</p> <pre> id [] ID for a subtrack. </pre>	
type	xs:int
properties	content simple
annotation	documentation ID for a subtrack.

element subtrack/dispersionWeight

<p>diagram</p> <pre> dispersionWeight [] dispersion weight value; must be greater than one and less than or equal to 1. </pre>	
type	xs:double
properties	content simple
used by	element backbone
annotation	documentation dispersion weight value; must be greater than one and less than or equal to 1.

element taxiNode

diagram	<pre> classDiagram class taxiNode { <<Supports data in the APTAYOUT_TAXIWAY_POINTS table. Taxi nodes define the points for a given taxiway.>> } class elevation { <<Taxi node's elevation above MSL. Valid values: -500 to 5000. (m)>> } class speed { <<Speed of aircraft at node. Valid values: 1.00 to 60.00. (mph)>> } class coord2DGroup { <<Indicates how a two-dimensional group is specified.>> } class lationCoordGroup { <<Specifies a coordinate using latitude and longitude.>> } class utmCoordGroup { <<Specifies a point using Universal Transverse Mercator coordinates.>> } class latitude { <<Latitude specified as degrees in decimal format. Can include optional attribute positive.>> } class longitude { <<Longitude specified as degrees in decimal format. Can include optional attribute positive.>> } class latitudeDMS { <<Latitude expressed as dd' mm' ss with optional indicator N, n, S, s.>> } class longitudeDMS { <<Longitude expressed as dd' mm' ss with optional indicator N, n, S, s.>> } class utmN { <<UTM Northing of the point in decimal meters north of the equator.>> } class utmE { <<UTM Easting of the point in decimal meters east from a central meridian.>> } class utmZone { <<UTM Zone of the point. A default zone can be set in the &#60;options&#62; tag.>> } taxiNode --> elevation taxiNode --> speed coord2DGroup --> lationCoordGroup coord2DGroup --> utmCoordGroup lationCoordGroup --> latitude lationCoordGroup --> longitude utmCoordGroup --> utmN utmCoordGroup --> utmE utmCoordGroup --> utmZone </pre>
properties	content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone elevation speed
used by	element taxiNodeSet
annotation	<p>documentation</p> <p>Supports data in the APTAYOUT_TAXIWAY_POINTS table. Taxi nodes define the points for a given taxiway.</p>

element taxiNode/elevation

diagram	<pre> classDiagram class elevation { <<Taxi node's elevation above MSL. Valid values: -500 to 5000. (m)>> } </pre>
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	<p>documentation</p> <p>Taxi node's elevation above MSL. Valid values: -500 to 5000. (m)</p>

element taxiNode/speed

diagram	<pre> classDiagram class speed { <<Speed of aircraft at node. Valid values: 1.00 to 60.00. (mph)>> } </pre>
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	<p>documentation</p> <p>Speed of aircraft at node. Valid values: 1.00 to 60.00. (mph)</p>

element taxiNodeSet

diagram	<pre> classDiagram class taxiNodeSet { <<Supports data in the APTAYOUT_TAXIWAY_POINTS table. Taxi nodes define the points for a given taxiway.>> } class taxiNode { <<Supports data in the APTAYOUT_TAXIWAY_POINTS table. Taxi nodes define the points for a given taxiway.>> } class APTAYOUT_TAXIWAY_POINTS { <<Supports data in the APTAYOUT_TAXIWAY_POINTS table. Taxi nodes define the points for a given taxiway.>> } class APTAYOUT_TAXIWAY_POINTS --> taxiNodeSet class APTAYOUT_TAXIWAY_POINTS --> taxiNode </pre>
properties	content complex
children	taxiNode
used by	element taxiway

annotation	documentation Supports data in the APTLAYOUT_TAXIWAY_POINTS table. Taxi nodes define the points for a given taxiway.
------------	---

element taxipath

diagram	<pre> classDiagram class taxipath class gateName class runwayName class direction class taxiwayName taxipath "1..∞" --> gateName : "References an existing gate." taxipath "1..∞" --> runwayName : "References an existing runway." taxipath "1..∞" --> direction : "Direction of the taxipath. Valid values: Inbound or Outbound." taxipath "1..∞" --> taxiwayName : "1..∞ References an existing taxiway." </pre> <p>Supports data contained in the APTLAYOUT_TAXIPATH table. A taxipath is a sequence of taxiways, possibly just one, that connects a gate to a runway or vice versa. Taxipaths are used to do the modeling of aircraft ground movement. They are needed for sequence modeling, which includes all dispersion analyses. Gates, taxiways and runways must be defined before taxipaths can be specified.</p>
properties	content complex
children	gateName runwayName direction taxiwayName
used by	element taxipathSet
annotation	documentation Supports data contained in the APTLAYOUT_TAXIPATH table. A taxipath is a sequence of taxiways, possibly just one, that connects a gate to a runway or vice versa. Taxipaths are used to do the modeling of aircraft ground movement. They are needed for sequence modeling, which includes all dispersion analyses. Gates, taxiways and runways must be defined before taxipaths can be specified.

element taxipath/gateName

diagram	<pre> classDiagram class gateName gateName "References an existing gate." </pre>
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation References an existing gate.

element taxipath/runwayName

diagram	<pre> classDiagram class runwayName runwayName "References an existing runway." </pre>
type	string8
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation References an existing runway.

element taxipath/direction


diagram	<pre> classDiagram class direction direction "Direction of the taxipath. Valid values: Inbound or Outbound." </pre>
type	directionType
properties	content simple
facets	Kind Value Annotation pattern A Arrival D Departure Inbound O Outbound
annotation	documentation Direction of the taxipath. Valid values: Inbound or Outbound.

element taxipath/taxiwayName


diagram	<pre> classDiagram class taxiwayName taxiwayName "1..∞ References an existing taxiway." </pre>
type	string20
properties	minOcc 1 maxOcc unbounded content simple

facets	Kind Value Annotation minLength 0 maxLength 20
annotation	documentation References an existing taxiway.

element **taxipathSet**

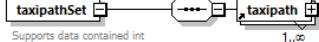diagram	 <p>Supports data contained in the APTAYOUT_TAXIPATH table. A taxipath is a sequence of taxiways, possibly just one, that connects a gate to a runway or vice versa. Taxipaths are used to do the modeling of aircraft ground movement. They are needed for sequence modeling, which includes all dispersion analyses. Gates, taxiways and runways must be defined before taxipaths can be specified.</p> <p>Supports data contained in the APTAYOUT_TAXIPATH table. A taxipath is a sequence of taxiways, possibly just one, that connects a gate to a runway or vice versa. Taxipaths are used to do the modeling of aircraft ground movement. They are needed for sequence modeling, which includes all dispersion analyses. Gates, taxiways and runways must be defined before taxipaths can be specified.</p>
properties	content complex
children	taxipath
used by	complexType airportLayoutType
annotation	<p>documentation</p> <p>Supports data contained in the APTAYOUT_TAXIPATH table. A taxipath is a sequence of taxiways, possibly just one, that connects a gate to a runway or vice versa. Taxipaths are used to do the modeling of aircraft ground movement. They are needed for sequence modeling, which includes all dispersion analyses. Gates, taxiways and runways must be defined before taxipaths can be specified.</p>

element **taxiTime**

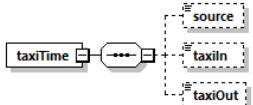diagram	 <p>source</p> <p>taxin</p> <p>taxiOut</p>
properties	content complex
children	source taxin taxiOut
used by	complexType airport

element **taxiTime/source**

diagram	 <p>source</p>
type	string6
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 6

element **taxiTime/taxin**

diagram	 <p>taxin</p>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple

element **taxiTime/taxiOut**

diagram	 <p>taxiOut</p>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple

element **taxiway**

diagram	<p>name Identifying name for taxiway.</p> <p>dispersionWidth Width of emission dispersion around taxiway. Valid values: 0 to 100. (m)</p> <p>taxiNodeSet Supports data in the APTAYOUT_TAXIWAY_POINTS table. Taxi nodes define the points for a given taxiway.</p>
properties	content complex
children	name dispersionWidth taxiNodeSet
used by	element taxiwaySet
annotation	<p>documentation</p> <p>Supports data in the APTAYOUT_TAXIWAY table. Taxiways determine the ground segments where the aircraft operates.</p>

element taxiway/name

diagram	<p>name Identifying name for taxiway.</p>									
type	string20									
properties	content simple									
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>20</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	minLength	0		maxLength	20	
Kind	Value	Annotation								
minLength	0									
maxLength	20									
annotation	<p>documentation</p> <p>Identifying name for taxiway.</p>									

element taxiway/dispersionWidth

diagram	<p>dispersionWidth Width of emission dispersion around taxiway. Valid values: 0 to 100. (m)</p>												
type	doubleExclusive100												
properties	<table> <tbody> <tr> <td>minOcc</td> <td>0</td> <td></td> </tr> <tr> <td>maxOcc</td> <td>1</td> <td></td> </tr> <tr> <td>content</td> <td>simple</td> <td></td> </tr> <tr> <td>default</td> <td>1</td> <td></td> </tr> </tbody> </table>	minOcc	0		maxOcc	1		content	simple		default	1	
minOcc	0												
maxOcc	1												
content	simple												
default	1												
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>minInclusive</td> <td>0</td> <td></td> </tr> <tr> <td>maxExclusive</td> <td>100</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	minInclusive	0		maxExclusive	100				
Kind	Value	Annotation											
minInclusive	0												
maxExclusive	100												
annotation	<p>documentation</p> <p>Width of emission dispersion around taxiway. Valid values: 0 to 100. (m)</p>												

element taxiwaySet

diagram	<p>taxiwaySet Supports data in the APTAYOUT_TAXIWAY table. Taxiways determine the ground segments where the aircraft operates.</p> <p>taxiway Supports data in the APTAYOUT_TAXIWAY table. Taxiways determine the ground segments where the aircraft operates.</p>
properties	content complex
children	taxiway
used by	complexType airportLayoutType
annotation	<p>documentation</p> <p>Supports data in the APTAYOUT_TAXIWAY table. Taxiways determine the ground segments where the aircraft operates.</p>

element track

diagram	<pre> classDiagram class track { <<A flight track that can be used for flight operations.>> } class name { <<The name of the track.>> } class otype { <<Type of track. (A = arrival, D = departure, V = overflight, T = Touch and Go)>> } class wingtype { <<Type of wing. (F = fixed wing, R = rotary wing)>> } class airport { <<The IATA airport code.>> } class runway { <<The name of the runway.>> } class vectorCourseHelipad { <<Direction for helicopter operations of vector type (angle from North).>> } class backbone { <<Represents the centerline of a set of dispersed tracks.>> } class subtrack { <<Intended to represent a dispersed child track of a parent track.>> <<1..>> } track <--> name track <--> otype track <--> wingtype track <--> airport track <--> runway track <--> vectorCourseHelipad track <--> backbone track <--> subtrack </pre>
properties	content complex
children	name otype wingtype airport runway vectorCourseHelipad backbone subtrack
used by	elements trackOpSet trackSet
annotation	<p>documentation</p> <p>A flight track that can be used for flight operations.</p>

element **track/name**

diagram	<pre> classDiagram class name { <<The name of the track.>> } name < -- string64 </pre>									
type	string64									
properties	minOcc 0 maxOcc 1 content simple									
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>64</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	minLength	0		maxLength	64	
Kind	Value	Annotation								
minLength	0									
maxLength	64									
annotation	<p>documentation</p> <p>The name of the track.</p>									

element **track/otype**

diagram	<pre> classDiagram class otype { <<Type of track. (A = arrival, D = departure, V = overflight, T = Touch and Go)>> } otype < -- trackType </pre>						
type	trackType						
properties	content simple						
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>pattern</td> <td>A Arrival D Departure V Overflight T TouchAndGo X ArrivalHeliTaxi O DepartureHeliTaxi</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	pattern	A Arrival D Departure V Overflight T TouchAndGo X ArrivalHeliTaxi O DepartureHeliTaxi	
Kind	Value	Annotation					
pattern	A Arrival D Departure V Overflight T TouchAndGo X ArrivalHeliTaxi O DepartureHeliTaxi						
annotation	<p>documentation</p> <p>Type of track. (A = arrival, D = departure, V = overflight, T = Touch and Go)</p>						

element **track/wingtype**

diagram	<pre> classDiagram class wingtype { <<Type of wing. (F = fixed wing, R = rotary wing)>> } wingtype < -- wingType </pre>						
type	wingType						
properties	minOcc 0 maxOcc 1 content simple						
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>pattern</td> <td>F FixedWing R RotaryWing</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	pattern	F FixedWing R RotaryWing	
Kind	Value	Annotation					
pattern	F FixedWing R RotaryWing						
annotation	<p>documentation</p> <p>Type of wing. (F = fixed wing, R = rotary wing)</p>						

element **track/airport**

diagram	
type	airportCode
properties	minOcc 0 maxOcc 1 content complex
facets	Kind Value Annotation minLength 0 maxLength 4
attributes	Name Type Use Default Fixed Annotation type airportCodeType optional ANY country string3 optional ANY
annotation	documentation The IATA airport code.

element track/runway

diagram	 The name of the runway.
type	string8
properties	minOcc 0 maxOcc 1 content simple
used by	element runwaySet
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation The name of the runway.

element track/vectorCourseHelipad

diagram	 Direction for helicopter operations of vector type (angle from North).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Direction for helicopter operations of vector type (angle from North).

element trackNode

diagram	<pre> classDiagram trackNode < -- nodeGroup trackNode < -- backboneNode trackNode --> id : id trackNode --> description : description trackNode --> lationCoordGroup : lationCoordGroup trackNode --> coord2DGroup : coord2DGroup trackNode --> utmCoordGroup : utmCoordGroup </pre> <p>trackNode</p> <ul style="list-style-type: none"> A flight track node. Indicates how a two-dimensional group is specified. <p>nodeGroup</p> <ul style="list-style-type: none"> A group of nodes. <p>description</p> <ul style="list-style-type: none"> An optional description for the grouping of nodes. <p>lationCoordGroup</p> <ul style="list-style-type: none"> Specifies a coordinate using latitude and longitude. <p>coord2DGroup</p> <ul style="list-style-type: none"> Indicates how a two-dimensional group is specified. <p>utmCoordGroup</p> <ul style="list-style-type: none"> Specifies a point using Universal Transverse Mercator coordinates. <p>id</p> <ul style="list-style-type: none"> String identifier for the grouping of nodes. <p>latitude</p> <ul style="list-style-type: none"> Latitude specified as degrees in decimal format. Can include optional attribute positive. <p>latitudeDMS</p> <ul style="list-style-type: none"> Latitude expressed as dd' mm'' ss with optional indicator N, n, S, s. <p>longitude</p> <ul style="list-style-type: none"> Longitude specified as degrees in decimal format. Can include optional attribute positive. <p>longitudeDMS</p> <ul style="list-style-type: none"> Longitude expressed as dd' mm'' ss with optional indicator N, n, S, s. <p>utmN</p> <ul style="list-style-type: none"> UTM Northing of the point in decimal meters north of the equator. <p>utmE</p> <ul style="list-style-type: none"> UTM Easting of the point in decimal meters east from a central meridian. <p>utmZone</p> <ul style="list-style-type: none"> UTM Zone of the point. A default zone can be set in the &#60;options&#62; tag. <p>altitude</p> <ul style="list-style-type: none"> Node's altitude above or below MSL (feet). Includes attribute node. <p>speed</p> <ul style="list-style-type: none"> Speed of aircraft at node (KCAS). Includes attribute node. Valid values: nonnegative, Units: knots
properties	content complex
children	id description latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone altitude speed
used by	elements backboneNode trackNodes
annotation	documentation A flight track node.

element **trackNode/altitude**

diagram	<pre> classDiagram trackNode/altitude < -- altitude trackNode/altitude < -- trackNode trackNode/altitude --> attributes trackNode/altitude --> control </pre> <p>trackNode/altitude</p> <ul style="list-style-type: none"> Node's altitude above or below MSL (feet). Includes attribute node. <p>altitude</p> <ul style="list-style-type: none"> Node's altitude above or below MSL (feet). Includes attribute node. <p>attributes</p> <p>control</p>
type	extension of xs:double
properties	minOcc 0 maxOcc 1 content complex
attributes	Name control Type nodeControlType Use optional Default Fixed Annotation
annotation	documentation Node's altitude above or below MSL (feet). Includes attribute node.

attribute **trackNode/altitude/@control**

type	nodeControlType
properties	use optional
facets	Kind Value Annotation pattern 0 None 1 AtOrBelow 2 Match 3 AtOrAbove

element **trackNode/speed**


diagram	<pre> classDiagram trackNode/speed < -- speed trackNode/speed < -- trackNode trackNode/speed --> attributes trackNode/speed --> control </pre> <p>trackNode/speed</p> <ul style="list-style-type: none"> Speed of aircraft at node (KCAS). Includes attribute node. <p>speed</p> <ul style="list-style-type: none"> Speed of aircraft at node (KCAS). Includes attribute node. Valid values: nonnegative, Units: knots <p>attributes</p> <p>control</p>
type	extension of xs:double
properties	minOcc 0 maxOcc 1

	content complex
attributes	Name control Type nodeControlType Use optional Default Fixed Annotation
annotation	documentation Speed of aircraft at node (KCAS). Includes attribute node. Valid values: nonnegative, Units: knots


attribute **trackNode/speed/@control**

type	nodeControlType
properties	use optional
facets	Kind Value Annotation pattern 0 None 1 AtOrBelow 2 Match 3 AtOrAbove


element **trackNodes**

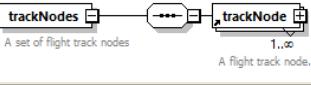diagram	 A set of flight track nodes.
properties	content complex
children	trackNode
used by	element subtrack
annotation	documentation A set of flight track nodes


element **trackOpSet**

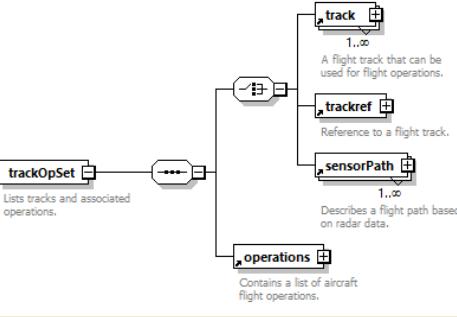diagram	 Lists tracks and associated operations.
properties	content complex
children	track trackref sensorPath operations
used by	elements AsifXml case
annotation	documentation Lists tracks and associated operations.

element **trackref**

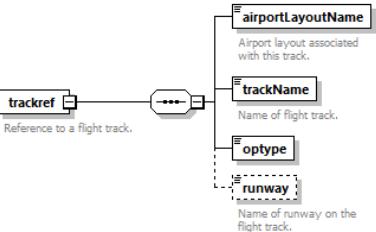diagram	 Reference to a flight track.
properties	content complex
children	airportLayoutName trackName optype runway
used by	element trackOpSet
annotation	documentation Reference to a flight track.

element **trackref/airportLayoutName**

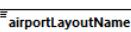diagram	 Airport layout associated with this track.
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airport layout associated with this track.

element **trackref/trackName**

diagram	 trackName Name of flight track.
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Name of flight track.

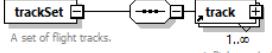
element **trackref/optype**

diagram	 optype
type	trackType
properties	content simple
facets	Kind Value Annotation pattern A Arrival D Departure V Overflight T TouchAndGo X ArrivalHeliTaxi O DepartureHeliTaxi

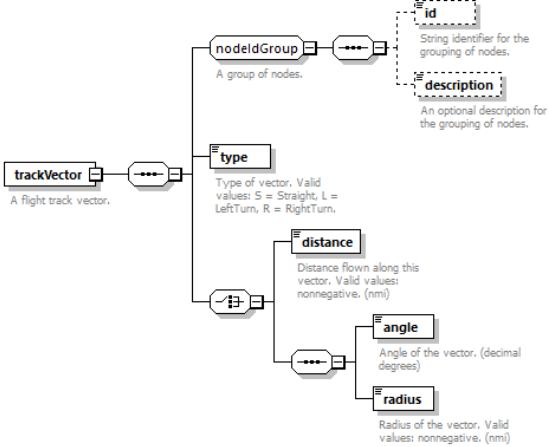
element **trackref/runway**

diagram	 runway Name of runway on the flight track.
type	string8
properties	minOcc 0 maxOcc 1 content simple
used by	element runwaySet
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation Name of runway on the flight track.

element **trackSet**

diagram	 trackSet → track A set of flight tracks. 1..∞ A flight track that can be used for flight operations.
properties	content complex
children	track
used by	complexType airportLayoutType
annotation	documentation A set of flight tracks.

element **trackVector**

diagram	 trackVector A flight track vector. → nodeIdGroup A group of nodes. → type Type of vector. Valid values: S = Straight, L = LeftTurn, R = RightTurn. → distance Distance flown along this vector. Valid values: nonnegative. (nm) → angle Angle of the vector. (decimal degrees) → radius Radius of the vector. Valid values: nonnegative. (nm) → id String identifier for the grouping of nodes. → description An optional description for the grouping of nodes.
properties	content complex
children	id description type distance angle radius
used by	element trackVectors
annotation	documentation A flight track vector.

element **trackVector/type**

diagram	 Type of vector. Valid values: S = Straight, L = LeftTurn, R = RightTurn.
type	vectorTrackType
properties	content simple
facets	Kind Value Annotation pattern S Straight L LeftTurn R RightTurn
annotation	documentation Type of vector. Valid values: S = Straight, L = LeftTurn, R = RightTurn.

element trackVector/distance

diagram	 Distance flown along this vector. Valid values: nonnegative. (nmi)
type	xs:double
properties	content simple
annotation	documentation Distance flown along this vector. Valid values: nonnegative. (nmi)

element trackVector/angle

diagram	 Angle of the vector. (decimal degrees)
type	xs:double
properties	content simple
annotation	documentation Angle of the vector. (decimal degrees)

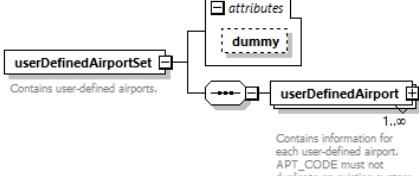
element trackVector/radius

diagram	 Radius of the vector. Valid values: nonnegative. (nmi)
type	xs:double
properties	content simple
annotation	documentation Radius of the vector. Valid values: nonnegative. (nmi)

element trackVectors

diagram	 A list of flight track vectors. A flight track vector.
properties	content complex
children	trackVector
used by	element subtrack
annotation	documentation A list of flight track vectors.

element userDefinedAirportSet


diagram	 Contains user-defined airports. userDefinedAirportSet userDefinedAirport Attributes dummy 1..∞
properties	content complex
children	userDefinedAirport
used by	element study
attributes	Name Type Use Default Fixed Annotation dummy, xs:int optional
annotation	documentation Contains user-defined airports.

attribute userDefinedAirportSet/@dummy

type	xs:int
properties	use optional

element **userDefinedAirportSet/userDefinedAirport**

diagram

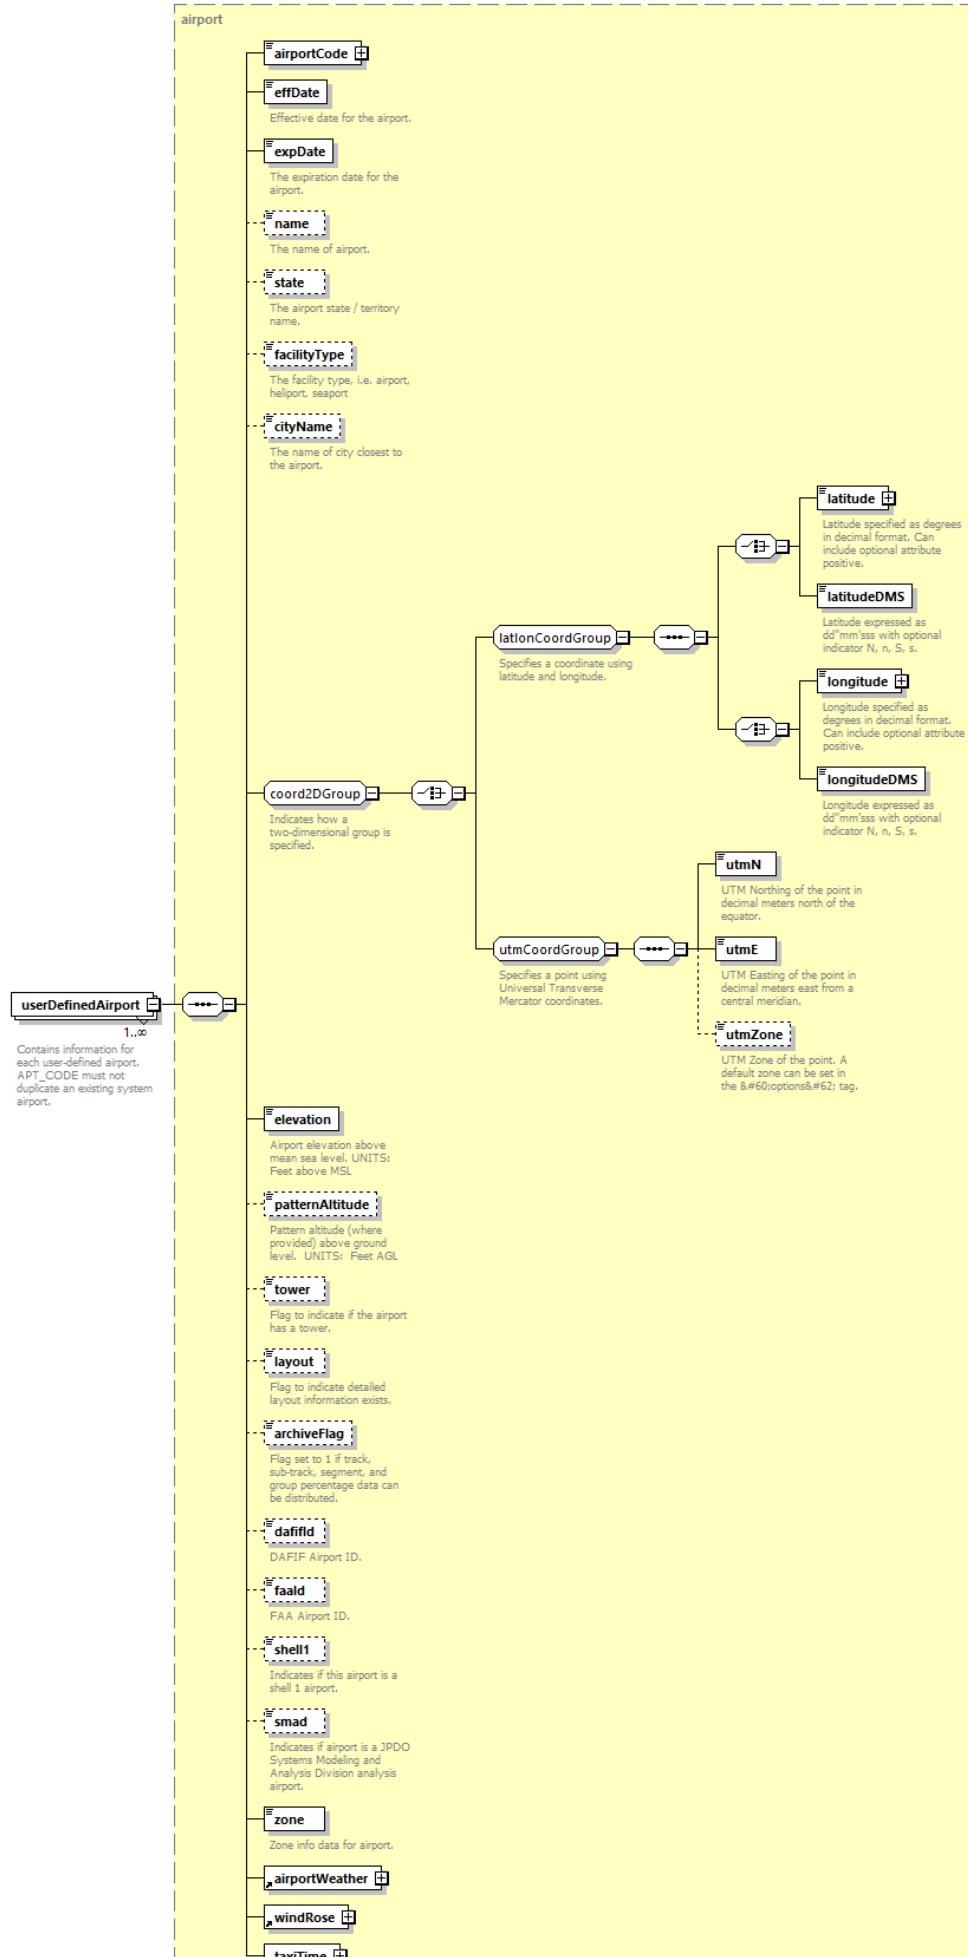

type	airport
properties	minOcc 1 maxOcc unbounded content complex
children	airportCode effDate expDate name state facilityType cityName latitude longitudeDMS longitude utmN utmE utmZone elevation patternAltitude tower layout archiveFlag dafid faaid shell1 smad zone airportWeather windRose taxiTime
annotation	documentation Contains information for each user-defined airport. APT_CODE must not duplicate an existing system airport.

element [userGroundSupportEquipment](#)

diagram	<p>userGroundSupportEquipment</p> <p>Supports user-created GSE stored in the STN_GSE table. This element supports the definition of user defined ground support equipment.</p>
properties	content complex
children	gselID gseName defaultLoadFactor defaultHorsepower defaultOpTimeDepartures defaultOpTimeArrivals defaultAnnualOpTime userEmissionFactors
used by	element userGroundSupportEquipmentSet
annotation	documentation Supports user-created GSE stored in the STN_GSE table. This element supports the definition of user defined ground support equipment.

element [userGroundSupportEquipment/gselID](#)

diagram	 <p>gselID</p> <p>User GSE ID (used as identifier (System GSE ID) in AIRCRAFT_GSE_ASSIGNMENTS, GSE_POPULATION, GSE_POPULATION_GATE_ASSIGNMENTS).</p>
type	xs:int
properties	content simple
annotation	documentation User GSE ID (used as identifier (System GSE ID) in AIRCRAFT_GSE_ASSIGNMENTS, GSE_POPULATION, GSE_POPULATION_GATE_ASSIGNMENTS).

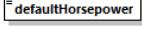
element [userGroundSupportEquipment/gseName](#)

diagram	 <p>gseName</p> <p>Custom GSE name.</p>
type	string40
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 40

element [userGroundSupportEquipment/defaultLoadFactor](#)

diagram	 defaultLoadFactor GSE default load factor (dimensionless). Valid values: 0 (0%) to 1 (100%).
type	doubleInclusive1
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation GSE default load factor (dimensionless). Valid values: 0 (0%) to 1 (100%).

element **userGroundSupportEquipment/defaultHorsepower**

diagram	 defaultHorsepower GSE default horsepower. Valid values: 0 to 10000. (hp)
type	xs:double
properties	content simple
annotation	documentation GSE default horsepower. Valid values: 0 to 10000. (hp)

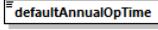
element **userGroundSupportEquipment/defaultOpTimeDepartures**

diagram	 defaultOpTimeDepartures GSE default operation time departures. Valid values: 0 to 1000. (min/LTO)
type	xs:double
properties	content simple
annotation	documentation GSE default operation time departures. Valid values: 0 to 1000. (min/LTO)

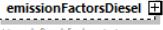
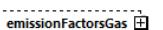
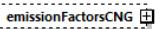
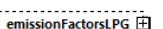
element **userGroundSupportEquipment/defaultOpTimeArrivals**

diagram	 defaultOpTimeArrivals GSE default operation time arrivals. Valid values: 0 to 1000. (min/LTO)
type	xs:double
properties	content simple
annotation	documentation GSE default operation time arrivals. Valid values: 0 to 1000. (min/LTO)

element **userGroundSupportEquipment/defaultAnnualOpTime**

diagram	 defaultAnnualOpTime GSE default operation time annual. Valid values: 0 to 8784. (min/LTO)
type	xs:double
properties	content simple
annotation	documentation GSE default operation time annual. Valid values: 0 to 8784. (min/LTO)

element **userGroundSupportEquipment/userEmissionFactors**

diagram	 userEmissionFactors Describes user-defined fuel emission factors.  emissionFactorsDiesel User-defined fuel emission factor for diesel.  emissionFactorsGas User-defined fuel emission factor for gasoline.  emissionFactorsCNG User-defined fuel emission factor for compressed natural gas.  emissionFactorsLPG User-defined fuel emission factor for liquefied petroleum gas.
properties	content complex
children	emissionFactorsDiesel emissionFactorsGas emissionFactorsCNG emissionFactorsLPG
annotation	documentation Describes user-defined fuel emission factors.

element **userGroundSupportEquipment/userEmissionFactors/emissionFactorsDiesel**

diagram	<pre> graph TD subgraph emissionFactorSet [emissionFactorSet] CO[CO] HC[HC] NOx[NOx] SOx[SOx] PM10[PM10] CO2[CO2] CH4[CH4] PM25[PM25] end emissionFactorsDiesel[emissionFactorsDiesel] --> emissionFactorSet </pre> <p>emissionFactorsDiesel User-defined fuel emission factor for diesel.</p>
type	emissionFactorSet
properties	minOcc 0 maxOcc 1 content complex
children	CO HC NOx SOx PM10 CO2 CH4 PM25
annotation	documentation User-defined fuel emission factor for diesel.

element userGroundSupportEquipment/userEmissionFactors/emissionFactorsGas

diagram	<pre> graph TD subgraph emissionFactorSet [emissionFactorSet] CO[CO] HC[HC] NOx[NOx] SOx[SOx] PM10[PM10] CO2[CO2] CH4[CH4] PM25[PM25] end emissionFactorsGas[emissionFactorsGas] --> emissionFactorSet </pre> <p>emissionFactorsGas User-defined fuel emission factor for gasoline.</p>
type	emissionFactorSet
properties	minOcc 0 maxOcc 1 content complex
children	CO HC NOx SOx PM10 CO2 CH4 PM25

annotation	documentation User-defined fuel emission factor for gasoline.
------------	--

element **userGroundSupportEquipment/userEmissionFactors/emissionFactorsCNG**

diagram	<pre> graph TD emissionFactorSet[emissionFactorSet] --- CO[CO] emissionFactorSet --- HC[HC] emissionFactorSet --- NOx[NOx] emissionFactorSet --- SOx[SOx] emissionFactorSet --- PM10[PM10] emissionFactorSet --- CO2[CO2] emissionFactorSet --- CH4[CH4] emissionFactorSet --- PM25[PM25] emissionFactorsCNG[emissionFactorsCNG] --- emissionFactorSet </pre> <p>User-defined fuel emission factor for compressed natural gas.</p>
type	emissionFactorSet
properties	minOcc 0 maxOcc 1 content complex
children	CO HC NOx SOx PM10 CO2 CH4 PM25
annotation	documentation User-defined fuel emission factor for compressed natural gas.

element **userGroundSupportEquipment/userEmissionFactors/emissionFactorsLPG**

diagram	<pre> graph TD emissionFactorSet[emissionFactorSet] --- CO[CO] emissionFactorSet --- HC[HC] emissionFactorSet --- NOx[NOx] emissionFactorSet --- SOx[SOx] emissionFactorSet --- PM10[PM10] emissionFactorSet --- CO2[CO2] emissionFactorSet --- CH4[CH4] emissionFactorSet --- PM25[PM25] emissionFactorsLPG[emissionFactorsLPG] --- emissionFactorSet </pre> <p>User-defined fuel emission factor for liquefied petroleum gas.</p>
type	emissionFactorSet

properties	minOcc 0 maxOcc 1 content complex
children	CO HC NOx SOx PM10 CO2 CH4 PM25
annotation	documentation User-defined fuel emission factor for liquefied petroleum gas.

element **userGroundSupportEquipmentSet**

diagram	<pre> classDiagram class userGroundSupportEquipmentSet { attributes dummy } class userGroundSupportEquipment { *--> userGroundSupportEquipmentSet } userGroundSupportEquipmentSet "1..oo" --> userGroundSupportEquipment </pre>
properties	content complex
children	userGroundSupportEquipment
used by	elements AsifXml study .
attributes	Name Type Use Default Fixed Annotation dummy xs:int optional
annotation	documentation Supports user-created GSE stored in the STN_GSE table. This element supports the definition of user defined ground support equipment.

attribute **userGroundSupportEquipmentSet/@dummy**

type	xs:int
properties	use optional

element **vehicleEmissionFactors**

diagram	<pre> classDiagram class vehicleEmissionFactors { CO NMHC VOC THC TOG NOx SOx PM_10 PM_2_5 Benzene MTBE Butadiene Formaldehyde Acetaldehyde Acrolein } </pre> <p>NOT currently supported in AEDT - legacy EDMS definitions for emission factors for Roadways and Parking Lots. This element supports the definition of custom emission factor specifications for roadways and parking.</p>
properties	content complex
children	CO NMHC VOC THC TOG NOx SOx PM-10 PM-2.5 Benzene MTBE Butadiene Formaldehyde Acetaldehyde Acrolein
used by	elements parkingFacilityOperation roadwayOperation
annotation	<p>documentation</p> <p>NOT currently supported in AEDT - legacy EDMS definitions for emission factors for Roadways and Parking Lots. This element supports the definition of custom emission factor specifications for roadways and parking.</p>

element vehicleEmissionFactors/CO

diagram	<pre> classDiagram class CO { Amount of carbon monoxide emitted. Valid Values: 0 to 20000. (grams/vehicle-mile) } </pre>
type	<code>xs:double</code>
properties	content simple
annotation	<p>documentation</p> <p>Amount of carbon monoxide emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)</p>

element vehicleEmissionFactors/NMHC

diagram	<pre> classDiagram class NMHC { Amount of non-methane hydrocarbons emitted. Valid Values: 0 to 20000. (grams/vehicle-mile) } </pre>
type	<code>xs:double</code>
properties	content simple

annotation	documentation Amount of non-methane hydrocarbons emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)
------------	---

element **vehicleEmissionFactors/VOC**

diagram	 VOC Amount of volatile organic compounds emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of volatile organic compounds emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)

element **vehicleEmissionFactors/THC**

diagram	 THC Amount of total hydrocarbons emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Amount of total hydrocarbons emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)

element **vehicleEmissionFactors/TOG**

diagram	 TOG Amount of total organic gasses emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of total organic gasses emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)

element **vehicleEmissionFactors/NOx**

diagram	 NOx Amount of nitrous oxides emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of nitrous oxides emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)

element **vehicleEmissionFactors/SOx**

diagram	 SOx Amount of sulfur oxides emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of sulfur oxides emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)

element **vehicleEmissionFactors/PM-10**

diagram	 PM-10 Amount of 10-micron particulate matter emitted. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of 10-micron particulate matter emitted. (grams/vehicle-mile)

element **vehicleEmissionFactors/PM-2.5**

diagram	 PM-2.5 Amount of 2.5-micron particulate matter emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)
type	xs:double

properties	content simple
annotation	documentation Amount of 2.5-micron particulate matter emitted. Valid Values: 0 to 20000. (grams/vehicle-mile)

element **vehicleEmissionFactors/Benzene**

diagram	 Benzene Amount of benzene emitted. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of benzene emitted. (grams/vehicle-mile)

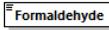
element **vehicleEmissionFactors/MTBE**

diagram	 MTBE Amount of methyl tertiary butyl ether emitted. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of methyl tertiary butyl ether emitted. (grams/vehicle-mile)

element **vehicleEmissionFactors/Butadiene**

diagram	 Butadiene Amount of butadiene emitted. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of butadiene emitted. (grams/vehicle-mile)

element **vehicleEmissionFactors/Formaldehyde**

diagram	 Formaldehyde Amount of formaldehyde emitted. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of formaldehyde emitted. (grams/vehicle-mile)

element **vehicleEmissionFactors/Acetaldehyde**

diagram	 Acetaldehyde Amount of acetaldehyde emitted. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of acetaldehyde emitted. (grams/vehicle-mile)

element **vehicleEmissionFactors/Acrolein**

diagram	 Acrolein Amount of acrolein emitted. (grams/vehicle-mile)
type	xs:double
properties	content simple
annotation	documentation Amount of acrolein emitted. (grams/vehicle-mile)

element **volumeStationarySource**

diagram	<p>volumeStationarySource Specifies the volume in space occupied by a stationary source of emissions.</p> <p>pointCoord Type of 2D coordinates specifying the volume.</p> <ul style="list-style-type: none"> baseElevation Height of volume. (m) releaseHeight Height at which emissions are released into the atmosphere. Valid values 0 to 100 (m) sigmaZ Vertical dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: 0.1 to 100.0. (m) sigmaY Horizontal dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: 0.1 to 100.0. (m)
properties	content complex
children	pointCoord baseElevation releaseHeight sigmaZ sigmaY
used by	element stationarySource
annotation	<p>documentation</p> <p>Specifies the volume in space occupied by a stationary source of emissions.</p>

element volumeStationarySource/pointCoord

diagram	<p>pointCoord Type of 2D coordinates specifying the volume.</p> <p>coord2DType</p> <ul style="list-style-type: none"> latlonCoordGroup Specifies a coordinate using latitude and longitude. utmCoordGroup Specifies a point using Universal Transverse Mercator coordinates. latitude Latitude specified as degrees in decimal format. Can include optional attribute positive. longitude Longitude specified as degrees in decimal format. Can include optional attribute positive. latitudeDMS Latitude expressed as dd° mm' ss" with optional indicator N, n, S, s. longitudeDMS Longitude expressed as dd° mm' ss" with optional indicator N, n, S, s. utmN UTM Northing of the point in decimal meters north of the equator. utmE UTM Easting of the point in decimal meters east from a central meridian. utmZone UTM Zone of the point. A default zone can be set in the &#60;options&#46; tag.
type	coord2DType
properties	content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone
annotation	<p>documentation</p> <p>Type of 2D coordinates specifying the volume.</p>

element volumeStationarySource/baseElevation

diagram	<p>baseElevation Height of volume. (m)</p>
type	xs:double
properties	content simple
annotation	<p>documentation</p> <p>Height of volume. (m)</p>

element volumeStationarySource/releaseHeight

diagram	<p>releaseHeight Height at which emissions are released into the atmosphere. Valid values 0 to 100 (m)</p>
type	doubleInclusive100

properties	minOcc 0 maxOcc 1 content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Height at which emissions are released into the atmosphere. Valid values 0 to 100 (m)

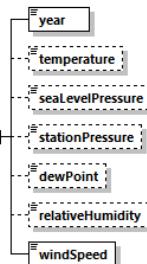
element **volumeStationarySource/sigmaZ**

diagram	
	Vertical dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: 0.1 to 100.0. (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Vertical dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: 0.1 to 100.0. (m)

element **volumeStationarySource/sigmaY**

diagram	
	Horizontal dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: 0.1 to 100.0. (m)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Horizontal dispersion parameter. For additional information, see the AEDT Technical Manual. Valid values: 0.1 to 100.0. (m)

element **weatherData**

diagram	
properties	content complex
children	year temperature seaLevelPressure stationPressure dewPoint relativeHumidity windSpeed
used by	element airportWeatherStation

element **weatherData/year**

diagram	
type	weatherDataYear
properties	content simple

element **weatherData/temperature**


diagram	
type	xs:decimal
properties	minOcc 0 maxOcc 1 content simple

element **weatherData/seaLevelPressure**

diagram	
type	xs:decimal
properties	minOcc 0 maxOcc 1

content simple


element weatherData/stationPressure

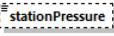diagram	
type	xs:decimal
properties	minOcc 0 maxOcc 1 content simple

element weatherData/dewPoint

diagram	
type	xs:decimal
properties	minOcc 0 maxOcc 1 content simple


element weatherData/relativeHumidity

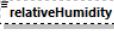diagram	
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

element weatherData/windSpeed

diagram	
type	xs:decimal
properties	content simple


element windRose

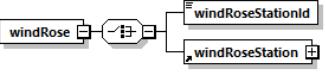diagram	
properties	content complex
children	windRoseStationId windRoseStation
used by	complexType airport

element windRose/windRoseStationId

diagram	
type	string5
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 5

element windRoseData

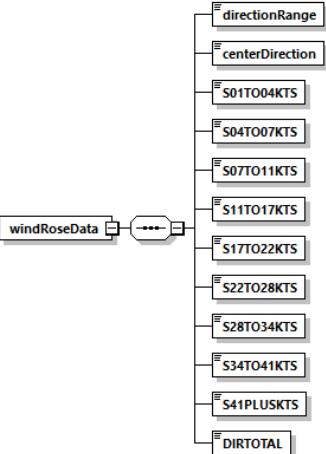
diagram	
properties	content complex
children	directionRange centerDirection S01TO04KTS S04TO07KTS S07TO11KTS S11TO17KTS S17TO22KTS S22TO28KTS S28TO34KTS S34TO41KTS S41PLUSKTS DIRTOTAL

used by	element windRoseStation
---------	---

element **windRoseData/directionRange**

diagram	 directionRange
type	string14
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 14


element **windRoseData/centerDirection**

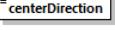diagram	 centerDirection
type	xs:int
properties	content simple


element **windRoseData/S01TO04KTS**

diagram	 S01TO04KTS
type	xs:int
properties	content simple


element **windRoseData/S04TO07KTS**

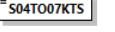diagram	 S04TO07KTS
type	xs:int
properties	content simple


element **windRoseData/S07TO11KTS**

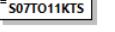diagram	 S07TO11KTS
type	xs:int
properties	content simple


element **windRoseData/S11TO17KTS**

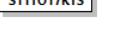diagram	 S11TO17KTS
type	xs:int
properties	content simple


element **windRoseData/S17TO22KTS**

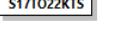diagram	 S17TO22KTS
type	xs:int
properties	content simple

element **windRoseData/S22TO28KTS**

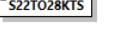diagram	 S22TO28KTS
type	xs:int
properties	content simple


element **windRoseData/S28TO34KTS**

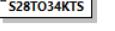diagram	 S28TO34KTS
type	xs:int
properties	content simple

element **windRoseData/S34TO41KTS**

diagram	 S34TO41KTS
type	xs:int
properties	content simple

element **windRoseData/S41PLUSKTS**

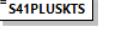
diagram	 S41PLUSKTS
---------	--

type	xs:int
properties	content simple

element **windRoseData/DIRTOTAL**

diagram	
type	xs:int
properties	content simple

element **windRoseStation**

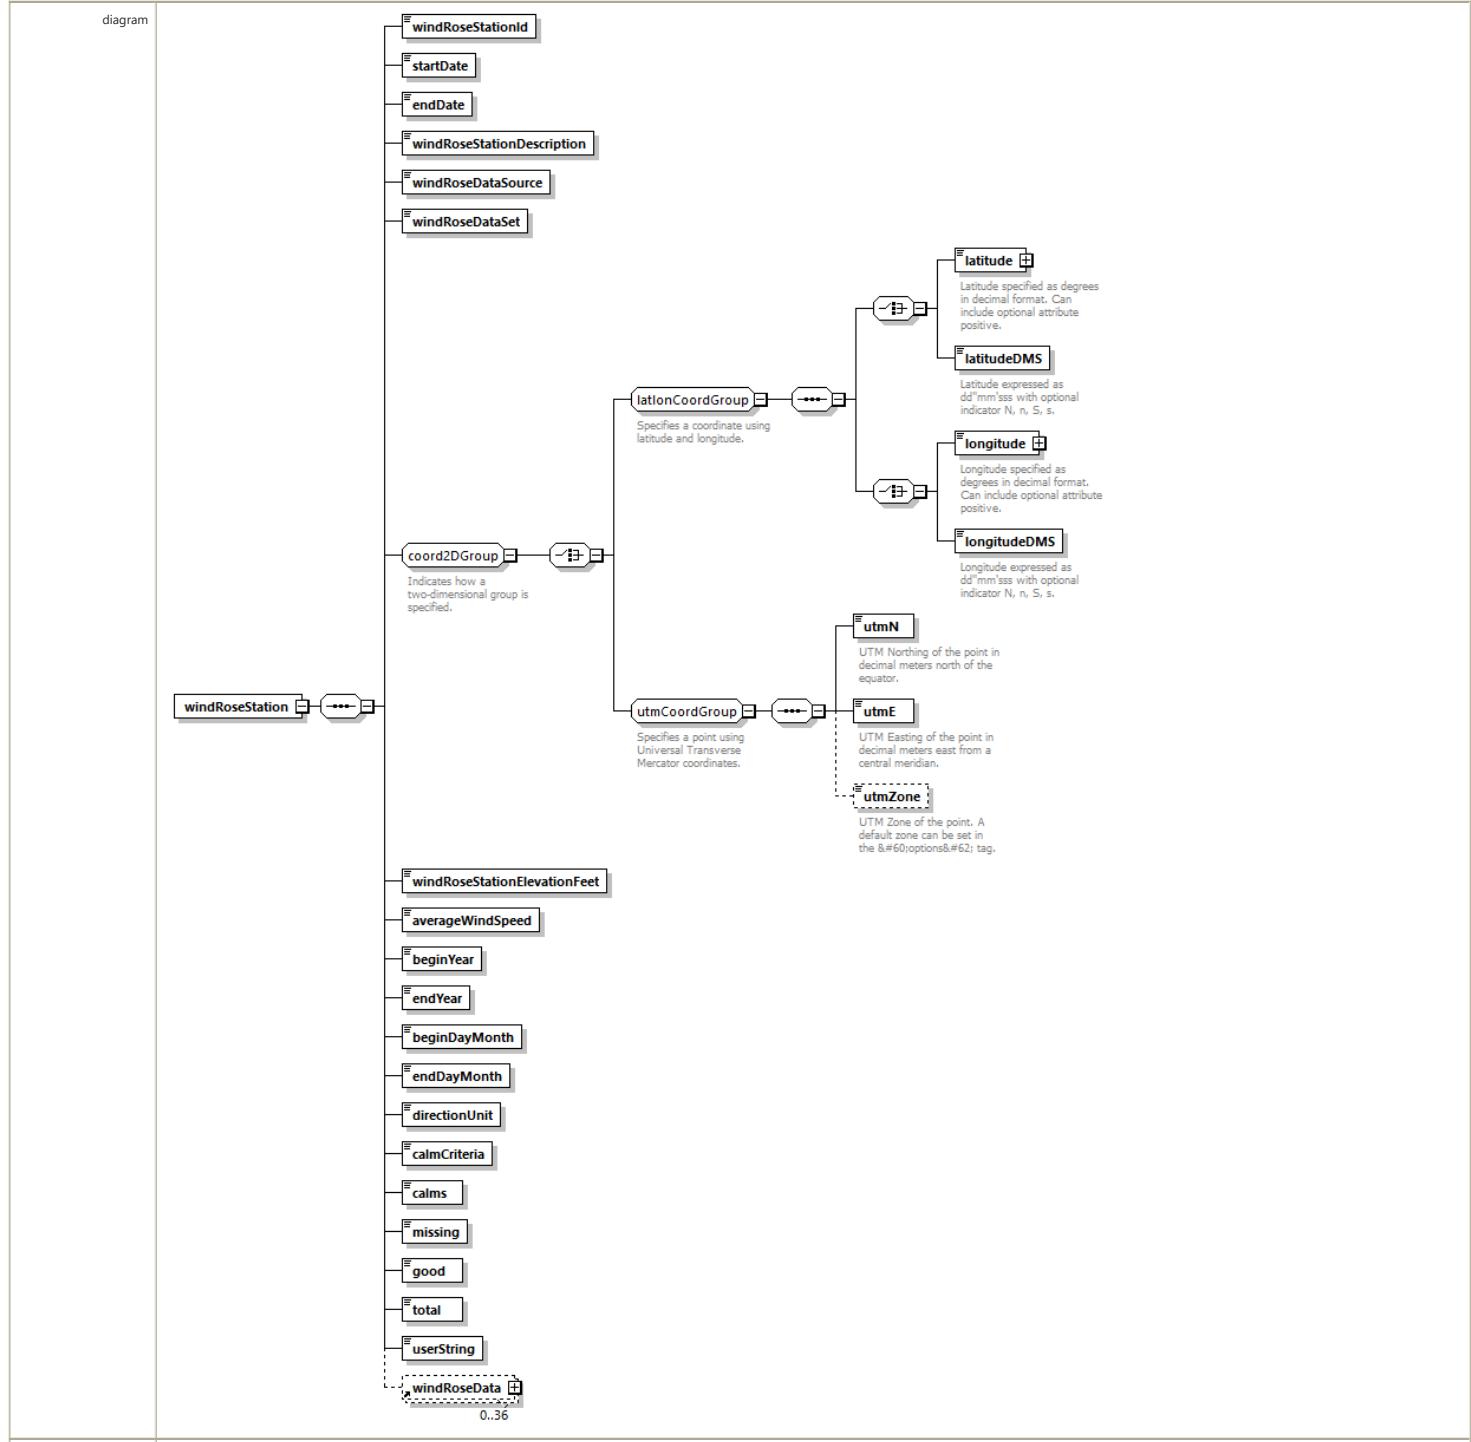

properties content complex

children `windRoseStationId` `startDate` `endDate` `windRoseStationDescription` `windRoseDataSource` `windRoseDataSet` `latitude` `longitude` `latitudeDMS` `longitudeDMS` `utmN` `utmE` `utmZone` `windRoseStationElevationFeet` `averageWindSpeed` `beginYear` `endYear` `beginDayMonth` `endDayMonth` `directionUnit` `calmCriteria` `calms` `missing` `good` `total` `userString` `windRoseData`

used by element `windRose`

element **windRoseStation/windRoseStationId**

diagram	
---------	--

type	string5
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 5

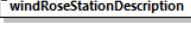
element **windRoseStation/startDate**

diagram	
type	xs:date
properties	content simple

element **windRoseStation/endDate**

diagram	
type	xs:date
properties	content simple

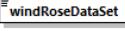
element **windRoseStation/windRoseStationDescription**

diagram	
type	string42
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 42

element **windRoseStation/windRoseDataSource**

diagram	
type	string32
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 32

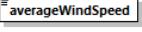
element **windRoseStation/windRoseDataSet**

diagram	
type	string66
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 66

element **windRoseStation/windRoseStationElevationFt**

diagram	
type	xs:int
properties	content simple

element **windRoseStation/averageWindSpeed**

diagram	
type	xs:double
properties	content simple

element **windRoseStation/beginYear**

diagram	
type	xs:int
properties	content simple

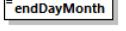
element **windRoseStation/endYear**

diagram	
type	xs:int
properties	content simple

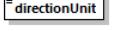
element **windRoseStation/beginDayMonth**

diagram	
type	string12
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 12

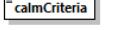
element **windRoseStation/endDayMonth**

diagram	
type	string11
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 11

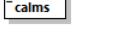
element **windRoseStation/directionUnit**

diagram	
type	string9
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 9

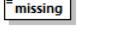
element **windRoseStation/calmCriteria**

diagram	
type	string11
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 11

element **windRoseStation/calms**

diagram	
type	xs:int
properties	content simple

element **windRoseStation/missing**

diagram	
type	xs:int
properties	content simple

element **windRoseStation/good**

diagram	
type	xs:int
properties	content simple

element **windRoseStation/total**

diagram	
type	xs:int
properties	content simple

element **windRoseStation/userString**

diagram	
type	string11
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 11

group **airportActivityGroup**

diagram	<p>parkingFacilityOperationSet NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of parking lot and parking garage activities for scenario layouts.</p> <p>roadwayOperationSet NOT currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.</p> <p>stationarySourceOperationSet Container of operations conducted at a stationary source contributing emissions.</p> <p>groundSupportEquipmentPopulationOperationSet Supports GSE operational data in the STN_OP_GSE table. This element supports the definition of user defined ground support equipment in operational usage.</p>
children	parkingFacilityOperationSet roadwayOperationSet stationarySourceOperationSet groundSupportEquipmentPopulationOperationSet
used by	element case
annotation	<p>documentation</p> <p>Contains a set of activities conducted at an airport.</p>

group annualizationGroupCase

diagram	<p>annualizationGroup Contains one or more weighted annualization group cases.</p> <p>annualizationCase Collection of study cases whose results are weighted in the scenario annualization rollup.</p>
children	annualizationGroup annualizationCase
used by	element annualizationGroup
annotation	<p>documentation</p> <p>Allows for grouping cases into groups, and groups into parent groups.</p>

group coord2DGroup

diagram	<p>latlonCoordGroup Specifies a coordinate using latitude and longitude.</p> <p>latitude Latitude specified as degrees in decimal format. Can include optional attribute positive.</p> <p>latitudeDMS Latitude expressed as dd:mm:ss with optional indicator N, n, S, s.</p> <p>longitude Longitude specified as degrees in decimal format. Can include optional attribute positive.</p> <p>longitudeDMS Longitude expressed as dd:mm:ss with optional indicator N, n, S, s.</p> <p>utmCoordGroup Specifies a point using Universal Transverse Mercator coordinates.</p> <p>utmN UTM Northing of the point in decimal meters north of the equator.</p> <p>utmE UTM Easting of the point in decimal meters east from a central meridian.</p> <p>utmZone UTM Zone of the point. A default zone can be set in the &#60;options&#62; tag.</p>
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone
used by	elements airportWeatherStation centroid grid pointReceptor polarGrid polarReceptor taxiNode trackNode windRoseStation complexTypes airport airportLayoutType runup runwayEnd
annotation	<p>documentation</p> <p>Indicates how a two-dimensional group is specified.</p>

group latlonCoordGroup

diagram	<p>latlonCoordGroup</p> <p>Specifies a coordinate using latitude and longitude.</p> <p>latitude</p> <p>Latitude specified as degrees in decimal format. Can include optional attribute positive.</p> <p>longitude</p> <p>Longitude specified as degrees in decimal format. Can include optional attribute positive.</p> <p>latitudeDMS</p> <p>Latitude expressed as dd' mm' ss with optional indicator N, n, S, s.</p> <p>longitudeDMS</p> <p>Longitude expressed as dd' mm' ss with optional indicator N, n, S, s.</p>
children	latitude latitudeDMS longitude longitudeDMS
used by	complexType coord2DType group coord2DGroup
annotation	documentation Specifies a coordinate using latitude and longitude.

element latlonCoordGroup/latitude

diagram	<p>latitude</p> <p>Latitude specified as degrees in decimal format. Can include optional attribute positive.</p> <p>latitudeDecimalType</p> <p>attributes</p> <p>positive</p>												
type	latitudeDecimalType												
properties	content complex												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>positive</td> <td>derived by: xs:string</td> <td>optional</td> <td>N</td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	positive	derived by: xs:string	optional	N		
Name	Type	Use	Default	Fixed	Annotation								
positive	derived by: xs:string	optional	N										
annotation	documentation Latitude specified as degrees in decimal format. Can include optional attribute positive.												

element latlonCoordGroup/latitudeDMS

diagram	<p>latitudeDMS</p> <p>Latitude expressed as dd' mm' ss with optional indicator N, n, S, s.</p> <p>latitudeDMSType</p> <p>attributes</p> <p>positive</p>						
type	latitudeDMSType						
properties	content simple						
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>pattern</td> <td>[0-9]{2}[-]{"0-9}{2}[-]{"0-9}{2}([0-9]{3})?N n S s</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	pattern	[0-9]{2}[-]{"0-9}{2}[-]{"0-9}{2}([0-9]{3})?N n S s	
Kind	Value	Annotation					
pattern	[0-9]{2}[-]{"0-9}{2}[-]{"0-9}{2}([0-9]{3})?N n S s						
annotation	documentation Latitude expressed as dd' mm' ss with optional indicator N, n, S, s.						

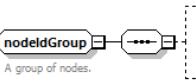
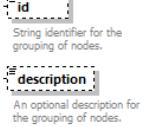
element latlonCoordGroup/longitude

diagram	<p>longitude</p> <p>Longitude specified as degrees in decimal format. Can include optional attribute positive.</p> <p>longitudeDecimalType</p> <p>attributes</p> <p>positive</p>												
type	longitudeDecimalType												
properties	content complex												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>positive</td> <td>derived by: xs:string</td> <td>optional</td> <td>E</td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	positive	derived by: xs:string	optional	E		
Name	Type	Use	Default	Fixed	Annotation								
positive	derived by: xs:string	optional	E										
annotation	documentation Longitude specified as degrees in decimal format. Can include optional attribute positive.												

element latlonCoordGroup/longitudeDMS

diagram	<p>longitudeDMS</p> <p>Longitude expressed as dd' mm' ss with optional indicator N, n, S, s.</p> <p>longitudeDMSType</p> <p>attributes</p> <p>positive</p>						
type	longitudeDMSType						
properties	content simple						
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>pattern</td> <td>[0-9]{2}[-]{"0-9}{2}[-]{"0-9}{2}([0-9]{3})?E e W w</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	pattern	[0-9]{2}[-]{"0-9}{2}[-]{"0-9}{2}([0-9]{3})?E e W w	
Kind	Value	Annotation					
pattern	[0-9]{2}[-]{"0-9}{2}[-]{"0-9}{2}([0-9]{3})?E e W w						
annotation	documentation Longitude expressed as dd' mm' ss with optional indicator N, n, S, s.						

group nodeIdGroup

diagram	 <p>A group of nodes.</p>	 <p>String identifier for the grouping of nodes. An optional description for the grouping of nodes.</p>
children	id description	
used by	elements trackNode trackVector	
annotation	documentation A group of nodes.	

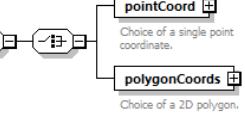
element nodeIdGroup/id

diagram	 <p>String identifier for the grouping of nodes.</p>
type	string16
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 16
annotation	documentation String identifier for the grouping of nodes.

element nodeIdGroup/description

diagram	 <p>An optional description for the grouping of nodes.</p>
type	string16
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 16
annotation	documentation An optional description for the grouping of nodes.

group oneOrThreeCoords2DGroupSet

diagram	 <p>Type of coordinate specifying the area.</p>	 <p>Choice of a single point coordinate. Choice of a 2D polygon.</p>
children	pointCoord polygonCoords	
used by	elements areaStationarySource building gate parkingFacility	
annotation	documentation Type of coordinate specifying the area.	

element oneOrThreeCoords2DGroupSet/pointCoord

diagram	<pre> classDiagram coord2DType < -- pointCoord coord2DType < -- latlonCoordGroup coord2DType < -- utmCoordGroup latlonCoordGroup < -- latitude latlonCoordGroup < -- latitudeDMS latlonCoordGroup < -- longitude latlonCoordGroup < -- longitudeDMS utmCoordGroup < -- utmN utmCoordGroup < -- utmE utmCoordGroup < -- utmZone </pre> <p>The diagram illustrates the structure of the <code>coord2DType</code> element. It is defined as a choice between a single point coordinate (<code>pointCoord</code>) or a coordinate using latitude and longitude (<code>latlonCoordGroup</code>). The <code>latlonCoordGroup</code> is further divided into two disjoint regions: one for specifying coordinates using decimal degrees (<code>latitude</code>, <code>longitude</code>) and another for specifying them using DMS format (<code>latitudeDMS</code>, <code>longitudeDMS</code>). The <code>utmCoordGroup</code> specifies a point using Universal Transverse Mercator coordinates, defining <code>utmN</code> (Northing) and <code>utmE</code> (Easting). A dashed box encloses the <code>utmZone</code> element, which represents the UTM zone of the point.</p>
type	coord2DType
properties	content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone
annotation	documentation Choice of a single point coordinate.

element **oneOrThreeCoords2DGroupSet/polygonCoords**

diagram	<pre> classDiagram class polygon2DType class polygonCoords { <<Choice of a 2D polygon.>> <<A list of vertices defining the polygon.>> } class vertex { <<1..1>> } polygon2DType "3..oo" --> polygonCoords polygonCoords --> dummy dummy --> vertex </pre>
type	polygon2DType
properties	content complex
children	dummy vertex
annotation	documentation Choice of a 2D polygon.

group **pm10TermGroup**

diagram	 <p><code>constantTermPm10</code></p> <p>PM10 emissions Index, dependent on fuel type, Valid values: 0 to 1000, (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m³)</p> <p><code>sulfurTermPm10</code></p> <p>PM10 sulfur EI term, fuel dependent. Valid values: 0 to 1000, (Kg/1000 m³ - %Sulfur, or Kg/Kiloliter - %Sulfur, or Kg/Metric Ton - %Sulfur)</p>
children	constantTermPm10 sulfurTermPm10
used by	element categoryBoilerHeater

element **pm10TermGroup/constantTermPm10**

diagram	constantTermPm10 PM10 emissions Index, dependent on fuel type. Valid values! 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000

annotation	documentation PM10 emissions Index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)
------------	--

element pm10TermGroup/sulfurTermPm10

diagram	
type	doubleInclusive1000
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation PM10 sulfur EI term, fuel dependent. Valid values: 0 to 1000. (Kg/1000 m^3 - %Sulfur, or Kg/Kiloliter - %Sulfur, or Kg/Metric Ton - %Sulfur)

group receptorGroup

diagram	
children	centroid pointReceptor grid polarReceptor polarGrid
used by	element receptorSet
annotation	documentation Description of a receptor group.

group thcElGroup


diagram	
children	THC_EI pollutionControlFactorTHC
used by	element categoryBoilerHeater
annotation	documentation Contains the definition for the THC EI and accompanying pollution control factor.

element thcElGroup/THC_EI


diagram	
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation

	minInclusive 0 maxInclusive 1000
annotation	documentation Total hydrocarbon emissions Index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **thcElGroup/pollutionControlFactorTHC**

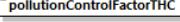diagram	 <p>pollutionControlFactorTHC Percent of total hydrocarbons removed by pollution control measures. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of total hydrocarbons removed by pollution control measures. Valid values: 0 to 100. (%)

group **tnmocElGroup**

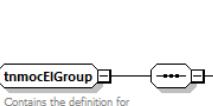diagram	 <p>TNMOC_EI TNMOC emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p> <p>pollutionControlFactorTNMOC Percent of total non-methane organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)</p>
children	TNMOC_EI pollutionControlFactorTNMOC
used by	element categoryBoilerHeater
annotation	documentation Contains the definition for the TNMOC EI and accompanying pollution control factor.

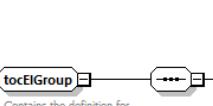
element **tnmocElGroup/TNMOC_EI**

diagram	 <p>TNMOC_EI TNMOC emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p>
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation TNMOC emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **tnmocElGroup/pollutionControlFactorTNMOC**

diagram	 <p>pollutionControlFactorTNMOC Percent of total non-methane organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)</p>
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of total non-methane organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)

group **tocElGroup**

diagram	 <p>TOC_EI Total organic compound emissions Index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p> <p>pollutionControlFactorTOC Percent of total organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)</p>
children	TOC_EI pollutionControlFactorTOC
used by	element categoryBoilerHeater

annotation	documentation Contains the definition for the TOC EI and accompanying pollution control factor.
------------	--

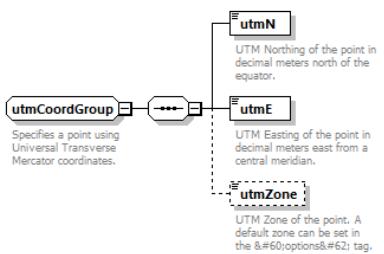
element **tocElGroup/TOC_EI**

diagram	
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation Total organic compound emissions Index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **tocElGroup/pollutionControlFactorTOC**

diagram	
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of total organic compounds removed by pollution control measures. Valid values: 0 to 100.(%)

group **utmCoordGroup**

diagram	
children	utmN utmE utmZone
used by	complexType coord2DType group coord2DGroup
annotation	documentation Specifies a point using Universal Transverse Mercator coordinates.

element **utmCoordGroup/utmN**

diagram	
type	xs:double
properties	content simple
annotation	documentation UTM Northing of the point in decimal meters north of the equator.

element **utmCoordGroup/utmE**

diagram	
type	xs:double
properties	content simple
annotation	documentation UTM Easting of the point in decimal meters east from a central meridian.

element **utmCoordGroup/utmZone**

diagram	
annotation	documentation UTM Zone of the point. A default zone can be set in the <options> tag.

	type xs:int
properties	minOcc 0 maxOcc 1 content simple default -1
annotation	documentation UTM Zone of the point. A default zone can be set in the <options> tag.

group **vocElGroup**

diagram	<p>The diagram shows a 'vocElGroup' element connected to two other elements: 'VOC_EI' and 'pollutionControlFactorVOC'. A callout box for 'VOC_EI' states: 'Contains the definition for the VOC EI and accompanying pollution control factor.' Another callout box for 'pollutionControlFactorVOC' states: 'Percent of volatile organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)'</p>
children	VOC_EI pollutionControlFactorVOC
used by	element categoryBoilerHeater
annotation	documentation Contains the definition for the VOC EI and accompanying pollution control factor.

element **vocElGroup/VOC_EI**

diagram	<p>The diagram shows the 'VOC_EI' element definition. A callout box states: 'VOC emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)'</p>
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation VOC emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

element **vocElGroup/pollutionControlFactorVOC**

diagram	<p>The diagram shows the 'pollutionControlFactorVOC' element definition. A callout box states: 'Percent of volatile organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)'</p>
type	doubleInclusive100
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Percent of volatile organic compounds removed by pollution control measures. Valid values: 0 to 100. (%)

complexType **aircraft**

diagram	<pre> classDiagram class aircraft { <<Main block for creating new user defined AEDT aircraft.>> } class description { <<The description for this user defined aircraft.>> } class airframeModel { <<The airframe model used for this user defined aircraft.>> } class engineCode { <<The engine code used for this user defined aircraft.>> } class engineModCode { <<The engine modification code used for this user defined aircraft.>> } class anpAirplaneld { <<The ANP airplane linked to this user defined aircraft.>> } class badaAirplaneld { <<The BADA airplane linked to this user defined aircraft.>> } class anpHelicopterId { <<The ANP helicopter linked to this user defined helicopter.>> } class bada4AirplaneModel { <<Airplane's BADA 4 model.>> } class bada4Engine { <<Airplane's BADA 4 engine.>> } class bada4Suffix { <<User-defined BADA 4 model suffix.>> } class bada4FlapsMapSourceAnpid { <<Source ANP airplane ID for mapping ANP flaps to BADA 4.>> } aircraft <--> description aircraft <--> airframeModel aircraft <--> engineCode aircraft <--> engineModCode aircraft <--> anpAirplaneld aircraft <--> badaAirplaneld aircraft <--> anpHelicopterId aircraft <--> bada4AirplaneModel aircraft <--> bada4Engine aircraft <--> bada4Suffix aircraft <--> bada4FlapsMapSourceAnpid </pre>
children	description airframeModel engineCode engineModCode anpAirplaneld badaAirplaneld anpHelicopterId bada4AirplaneModel bada4Engine bada4Suffix bada4FlapsMapSourceAnpid
used by	element fleet/aircraft
annotation	documentation Main block for creating new user defined AEDT aircraft.

element aircraft/description

diagram	<p>description</p> <p>The description for this user defined aircraft.</p>
type	string255
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The description for this user defined aircraft.

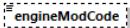
element aircraft/airframeModel

diagram	<p>airframeModel</p> <p>The airframe model used for this user defined aircraft.</p>
type	airframeModel
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The airframe model used for this user defined aircraft.

element aircraft/engineCode

diagram	<p>engineCode</p> <p>The engine code used for this user defined aircraft.</p>
type	engineCode
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The engine code used for this user defined aircraft.

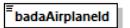
element aircraft/engineModCode

diagram	 engineModCode The engine modification code used for this user defined aircraft.
type	engineModCode
properties	minOcc 0 maxOcc 1 content simple default NONE
facets	Kind Value Annotation minLength 0 maxLength 50
annotation	documentation The engine modification code used for this user defined aircraft.

element aircraft/anpAirplaneId

diagram	 anpAirplaneId The ANP airplane linked to this user defined aircraft.
type	anpAirplaneId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The ANP airplane linked to this user defined aircraft.

element aircraft/badaAirplaneId

diagram	 badaAirplaneId The BADA airplane linked to this user defined aircraft.
type	badaAirplaneId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The BADA airplane linked to this user defined aircraft.

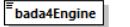
element aircraft/anpHelicopterId

diagram	 anpHelicopterId The ANP helicopter linked to this user defined helicopter.
type	anpHelicopterId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The ANP helicopter linked to this user defined helicopter.

element aircraft/bada4AirplaneModel

diagram	 bada4AirplaneModel Airplane's BADA 4 model.
type	bada4AirplaneModel
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airplane's BADA 4 model.

element aircraft/bada4Engine


diagram	 bada4Engine Airplane's BADA 4 engine.
type	bada4Engine
properties	content simple
facets	Kind Value Annotation minLength 0

	maxLength 255
annotation	documentation Airplane's BADA 4 engine.

element **aircraft/bada4Suffix**

diagram	 bada4Suffix User-defined BADA 4 model suffix.
type	bada4Suffix
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation User-defined BADA 4 model suffix.

element **aircraft/bada4FlapsMapSourceAnpId**

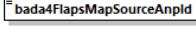diagram	 bada4FlapsMapSourceAnpId Source ANP airplane ID for mapping ANP flaps to BADA 4.
type	anpAirplaneId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Source ANP airplane ID for mapping ANP flaps to BADA 4.

complexType **aircraftEngine**

diagram	<pre> graph LR AE[aircraftEngine] --- code1[code] code1 --- model1[model] code1 --- engineType1[engineType] code1 --- notes1[notes] code1 --- emissionsEngineModel1[emissionsEngineModel] code1 --- performanceEngineModel1[performanceEngineModel] code1 --- manufacturer1[manufacturer] code1 --- combustor1[combustor] code1 --- superseded1[superseded] superseded1 --- code2[code] AE --- source1[source] AE --- bypassRatio1[bypassRatio] AE --- pressureRatio1[pressureRatio] AE --- tfmtFlag1[tfmtFlag] AE --- defaultSOx1[defaultSOx] AE --- taxiIdleEmissionFactors1[taxiIdleEmissionFactors] AE --- takeOffEmissionFactors1[takeOffEmissionFactors] AE --- climbEmissionFactors1[climbEmissionFactors] AE --- approachEmissionFactors1[approachEmissionFactors] </pre>
children	code model engineType notes emissionsEngineModel performanceEngineModel manufacturer combustor superseded ratedEngineOut source bypassRatio pressureRatio tfmtFlag defaultSOx taxiIdleEmissionFactors takeOffEmissionFactors climbEmissionFactors approachEmissionFactors
used by	element fleet/engine
annotation	documentation User defined engine information containing custom parameters that reflect an aircraft engine. This engine definition can that be used within a user defined aircraft.

element aircraftEngine/code

diagram	
type	engineCode
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Unique ICAO UID.

element aircraftEngine/model

diagram	
---------	--

type	engineModel
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Engine model.

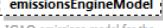
element **aircraftEngine/engineType**

diagram	 engineType Engine type. Valid values: J (jet), T (turboprop), P (piston).
type	engineType
properties	content simple
facets	Kind Value Annotation pattern Jet J Turbo Turboprop T Prop Piston P
annotation	documentation Engine type. Valid values: J (jet), T (turboprop), P (piston).

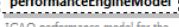
element **aircraftEngine/notes**

diagram	 notes Free-text notes for the engine.
type	string1024
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1024
annotation	documentation Free-text notes for the engine.

element **aircraftEngine/emissionsEngineModel**

diagram	 emissionsEngineModel ICAO emissions model for the engine.
type	string25
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 25
annotation	documentation ICAO emissions model for the engine.

element **aircraftEngine/performanceEngineModel**

diagram	 performanceEngineModel ICAO performance model for the engine.
type	string25
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 25
annotation	documentation ICAO performance model for the engine.

element **aircraftEngine/manufacturer**

diagram	 manufacturer Engine manufacturer.
type	string100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 100

annotation	documentation Engine manufacturer.
------------	---------------------------------------

element **aircraftEngine/combustor**

diagram	 combustor Combustor used on engine.
type	string50
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 50
annotation	documentation Combustor used on engine.

element **aircraftEngine/superseded**

diagram	 superseded ICAO UID of engine that supersedes the given engine.
type	string10
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 10
annotation	documentation ICAO UID of engine that supersedes the given engine.

element **aircraftEngine/ratedEngineOut**

diagram	 ratedEngineOut Rated engine output (in kN). Valid values: Nonnegative.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Rated engine output (in kN). Valid values: Nonnegative.

element **aircraftEngine/source**

diagram	 source Source of engine data.
type	string100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation Source of engine data.

element **aircraftEngine/bypassRatio**

diagram	 bypassRatio Engine's bypass ratio. Valid values: Nonnegative.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Engine's bypass ratio. Valid values: Nonnegative.

element **aircraftEngine/pressureRatio**

diagram	 pressureRatio Engine's pressure ratio. Valid values: Nonnegative.
type	xs:double
properties	minOcc 0 maxOcc 1

	content simple
annotation	documentation Engine's pressure ratio. Valid values: Nonnegative.

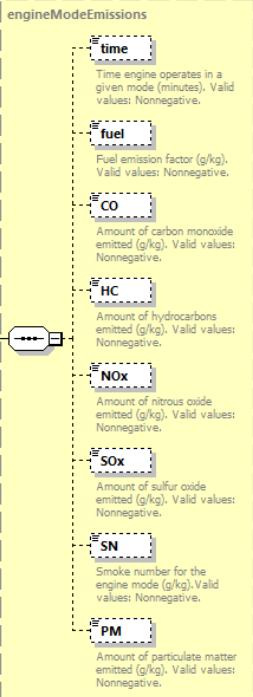
element **aircraftEngine/tfmtFlag**

diagram	 <p>Turbo-fan or Mixed turn-fan flag. Valid values: TF (turbofan) or MTF (mixed turbofan).</p>
type	string50
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 50
annotation	documentation Turbo-fan or Mixed turn-fan flag. Valid values: TF (turbofan) or MTF (mixed turbofan).

element **aircraftEngine/defaultSOx**

diagram	 <p>Sulfur oxides emitted (grams per kilogram of fuel). Valid values: Nonnegative.</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Sulfur oxides emitted (grams per kilogram of fuel). Valid values: Nonnegative.

element **aircraftEngine/taxiIdleEmissionFactors**

diagram	 <p>taxidleEmissionFactors Emission factor when aircraft is idling.</p> <p>engineModeEmissions</p> <ul style="list-style-type: none"> time Time engine operates in a given mode (minutes). Valid values: Nonnegative. fuel Fuel emission factor (g/kg). Valid values: Nonnegative. CO Amount of carbon monoxide emitted (g/kg). Valid values: Nonnegative. HC Amount of hydrocarbons emitted (g/kg). Valid values: Nonnegative. NOx Amount of nitrous oxide emitted (g/kg). Valid values: Nonnegative. SOx Amount of sulfur oxide emitted (g/kg). Valid values: Nonnegative. SN Smoke number for the engine mode (g/kg). Valid values: Nonnegative. PM Amount of particulate matter emitted (g/kg). Valid values: Nonnegative.
type	engineModeEmissions
properties	content complex
children	time fuel CO HC NOx SOx SN PM
annotation	documentation Emission factor when aircraft is idling.

element **aircraftEngine/takeOffEmissionFactors**

diagram	<p>engineModeEmissions</p> <ul style="list-style-type: none"> time: Time engine operates in a given mode (minutes). Valid values: Nonnegative. fuel: Fuel emission factor (g/kg). Valid values: Nonnegative. CO: Amount of carbon monoxide emitted (g/kg). Valid values: Nonnegative. HC: Amount of hydrocarbons emitted (g/kg). Valid values: Nonnegative. NOx: Amount of nitrous oxide emitted (g/kg). Valid values: Nonnegative. SOx: Amount of sulfur oxide emitted (g/kg). Valid values: Nonnegative. SN: Smoke number for the engine mode (g/kg). Valid values: Nonnegative. PM: Amount of particulate matter emitted (g/kg). Valid values: Nonnegative. <p>takeOffEmissionFactors</p> <p>Emission factor when aircraft is taking off.</p>
type	engineModeEmissions
properties	content complex
children	time fuel CO HC NOx SOx SN PM
annotation	documentation Emission factor when aircraft is taking off.

element aircraftEngine/climbEmissionFactors

diagram	<p>engineModeEmissions</p> <ul style="list-style-type: none"> time: Time engine operates in a given mode (minutes). Valid values: Nonnegative. fuel: Fuel emission factor (g/kg). Valid values: Nonnegative. CO: Amount of carbon monoxide emitted (g/kg). Valid values: Nonnegative. HC: Amount of hydrocarbons emitted (g/kg). Valid values: Nonnegative. NOx: Amount of nitrous oxide emitted (g/kg). Valid values: Nonnegative. SOx: Amount of sulfur oxide emitted (g/kg). Valid values: Nonnegative. SN: Smoke number for the engine mode (g/kg). Valid values: Nonnegative. PM: Amount of particulate matter emitted (g/kg). Valid values: Nonnegative. <p>climbEmissionFactors</p> <p>Emission factor when aircraft is climbing.</p>
type	engineModeEmissions
properties	content complex
children	time fuel CO HC NOx SOx SN PM
annotation	documentation Emission factor when aircraft is climbing.

element aircraftEngine/approachEmissionFactors

diagram	<pre> graph LR approachEmissionFactors[approachEmissionFactors] --> time[time] approachEmissionFactors --> fuel[fuel] approachEmissionFactors --> CO[CO] approachEmissionFactors --> HC[HC] approachEmissionFactors --> NOx[NOx] approachEmissionFactors --> SOx[SOx] approachEmissionFactors --> SN[SN] approachEmissionFactors --> PM[PM] </pre> <p>approachEmissionFactors Emission factor when aircraft is on approach.</p>
type	engineModeEmissions
properties	content complex
children	time fuel CO HC NOx SOx SN PM
annotation	documentation Emission factor when aircraft is on approach.

complexType aircraftEngineMod	<p>diagram</p> <pre> graph LR aircraftEngineMod[aircraftEngineMod] --> code[code] aircraftEngineMod --> description[description] </pre> <p>aircraftEngineMod User defined engine modification information containing custom parameters that reflect an aircraft engine modification. This engine modification definition can that be used within a user defined aircraft.</p>
children	code description
used by	element fleet/engineMod
annotation	documentation User defined engine modification information containing custom parameters that reflect an aircraft engine modification. This engine modification definition can that be used within a user defined aircraft.

element aircraftEngineMod/code	<p>diagram</p> <pre> graph LR code[code] </pre> <p>code Unique ICAO UID.</p>
type	engineModCode
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 50
annotation	documentation Unique ICAO UID.

element aircraftEngineMod/description	<p>diagram</p> <pre> graph LR description[description] </pre> <p>description Description of engine modifications.</p>
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Description of engine modifications.

complexType **aircraftType**

diagram	<pre> classDiagram aircraftType "Characterizes an aircraft." anpAircraftId airframeModel "Air frame model." engineCode "Engine code. Valid values: E (Electric), J (Jet), P (Piston), T (Turboprop)." engineModCode "Engine modification code. (AEDT database reference table FLEET.FLT_ENGINEMOD S column ENGINE_MOD_CODE.)" apuName "Name of auxiliary power unit used by this type of aircraft." groundSupportEquipmentLTOOp "Supports GSE operational data stored in the GSE_LTO_OP table. This element supports the definition of user defined ground support equipment in operational usage." assignDefaultGse "Whether the application should assign default GSE for this operation or not" aircraftType --> anpAircraftId : anpAircraftId --> airframeModel : anpAircraftId --> engineCode : anpAircraftId --> engineModCode : anpAircraftId --> apuName : anpAircraftId --> groundSupportEquipmentLTOOp : anpAircraftId --> assignDefaultGse : </pre>
children	anpAircraftId airframeModel engineCode engineModCode apuName groundSupportEquipmentLTOOp assignDefaultGse
used by	elements operation/aircraftType runup/aircraftType
annotation	documentation Characterizes an aircraft.

element aircraftType/anpAircraftId

diagram	<pre> classDiagram aircraftType "Characterizes an aircraft." anpAircraftId aircraftType --> anpAircraftId : </pre>
type	anpAircraftId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255

element aircraftType/airframeModel

diagram	<pre> classDiagram aircraftType "Characterizes an aircraft." airframeModel "Air frame model." aircraftType --> airframeModel : </pre>
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Air frame model.

element aircraftType/engineCode

diagram	<pre> classDiagram aircraftType "Characterizes an aircraft." engineCode "Engine code. Valid values: E (Electric), J (Jet), P (Piston), T (Turboprop)." aircraftType --> engineCode : </pre>
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Engine code. Valid values: E (Electric), J (Jet), P (Piston), T (Turboprop).

element aircraftType/engineModCode


diagram	<pre> classDiagram aircraftType "Characterizes an aircraft." engineModCode "Engine modification code. (AEDT database reference table FLEET.FLT_ENGINEMOD S column ENGINE_MOD_CODE.)" aircraftType --> engineModCode : </pre>
type	engineModCode
properties	minOcc 0 maxOcc 1 content simple default NONE
facets	Kind Value Annotation

	minLength 0 maxLength 50
annotation	documentation Engine modification code. (AEDT database reference table FLEET.FLT_ENGINE_MODS column ENGINE_MOD_CODE.)





element aircraftType/apuName

diagram	 Name of auxiliary power unit used by this type of aircraft.
type	xs:string
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Name of auxiliary power unit used by this type of aircraft.

element aircraftType/assignDefaultGse

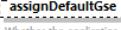diagram	 Whether the application should assign default GSE for this operation or not
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false
annotation	documentation Whether the application should assign default GSE for this operation or not

complexType airframe

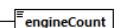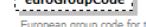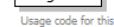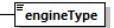diagram	 <p>This element supports the definition of custom airframes.</p>  Unique description of airframe.  Number of engines on airframe.  Position of engine on airframe. Valid values: F (Fuselage/Tail), W (Wing).  Type of aviation. Valid values: C (Civil), G (General Aviation), M (Military).  Maximum seats the airframe can hold including pilots and passengers.  Number of miles airframe can fly fully fueled. Valid values: Nonnegative.  Year airframe was introduced. Valid values: Nonnegative.  European group code for this airframe. Valid values: H1 (Helicopter Light), H2 (Helicopter Heavy), JB (Jet Business), JL (Jet Large), JM (Jet Medium), JR (Jet Regional), JS (Jet Small), PP (Propeller), SS (Supersonic), TP (Turboprop).  Usage code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light).  Size code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light).  Type of engine on this airframe. Valid values: E (Electric), J (Jet), P (Piston), T (Turboprop).  Identifier of an auxiliary power unit.
children	model engineCount engineLocation designationCode maxSeats maxRange introYear euroGroupCode usageCode sizeCode engineType auxiliaryPowerUnitId

used by	element fleet/airframe
annotation	documentation This element supports the definition of custom airframes.

element **airframe/model**

diagram	 model Unique description of airframe.
type	airframeModel
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Unique description of airframe.

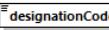
element **airframe/engineCount**

diagram	 engineCount Number of engines on airframe.
type	xs:int
properties	content simple
annotation	documentation Number of engines on airframe.

element **airframe/engineLocation**

diagram	 engineLocation Position of engine on airframe. Valid values: F (Fuselage/Tail), W (Wing).
type	string
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Position of engine on airframe. Valid values: F (Fuselage/Tail), W (Wing).

element **airframe/designationCode**

diagram	 designationCode Type of aviation. Valid values: C (Civil), G (General Aviation), M (Military).
type	string
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Type of aviation. Valid values: C (Civil), G (General Aviation), M (Military).

element **airframe/maxSeats**

diagram	 maxSeats Maximum seats the airframe can hold including pilots and passengers.
type	int1to9999
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minInclusive 1 maxInclusive 9999
annotation	documentation Maximum seats the airframe can hold including pilots and passengers.

element **airframe/maxRange**

diagram	 maxRange Number of miles airframe can fly fully fueled. Valid values: Nonnegative.
type	xs:int
properties	minOcc 0

	maxOcc 1 content simple
annotation	documentation Number of miles airframe can fly fully fueled. Valid values: Nonnegative.

element airframe/introYear

diagram	 introYear Year airframe was introduced. Valid values: Nonnegative.
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Year airframe was introduced. Valid values: Nonnegative.

element airframe/euroGroupCode

diagram	 euroGroupCode European group code for this airframe. Valid values: H1 (Helicopter Light), H2 (Helicopter Heavy), JB (Jet Business), JL (Jet Large), JM (Jet Medium), JR (Jet Regional), JS (Jet Small), PP (Propeller), SS (Supersonic), TP (Turboprop).
type	string2
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 2
annotation	documentation European group code for this airframe. Valid values: H1 (Helicopter Light), H2 (Helicopter Heavy), JB (Jet Business), JL (Jet Large), JM (Jet Medium), JR (Jet Regional), JS (Jet Small), PP (Propeller), SS (Supersonic), TP (Turboprop).

element airframe/usageCode

diagram	 usageCode Usage code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light).
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Usage code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light).

element airframe/sizeCode

diagram	 sizeCode Size code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light).
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Size code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light).

element airframe/engineType

diagram	 engineType Type of engine on this airframe. Valid values: E (Electric), J (Jet), P (Piston), T (Turboprop).
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1


annotation	documentation Type of engine on this airframe. Valid values: E (Electric), J (Jet), P (Piston), T (Turboprop).
------------	---

element **airframe/auxiliaryPowerUnitId**

diagram	 auxiliaryPowerUnitId Identifier of an auxiliary power unit.
type	apuName
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 30
annotation	documentation Identifier of an auxiliary power unit.


complexType **airport**

diagram

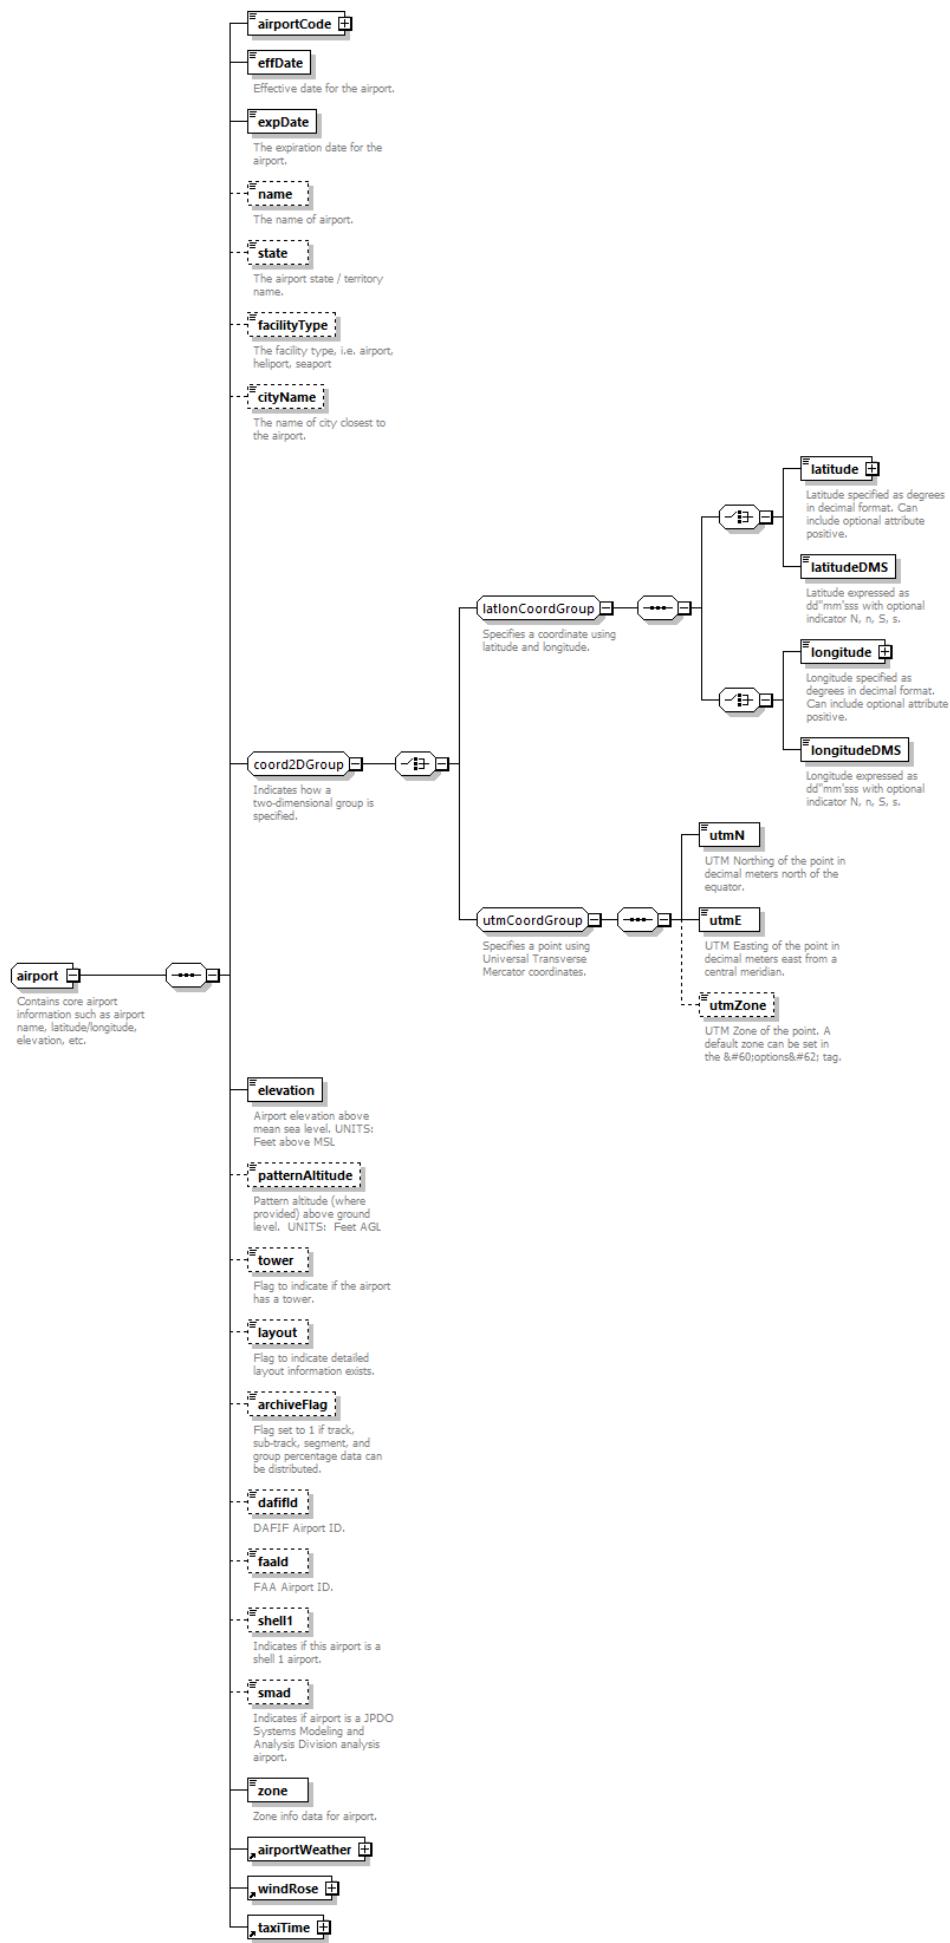

children	airportCode effDate expDate name state facilityType cityName latitude longitude longitudeDMS utmN utmE utmZone elevation patternAltitude tower layout archiveFlag dafidId faid shell1 smad zone airportWeather windRose taxiTime
used by	element userDefinedAirportSet / userDefinedAirport
annotation	documentation Contains core airport information such as airport name, latitude/longitude, elevation, etc.

element **airport/airportCode**

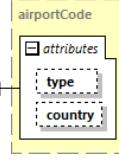diagram	
type	airportCode
properties	content complex
facets	Kind Value Annotation minLength 0 maxLength 4
attributes	Name Type Use Default Fixed Annotation type airportCodeType optional ANY country string3 optional ANY

element **airport/effDate**

diagram	
	Effective date for the airport.
type	xs:date
properties	content simple

element **airport/expDate**

diagram	
	The expiration date for the airport.
type	xs:date
properties	content simple

element **airport/name**

diagram	
	The name of airport.
type	string100
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation The name of airport.

element **airport/state**

diagram	
	The airport state / territory name.
type	string50
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 50
annotation	documentation The airport state / territory name.

element **airport/facilityType**

diagram	
	The facility type, i.e. airport, heliport, seaport.

	<p>type string25</p>
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 25
annotation	<p>documentation</p> The facility type, i.e. airport, heliport, seaport

element **airport/cityName**

cityName	<p>The name of city closest to the airport.</p>
type	string50
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 50
annotation	<p>documentation</p> The name of city closest to the airport.

element **airport/elevation**

elevation	<p>Airport elevation above mean sea level. UNITS: Feet above MSL</p>
type	xs:double
properties	content simple
annotation	<p>documentation</p> Airport elevation above mean sea level. UNITS: Feet above MSL

element **airport/patternAltitude**

patternAltitude	<p>Pattern altitude (where provided) above ground level. UNITS: Feet AGL</p>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	<p>documentation</p> Pattern altitude (where provided) above ground level. UNITS: Feet AGL

element **airport/tower**

tower	<p>Flag to indicate if the airport has a tower.</p>
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple
annotation	<p>documentation</p> Flag to indicate if the airport has a tower.

element **airport/layout**

layout	<p>Flag to indicate detailed layout information exists.</p>
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false
annotation	<p>documentation</p> Flag to indicate detailed layout information exists.

element **airport/archiveFlag**

archiveFlag	<p>Flag set to 1 if track, sub-track, segment, and group percentage data can be distributed.</p>
--------------------	--

	type	<code>xs:boolean</code>
properties	minOcc 0 maxOcc 1 content simple default false	
annotation	documentation Flag set to 1 if track, sub-track, segment, and group percentage data can be distributed.	

element airport/dafifid

	diagram	 <code>dafifid</code> DAIFIF Airport ID.
	type	<code>string7</code>
properties	minOcc 0 maxOcc 1 content simple	
facets	Kind Value Annotation minLength 0 maxLength 7	
annotation	documentation DAIFIF Airport ID.	

element airport/faaid

	diagram	 <code>faaid</code> FAA Airport ID.
	type	<code>string15</code>
properties	minOcc 0 maxOcc 1 content simple	
facets	Kind Value Annotation minLength 0 maxLength 15	
annotation	documentation FAA Airport ID.	

element airport/shell1

	diagram	 <code>shell1</code> Indicates if this airport is a shell 1 airport.
	type	<code>xs:boolean</code>
properties	minOcc 0 maxOcc 1 content simple default false	
annotation	documentation Indicates if this airport is a shell 1 airport.	

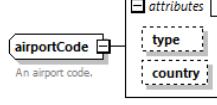
element airport/smad

	diagram	 <code>smad</code> Indicates if airport is a JPDO Systems Modeling and Analysis Division analysis airport.
	type	<code>xs:boolean</code>
properties	minOcc 0 maxOcc 1 content simple default false	
annotation	documentation Indicates if airport is a JPDO Systems Modeling and Analysis Division analysis airport.	

element airport/zone

	diagram	 <code>zone</code> Zone info data for airport.
	type	<code>string100</code>
properties	content simple	
facets	Kind Value Annotation minLength 0 maxLength 100	
annotation	documentation Zone info data for airport.	

complexType **airportCode**

diagram	
type	extension of string4
properties	base string4
used by	elements track / airport runup / airport airport / airportCode airportLayoutType / airportCode operation / arrivalAirport operation / departureAirport
facets	Kind Value Annotation minLength 0 maxLength 4
attributes	Name Type Use Default Fixed Annotation type airportCodeType optional ANY country string3 optional ANY
annotation	documentation An airport code.

attribute **airportCode/@type**


type	airportCodeType
properties	use optional default ANY
facets	Kind Value Annotation enumeration ICAO enumeration IATA enumeration FAA enumeration OTHER enumeration ANY

attribute **airportCode/@country**

type	string3
properties	use optional default ANY
facets	Kind Value Annotation minLength 0 maxLength 3

complexType **airportLayoutType**

diagram

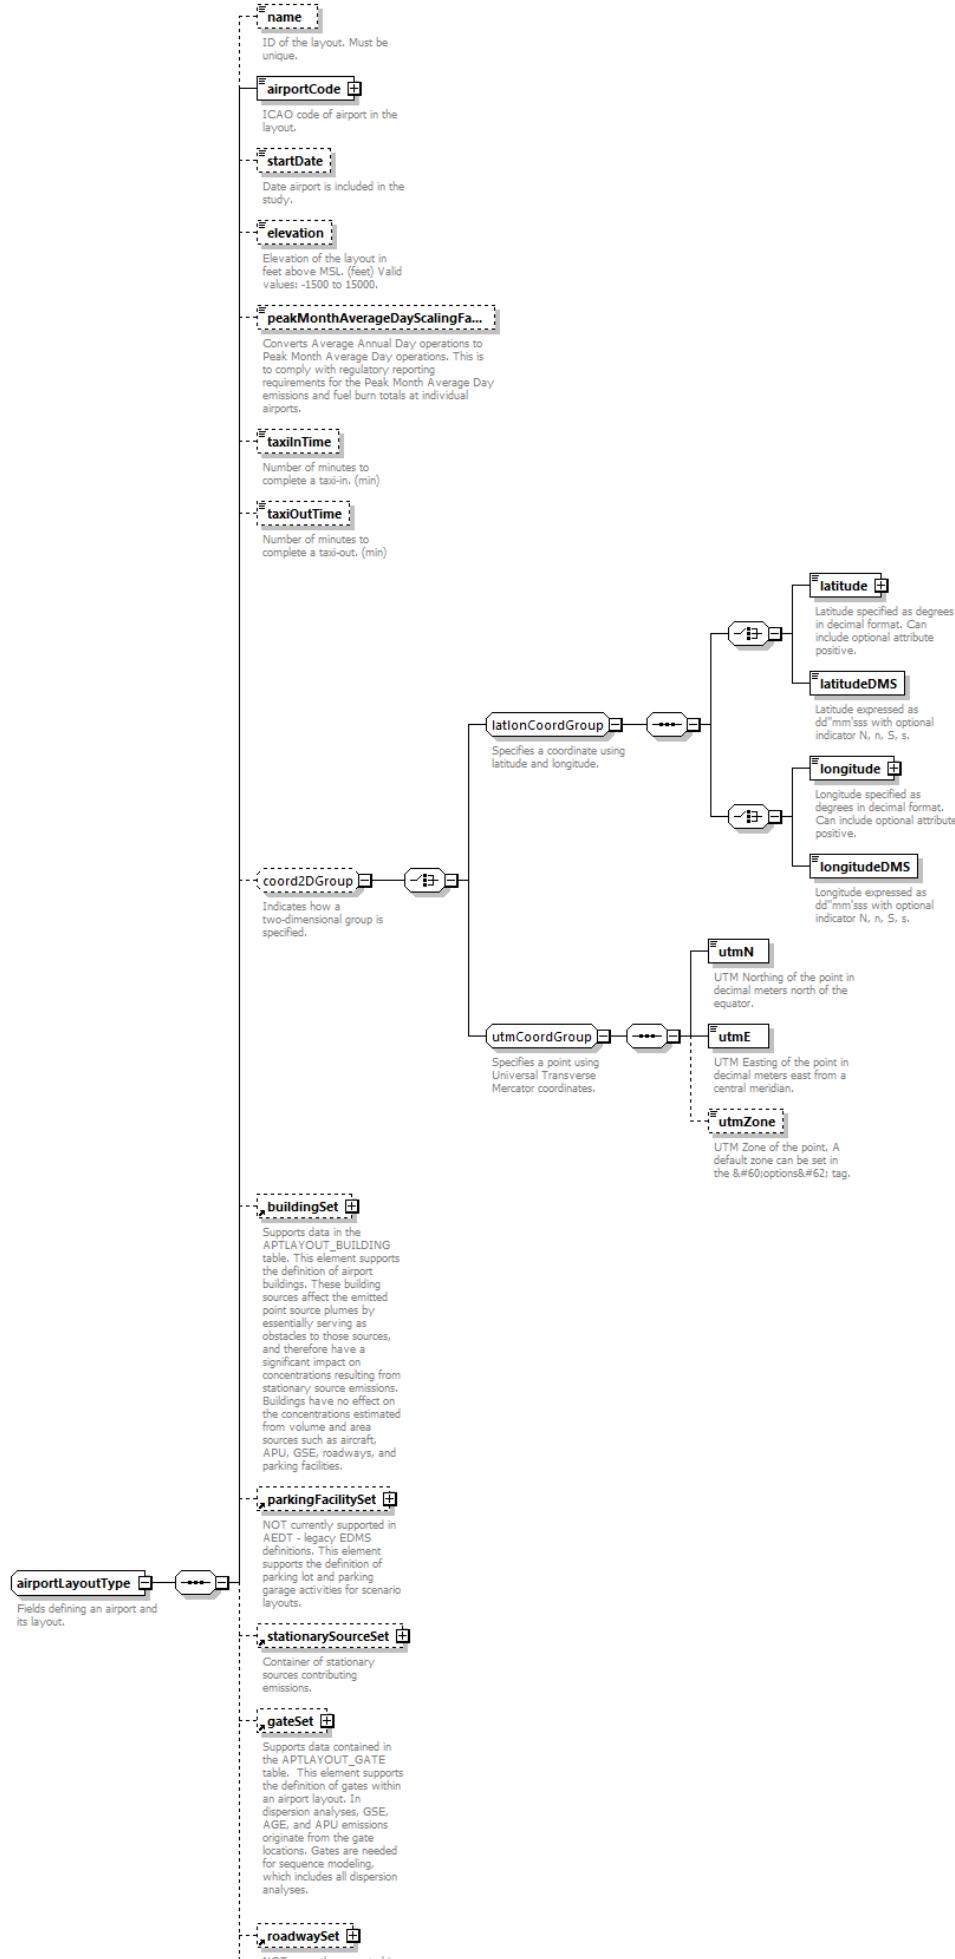


	<p>NO.1 currently supported in AEDT - legacy EDMS definitions. This element supports the definition of vehicle activity on roadways for scenario layouts.</p>
	<p>taxiwaySet </p> <p>Supports data in the APTAYOUT_TAXIWAY table. Taxiways determine the ground segments where the aircraft operates.</p>
	<p>runwaySet </p> <p>Container for runways.</p>
	<p>taxipathSet </p> <p>Supports data contained int the APTAYOUT_TAXIPATH table. A taxipath is a sequence of taxiways, possibly just one, that connects a gate to a runway or vice versa. Taxipaths are used to do the modeling of aircraft ground movement. They are needed for sequence modeling, which includes all dispersion analyses. Gates, taxiways and runways must be defined before taxipaths can be specified.</p>
	<p>trackSet </p> <p>A set of flight tracks.</p>
	<p>airportConfigSet </p> <p>Contains one or more airportConfig elements.</p>
	<p>airportCapacity </p> <p>Supports content related to the APTCONFIG table. This element supports the definition of airport capacities based on various points within an airport.</p>
	<p>quarterHourlyProfileSet </p> <p>Supports the definition and use of QUARTER_HOURLY_PROFILE S for the quarter hourly variation of operations.</p>
	<p>dailyProfileSet </p> <p>Supports the definition and use of data in the APTPROFILE_DAILY table for the daily variation of operations.</p>
	<p>monthlyProfileSet </p> <p>Supports the definition and use of data in the APTPROFILE_MONTHLY table for the monthly variation of operations.</p>
	<p>activityProfileSet </p> <p>Supports the definition and use of QUARTER_HOURLY_PROF ILES, DAILY_PROFILES, and MONTHLY_PROFILES variation of operations.</p>
children	<p>name airportCode startDate elevation peakMonthAverageDayScalingFactor taxiInTime latitude longitudeDMS longitude longitudeDMS utmN utmE utmZone buildingSet parkingFacilitySet stationarySourceSet gateSet roadwaySet taxiwaySet runwaySet taxipathSet trackSet airportConfigSet airportCapacity quarterHourlyProfileSet dailyProfileSet monthlyProfileSet activityProfileSet</p>
used by	element airportLayoutSet/airportLayout
annotation	<p>documentation</p> <p>Fields defining an airport and its layout.</p>

element **airportLayoutType/name**

diagram	<p>ID of the layout. Must be unique.</p>
type	string255
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	<p>documentation</p> <p>ID of the layout. Must be unique.</p>

element **airportLayoutType/airportCode**

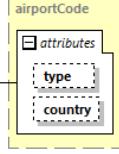diagram	
type	airportCode
properties	content complex
facets	Kind Value Annotation minLength 0 maxLength 4
attributes	Name Type Use Default Fixed Annotation <u>type</u> airportCodeType optional ANY <u>country</u> string3 optional ANY
annotation	documentation ICAO code of airport in the layout.

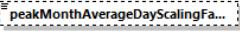
element **airportLayoutType/startDate**

diagram	
	Date airport is included in the study.
type	xs:date
properties	minOcc 0 maxOcc 1 content simple

element **airportLayoutType/elevation**

diagram	
	Elevation of the layout in feet above MSL. (feet) Valid values: -1500 to 15000.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

element **airportLayoutType/peakMonthAverageDayScalingFactor**

diagram	
	Converts Average Annual Day operations to Peak Month Average Day operations. This is to comply with regulatory reporting requirements for the Peak Month Average Day emissions and fuel burn totals at individual airports.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 1.0

element **airportLayoutType/taxiInTime**

diagram	
	Number of minutes to complete a taxi-in. (min)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

element **airportLayoutType/taxiOutTime**

diagram	
	Number of minutes to complete a taxi-out. (min)
type	xs:double

	content simple
annotation	documentation Number of minutes to complete a taxi-out. (min)
complexType anpAirplane	
diagram	<pre> graph LR anpAirplane[anpAirplane] --- anpAirplaneld[anpAirplaneld] anpAirplane --- description[description] anpAirplane --- sizeCode[sizeCode] anpAirplane --- owner[owner] anpAirplane --- engineTypeCode[engineTypeCode] anpAirplane --- numberEngines[numberEngines] anpAirplane --- maxGrossWeightTakeoff[maxGrossWeightTakeoff] anpAirplane --- maxGrossWeightLand[maxGrossWeightLand] anpAirplane --- maxDsStop[maxDsStop] anpAirplane --- depThrustCoeffType[depThrustCoeffType] anpAirplane --- thrustStatic[thrustStatic] anpAirplane --- thrustRestore[thrustRestore] anpAirplane --- noiseld[noiseld] anpAirplane --- noiseCategory[noiseCategory] anpAirplane --- minBurn[minBurn] </pre> <p>Creates a new ANP airplane.</p>
children	anpAirplaneld description sizeCode owner engineTypeCode numberEngines maxGrossWeightTakeoff maxGrossWeightLand maxDsStop depThrustCoeffType thrustStatic thrustRestore noiseld noiseCategory minBurn
used by	element fleet/anpAirplane
annotation	documentation Creates a new ANP airplane.

element anpAirplane/anpAirplaneld

diagram	<pre> graph LR anpAirplaneld[anpAirplaneld] </pre>
	ID of ANP airplane. Must be a new, unique value.
type	anpAirplaneld
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation ID of ANP airplane. Must be a new, unique value.

element anpAirplane/description

diagram	<pre> graph LR description[description] </pre>
type	string255

properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Description of ANP airplane.

element **anpAirplane/sizeCode**

diagram	 sizeCode Size code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light).
type	anpSizeCode
properties	content simple
facets	Kind Value Annotation pattern Heavy H Large L Small S
annotation	documentation Size code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light).

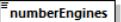
element **anpAirplane/owner**

diagram	 owner The owner category: commercial, general aviation, military.
type	anpOwnerType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern Commercial C Military M General G
annotation	documentation The owner category: commercial, general aviation, military.

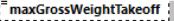
element **anpAirplane/engineTypeCode**

diagram	 engineTypeCode The engine type code: prop, jet, turbo.
type	engineType
properties	content simple
facets	Kind Value Annotation pattern Jet J Turbo Turboprop T Prop Piston P
annotation	documentation The engine type code: prop, jet, turbo.

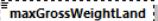
element **anpAirplane/numberEngines**

diagram	 numberEngines Number of engines on this airplane. Valid values: 1 through 8.
type	xs:int
properties	content simple
annotation	documentation Number of engines on this airplane. Valid values: 1 through 8.

element **anpAirplane/maxGrossWeightTakeoff**

diagram	 maxGrossWeightTakeoff Maximum gross weight on takeoff (min = 0, max = 999999, lbs).
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Maximum gross weight on takeoff (min = 0, max = 999999, lbs).

element **anpAirplane/maxGrossWeightLand**

diagram	 maxGrossWeightLand Maximum gross weight on landing (min = 0, max = 999999, lbs).
---------	--

	<p>type xs:int</p> <p>properties minOcc 0 maxOcc 1 content simple</p> <p>annotation documentation Maximum gross weight on landing (min = 0, max = 999999, lbs).</p>
--	--

element **anpAirplane/maxDsStop**

diagram	<p>maxDsStop FAR landing field length at maximum landing weight (min =0, max = 20000, feet).</p>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation FAR landing field length at maximum landing weight (min =0, max = 20000, feet).

element **anpAirplane/depThrustCoeffType**

diagram	<p>depThrustCoeffType Type of thrust coefficients: J=jet, P=prop.</p>
type	anpCoeffType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern Jet Prop P
annotation	documentation Type of thrust coefficients: J=jet, P=prop.

element **anpAirplane/thrustStatic**

diagram	<p>thrustStatic Static rated thrust or 100% thrust (lb, min =0, max = 200000).</p>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Static rated thrust or 100% thrust (lb, min =0, max = 200000).

element **anpAirplane/thrustRestore**

diagram	<p>thrustRestore Flag indicating aircraft has automated thrust restoration system.</p>
type	yesNoType
properties	content simple default N
facets	Kind Value Annotation pattern Yes No N
annotation	documentation Flag indicating aircraft has automated thrust restoration system.

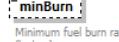
element **anpAirplane/noiseld**

diagram	<p>noiseld ID of a Noise Group.</p>
type	anpNoiseld
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation ID of a Noise Group.

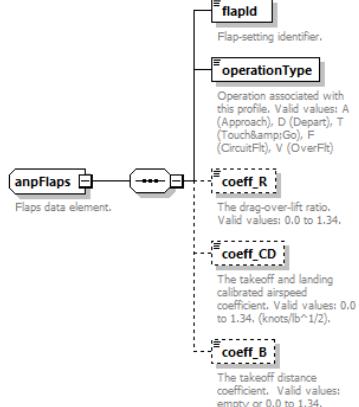
element **anpAirplane/noiseCategory**

diagram	 The noise category stage number.
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The noise category stage number.

element anpAirplane/minBurn

diagram	 Minimum fuel burn rate. (kg/sec)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Minimum fuel burn rate. (kg/sec)

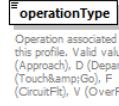
complexType anpFlaps

diagram	 Flaps data element.  Flap-setting identifier.  Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&Go), F (CircuitFlt), V (OverFlt)  The drag-over-lift ratio. Valid values: 0.0 to 1.34.  The takeoff and landing calibration airspeed coefficient. Valid values: 0.0 to 1.34. (knots/lb^-1/2).  The takeoff distance coefficient. Valid values: empty or 0.0 to 1.34. (feet/lb).
children	flapId operationType coeff_R coeff_CD coeff_B
used by	element anpFlapsSet/flaps
annotation	documentation Flaps data element.

element anpFlaps/flapId

diagram	 Flap-setting identifier.
type	anpFlapId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 6
annotation	documentation Flap-setting identifier.

element anpFlaps/operationType

diagram	 Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&Go), F (CircuitFlt), V (OverFlt)
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&Go), F (CircuitFlt), V (OverFlt)

element anpFlaps/coeff_R

diagram	 The drag-over-lift ratio. Valid values: 0.0 to 1.34.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The drag-over-lift ratio. Valid values: 0.0 to 1.34.

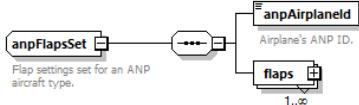
element anpFlaps/coeff_CD

diagram	 The takeoff and landing calibrated airspeed coefficient. Valid values: 0.0 to 1.34. (knots/lb^1/2).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The takeoff and landing calibrated airspeed coefficient. Valid values: 0.0 to 1.34. (knots/lb^1/2).

element anpFlaps/coeff_B

diagram	 The takeoff distance coefficient. Valid values: empty or 0.0 to 1.34. (feet/lb).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The takeoff distance coefficient. Valid values: empty or 0.0 to 1.34. (feet/lb).

complexType anpFlapsSet

diagram	 Flap settings set for an ANP aircraft type.
children	anpAirplaneld flaps
used by	element fleet/anpFlapsSet
annotation	documentation Flap settings set for an ANP aircraft type.

element anpFlapsSet/anpAirplaneld


diagram	 Airplane's ANP ID.
type	anpAirplaneld
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airplane's ANP ID.

element anpFlapsSet/flaps

diagram	<pre> classDiagram class flaps class anpFlaps { flapId operationType coeff_R coeff_CD } flaps "1..n" --> anpFlaps </pre>
type	anpFlaps
properties	minOcc 1 maxOcc unbounded content complex
children	flapId operationType coeff_R coeff_CD coeff_B

complexType **anpHelicopter**

diagram

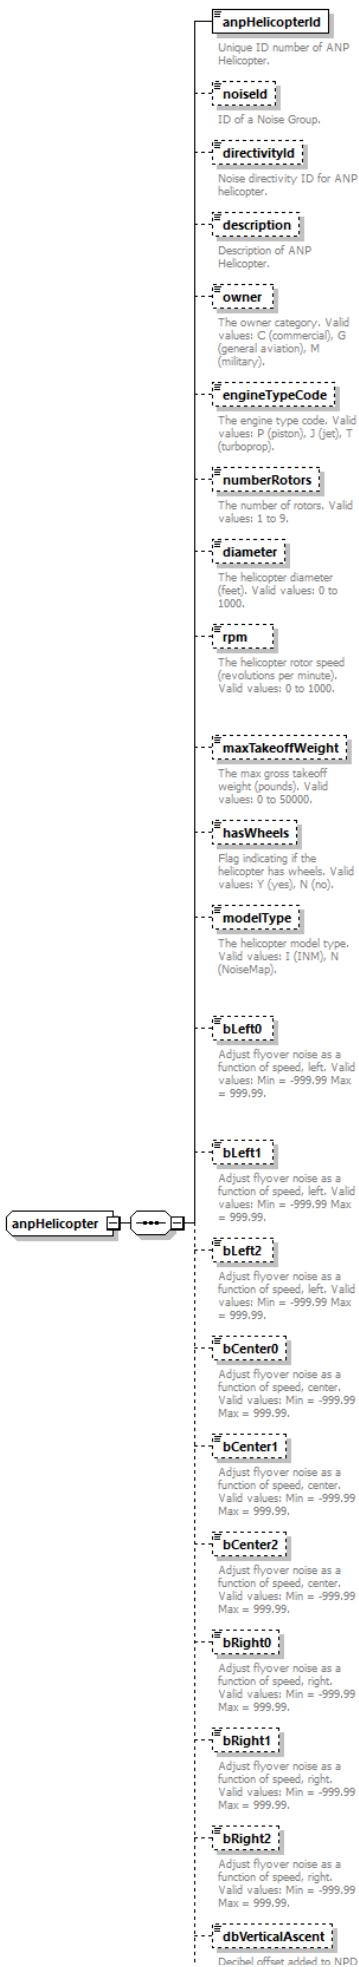

	<p>levels, vertical ascent (dB). Valid values: Min = -50 Max = 50.</p> <p>dbVerticalDescent</p> <p>Decimal offset added to NPD levels, vertical descent (dB). Valid values: Min = -50 Max = 50.</p> <p>dbHorizontalAcceleration</p> <p>Decimal offset added to NPD levels, depart horizontal acceleration (dB). Valid values: Min = -50 Max = 50.</p> <p>dbClimbAcceleration</p> <p>Decimal offset added to NPD levels, depart with climbing acceleration (dB). Valid values: Min = -50 Max = 50.</p> <p>dbHorizontalDeceleration</p> <p>Decimal offset added to NPD levels, approach with horizontal deceleration (dB). Valid values: Min = -50 Max = 50.</p> <p>dbDescendDeceleration</p> <p>Decimal offset added to NPD levels, approach with descending deceleration (dB). Valid values: Min = -50 Max = 50.</p>
children	anpHelicopterId noiseld directivityId description owner engineTypeCode numberRotors diameter rpm maxTakeoffWeight hasWheels modelType bLeft0 bLeft1 bLeft2 bCenter0 bCenter1 bCenter2 bRight0 bRight1 bRight2 dbVerticalAscent dbVerticalDescent dbHorizontalAcceleration dbClimbAcceleration dbHorizontalDeceleration dbDescendDeceleration
used by	element fleet / anpHelicopter

element anpHelicopter/anpHelicopterId

diagram	<p>anpHelicopterId</p> <p>Unique ID number of ANP Helicopter.</p>
type	anpHelo
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Unique ID number of ANP Helicopter.

element anpHelicopter/noiseld

diagram	<p>noiseld</p> <p>ID of a Noise Group.</p>
type	anpHeloNoiseld
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation ID of a Noise Group.

element anpHelicopter/directivityId

diagram	<p>directivityId</p> <p>Noise directivity ID for ANP helicopter.</p>
type	anpHeloDirectivityId
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 12
annotation	documentation Noise directivity ID for ANP helicopter.

element anpHelicopter/description


diagram	<p>description</p> <p>Description of ANP Helicopter.</p>
type	string255
properties	minOcc 0 maxOcc 1 content simple

facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Description of ANP Helicopter.


element **anpHelicopter/owner**

diagram	 owner The owner category. Valid values: C (commercial), G (general aviation), M (military).
type	anpOwnerType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern Commercial Military General G
annotation	documentation The owner category. Valid values: C (commercial), G (general aviation), M (military).

element **anpHelicopter/engineTypeCode**

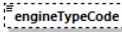diagram	 engineTypeCode The engine type code. Valid values: P (piston), J (jet), T (turboprop).
type	engineType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern Jet J Turbo Turboprop T Prop Piston P
annotation	documentation The engine type code. Valid values: P (piston), J (jet), T (turboprop).

element **anpHelicopter/numberRotors**

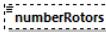diagram	 numberRotors The number of rotors. Valid values: 1 to 9.
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The number of rotors. Valid values: 1 to 9.

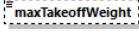
element **anpHelicopter/diameter**

diagram	 diameter The helicopter diameter (feet). Valid values: 0 to 1000.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The helicopter diameter (feet). Valid values: 0 to 1000.

element **anpHelicopter/rpm**

diagram	 rpm The helicopter rotor speed (revolutions per minute). Valid values: 0 to 1000.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The helicopter rotor speed (revolutions per minute). Valid values: 0 to 1000.

element **anpHelicopter/maxTakeoffWeight**

diagram	 maxTakeoffWeight The max gross takeoff weight (pounds). Valid values: 0 to 50000.
---------	---

	type <code>xs:int</code>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The max gross takeoff weight (pounds). Valid values: 0 to 50000.

element `anpHelicopter/hasWheels`

diagram	 hasWheels Flag indicating if the helicopter has wheels. Valid values: Y (yes), N (no).
type	<code>yesNoType</code>
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern Yes Y No N
annotation	documentation Flag indicating if the helicopter has wheels. Valid values: Y (yes), N (no).

element `anpHelicopter/modelType`

diagram	 modelType The helicopter model type. Valid values: I (INM), N (NoiseMap).
type	<code>string1</code>
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation The helicopter model type. Valid values: I (INM), N (NoiseMap).

element `anpHelicopter/bLeft0`

diagram	 bLeft0 Adjust flyover noise as a function of speed, left. Valid values: Min = -999.99 Max = 999.99.
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, left. Valid values: Min = -999.99 Max = 999.99.

element `anpHelicopter/bLeft1`

diagram	 bLeft1 Adjust flyover noise as a function of speed, left. Valid values: Min = -999.99 Max = 999.99.
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, left. Valid values: Min = -999.99 Max = 999.99.

element `anpHelicopter/bLeft2`

diagram	 bLeft2 Adjust flyover noise as a function of speed, left. Valid values: Min = -999.99 Max = 999.99.
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, left. Valid values: Min = -999.99 Max = 999.99.

element anpHelicopter/bCenter0

diagram	 Adjust flyover noise as a function of speed, center. Valid values: Min = -999.99 Max = 999.99.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, center. Valid values: Min = -999.99 Max = 999.99.

element anpHelicopter/bCenter1

diagram	 Adjust flyover noise as a function of speed, center. Valid values: Min = -999.99 Max = 999.99.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, center. Valid values: Min = -999.99 Max = 999.99.

element anpHelicopter/bCenter2

diagram	 Adjust flyover noise as a function of speed, center. Valid values: Min = -999.99 Max = 999.99.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, center. Valid values: Min = -999.99 Max = 999.99.

element anpHelicopter/bRight0

diagram	 Adjust flyover noise as a function of speed, right. Valid values: Min = -999.99 Max = 999.99.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, right. Valid values: Min = -999.99 Max = 999.99.

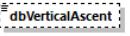
element anpHelicopter/bRight1

diagram	 Adjust flyover noise as a function of speed, right. Valid values: Min = -999.99 Max = 999.99.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, right. Valid values: Min = -999.99 Max = 999.99.

element anpHelicopter/bRight2

diagram	 Adjust flyover noise as a function of speed, right. Valid values: Min = -999.99 Max = 999.99.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Adjust flyover noise as a function of speed, right. Valid values: Min = -999.99 Max = 999.99.

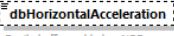
element anpHelicopter/dbVerticalAscent

diagram	 Decibel offset added to NPD levels, vertical ascent (dB). Valid values: Min = -50 Max = 50.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel offset added to NPD levels, vertical ascent (dB). Valid values: Min = -50 Max = 50.

element anpHelicopter/dbVerticalDescent

diagram	 Decibel offset added to NPD levels, vertical descent (dB). Valid values: Min = -50 Max = 50.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel offset added to NPD levels, vertical descent (dB). Valid values: Min = -50 Max = 50.

element anpHelicopter/dbHorizontalAcceleration

diagram	 Decibel offset added to NPD levels, depart horizontal acceleration (dB). Valid values: Min = -50 Max = 50.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel offset added to NPD levels, depart horizontal acceleration (dB). Valid values: Min = -50 Max = 50.

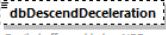
element anpHelicopter/dbClimbAcceleration

diagram	 Decibel offset added to NPD levels, depart with climbing acceleration (dB). Valid values: Min = -50 Max = 50.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel offset added to NPD levels, depart with climbing acceleration (dB). Valid values: Min = -50 Max = 50.

element anpHelicopter/dbHorizontalDeceleration


diagram	 Decibel offset added to NPD levels, approach with horizontal deceleration (dB). Valid values: Min = -50 Max = 50.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel offset added to NPD levels, approach with horizontal deceleration (dB). Valid values: Min = -50 Max = 50.

element anpHelicopter/dbDescendDeceleration

diagram	 Decibel offset added to NPD levels, approach with descending deceleration (dB). Valid values: Min = -50 Max = 50.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel offset added to NPD levels, approach with descending deceleration (dB). Valid values: Min = -50 Max = 50.

complexType **anpHelloDirectivity**

diagram

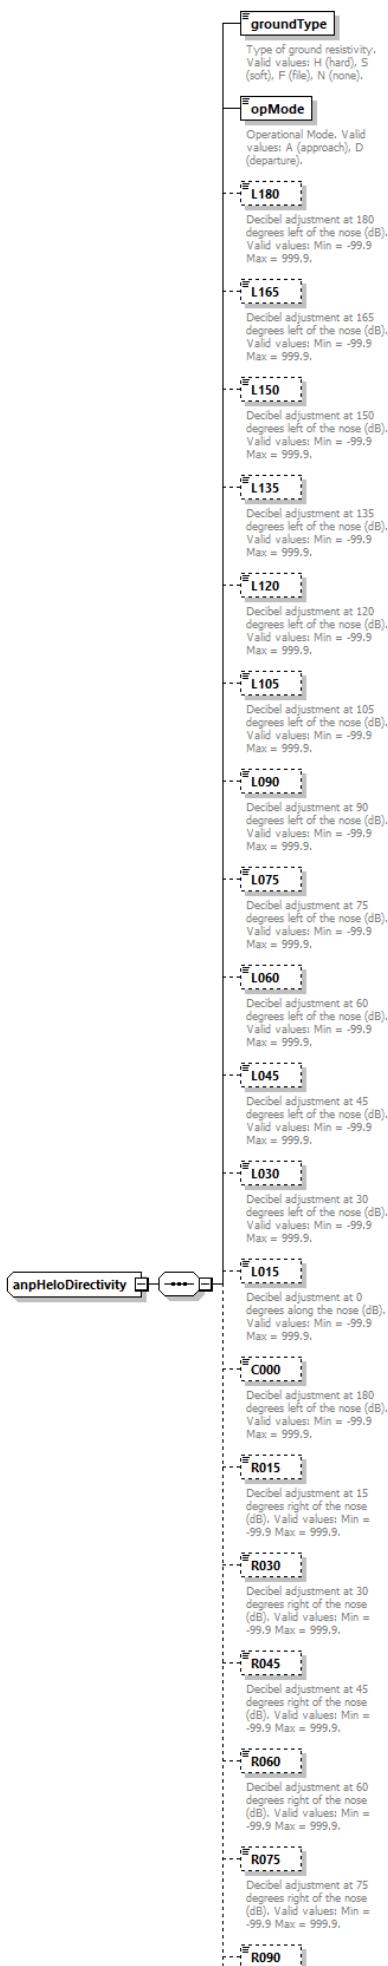

	<p>Decibel adjustment at 90 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p> <p>R105</p> <p>Decibel adjustment at 105 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p> <p>R120</p> <p>Decibel adjustment at 120 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p> <p>R135</p> <p>Decibel adjustment at 135 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p> <p>R150</p> <p>Decibel adjustment at 150 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p> <p>R165</p> <p>Decibel adjustment at 165 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p> <p>R180</p> <p>Decibel adjustment at 180 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p>
children	groundType opMode L180 L165 L150 L135 L120 L105 L090 L075 L060 L045 L030 L015 C000 R015 R030 R045 R060 R075 R090 R105 R120 R135 R150 R165 R180
used by	element anpHeloDirectivitySet/anpHeloDirectivity .

element anpHeloDirectivity/groundType

diagram	<p>Type of ground resistivity. Valid values: H (hard), S (soft), F (file), N (none).</p>
type	anpHeloGroundType
properties	content simple
facets	Kind Value Annotation pattern Hard H Soft S File F None N
annotation	documentation Type of ground resistivity. Valid values: H (hard), S (soft), F (file), N (none).

element anpHeloDirectivity/opMode

diagram	<p>Operational Mode. Valid values: A (approach), D (departure).</p>
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Operational Mode. Valid values: A (approach), D (departure).

element anpHeloDirectivity/L180

diagram	<p>Decibel adjustment at 180 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 180 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/L165

diagram	<p>Decibel adjustment at 165 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.</p>
type	xs:double
properties	minOcc 0

	maxOcc 1 content simple
annotation	documentation Decibel adjustment at 165 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/L150

diagram	 L150 Decibel adjustment at 150 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 150 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/L135

diagram	 L135 Decibel adjustment at 135 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 135 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/L120

diagram	 L120 Decibel adjustment at 120 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 120 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/L105

diagram	 L105 Decibel adjustment at 105 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 105 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/L090

diagram	 L090 Decibel adjustment at 90 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 90 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/L075

diagram	 L075 Decibel adjustment at 75 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1

	content simple
annotation	documentation Decibel adjustment at 75 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/L060**

diagram	 L060 Decibel adjustment at 60 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 60 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/L045**

diagram	 L045 Decibel adjustment at 45 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 45 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/L030**

diagram	 L030 Decibel adjustment at 30 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 30 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/L015**

diagram	 L015 Decibel adjustment at 0 degrees along the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 0 degrees along the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/C000**

diagram	 C000 Decibel adjustment at 180 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 180 degrees left of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/R015**

diagram	 R015 Decibel adjustment at 15 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

annotation	documentation Decibel adjustment at 15 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
------------	--

element **anpHeloDirectivity/R030**

diagram	 R030 Decibel adjustment at 30 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 30 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/R045**

diagram	 R045 Decibel adjustment at 45 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 45 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/R060**

diagram	 R060 Decibel adjustment at 60 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 60 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/R075**

diagram	 R075 Decibel adjustment at 75 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 75 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/R090**

diagram	 R090 Decibel adjustment at 90 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 90 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element **anpHeloDirectivity/R105**

diagram	 R105 Decibel adjustment at 105 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation

Decibel adjustment at 105 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/R120

diagram	 R120 Decibel adjustment at 120 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 120 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/R135

diagram	 R135 Decibel adjustment at 135 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 135 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/R150

diagram	 R150 Decibel adjustment at 150 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 150 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

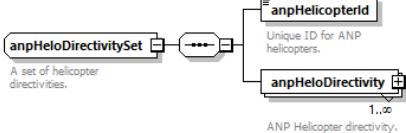
element anpHeloDirectivity/R165

diagram	 R165 Decibel adjustment at 165 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 165 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

element anpHeloDirectivity/R180

diagram	 R180 Decibel adjustment at 180 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel adjustment at 180 degrees right of the nose (dB). Valid values: Min = -99.9 Max = 999.9.

complexType anpHeloDirectivitySet


diagram	 <p>The diagram illustrates the structure of the anpHeloDirectivitySet complex type. It consists of three main components: anpHeloDirectivitySet (a sequence of anpHeloDirectivity elements), anpHelicopterId (a unique identifier for ANP helicopters), and anpHeloDirectivity (a single element). The anpHeloDirectivitySet is described as 'A set of helicopter directivities.' The anpHelicopterId is described as 'Unique ID for ANP helicopters.' The anpHeloDirectivity is described as 'ANP Helicopter directivity.'</p>
children	anpHelicopterId anpHeloDirectivity
used by	element fleet/anpHeloDirectivitySet
annotation	documentation


element **anpHeloDirectivitySet/anpHelicopterId**

diagram	 anpHelicopterId Unique ID for ANP helicopters.
type	anpHeloDirectId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 12
annotation	documentation Unique ID for ANP helicopters.

element **anpHeloDirectivitySet/anpHeloDirectivity**

diagram

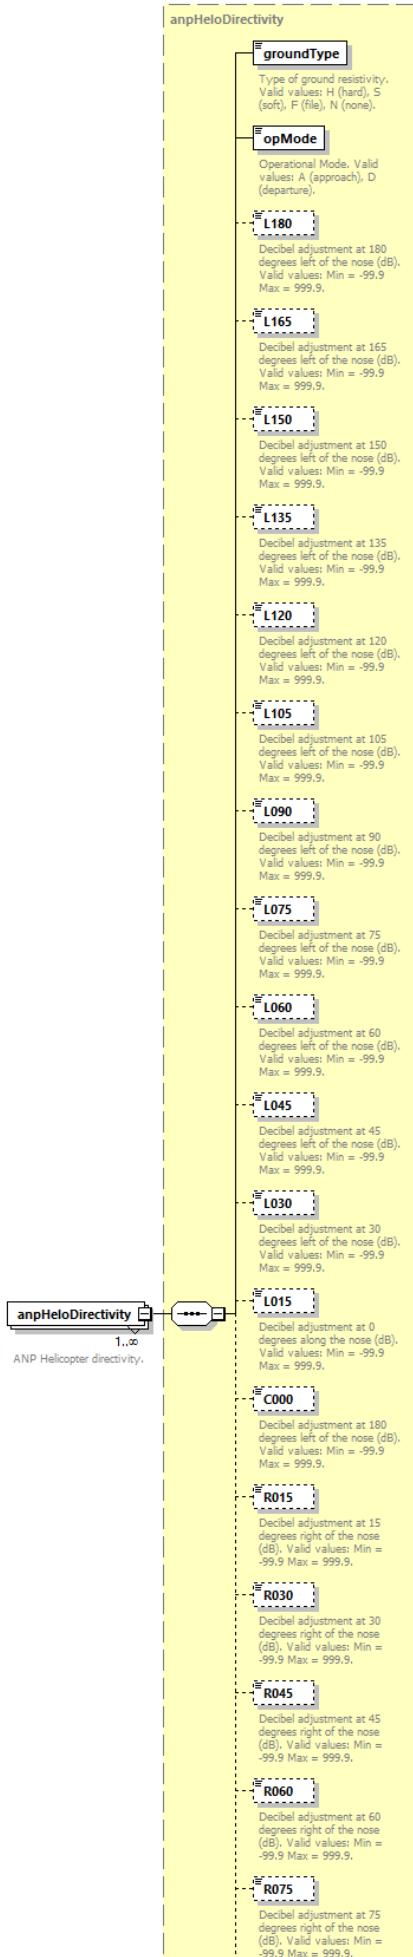

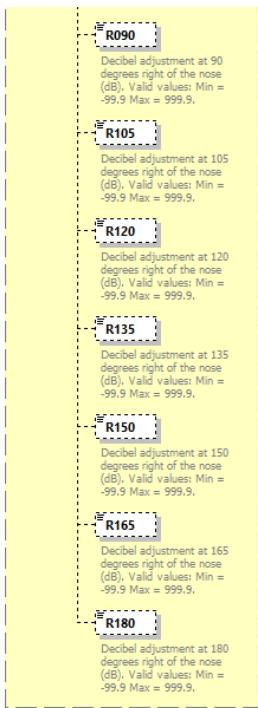

	<p>type anpHeloDirectivity.</p> <p>properties minOcc 1 maxOcc unbounded content complex</p> <p>children groundType opMode L180 L165 L150 L135 L120 L105 L090 L075 L060 L045 L030 L015 C000 R015 R030 R045 R060 R075 R090 R105 R120 R135 R150 R165 R180</p> <p>annotation documentation ANP Helicopter directivity.</p>
--	--

complexType anpHeloNoiseGroup


diagram	<p>anpHeloNoiseGroup → noiseld</p> <p>This element contains the three spectral class references for a given aircraft Noise group with the corresponding thrust setting type and model type.</p> <p>noiseld The noise group id.</p> <p>spectralClassApproach The approach spectral class number. Valid values: 0 to 999.</p> <p>spectralClassDeparture The departure spectral class number. Valid values: 0 to 999.</p> <p>spectralClassFlyover The flyover spectral class number. Valid values: 0 to 999.</p> <p>speedApproach N 6.1 Approach reference true airspeed (KTAS). Valid values: Min = 0.0 Max = 250.0. UNITS: knots.</p> <p>speedDeparture N 6.1 Depart reference true airspeed (KTAS) Min = 0.0 Max = 250.0. UNITS: knots.</p> <p>speedFlyover N 6.1 Flyover reference true airspeed (KTAS) Min = 0.0 Max = 250.0. UNITS: knots.</p> <p>npdCurves The set of noise curves for this group.</p>
children	noiseld spectralClassApproach spectralClassDeparture spectralClassFlyover speedApproach speedDeparture speedFlyover npdCurves
used by	element fleet/anpHeloNoiseGroup
annotation	documentation This element contains the three spectral class references for a given aircraft Noise group with the corresponding thrust setting type and model type.

element anpHeloNoiseGroup/noiseld


diagram	<p>noiseld The noise group id.</p>
type	anpHeloNoiseld
properties	content simple

facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The noise group id.


element **anpHeloNoiseGroup/spectralClassApproach**

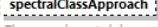diagram	 The approach spectral class number. Valid values: 0 to 999.
type	xs:short
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The approach spectral class number. Valid values: 0 to 999.


element **anpHeloNoiseGroup/spectralClassDeparture**

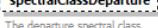diagram	 The departure spectral class number. Valid values: 0 to 999.
type	xs:short
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The departure spectral class number. Valid values: 0 to 999.


element **anpHeloNoiseGroup/spectralClassFlyover**

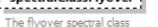diagram	 The flyover spectral class number. Valid values: 0 to 999.
type	xs:short
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation The flyover spectral class number. Valid values: 0 to 999.


element **anpHeloNoiseGroup/speedApproach**

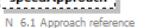diagram	 N 6.1 Approach reference true airspeed (KTAS). Valid values: Min = 0.0 Max = 250.0. UNITS: knots.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation N 6.1 Approach reference true airspeed (KTAS). Valid values: Min = 0.0 Max = 250.0. UNITS: knots.

element **anpHeloNoiseGroup/speedDeparture**

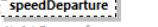diagram	 N 6.1 Depart reference true airspeed (KTAS) Min = 0.0 Max = 250.0. UNITS: knots.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation N 6.1 Depart reference true airspeed (KTAS) Min = 0.0 Max = 250.0. UNITS: knots.

element **anpHeloNoiseGroup/speedFlyover**

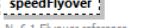diagram	 N 6.1 Flyover reference true airspeed (KTAS) Min = 0.0 Max = 250.0. UNITS: knots.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

annotation	documentation N 6.1 Flyover reference true airspeed (KTAS) Min = 0.0 Max = 250.0. UNITS: knots.
------------	--

element anpHeloNoiseGroup/npdCurves

diagram	<p>The set of noise curves for this group.</p> <p>Base noise data interpolated/extrapolated upon according to slant range distance and thrust setting for aircraft.</p>
type	anpHeloNPDCurves
properties	minOcc 0 maxOcc 1 content complex
children	npdCurve
annotation	documentation The set of noise curves for this group.

complexType anpHeloNPDCurve

diagram	<p>The Noise Power Distance curve table for a specified noise ID, noise type, operation mode, and thrust setting.</p>
children	noiseType opMode sideType L_200 L_400 L_630 L_1000 L_2000 L_4000 L_6300 L_10000 L_16000 L_25000
used by	element anpHeloNPDCurves/npdCurve
annotation	documentation The Noise Power Distance curve table for a specified noise ID, noise type, operation mode, and thrust setting.

element anpHeloNPDCurve/noiseType

diagram	<p>Type of noise described by this curve. Valid values: S (SEL), M (LAMAX), E (EPNL), P (PNLTM).</p>
type	anpNpdNoiseType

properties	content simple
facets	Kind Value Annotation pattern S M E P
annotation	documentation Type of noise described by this curve. Valid values: S (SEL), M (LAMAX), E (EPNL), P (PNLTM).

element **anpHeloNPDCurve/opMode**

diagram	 opMode Engine operation mode.
type	anpNpdOpMode
properties	content simple
facets	Kind Value Annotation pattern A D U G H I J V W Y Z B C E F X S
annotation	documentation Engine operation mode.

element **anpHeloNPDCurve/sideType**

diagram	 sideType Operation side type. Valid values: L (left), C (center), R (right), S (static)
type	anpHeloSideType
properties	content simple
facets	Kind Value Annotation pattern Left L Center C Right R Static S
annotation	documentation Operation side type. Valid values: L (left), C (center), R (right), S (static)

element **anpHeloNPDCurve/L_200**

diagram	 L_200 Decibel level at 200 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel level at 200 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpHeloNPDCurve/L_400**

diagram	 L_400 Decibel level at 400 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel level at 400 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpHeloNPDCurve/L_630**

diagram	 L_630 Decibel level at 630 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel level at 630 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpHeloNPDCurve/L_1000**

diagram	 L_1000 Decibel level at 1000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple

annotation	documentation Decibel level at 1000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
------------	---

element **anpHeloNPDCurve/L_2000**

diagram	 L_2000 Decibel level at 2000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel level at 2000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpHeloNPDCurve/L_4000**

diagram	 L_4000 Decibel level at 4000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 4000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpHeloNPDCurve/L_6300**

diagram	 L_6300 Decibel level at 6300 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel level at 6300 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpHeloNPDCurve/L_10000**

diagram	 L_10000 Decibel level at 10000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel level at 10000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpHeloNPDCurve/L_16000**

diagram	 L_16000 Decibel level at 16000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel level at 16000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpHeloNPDCurve/L_25000**

diagram	 L_25000 Decibel level at 25000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Decibel level at 25000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

complexType **anpHeloNPDCurves**

diagram	<p>The set of noise curves.</p>
children	npdCurve
used by	element anpHeloNoiseGroup/npdCurves
annotation	documentation The set of noise curves.

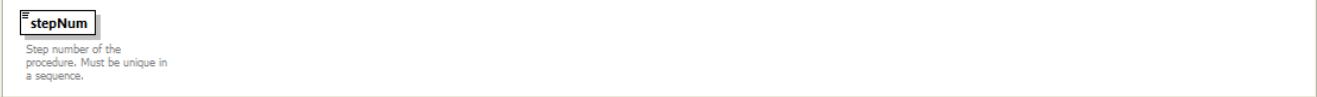
element [anpHeloNPDCurves/npdCurve](#)

diagram	<p>anpHeloNPDCurve</p> <ul style="list-style-type: none"> # noiseType <p>Type of noise described by this curve. Valid values: S (SEL), M (LAMAX), E (EPNL), P (PNLTM).</p> # opMode <p>Engine operation mode.</p> # sideType <p>Operation side type. Valid values: L (left), C (center), R (right), S (static)</p> L_200 <p>Decibel level at 200 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_400 <p>Decibel level at 400 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_630 <p>Decibel level at 630 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_1000 <p>Decibel level at 1000 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_2000 <p>Decibel level at 2000 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_4000 <p>Decibel level at 4000 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_6300 <p>Decibel level at 6300 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_10000 <p>Decibel level at 10000 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_16000 <p>Decibel level at 16000 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> L_25000 <p>Decibel level at 25000 feet AGL. Valid values: Min = -50.0 Max = 999.9.</p> <p>1..∞</p> <p>Base noise data interpolated/extrapolated upon according to slant range distance and thrust setting for aircraft.</p>
type	anpHeloNPDCurve
properties	minOcc 1 maxOcc unbounded content complex
children	noiseType opMode sideType L_200 L_400 L_630 L_1000 L_2000 L_4000 L_6300 L_10000 L_16000 L_25000
annotation	documentation Base noise data interpolated/extrapolated upon according to slant range distance and thrust setting for aircraft.

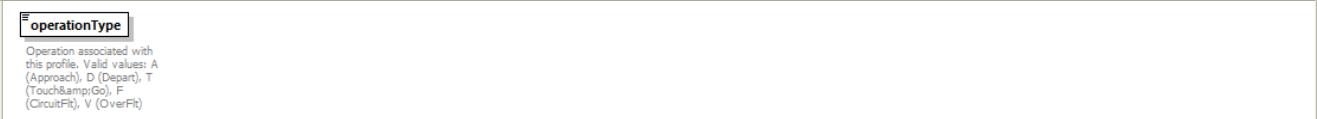
complexType [anpHeloProcedureStep](#)

diagram	 <pre> classDiagram class anpHeloProcedureStep { stepNum operationType profileGroupId profileStageLength stepType duration distance altitude speed } </pre> <p>anpHeloProcedureStep Procedure data element.</p>
children	stepNum operationType profileGroupId profileStageLength stepType duration distance altitude speed
used by	element appHeloProfile/step
annotation	documentation Procedure data element.

element [anpHeloProcedureStep/stepNum](#)

diagram	 <p>stepNum Step number of the procedure. Must be unique in a sequence.</p>
type	xs:int
properties	content simple
annotation	documentation Step number of the procedure. Must be unique in a sequence.

element [anpHeloProcedureStep/operationType](#)

diagram	 <p>operationType Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&#amp;Go), F (CircuitRlt), V (OverFlt)</p>
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation

element **anpHeloProcedureStep/profileGroupId**

diagram	profileGroupId Profile group identifier. Valid values: STANDARD, NOISEMAP (INM standard data).
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Profile group identifier. Valid values: STANDARD, NOISEMAP (INM standard data).

element **anpHeloProcedureStep/profileStageLength**

diagram	profileStageLength Profile stage number (min = 1, max = 9). Approach stage numbers are not related to trip distance. There is only one standard approach profile for most standard aircraft and its stage number is set to 1. Approach stage numbers are used to distinguish members of a group. For example, approach stage can mean different kinds of approaches (e.g. 1 = 3 degree approach, 2 = 5 degree approach).
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Profile stage number (min = 1, max = 9). Approach stage numbers are not related to trip distance. There is only one standard approach profile for most standard aircraft and its stage number is set to 1. Approach stage numbers are used to distinguish members of a group. For example, approach stage can mean different kinds of approaches (e.g. 1 = 3 degree approach, 2 = 5 degree approach).

element **anpHeloProcedureStep/stepType**

diagram	stepType Type of step. (A) Approach at constant speed, (D) Depart at constant speed, (L) Level flyover at constant speed, (G) Ground idle, (H) Flight idle, (I) Hover in ground effect, (J) Hover out of ground effect, (V) Vertical ascent in ground effect, (W) Vertical ascent out of ground effect, (Y) Vertical descent in ground effect, (Z) Vertical descent out of ground effect, (B) Approach with horizontal deceleration, (C) Approach with descending deceleration, (E) Depart with horizontal acceleration, (F) Depart with climbing acceleration, (X) Taxi at constant speed, (S) Start altitude at constant speed
type	string1
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Type of step. (A) Approach at constant speed, (D) Depart at constant speed, (L) Level flyover at constant speed, (G) Ground idle, (H) Flight idle, (I) Hover in ground effect, (J) Hover out of ground effect, (V) Vertical ascent in ground effect, (W) Vertical ascent out of ground effect, (Y) Vertical descent in ground effect, (Z) Vertical descent out of ground effect, (B) Approach with horizontal deceleration, (C) Approach with descending deceleration, (E) Depart with horizontal acceleration, (F) Depart with climbing acceleration, (X) Taxi at constant speed, (S) Start altitude at constant speed

element **anpHeloProcedureStep/duration**

diagram	duration Procedure's duration (seconds).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Procedure's duration (seconds).

element **anpHeloProcedureStep/distance**

diagram	 distance Length of a particular segment (min = -9999999.9, max = 9999999.9, feet).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Length of a particular segment (min = -9999999.9, max = 9999999.9, feet).

element **anpHeloProcedureStep/altitude**

diagram	 altitude Altitude above runway elevation (ARE) of aircraft (min = -9999, max = 60000). UNITS: feet.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Altitude above runway elevation (ARE) of aircraft (min = -9999, max = 60000). UNITS: feet.

element **anpHeloProcedureStep/speed**

diagram	 speed True airspeed (KTAS) at this point (min = 0, max = 600). UNITS: knots.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation True airspeed (KTAS) at this point (min = 0, max = 600). UNITS: knots.

complexType **anpHeloProfile**

diagram	<p>anpHeloProfile Profile data element.</p> <p>operationType Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&amp;Go), F (CircuitFlt), V (OverFlt)</p> <p>profileGroupId Profile group identifier. Valid values: STANDARD, NOISEMAP (INM standard data).</p> <p>profileStageLength Profile stage number (min = 1, max = 9). Approach stage numbers are not related to trip distance. There is only one standard approach profile for most standard aircraft and stage number is set to 1. Approach stage numbers are used to distinguish members of a group. For example, approach stage can mean different kinds of approaches (e.g. 1 = 3 degree approach, 2 = 5 degree approach).</p> <p>weight Aircraft weight during this operation type. Valid values: 0 through 999999. (lb)</p> <p>useDirectivity Use directivity? Y=Yes N=No.</p> <p>useTrack Use track (static heading is relative to track)? Y=Yes N=No.</p> <p>headingTakeoffGround Takeoff ground heading. Valid values: -180 through 360. (decimal degrees)</p> <p>headingTakeoffHover Takeoff hover heading. Valid values: -180 through 360. (decimal degrees)</p> <p>headingLandGround Landing ground heading. Valid values: -180 through 360. (decimal degrees)</p> <p>headingLandHover Landing hover heading. Valid values: -180 through 360. (decimal degrees)</p> <p>step The procedure steps.</p>
children	operationType profileGroupId profileStageLength weight useDirectivity useTrack headingTakeoffGround headingTakeoffHover headingLandGround headingLandHover step
used by	element anpHeloProfileSet/profile
annotation	documentation Profile data element.

element anpHeloProfile/operationType


diagram	<p>operationType Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&amp;Go), F (CircuitFlt), V (OverFlt)</p>
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&Go), F (CircuitFlt), V (OverFlt)

element anpHeloProfile/profileGroupId

diagram	<p>profileGroupId Profile group identifier. Valid values: STANDARD, NOISEMAP (INM standard data).</p>
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation

Profile group identifier. Valid values: STANDARD, NOISEMAP (INM standard data).


element anpHeloProfile/profileStageLength

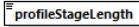diagram	 profileStageLength Profile stage number (min = 1, max = 9). Approach stage numbers are not related to trip distance. There is only one standard approach profile for most standard aircraft and its stage number is set to 1. Approach stage numbers are used to distinguish members of a group. For example, approach stage can mean different kinds of approaches (e.g. 1 = 3 degree approach, 2 = 5 degree approach).
type	string
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Profile stage number (min = 1, max = 9). Approach stage numbers are not related to trip distance. There is only one standard approach profile for most standard aircraft and its stage number is set to 1. Approach stage numbers are used to distinguish members of a group. For example, approach stage can mean different kinds of approaches (e.g. 1 = 3 degree approach, 2 = 5 degree approach).

element anpHeloProfile/weight

diagram	 weight Aircraft weight during this operation type. Valid values: 0 through 999999. (lb)
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Aircraft weight during this operation type. Valid values: 0 through 999999. (lb)


element anpHeloProfile/useDirectivity

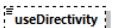diagram	 useDirectivity Use directivity? Y=Yes N=No.
type	yesNoType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern Yes Y No N
annotation	documentation Use directivity? Y=Yes N=No.

element anpHeloProfile/useTrack

diagram	 useTrack Use track (static heading is relative to track)? Y=Yes N=No.
type	yesNoType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern Yes Y No N
annotation	documentation Use track (static heading is relative to track)? Y=Yes N=No.


element anpHeloProfile/headingTakeoffGround

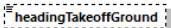diagram	 headingTakeoffGround Takeoff ground heading. Valid values: -180 through 360. (decimal degrees)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Takeoff ground heading. Valid values: -180 through 360. (decimal degrees)


element anpHeloProfile/headingTakeoffHover

diagram	 headingTakeoffHover Takeoff hover heading. Valid values: -180 through 360. (decimal degrees)
type	xs:double
properties	content simple
annotation	documentation Takeoff hover heading. Valid values: -180 through 360. (decimal degrees)


element **anpHeloProfile/headingLandGround**

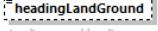diagram	 headingLandGround Landing ground heading. Valid values: -180 through 360. (decimal degrees)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Landing ground heading. Valid values: -180 through 360. (decimal degrees)


element **anpHeloProfile/headingLandHover**

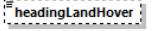diagram	 headingLandHover Landing hover heading. Valid values: -180 through 360. (decimal degrees)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Landing hover heading. Valid values: -180 through 360. (decimal degrees)

element **anpHeloProfile/step**

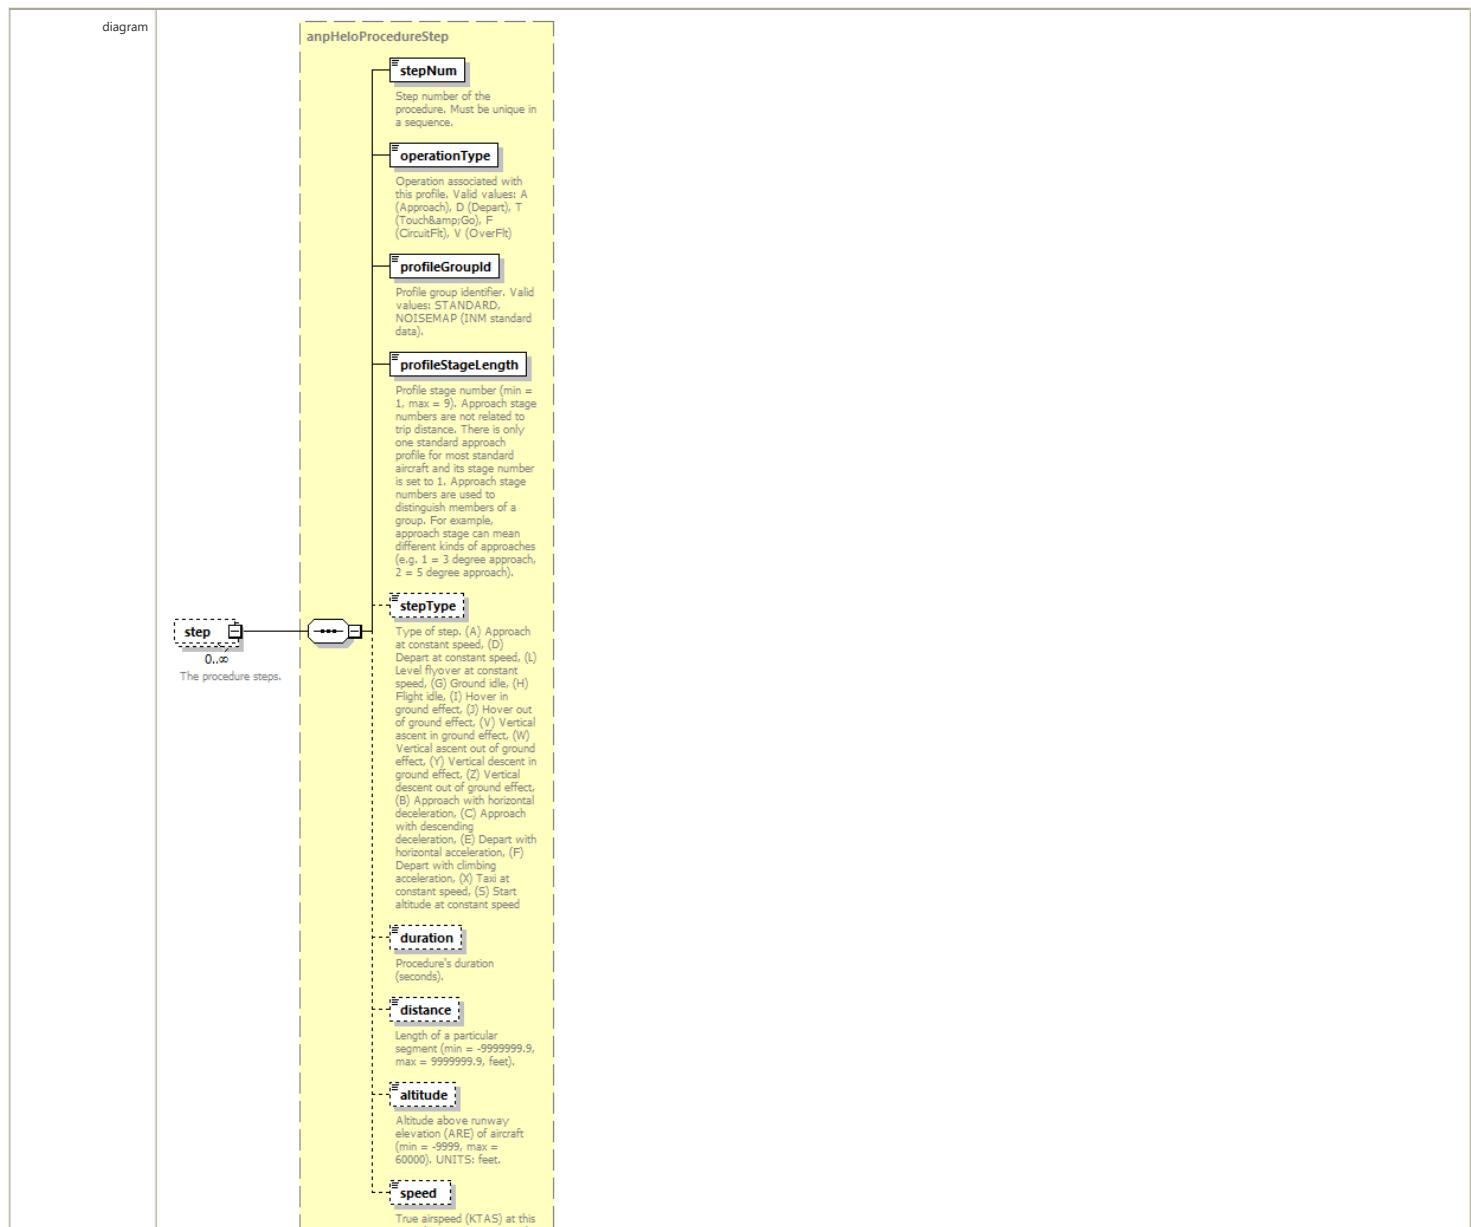

	type anpHeloProcedureStep
properties	minOcc 0 maxOcc unbounded content complex
children	stepNum operationType profileGroupId profileStageLength stepType duration distance altitude speed
annotation	documentation The procedure steps.

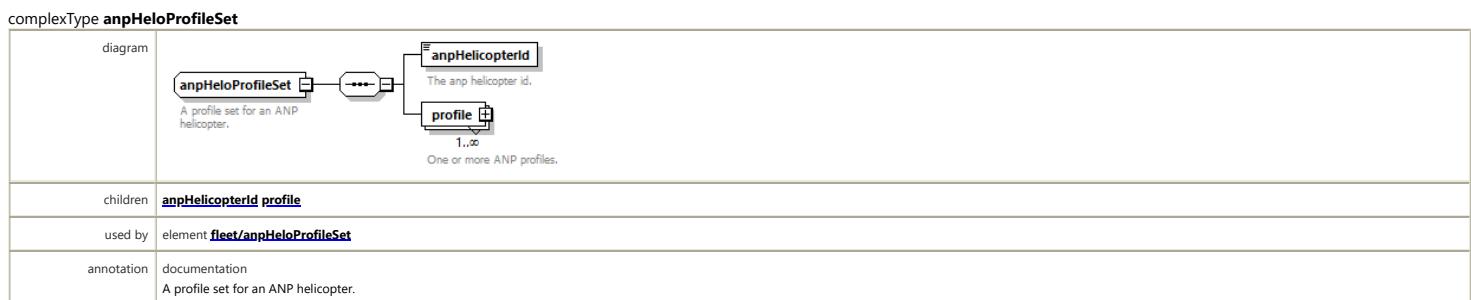

	element anpHeloProfileSet/anpHelicopterId
diagram	anpHelicopterId The anp helicopter id.
type	anpHeloid

properties	content simple						
facets	<table border="1"> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>255</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	255
Kind	Value Annotation						
minLength	0						
maxLength	255						
annotation	documentation The anp helicopter id.						

element anpHeloProfileSet/profile

diagram	<pre> classDiagram class profile { operationType profileGroupId profileStageLength weight useDirectivity useTrack headingTakeoffGround headingTakeoffHover headingLandGround headingLandHover step } profile "1..∞" --> "profile" </pre> <p>The diagram shows the structure of the <code>profile</code> element. It contains attributes: <code>operationType</code>, <code>profileGroupId</code>, <code>profileStageLength</code>, <code>weight</code>, <code>useDirectivity</code>, <code>useTrack</code>, <code>headingTakeoffGround</code>, <code>headingTakeoffHover</code>, <code>headingLandGround</code>, <code>headingLandHover</code>, and <code>step</code>. A multiplicity of <code>1..∞</code> is indicated for the <code>profile</code> association.</p>
type	anpHeloProfile
properties	minOcc 1 maxOcc unbounded content complex
children	operationType profileGroupId profileStageLength weight useDirectivity useTrack headingTakeoffGround headingTakeoffHover headingLandGround headingLandHover step
annotation	documentation One or more ANP profiles.

complexType anpNoiseGroup

diagram	<pre> graph LR anpNoiseGroup[anpNoiseGroup] --- noiseld[noiseld] anpNoiseGroup --- spectralClassApproach[spectralClassApproach] anpNoiseGroup --- spectralClassDeparture[spectralClassDeparture] anpNoiseGroup --- spectralClassAfterburner[spectralClassAfterburner] anpNoiseGroup --- thrustSetType[thrustSetType] anpNoiseGroup --- modeType[modelType] anpNoiseGroup --- npdCurves[npdCurves] </pre> <p>This element contains the three spectral class references for a given aircraft Noise group with the corresponding thrust setting type and model type.</p>
children	noiseld spectralClassApproach spectralClassDeparture spectralClassAfterburner thrustSetType modelType npdCurves
used by	element fleet/anpNoiseGroup
annotation	<p>documentation</p> <p>This element contains the three spectral class references for a given aircraft Noise group with the corresponding thrust setting type and model type.</p>

element anpNoiseGroup/noiseld

diagram	<pre> graph TD noiseld[noiseld] </pre> <p>Noise group's ID.</p>						
type	anpNoiseld						
properties	content simple						
facets	<table> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>255</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	255
Kind	Value Annotation						
minLength	0						
maxLength	255						
annotation	<p>documentation</p> <p>Noise group's ID.</p>						

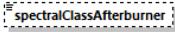
element anpNoiseGroup/spectralClassApproach

diagram	<pre> graph TD spectralClassApproach[spectralClassApproach] </pre> <p>Spectral class number for approach (min = 0, max = 30000).</p>						
type	xs:short						
properties	<table> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> </table>	minOcc	0	maxOcc	1	content	simple
minOcc	0						
maxOcc	1						
content	simple						
annotation	<p>documentation</p> <p>Spectral class number for approach (min = 0, max = 30000).</p>						

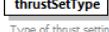
element anpNoiseGroup/spectralClassDeparture

diagram	<pre> graph TD spectralClassDeparture[spectralClassDeparture] </pre> <p>Spectral class number for departure (min = 0, max = 30000).</p>						
type	xs:short						
properties	<table> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> </table>	minOcc	0	maxOcc	1	content	simple
minOcc	0						
maxOcc	1						
content	simple						
annotation	<p>documentation</p> <p>Spectral class number for departure (min = 0, max = 30000).</p>						

element anpNoiseGroup/spectralClassAfterburner

diagram	 spectralClassAfterburner Spectral class number for afterburner (min = 0, max = 30000).
type	xs:short
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Spectral class number for afterburner (min = 0, max = 30000).

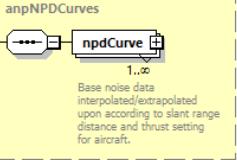
element **anpNoiseGroup/thrustSetType**

diagram	 thrustSetType Type of thrust setting. Valid values: L (pounds), P (percent), X (other). The following are typically used for military airplane: A (Power Lever Angle), B (Pounds Thrust), C (Turbine Inlet Temperature (Deg C)), E (Engine Pressure Ratio), F (Fan Speed), H (Equivalent Shaft Power), I (Manifold Pressure (Inches Mercury)), M (Propeller or Compressor RPM), N (Percent Corrected Rotor Speed), O (Percent Low Pressure Compressor Speed), R (Percent Propeller or Compressor RPM), S (Pounds per Hour of Fuel Flow), V (Percent Fan Speed).
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Type of thrust setting. Valid values: L (pounds), P (percent), X (other). The following are typically used for military airplane: A (Power Lever Angle), B (Pounds Thrust), C (Turbine Inlet Temperature (Deg C)), E (Engine Pressure Ratio), F (Fan Speed), H (Equivalent Shaft Power), I (Manifold Pressure (Inches Mercury)), M (Propeller or Compressor RPM), N (Percent Corrected Rotor Speed), O (Percent Low Pressure Compressor Speed), R (Percent Propeller or Compressor RPM), S (Pounds per Hour of Fuel Flow), V (Percent Fan Speed).

element **anpNoiseGroup/modelType**

diagram	 modelType Type of distance-duration model. Valid values: I (INM), N (NoiseMap).
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Type of distance-duration model. Valid values: I (INM), N (NoiseMap).

element **anpNoiseGroup/npdCurves**

diagram	 anpNPDCurves The set of noise curves for ANP aircraft. npdCurves  npdCurve  1..∞ Base noise data interpolated/extrapolated upon according to slant range distance and thrust setting for aircraft.
type	anpNPDCurves
properties	content complex
children	npdCurve
annotation	documentation The set of noise curves for ANP aircraft.

complexType **anpNPDCurve**

diagram	<p>The Noise Power Distance curve table for a specified noise ID, noise type, operation mode, and thrust setting.</p>
children	noiseType opMode netThrustPerEngine L_200 L_400 L_630 L_1000 L_2000 L_4000 L_6300 L_10000 L_16000 L_25000
used by	element anNPDCurves/npdCurve
annotation	documentation The Noise Power Distance curve table for a specified noise ID, noise type, operation mode, and thrust setting.

element anNPDCurve/noiseType

diagram	
type	anNpdNoiseType
properties	content simple
facets	Kind Value Annotation pattern S M E P
annotation	documentation Type of noise described by this curve. Valid values: S (SEL), M (LAMAX), E (EPNL), P (PNLTM).

element anNPDCurve/opMode

diagram	
type	anNpdOpMode
properties	content simple
facets	Kind Value Annotation pattern A D L G H J V W Y Z B C F X S
annotation	Engine operation mode. Valid values: A (Approach), D (Depart), X (Afterburner)

element **anpNPDCurve/netThrustPerEngine**

diagram	 netThrustPerEngine Net thrust per engine (min = 0.10, max = 99999.00, lbs. or percentage depending on parent noise group THRUST_SET_TYPE value).
type	xs:double
properties	content simple
annotation	documentation Net thrust per engine (min = 0.10, max = 99999.00, lbs. or percentage depending on parent noise group THRUST_SET_TYPE value).

element **anpNPDCurve/L_200**

diagram	 L_200 Decibel level at 200 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 200 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpNPDCurve/L_400**

diagram	 L_400 Decibel level at 400 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 400 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpNPDCurve/L_630**

diagram	 L_630 Decibel level at 630 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 630 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpNPDCurve/L_1000**

diagram	 L_1000 Decibel level at 1000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 1000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpNPDCurve/L_2000**

diagram	 L_2000 Decibel level at 2000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 2000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpNPDCurve/L_4000**

diagram	 L_4000 Decibel level at 4000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 4000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpNPDCurve/L_6300**

diagram	 L_6300 Decibel level at 6300 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 6300 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpNPDCurve/L_10000**

diagram	 L_10000 Decibel level at 10000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 10000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

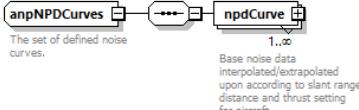
element **anpNPDCurve/L_16000**

diagram	 L_16000 Decibel level at 16000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 16000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

element **anpNPDCurve/L_25000**

diagram	 L_25000 Decibel level at 25000 feet AGL. Valid values: Min = -50.0 Max = 999.9.
type	xs:double
properties	content simple
annotation	documentation Decibel level at 25000 feet AGL. Valid values: Min = -50.0 Max = 999.9.

complexType **anpNPDCurves**

diagram	 The set of defined noise curves. Base noise data interpolated/extrapolated upon according to slant range distance and thrust setting for aircraft.
children	npdCurve
used by	element anpNoiseGroup/npdCurves
annotation	documentation The set of defined noise curves.

element **anpNPDCurves/npdCurve**

diagram	<pre> classDiagram npdCurve < -- anpNPDCurve anpNPDCurve { noiseType opMode netThrustPerEngine L_200 L_400 L_630 L_1000 L_2000 L_4000 L_6300 L_10000 L_16000 L_25000 } note over npdCurve: 1..∞ Base noise data interpolated/extrapolated upon according to slant range distance and thrust setting for aircraft. </pre>
type	anpNPDCurve
properties	minOcc 1 maxOcc unbounded content complex
children	noiseType opMode netThrustPerEngine L_200 L_400 L_630 L_1000 L_2000 L_4000 L_6300 L_10000 L_16000 L_25000
annotation	<p>documentation</p> <p>Base noise data interpolated/extrapolated upon according to slant range distance and thrust setting for aircraft.</p>

complexType [anpProcedureStep](#)

diagram	<p>anpProcedureStep</p> <p>A single procedure step datum for the profile.</p>
children	stepNum flapId stepType thrustType param1 param2 param3
used by	element anpProcedureSteps/step
annotation	<p>documentation</p> <p>A single procedure step datum for the profile.</p>

element anpProcedureStep/stepNum

diagram	<p>stepNum</p> <p>Step number of the procedure. Must be unique in a sequence.</p>
type	xs:int
properties	content simple
annotation	<p>documentation</p> <p>Step number of the procedure. Must be unique in a sequence.</p>

element anpProcedureStep/flapId


diagram	<p>flapId</p> <p>Flap-setting identifier.</p>
type	anpFlapId
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 6
annotation	<p>documentation</p> <p>Flap-setting identifier.</p>

element anpProcedureStep/stepType

diagram	<p>stepType</p> <p>Type of step. (T) Takeoff, (C) Climb, (M) Cruise-Climb, (A) Accelerate, (P) Decelerate, (V) Acceler-Percant, (L) Level, (U) Level-Decel, (W) Level-Idle, (S) Level-Stretch, (D) Descend, (E) Descend-Decel, (F) Decend-IDle, (I) Land, (B) Decelerate</p>
type	string1
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1

annotation	documentation Type of step. (T) Takeoff, (C) Climb, (M) Cruise-Climb, (A) Accelerate, (P) Accel-Percent, (V) Level, (U) Level-Decel, (W) Level-Idle, (S) Level-Stretch, (D) Descend, (E) Descend-Decel, (F) Descend-Idle, (L) Land, (B) Decelerate
------------	---

element anpProcedureStep/thrustType

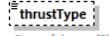diagram	 Type of thrust. (T) MaxTakeoff, (C) MaxClimb, (N) MaxContinuous, (H) ReduceTakeoff, (Q) ReduceClimb, (S) MaxTakeoffHiTemp, (B) MaxClimbHiTemp, (M) MaxContinuousHiTemp, (G) ReduceClimbHiTemp, (P) ReduceClimbHiTemp, (I) IdleApproach, (J) IdleApproachHiTemp, (R) MinimumThrust, (K) UserCutback, (U) UserValue
type	string
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Type of thrust. (T) MaxTakeoff, (C) MaxClimb, (N) MaxContinuous, (H) ReduceTakeoff, (Q) ReduceClimb, (S) MaxTakeoffHiTemp, (B) MaxClimbHiTemp, (M) MaxContinuousHiTemp, (G) ReduceClimbHiTemp, (P) ReduceClimbHiTemp, (I) IdleApproach, (J) IdleApproachHiTemp, (R) MinimumThrust, (K) UserCutback, (U) UserValue

element anpProcedureStep/param1

diagram	 Parameter particular for this step type (min = 9999.0, max = 60000.0).
type	xs:double
properties	content simple
annotation	documentation Parameter particular for this step type (min = 9999.0, max = 60000.0).

element anpProcedureStep/param2

diagram	 Parameter particular for this step type (min = 0, max = 600.0).
type	xs:double
properties	content simple
annotation	documentation Parameter particular for this step type (min = 0, max = 600.0).

element anpProcedureStep/param3

diagram	 Parameter particular for this step type (min = 0.0, max = 9999999.9).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Parameter particular for this step type (min = 0.0, max = 9999999.9).

complexType anpProcedureSteps

diagram	 A set of procedure steps for the profile.
children	step
used by	element appProfile/procedureSteps
annotation	documentation A set of procedure steps for the profile.

element anpProcedureSteps/step

diagram	<p>An ANP procedure step.</p>
type	anpProcedureStep
properties	minOcc 1 maxOcc unbounded content complex
children	stepNum flapid stepType thrustType param1 param2 param3
annotation	documentation An ANP procedure step.

complexType anpProfile	<p>Profile data element.</p>
children	operationType profileGroupId profileStageLength weight procedureSteps profilePoints
used by	element anpProfileSet/profile
annotation	documentation Profile data element.

element **anpProfile/operationType**

diagram	<p>Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&#amp;Go), F (CircuitFlt), V (OverFlt)</p>
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	<p>documentation</p> <p>Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&#amp;Go), F (CircuitFlt), V (OverFlt)</p>

element anpProfile/profileGroupId

diagram	<p>Profile group identifier. Valid values: STANDARD, NOISEMAP (INM standard data).</p>
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	<p>documentation</p> <p>Profile group identifier. Valid values: STANDARD, NOISEMAP (INM standard data).</p>

element anpProfile/profileStageLength

diagram	<p>Profile stage number (min = 1, max = 9). Approach stage numbers are not related to trip distance. There is only one standard approach profile for most standard aircraft and its stage number is set to 1. Approach stage numbers are used to distinguish members of a group. For example, approach stage can mean different kinds of approaches (e.g. 1 = 3 degree approach, 2 = 5 degree approach).</p>
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	<p>documentation</p> <p>Profile stage number (min = 1, max = 9). Approach stage numbers are not related to trip distance. There is only one standard approach profile for most standard aircraft and its stage number is set to 1. Approach stage numbers are used to distinguish members of a group. For example, approach stage can mean different kinds of approaches (e.g. 1 = 3 degree approach, 2 = 5 degree approach).</p>

element anpProfile/weight

diagram	<p>Aircraft weight during this operation type (min = 0, max = 999999, lbs).</p>
type	xs:int
properties	content simple
annotation	<p>documentation</p> <p>Aircraft weight during this operation type (min = 0, max = 999999, lbs).</p>

element anpProfile/procedureSteps

diagram	<p>Set of procedure steps associated with this profile.</p> <pre> graph LR subgraph anpProcedureSteps [anpProcedureSteps] direction LR procedureSteps[procedureSteps] --- step[step] step --- step end </pre> <p>An ANP procedure step.</p>
type	anpProcedureSteps
properties	content complex
children	step
annotation	<p>Set of procedure steps associated with this profile.</p>

element anpProfile/profilePoints

diagram	The diagram shows a class named 'anpProfilePoints' with a multiplicity of '1..∞'. It has a single association named 'profilePoints' pointing to a class named 'point'. A note below the diagram states: 'Set of points associated with this profile.'
type	anpProfilePoints
properties	content complex
children	point
annotation	documentation Set of points associated with this profile.

complexType anpProfilePoint

diagram	The diagram shows a class named 'anpProfilePoint' with a multiplicity of '1..1'. It has five associations: 'pointNum' (with note: 'Point index number. Must be sequential and unique, starting at 1.'), 'distance' (with note: 'Distance along the ground relative to start (min = -9999999.9, max = 9999999.9, feet).'), 'altitude' (with note: 'Altitude AFE of aircraft (min = -9999, max = 60000, feet).'), 'speed' (with note: 'True air speed (TAS) at this point (min = 0, max = 600, knots).'), 'thrustSet' (with note: 'Corrected net thrust per engine at this point (min = 0.1, max = 99999, lbs or % max thrust).'), and 'opMode' (with note: 'Operational mode. Valid values: A (Approach), D (Departure), X (Overflight).').
children	pointNum distance altitude speed thrustSet opMode
used by	element anpProfilePoints/point
annotation	documentation A single profile point data element.

element anpProfilePoint/pointNum

diagram	The diagram shows an attribute named 'pointNum' with a note: 'Point index number. Must be sequential and unique, starting at 1.'
type	xs:short
properties	content simple
annotation	documentation Point index number. Must be sequential and unique, starting at 1.

element anpProfilePoint/distance

diagram	The diagram shows an attribute named 'distance' with a note: 'Distance along the ground relative to start (min = -9999999.9, max = 9999999.9, feet).'
type	xs:double
properties	content simple
annotation	documentation Distance along the ground relative to start (min = -9999999.9, max = 9999999.9, feet).

element anpProfilePoint/altitude

diagram	The diagram shows an attribute named 'altitude' with a note: 'Altitude AFE of aircraft (min = -9999, max = 60000, feet).'
type	xs:double
properties	content simple
annotation	documentation Altitude AFE of aircraft (min = -9999, max = 60000, feet).

element anpProfilePoint/speed

diagram	
	True air speed (TAS) at this point (min = 0, max = 600, knots).
type	xs:double
properties	content simple
annotation	documentation True air speed (TAS) at this point (min = 0, max = 600, knots).

element anpProfilePoint/thrustSet

diagram	
	Corrected net thrust per engine at this point (min = 0.1, max = 99999, lbs or % max thrust).
type	xs:double
properties	content simple
annotation	documentation Corrected net thrust per engine at this point (min = 0.1, max = 99999, lbs or % max thrust).

element anpProfilePoint/opMode

diagram	
	Operational mode. Valid values: A (Approach), D (Departure), X (Overflight).
type	string1
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Operational mode. Valid values: A (Approach), D (Departure), X (Overflight).

complexType anpProfilePoints

diagram	 A set of point profile data.
children	point
used by	element anpProfile/profilePoints
annotation	documentation A set of point profile data.

element anpProfilePoints/point

diagram	 AnpProfilePoint pointNum Point index number. Must be sequential and unique, starting at 1. distance Distance along the ground relative to start (min = -9999999.9, max = 9999999.9, feet). altitude Altitude AFE of aircraft (min = -9999, max = 60000, feet). speed True air speed (TAS) at this point (min = 0, max = 600, knots). thrustSet Corrected net thrust per engine at this point (min = 0.1, max = 99999, lbs or % max thrust). opMode Operational mode. Valid values: A (Approach), D (Departure), X (Overflight).
type	anpProfilePoint
properties	minOcc 1 maxOcc unbounded content complex
children	pointNum altitude speed thrustSet opMode

complexType **anpProfileSet**

diagram	<pre> graph LR anpProfileSet[anpProfileSet] --> anpAirplanId[anpAirplanId] anpProfileSet -- "1..∞" --> profile[profile] </pre> <p>A profile set for an ANP airplane.</p>
children	anpAirplanId profile
used by	element fleet/anpProfileSet
annotation	documentation A profile set for an ANP airplane.

element **anpProfileSet/anpAirplanId**

diagram	
type	anpAirplanId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airplane's ANP ID.

element **anpProfileSet/profile**

diagram	
type	anpProfile
properties	minOcc 1 maxOcc unbounded content complex
children	operationType profileGroupId profileStageLength weight procedureSteps profilePoints
annotation	documentation One or more ANP profiles.

complexType **anpThrustGeneral**

diagram	<pre> classDiagram class anpThrustGeneral { <<General thrust data for an ANP aircraft.>> } class thrustType { <<The type of generalized thrust-setting.>> } class coeff_E { <<Corrected net thrust per engine coefficient. Valid values:-199999.9 through 99999.9. (lb).>> } class coeff_F { <<Speed (TAS) adjustment coefficient. Valid values:-200.00000 through 1000.00000. (lb/knot TAS at sea level and 59°F)>> } class coeff_GA { <<Altitude adjustment coefficient at MSL. (lb/ft)>> } class coeff_GB { <<Altitude-squared adjustment coefficient at MSL. (lb/ft^2)>> } class coeff_H { <<Temperature adjustment coefficient. (lb°C)>> } class coeff_K1 { <<EPR or N1/sqrt(theta) adjustment coefficient. (lb/EPR)>> } class coeff_K2 { <<EPR- or N1/sqrt(theta)-squared adjustment coefficient. (lb/EPR2)>> } anpThrustGeneral < -- thrustType anpThrustGeneral < -- coeff_E anpThrustGeneral < -- coeff_F anpThrustGeneral < -- coeff_GA anpThrustGeneral < -- coeff_GB anpThrustGeneral < -- coeff_H anpThrustGeneral < -- coeff_K1 anpThrustGeneral < -- coeff_K2 </pre>
children	thrustType coeff_E coeff_F coeff_GA coeff_GB coeff_H coeff_K1 coeff_K2
used by	element anpThrustSet/thrustGeneral
annotation	documentation General thrust data for an ANP aircraft.

element anpThrustGeneral/thrustType

diagram	
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation The type of generalized thrust-setting.

element anpThrustGeneral/coeff_E

diagram	
type	xs:double
properties	content simple
annotation	documentation Corrected net thrust per engine coefficient. Valid values: -199999.9 through 99999.9. (lb).

element anpThrustGeneral/coeff_F

diagram	
type	xs:double
properties	content simple
annotation	documentation Speed (TAS) adjustment coefficient. Valid values: -200.00000 through 1000.00000. (lb/knot TAS at sea level and 59°F)

element anpThrustGeneral/coeff_GA

diagram	
type	xs:double
properties	content simple
annotation	documentation

Altitude adjustment coefficient at MSL. (lb/ft)

element anpThrustGeneral/coeff_GB

diagram	 coeff_GB Altitude-squared adjustment coefficient at MSL. (lb/ft^2)
type	xs:double
properties	content simple
annotation	documentation Altitude-squared adjustment coefficient at MSL. (lb/ft^2)

element anpThrustGeneral/coeff_H

diagram	 coeff_H Temperature adjustment coefficient. (lb/^C)
type	xs:double
properties	content simple
annotation	documentation Temperature adjustment coefficient. (lb/^C)

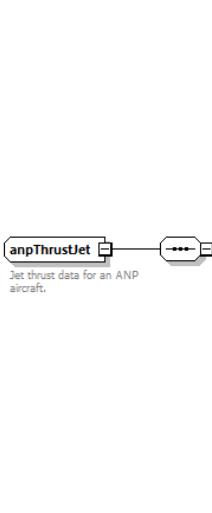
element anpThrustGeneral/coeff_K1

diagram	 coeff_K1 EPR or N1/sqr(theta) adjustment coefficient. (lb/EPR)
type	xs:double
properties	content simple
annotation	documentation EPR or N1/sqr(theta) adjustment coefficient. (lb/EPR)

element anpThrustGeneral/coeff_K2

diagram	 coeff_K2 EPR- or N1/sqr(theta)-squared adjustment coefficient. (lb/EPR2)
type	xs:double
properties	content simple
annotation	documentation EPR- or N1/sqr(theta)-squared adjustment coefficient. (lb/EPR2)

complexType anpThrustJet

diagram	 <pre> graph LR thrustType[thrustType] --- coeff_E[coeff_E] coeff_E --- coeff_F[coeff_F] coeff_F --- coeff_GA[coeff_GA] coeff_GA --- coeff_GB[coeff_GB] coeff_GB --- coeff_H[coeff_H] </pre> <p>Jet thrust data for an ANP aircraft.</p>
children	thrustType coeff_E coeff_F coeff_GA coeff_GB coeff_H
used by	element anpThrustSet/thrustJet
annotation	documentation Jet thrust data for an ANP aircraft.

element anpThrustJet/thrustType

diagram	<p>Type of thrust. Primary key UNITS: T = Max Takeoff, S = High Temp Takeoff, C = Max Climb, B = High Temp Climb, N = Max Continuous, M = High Temp Continuous</p>
type	string
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Type of thrust. Primary key UNITS: T = Max Takeoff, S = High Temp Takeoff, C = Max Climb, B = High Temp Climb, N = Max Continuous, M = High Temp Continuous

element anpThrustJet/coeff_E

diagram	<p>Corrected net thrust per engine coefficient. Valid values: 0.0 through 500000.0. (lb)</p>
type	xs:double
properties	content simple
annotation	documentation Corrected net thrust per engine coefficient. Valid values: 0.0 through 500000.0. (lb)

element anpThrustJet/coeff_F

diagram	<p>Speed (TAS) adjustment coefficient. Valid values: -200.00000 through 1000.00000. (lb/knot TAS at sea level and 59°F)</p>
type	xs:double
properties	content simple
annotation	documentation Speed (TAS) adjustment coefficient. Valid values: -200.00000 through 1000.00000. (lb/knot TAS at sea level and 59°F)

element anpThrustJet/coeff_GA

diagram	<p>Altitude adjustment coefficient at MSL. (lb/ft)</p>
type	xs:double
properties	content simple
annotation	documentation Altitude adjustment coefficient at MSL. (lb/ft)

element anpThrustJet/coeff_GB

diagram	<p>Altitude-squared adjustment coefficient at MSL. (lb/ft^2)</p>
type	xs:double
properties	content simple
annotation	documentation Altitude-squared adjustment coefficient at MSL. (lb/ft^2)

element anpThrustJet/coeff_H

diagram	<p>Temperature adjustment coefficient. (lb/^°C)</p>
type	xs:double
properties	content simple
annotation	documentation Temperature adjustment coefficient. (lb/^°C)

complexType anpThrustProp

diagram	<p>Prop thrust data for an ANP aircraft.</p> <pre> graph LR anpThrustProp[anpThrustProp] ---> thrustType[thrustType] anpThrustProp ---> efficiency[efficiency] anpThrustProp ---> power[power] </pre> <p>thrustType Type of thrust.</p> <p>efficiency The propeller efficiency ratio. Valid values: 0.50 to 1.00.</p> <p>power Net propulsive power per engine (HP). Valid values: 0 to 9999.9.</p>
---------	---

children	thrustType efficiency power
used by	element anpThrustSet/thrustProp
annotation	documentation Prop thrust data for an ANP aircraft.

element **anpThrustProp/thrustType**

diagram	 Type of thrust.
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Type of thrust.

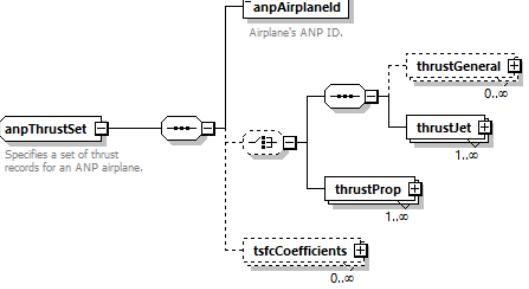
element **anpThrustProp/efficiency**

diagram	 The propeller efficiency ratio. Valid values: 0.50 to 1.00.
type	xs:double
properties	content simple
annotation	documentation The propeller efficiency ratio. Valid values: 0.50 to 1.00.

element **anpThrustProp/power**

diagram	 Net propulsive power per engine (HP). Valid values: 0 to 9999.9.
type	xs:double
properties	content simple
annotation	documentation Net propulsive power per engine (HP). Valid values: 0 to 9999.9.

complexType **anpThrustSet**

diagram	
children	anpAirplaneId thrustGeneral thrustJet thrustProp tsfcCoefficients
used by	element fleet/anpThrustSet
annotation	documentation Specifies a set of thrust records for an ANP airplane.

element **anpThrustSet/anpAirplaneId**

diagram	 Airplane's ANP ID.
type	anpAirplaneId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airplane's ANP ID.

element **anpThrustSet/thrustGeneral**

diagram	<pre> graph TD thrustGeneral[thrustGeneral] -- "0..∞" --> coeff_E[coeff_E] thrustGeneral -- "0..∞" --> coeff_F[coeff_F] thrustGeneral -- "0..∞" --> coeff_GA[coeff_GA] thrustGeneral -- "0..∞" --> coeff_GB[coeff_GB] thrustGeneral -- "0..∞" --> coeff_H[coeff_H] thrustGeneral -- "0..∞" --> coeff_K1[coeff_K1] thrustGeneral -- "0..∞" --> coeff_K2[coeff_K2] </pre> <p>The diagram illustrates the structure of the <code>anpThrustGeneral</code> element. It contains a single association named <code>thrustGeneral</code> with multiplicity <code>0..∞</code>. This association connects to six child elements: <code>coeff_E</code>, <code>coeff_F</code>, <code>coeff_GA</code>, <code>coeff_GB</code>, <code>coeff_H</code>, and <code>coeff_K1</code>. Each child element has a detailed description of its purpose and units.</p>
type	anpThrustGeneral
properties	minOcc 0 maxOcc unbounded content complex
children	thrustType coeff_E coeff_F coeff_GA coeff_GB coeff_H coeff_K1 coeff_K2

element <code>anpThrustSet/thrustJet</code>	<pre> graph TD thrustJet[thrustJet] -- "1..∞" --> coeff_E[coeff_E] thrustJet -- "1..∞" --> coeff_F[coeff_F] thrustJet -- "1..∞" --> coeff_GA[coeff_GA] thrustJet -- "1..∞" --> coeff_H[coeff_H] </pre> <p>The diagram illustrates the structure of the <code>anpThrustSet/thrustJet</code> element. It contains a single association named <code>thrustJet</code> with multiplicity <code>1..∞</code>. This association connects to four child elements: <code>coeff_E</code>, <code>coeff_F</code>, <code>coeff_GA</code>, and <code>coeff_H</code>. Each child element has a detailed description of its purpose and units.</p>
type	anpThrustJet
properties	minOcc 1 maxOcc unbounded content complex
children	thrustType coeff_E coeff_F coeff_GA coeff_GB coeff_H

element `anpThrustSet/thrustProp`

diagram	<pre> graph LR thrustProp[thrustProp 1..∞] --> anpThrustProp[anpThrustProp] anpThrustProp --> thrustType[thrustType] anpThrustProp --> efficiency[efficiency] anpThrustProp --> power[power] </pre> <p>anpThrustProp</p> <ul style="list-style-type: none"> thrustType: Type of thrust. efficiency: The propeller efficiency ratio. Valid values: 0.50 to 1.00. power: Net propulsive power per engine (HP). Valid values: 0 to 9999.9.
type	anpThrustProp
properties	minOcc 1 maxOcc unbounded content complex
children	thrustType efficiency power

element anpThrustSet/tsfcCoefficients

diagram	<pre> graph LR tsfcCoefficients[tsfcCoefficients 0..∞] --> anpTsfcCoefficients[anpTsfcCoefficients] anpTsfcCoefficients --> mode(mode) anpTsfcCoefficients --> k1[k1] anpTsfcCoefficients --> k2[k2] anpTsfcCoefficients --> k3[k3] anpTsfcCoefficients --> k4[k4] anpTsfcCoefficients --> beta1[beta1] anpTsfcCoefficients --> beta2[beta2] anpTsfcCoefficients --> beta3[beta3] anpTsfcCoefficients --> alpha[alpha] </pre> <p>anpTsfcCoefficients</p> <ul style="list-style-type: none"> mode: Arrival or departure mode. k1: Departure thrust specific fuel consumption constant coefficient. k2: Departure thrust specific fuel consumption Mach number coefficient. k3: Departure thrust specific fuel consumption altitude coefficient. k4: Departure thrust specific fuel consumption thrust coefficient. beta1: Arrival thrust specific fuel consumption Mach number coefficient. beta2: Arrival thrust specific fuel consumption altitude coefficient. beta3: Arrival thrust specific fuel consumption thrust coefficient. alpha: Arrival thrust specific fuel consumption constant coefficient.
type	anpTsfcCoefficients
properties	minOcc 0 maxOcc unbounded content complex
children	mode k1 k2 k3 k4 beta1 beta2 beta3 alpha

complexType **anpTsfcCoefficients**

diagram	<pre> classDiagram mode { k1 k2 k3 k4 beta1 beta2 beta3 alpha } anpTsfcCoefficients < -- mode note over anpTsfcCoefficients: TSFC coefficient data for an ANP aircraft. </pre>
children	mode k1 k2 k3 k4 beta1 beta2 beta3 alpha
used by	element anpThrustSet/tsfccoefficients
annotation	documentation TSFC coefficient data for an ANP aircraft.

element anpTsfcCoefficients/mode

diagram	<pre> classDiagram mode { string1 } note over mode: Arrival or departure mode. </pre>									
type	string1									
properties	content simple									
facets	<table border="1"> <tr> <td>Kind</td> <td>Value</td> <td>Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>1</td> <td></td> </tr> </table>	Kind	Value	Annotation	minLength	0		maxLength	1	
Kind	Value	Annotation								
minLength	0									
maxLength	1									
annotation	documentation Arrival or departure mode.									

element anpTsfcCoefficients/k1

diagram	<pre> classDiagram k1 note over k1: Departure thrust specific fuel consumption constant coefficient. </pre>						
type	xs:double						
properties	<table border="1"> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> </table>	minOcc	0	maxOcc	1	content	simple
minOcc	0						
maxOcc	1						
content	simple						
annotation	documentation Departure thrust specific fuel consumption constant coefficient.						

element anpTsfcCoefficients/k2

diagram	<pre> classDiagram k2 note over k2: Departure thrust specific fuel consumption Mach number coefficient. </pre>						
type	xs:double						
properties	<table border="1"> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> </table>	minOcc	0	maxOcc	1	content	simple
minOcc	0						
maxOcc	1						
content	simple						
annotation	documentation Departure thrust specific fuel consumption Mach number coefficient.						

element anpTsfcCoefficients/k3

diagram	<pre> classDiagram k3 note over k3: Departure thrust specific fuel consumption altitude coefficient. </pre>
---------	---

	<p>type xs:double</p>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Departure thrust specific fuel consumption altitude coefficient.

element anpTsfcCoefficients/k4

diagram	k4 Departure thrust specific fuel consumption thrust coefficient.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Departure thrust specific fuel consumption thrust coefficient.

element anpTsfcCoefficients/beta1

diagram	beta1 Arrival thrust specific fuel consumption Mach number coefficient.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Arrival thrust specific fuel consumption Mach number coefficient.

element anpTsfcCoefficients/beta2

diagram	beta2 Arrival thrust specific fuel consumption altitude coefficient.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Arrival thrust specific fuel consumption altitude coefficient.

element anpTsfcCoefficients/beta3

diagram	beta3 Arrival thrust specific fuel consumption thrust coefficient.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Arrival thrust specific fuel consumption thrust coefficient.

element anpTsfcCoefficients/alpha

diagram	alpha Arrival thrust specific fuel consumption constant coefficient.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Arrival thrust specific fuel consumption constant coefficient.

complexType **auxiliaryPowerUnit**

diagram	<pre> graph LR AP[auxiliaryPowerUnit] --- BAU[baseAuxiliaryPowerUnit] AP --- DTA[defaultTimeArrivals] AP --- DTD[defaultTimeDepartures] AP --- CO[CO] AP --- HC[HC] AP --- NOx[NOx] AP --- SOx[SOx] AP --- PM[PM] </pre> <p>This element supports the definition of custom auxiliary power units. These are most often on-board generators that provide electrical power to the aircraft while its engines are shut down.</p>
children	<code>name baseAuxiliaryPowerUnit defaultTimeArrivals defaultTimeDepartures CO HC NOx SOx PM</code>
used by	element fleet/auxiliaryPowerUnit
annotation	<p>documentation</p> <p>This element supports the definition of custom auxiliary power units. These are most often on-board generators that provide electrical power to the aircraft while its engines are shut down.</p>

element auxiliaryPowerUnit/name

diagram	<p>Identifying name of APU.</p>						
type	apuName						
properties	content simple						
facets	<table> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>30</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	30
Kind	Value Annotation						
minLength	0						
maxLength	30						
annotation	<p>documentation</p> <p>Identifying name of APU.</p>						

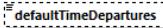
element auxiliaryPowerUnit/baseAuxiliaryPowerUnit

diagram	<p>Base reference name, typically a system name.</p>						
type	apuName						
properties	<table> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> </table>	minOcc	0	maxOcc	1	content	simple
minOcc	0						
maxOcc	1						
content	simple						
facets	<table> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>30</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	30
Kind	Value Annotation						
minLength	0						
maxLength	30						
annotation	<p>documentation</p> <p>Base reference name, typically a system name.</p>						

element auxiliaryPowerUnit/defaultTimeArrivals

diagram	<p>Default length of time APU used for powering arrival aircraft (minutes). Valid values: Nonnegative.</p>								
type	xs:double								
properties	<table> <tr> <td>minOcc</td> <td>0</td> </tr> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> <tr> <td>default</td> <td>0</td> </tr> </table>	minOcc	0	maxOcc	1	content	simple	default	0
minOcc	0								
maxOcc	1								
content	simple								
default	0								
annotation	<p>documentation</p> <p>Default length of time APU used for powering arrival aircraft (minutes). Valid values: Nonnegative.</p>								

element auxiliaryPowerUnit/defaultTimeDepartures

diagram	 defaultTimeDepartures Default length of time APU used for powering departure aircraft (minutes). Valid values: Nonnegative.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Default length of time APU used for powering departure aircraft (minutes). Valid values: Nonnegative.

element auxiliaryPowerUnit/CO

diagram	 CO Amount of carbon monoxide emitted (kg/hour). Valid values [0..#8230;1,000].
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Amount of carbon monoxide emitted (kg/hour). Valid values [0..#8230;1,000].

element auxiliaryPowerUnit/HC

diagram	 HC Amount of hydrocarbons emitted (kg/hour). Valid values [0..#8230;1,000].
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Amount of hydrocarbons emitted (kg/hour). Valid values [0..#8230;1,000].

element auxiliaryPowerUnit/NOx

diagram	 NOx Amount of nitrous oxide emitted (kg/hour). Valid values [0..#8230;1,000].
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Amount of nitrous oxide emitted (kg/hour). Valid values [0..#8230;1,000].

element auxiliaryPowerUnit/SOx

diagram	 SOx Amount of sulfur oxide emitted (kg/hour). Valid values [0..#8230;1,000].
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Amount of sulfur oxide emitted (kg/hour). Valid values [0..#8230;1,000].

element auxiliaryPowerUnit/PM

diagram	 PM Amount of particulate matter emitted (kg/hour). Valid values [0..#8230;1,000].
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Amount of particulate matter emitted (kg/hour). Valid values [0..#8230;1,000].

complexType **bada4ProcedureStep**

diagram	<p>stepNumber</p> <p>Step number of the procedure. Must be unique in a sequence.</p> <p>configId</p> <p>AFCM configuration ID.</p> <p>anpAirplaneId</p> <p>Airplane's ANP ID.</p> <p>anpFlapId</p> <p>Flap-setting identifier.</p> <p>stepType</p> <p>Step type: (L) Level, (D) Descend, (L) Land, (B) Landing decelerate, (T) Takeoff, (C) Climb, (A) Accelerate, (M) Cruise climb, (S) Hold-track distance, (U) Level decelerate, (W) Level idle, (E) Descend decelerate, (F) Descend idle, (P) Percent accelerate.</p> <p>thrustType</p> <p>The thrust type: (T) MaxTakeoff, (S) MaxTakeoffHTemp, (F) MaxTakeoffReduce5, (E) MaxTakeoffReduce5HTemp, (X) MaxTakeoffReduce10, (W) MaxTakeoffReduce10HTemp, (Z) MaxTakeoffReduce15, (Y) MaxTakeoffReduce15HTemp, (C) MaxClimb, (B) MaxClimbHTemp, (D) MaxClimbReduce10, (A) MaxClimbReduce10HTemp, (N) MaxCont, (M) MaxContHTemp, (H) ReducedTakeoff, (G) ReducedTakeoffHTemp, (Q) ReducedClimb, (P) ReducedClimbHTemp, (R) MinimumThrust, (K) UserCutback, (U) UserValue, (V) ReversedThrust, (L) NormalThrust, (I) IdleApproach, (J) IdleApproachHTemp, (O) UnknownThrust.</p> <p>bada4ProcedureStep</p> <p>A single procedure step for the BADA 4 profile.</p> <p>altitude</p> <p>Altitude above runway elevation (ARE) for the procedure step. UNITS: feet.</p> <p>calibratedAirspeed</p> <p>Calibrated airspeed (KCAS). UNITS: knots.</p> <p>mach</p> <p>Mach number for procedure step. Min= 0.0 Max= 10.0 UNITS: Dimensionless.</p> <p>thrust</p> <p>Thrust in pounds.</p> <p>angle</p> <p>Climb or descend angle in degrees. Valid values: 0.00 to 180.00. UNITS: decimal degrees.</p> <p>climbRate</p> <p>Climb rate in feet per minute.</p> <p>distance</p> <p>Flight segment length in feet.</p> <p>percent</p> <p>Defines how much energy is spent on acceleration.</p> <p>gearDown</p> <p>Flag representing if the landing gear is down(1) or not down(0).</p>
children	stepNumber configId anpAirplaneId anpFlapId stepType thrustType altitude calibratedAirspeed mach thrust angle climbRate distance percent gearDown
used by	element bada4ProcedureSteps/step
annotation	<p>documentation</p> <p>A single procedure step for the BADA 4 profile.</p>

element bada4ProcedureStep/stepNumber

diagram	<p>stepNumber</p> <p>Step number of the procedure. Must be unique in a sequence.</p>
type	xs:int
properties	content simple
annotation	documentation

Step number of the procedure. Must be unique in a sequence.

element **bada4ProcedureStep/configId**

diagram	 configId AFCM configuration ID.
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation AFCM configuration ID.

element **bada4ProcedureStep/anpAirplaneId**

diagram	 anpAirplaneId Airplane's ANP ID.
type	anpAirplaneId
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255

element **bada4ProcedureStep/anpFlapId**

diagram	 anpFlapId Flap-setting identifier.
type	anpFlapId
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 6
annotation	documentation Flap-setting identifier.

element **bada4ProcedureStep/stepType**

diagram	 stepType Step type: (L) Level, (D) Descend, (L) Land, (B) Landing decelerate, (T) Takeoff, (C) Climb, (A) Accelerate, (M) Cruise climb, (S) Fit-to-track distance, (U) Level decelerate (U), (W) Level idle, (E) Descend decelerate, (F) Descend idle, (P) Percent accelerate.
type	string1
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Step type: (L) Level, (D) Descend, (L) Land, (B) Landing decelerate, (T) Takeoff, (C) Climb, (A) Accelerate, (M) Cruise climb, (S) Fit-to-track distance, (U) Level decelerate (U), (W) Level idle, (E) Descend decelerate, (F) Descend idle, (P) Percent accelerate.

element **bada4ProcedureStep/thrustType**

diagram	<pre><code>graph TD; thrustType[thrustType] Thrust type: (T) MaxTakeoff,(S) MaxTakeoffHiTemp,(F) MaxTakeoffReduce05,(E) MaxTakeoffReduce05HiTemp p,(X) MaxTakeoffReduce10, (W) MaxTakeoffReduce10HiTemp p,(Z) MaxTakeoffReduce15, (Y) MaxTakeoffReduce15HiTemp p,(C) MaxClimb,(B) MaxClimbHiTemp,(D) MaxClimbReduce10,(A) MaxClimbReduce10HiTemp, (N) MaxCont,(M) MaxContHiTemp,(H) ReducedTakeoff,(G) ReducedTakeoffHiTemp,(Q) ReducedClimb,(P) ReducedClimbHiTemp,(R) MinimumThrust,(K) UserCutback,(U) UserValue,(V) ReversedThrust,(L) NormalThrust,(I) IdleApproach,(J) IdleApproachHiTemp,(I') UnknownThrust.</code></pre>
type	<code>string1</code>
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Thrust type: (T) MaxTakeoff, (S) MaxTakeoffHiTemp, (F) MaxTakeoffReduce05, (E) MaxTakeoffReduce05HiTemp, (X) MaxTakeoffReduce10, (W) MaxTakeoffReduce10HiTemp, (Z) MaxTakeoffReduce15, (Y) MaxTakeoffReduce15HiTemp, (C) MaxClimb, (B) MaxClimbHiTemp, (D) MaxClimbReduce10, (A) MaxClimbReduce10HiTemp, (N) MaxCont, (M) MaxContHiTemp, (H) ReducedTakeoff, (G) ReducedTakeoffHiTemp, (Q) ReducedClimb, (P) ReducedClimbHiTemp, (R) MinimumThrust, (K) UserCutback, (U) UserValue, (V) ReversedThrust, (L) NormalThrust, (I) IdleApproach, (J) IdleApproachHiTemp, (I') UnknownThrust.

element bada4ProcedureStep/altitude

diagram	<pre><code>graph TD; altitude[altitude] Altitude above runway elevation (ARE) for the procedure step. UNITS: feet.</code></pre>
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Altitude above runway elevation (ARE) for the procedure step. UNITS: feet.

element bada4ProcedureStep/calibratedAirspeed

diagram	<pre><code>graph TD; calibratedAirspeed[calibratedAirspeed] Calibrated airspeed (KCAS). UNITS: knots.</code></pre>
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Calibrated airspeed (KCAS). UNITS: knots.

element bada4ProcedureStep/mach

diagram	<pre><code>graph TD; mach[mach] Mach number for procedure step. Min= 0.0 Max= 10.0 UNITS: Dimensionless.</code></pre>
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Mach number for procedure step. Min= 0.0 Max= 10.0 UNITS: Dimensionless.

element bada4ProcedureStep/thrust

diagram	<pre><code>graph TD; thrust[thrust] Thrust in pounds.</code></pre>
type	<code>xs:double</code>
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Thrust in pounds.

element **bada4ProcedureStep/angle**

diagram	
	angle Climb or descend angle in degrees. Valid values: 0.00 to 180.00. UNITS: decimal degrees.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Climb or descend angle in degrees. Valid values: 0.00 to 180.00. UNITS: decimal degrees.

element **bada4ProcedureStep/climbRate**

diagram	
	climbRate Climb rate in feet per minute.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Climb rate in feet per minute.

element **bada4ProcedureStep/distance**

diagram	
	distance Flight segment length in feet.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Flight segment length in feet.

element **bada4ProcedureStep/percent**

diagram	
	percent Defines how much energy is spent on acceleration.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Defines how much energy is spent on acceleration.

element **bada4ProcedureStep/gearDown**

diagram	
	gearDown Flag representing if the landing gear is down(1) or not down(0).
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Flag representing if the landing gear is down(1) or not down(0).

complexType **bada4ProcedureSteps**

diagram	
	bada4ProcedureSteps step Set of procedure steps associated with this BADA 4 profile. 1..∞ A BADA 4 procedure step.
children	step
used by	element bada4Profile/bada4ProcedureSteps
annotation	documentation Set of procedure steps associated with this BADA 4 profile.

element **bada4ProcedureSteps/step**

diagram	<pre> classDiagram class bada4ProcedureStep { stepNumber configId anpAirplaneId anpFlapId stepType thrustType altitude calibratedAirspeed mach thrust angle climbRate distance percent gearDown } step < -- bada4ProcedureStep step "1..∞" --> bada4ProcedureStep note over step: A BADA 4 procedure step. </pre> <p>A BADA 4 procedure step.</p>
type	bada4ProcedureStep
properties	minOcc 1 maxOcc unbounded content complex
children	stepNumber configId anpAirplaneId anpFlapId stepType thrustType altitude calibratedAirspeed mach thrust angle climbRate distance percent gearDown
annotation	documentation A BADA 4 procedure step.

complexType **bada4Profile**

diagram	<pre> graph LR bada4Profile[bada4Profile] --- operationType[operationType] bada4Profile --- flightProcedure[flightProcedure] bada4Profile --- weightClass[weightClass] bada4Profile --- bada4ProcedureSteps[bada4ProcedureSteps] </pre> <p>bada4Profile BADA 4 profile data element.</p> <p>operationType Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&amp;Go), F (CircuitFlt), V (OverFlt)</p> <p>flightProcedure Flight procedure identifier. Typically STANDARD, ICAO A, ICAO B or user defined.</p> <p>weightClass Formerly known as STAGE LENGTH.</p> <p>weight Weight in pounds.</p> <p>bada4ProcedureSteps Set of procedure steps associated with this BADA 4 profile.</p>
children	operationType flightProcedure weightClass weight bada4ProcedureSteps
used by	element bada4ProfileSet/bada4profile
annotation	documentation BADA 4 profile data element.

element bada4Profile/operationType

diagram	<pre> graph LR operationType[operationType] --- string1[string1] </pre> <p>operationType Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&amp;Go), F (CircuitFlt), V (OverFlt)</p>
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Operation associated with this profile. Valid values: A (Approach), D (Depart), T (Touch&Go), F (CircuitFlt), V (OverFlt)

element bada4Profile/flightProcedure

diagram	<pre> graph LR flightProcedure[flightProcedure] --- string255[string255] </pre> <p>flightProcedure Flight procedure identifier. Typically STANDARD, ICAO A, ICAO B or user defined.</p>
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Flight procedure identifier. Typically STANDARD, ICAO A, ICAO B or user defined.

element bada4Profile/weightClass

diagram	<pre> graph LR weightClass[weightClass] --- string1[string1] </pre> <p>weightClass Formerly known as STAGE LENGTH.</p>
type	string1
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation Formerly known as STAGE LENGTH.

element bada4Profile/weight

diagram	<pre> graph LR weight[weight] --- xsint[xs:int] </pre> <p>weight Weight in pounds.</p>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Weight in pounds.

element bada4Profile/bada4ProcedureSteps

diagram	<p>bada4ProcedureSteps Set of procedure steps associated with this BADA 4 profile.</p> <p>step A BADA 4 procedure step.</p>
type	bada4ProcedureSteps
properties	content complex
children	step
annotation	documentation Set of procedure steps associated with this BADA 4 profile.

complexType bada4ProfileSet

diagram	<p>bada4ProfileSet A profile set for an BADA4 airplane.</p> <p>bada4profile One or more BADA 4 profiles.</p>
children	anpAirplaneId bada4AirplaneModel bada4Engine bada4Suffix bada4profile
used by	element fleet/bada4ProfileSet
annotation	documentation A profile set for an BADA4 airplane.

element bada4ProfileSet/anpAirplaneId

diagram	<p>anpAirplaneId Airplane's ANP ID.</p>
type	anpAirplaneId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airplane's ANP ID.

element bada4ProfileSet/bada4AirplaneModel

diagram	<p>bada4AirplaneModel Airplane's BADA 4 model.</p>
type	bada4AirplaneModel
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airplane's BADA 4 model.

element bada4ProfileSet/bada4Engine

diagram	<p>bada4Engine Airplane's BADA 4 engine.</p>
type	bada4Engine
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airplane's BADA 4 engine.

element bada4ProfileSet/bada4Suffix

diagram	<p>bada4Suffix User-defined BADA 4 model suffix.</p>
type	bada4Suffix

properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation User-defined BADA 4 model suffix.

element **bada4ProfileSet/bada4profile**

diagram	<pre> classDiagram class bada4Profile { operationType flightProcedure weightClass weight bada4ProcedureSteps } bada4Profile "1..∞" --> "bada4Profile" bada4Profile "operationType" bada4Profile "flightProcedure" bada4Profile "weightClass" bada4Profile "weight" bada4Profile "bada4ProcedureSteps" </pre>
type	bada4Profile
properties	minOcc 1 maxOcc unbounded content complex
children	operationType flightProcedure weightClass weight bada4ProcedureSteps
annotation	documentation One or more BADA 4 profiles.

complexType **badaAirplane**

diagram	<p>badaAirplane</p> <p>Block used to create a user defined BADA airplane.</p>
children	badaAirplaneId mfgDescription numEngines engineTypeCode wakeCategory referenceAircraftMass minAircraftMass maxAircraftMass maxPayloadMass weightGradient maxOperatingSpeed maxOperatingMachNumber maxOperatingAltitude maxAltitudeAtMaxTakeoffWeight temperatureGradientOnMaximumAltitude wingSurfaceArea buffetOnsetLiftCoeff buffetingGradient machDragCoeff
used by	element fleet/badaAirplane
annotation	<p>documentation</p> <p>Block used to create a user defined BADA airplane.</p>

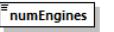
element badaAirplane/badaAirplaneId

diagram							
type	badaAirplaneId						
properties	content simple						
facets	<table> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>255</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	255
Kind	Value Annotation						
minLength	0						
maxLength	255						
annotation	<p>documentation</p> <p>ID of a BADA airplane model. Must be unique.</p>						

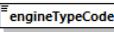
element **badaAirplane/mfgDescription**

diagram	 mfgDescription Manufacturer description.
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Manufacturer description.

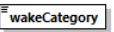
element **badaAirplane/numEngines**

diagram	 numEngines The number of engines.
type	xs:int
properties	content simple
annotation	documentation The number of engines.

element **badaAirplane/engineTypeCode**

diagram	 engineTypeCode The engine type code: J/T/P.
type	engineType
properties	content simple
facets	Kind Value Annotation pattern Jet J Turbo Turboprop T Prop Piston P
annotation	documentation The engine type code: J/T/P.

element **badaAirplane/wakeCategory**

diagram	 wakeCategory The wake category.
type	badaWakeType
properties	content simple
facets	Kind Value Annotation pattern Heavy H Light L Medium M SuperHeavy S
annotation	documentation The wake category.

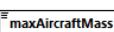
element **badaAirplane/referenceAircraftMass**

diagram	 referenceAircraftMass Minimum aircraft mass (min = 0.0, max = 455.0, metric ton).
type	xs:double
properties	content simple
annotation	documentation Minimum aircraft mass (min = 0.0, max = 455.0, metric ton).

element **badaAirplane/minAircraftMass**

diagram	 minAircraftMass Minimum aircraft mass (min = 0.0, max = 455.0, metric ton).
type	xs:double
properties	content simple
annotation	documentation Minimum aircraft mass (min = 0.0, max = 455.0, metric ton).

element **badaAirplane/maxAircraftMass**

diagram	 maxAircraftMass Maximum aircraft mass (min = 0.0, max = 455.0, metric ton).
type	xs:double
properties	content simple
annotation	documentation

Maximum aircraft mass (min = 0.0, max = 455.0, metric ton).

element badaAirplane/maxPayloadMass

diagram	maxPayloadMass Maximum payload mass (min = 0.0, max = 455.0, (metric ton)).
type	xs:double
properties	content simple
annotation	documentation Maximum payload mass (min = 0.0, max = 455.0, (metric ton)).

element badaAirplane/weightGradient

diagram	weightGradient Weight gradient on maximum altitude (min = 0.0, max = 10.0, feet/kg).
type	xs:double
properties	content simple
annotation	documentation Weight gradient on maximum altitude (min = 0.0, max = 10.0, feet/kg).

element badaAirplane/maxOperatingSpeed

diagram	maxOperatingSpeed Maximum operating speed (KCAS) (min = 0.0, max = 600.0, UNITS: knots).
type	xs:double
properties	content simple
annotation	documentation Maximum operating speed (KCAS) (min = 0.0, max = 600.0, UNITS: knots).

element badaAirplane/maxOperatingMachNumber

diagram	maxOperatingMachNumber Maximum operating Mach number (min = 0.0, max = 10.0, UNITS: dimensionless).
type	xs:double
properties	content simple
annotation	documentation Maximum operating Mach number (min = 0.0, max = 10.0, UNITS: dimensionless).

element badaAirplane/maxOperatingAltitude

diagram	maxOperatingAltitude Maximum operating altitude (min = -9999.0, max = 60000.0, UNITS: feet, pressure altitude).
type	xs:double
properties	content simple
annotation	documentation Maximum operating altitude (min = -9999.0, max = 60000.0, UNITS: feet, pressure altitude).

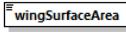
element badaAirplane/maxAltitudeAtMaxTakeoffWeight

diagram	maxAltitudeAtMaxTakeoffWeight Maximum altitude at maximum takeoff weight and ISA (Min = -9999.0, Max = 60000.0, UNITS: feet, pressure altitude).
type	xs:double
properties	content simple
annotation	documentation Maximum altitude at maximum takeoff weight and ISA (Min = -9999.0, Max = 60000.0, UNITS: feet, pressure altitude).

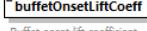
element badaAirplane/temperatureGradientOnMaximumAltitude

diagram	temperatureGradientOnMaximum... Temperature gradient on maximum altitude.
type	xs:double
properties	content simple
annotation	documentation Temperature gradient on maximum altitude.

element badaAirplane/wingSurfaceArea

diagram	 Wing surface area (min = 0.0, max = 1000.0, square meters).
type	xs:double
properties	content simple
annotation	documentation Wing surface area (min = 0.0, max = 1000.0, square meters).

element **badaAirplane/buffetOnsetLiftCoeff**

diagram	 Buffet onset lift coefficient (jet only) (min = 0.0, max = 10.0).
type	xs:double
properties	content simple
annotation	documentation Buffet onset lift coefficient (jet only) (min = 0.0, max = 10.0).

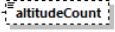
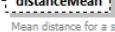
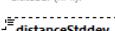
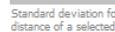
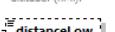
element **badaAirplane/buffetingGradient**

diagram	 Buffeting gradient (jet only).
type	xs:double
properties	content simple
annotation	documentation Buffeting gradient (jet only).

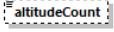
element **badaAirplane/machDragCoeff**

diagram	 Mach drag coefficient (min = 0.0, max = 10.0).
type	xs:double
properties	content simple
annotation	documentation Mach drag coefficient (min = 0.0, max = 10.0).

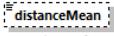
complexType **badaAltitudeDistribution**

diagram	 BADA altitude distribution data.  <ul style="list-style-type: none">  Flight counts for a selected altitude.  Mean distance for a selected altitude. (nMi).  Standard deviation for the distance of a selected altitude. (nMi).  Min distance for a selected altitude. (nMi).  Maximum distance for a selected altitude. (nMi).  The selected cruise altitude MSL. UNITS: feet.
children	altitudeCount distanceMean distanceStddev distanceLow distanceHigh altitude
used by	element badaAltitudeDistributionSet/altitudeDistribution
annotation	documentation BADA altitude distribution data.

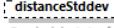
element **badaAltitudeDistribution/altitudeCount**

diagram	 Flight counts for a selected altitude.
type	xs:int
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Flight counts for a selected altitude.

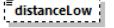
element **badaAltitudeDistribution/distanceMean**

diagram	 Mean distance for a selected altitude. (nMi).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Mean distance for a selected altitude. (nMi).

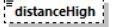
element **badaAltitudeDistribution/distanceStddev**

diagram	 Standard deviation for the distance of a selected altitude. (nMi).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Standard deviation for the distance of a selected altitude. (nMi).

element **badaAltitudeDistribution/distanceLow**

diagram	 Min distance for a selected altitude. (nMi).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Min distance for a selected altitude. (nMi).

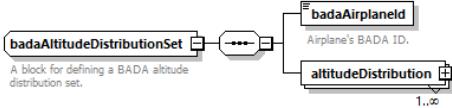
element **badaAltitudeDistribution/distanceHigh**

diagram	 Maximum distance for a selected altitude. (nMi).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Maximum distance for a selected altitude. (nMi).

element **badaAltitudeDistribution/altitude**

diagram	 The selected cruise altitude MSL. UNITS: feet.
type	xs:int
properties	content simple
annotation	documentation The selected cruise altitude MSL. UNITS: feet.

complexType **badaAltitudeDistributionSet**

diagram	 A block for defining a BADA altitude distribution set. badaAirplaneId Airplane's BADA ID. altitudeDistribution 1..∞
children	badaAirplaneId altitudeDistribution
used by	elements fleet/badaAltitudeDistributionSet fleet/badaDefaultAltitudeDistributionSet
annotation	documentation A block for defining a BADA altitude distribution set.

element **badaAltitudeDistributionSet/badaAirplaneId**

diagram	 Airplane's BADA ID.
type	badaAirplaneId
properties	content simple
facets	Kind Value Annotation minLength 0

	maxLength 255
annotation	documentation Airplane's BADA ID.

element **badaAltitudeDistributionSet/altitudeDistribution**

diagram	<pre> graph LR subgraph badaAltitudeDistributionSet [] direction TB altitudeCount["altitudeCount
Flight counts for a selected altitude."] distanceMean["distanceMean
Mean distance for a selected altitude. (nMi)."] distanceStddev["distanceStddev
Standard deviation for the distance of a selected altitude. (nMi)."] distanceLow["distanceLow
Min distance for a selected altitude. (nMi)."] distanceHigh["distanceHigh
Maximum distance for a selected altitude. (nMi)."] altitude["altitude
The selected cruise altitude MSL. UNITS: feet."] end altitudeDistribution["altitudeDistribution"] -- "1..∞" --> badaAltitudeDistributionSet </pre>
type	badaAltitudeDistribution
properties	minOcc 1 maxOcc unbounded content complex
children	altitudeCount distanceMean distanceStddev distanceLow distanceHigh altitude

complexType **badaConfig**

diagram	<pre> graph LR subgraph badaConfig [badaConfig] direction TB phase["phase
The phase of flight (IC=initial climb, TO=take-off, AP=approach, LD=landing)."] configName["configName
The configuration identifier."] stallSpeed["stallSpeed
Stall speed, CAS. Valid values: 0.0 through 600.0. UNITS: knots."] parasiticDrag["parasiticDrag
The parasitic drag coefficient. Valid values: 0.0 through 10.0."] inducedDrag["inducedDrag
The induced drag coefficient. Valid values: 0.0 through 10.0."] end </pre>
children	phase configName stallSpeed parasiticDrag inducedDrag
used by	element badaConfigSet/badaConfig
annotation	documentation BADA Configuration Coefficient data.

element **badaConfig/phase**

diagram	<pre> graph LR subgraph phase [phase] direction TB phase_desc[".The phase of flight (IC=initial climb, TO=take-off, AP=approach, LD=landing)."] end </pre>
type	badaPhaseType
properties	content simple
facets	Kind Value Annotation pattern InitialClimb IC Takeoff TO Approach AP Landing LD Cruise CR
annotation	documentation .The phase of flight (IC=initial climb, TO=take-off, AP=approach, LD=landing).

element **badaConfig/configName**

diagram	<pre> graph LR subgraph configName [configName] direction TB configName_desc["The configuration identifier."] end </pre>
type	string10
properties	minOcc 0 maxOcc 1 content simple

	<p>facets</p> <table> <thead> <tr> <th>Kind</th><th>Value</th><th>Annotation</th></tr> </thead> <tbody> <tr> <td>minLength</td><td>0</td><td></td></tr> <tr> <td>maxLength</td><td>10</td><td></td></tr> </tbody> </table>	Kind	Value	Annotation	minLength	0		maxLength	10	
Kind	Value	Annotation								
minLength	0									
maxLength	10									
annotation	documentation The configuration identifier.									

element **badaConfig/stallSpeed**

diagram	<p>The stall speed, CAS. Valid values: 0.0 through 600.0. UNITS: knots.</p>
type	xs:double
properties	<p>minOcc 0</p> <p>maxOcc 1</p> <p>content simple</p>
annotation	documentation Stall speed, CAS. Valid values: 0.0 through 600.0. UNITS: knots.

element **badaConfig/parasiticDrag**

diagram	<p>The parasitic drag coefficient. Valid values: 0.0 through 10.0.</p>
type	xs:double
properties	<p>minOcc 0</p> <p>maxOcc 1</p> <p>content simple</p>
annotation	documentation The parasitic drag coefficient. Valid values: 0.0 through 10.0.

element **badaConfig/inducedDrag**

diagram	<p>The induced drag coefficient. Valid values: 0.0 through 10.0.</p>
type	xs:double
properties	<p>minOcc 0</p> <p>maxOcc 1</p> <p>content simple</p>
annotation	documentation The induced drag coefficient. Valid values: 0.0 through 10.0.

complexType **badaConfigSet**

diagram	<p>A block for a custom BADA airplane configuration coefficient set.</p> <p>The BADA airplane ID for the profile set.</p> <p>The BADA configuration coefficient data.</p>
children	badaAirplaneId badaConfig
used by	element fleet/badaConfigSet
annotation	documentation A block for a custom BADA airplane configuration coefficient set.

element **badaConfigSet/badaAirplaneId**

diagram	<p>The BADA airplane ID for the profile set.</p>									
type	badaAirplaneId									
properties	content simple									
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>255</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	minLength	0		maxLength	255	
Kind	Value	Annotation								
minLength	0									
maxLength	255									
annotation	documentation The BADA airplane ID for the profile set.									

element **badaConfigSet/badaConfig**

diagram	<pre> classDiagram class badaConfig { <<The BADA configuration coefficient data.>> 1..∞ } class phase { <<.The phase of flight (IC=initial climb, TO=take-off, AP=approach, LD=landing).>> } class configName { <<The configuration identifier.>> } class stallSpeed { <<Stall speed, CAS. Valid values: 0.0 through 600.0. UNITS: knots.>> } class parasiticDrag { <<The parasitic drag coefficient. Valid values: 0.0 through 10.0.>> } class inducedDrag { <<The induced drag coefficient. Valid values: 0.0 through 10.0.>> } badaConfig "1..∞" --> phase : badaConfig "1..∞" --> configName : badaConfig "1..∞" --> stallSpeed : badaConfig "1..∞" --> parasiticDrag : badaConfig "1..∞" --> inducedDrag : </pre>
type	badaConfig
properties	minOcc 1 maxOcc unbounded content complex
children	phase configName stallSpeed parasiticDrag inducedDrag
annotation	documentation The BADA configuration coefficient data.

complexType **badaFuel**

diagram	<pre> classDiagram class badaFuel { <<A BADA Fuel data record.>> 1..∞ } class badaAirplaneId { <<The BADA aircraft ID>> } class coeff_CF1 { <<1st thrust specific fuel consumption coefficient. Valid values: 0.0 through 10.0. Variable units. (kg/(min*kN)) (jet); (kg/(min*kN* knot)); (turbo prop); kg/min (piston)>> } class coeff_CF2 { <<2nd thrust specific fuel consumption coefficient. Valid values: 0.0 through 1. UNITS: knots.>> } class coeff_CF3 { <<1st descent fuel flow coefficient. Min= Valid values: 0.0 through 100.0.(kg/min)>> } class coeff_CF4 { <<2nd descent fuel flow coefficient. Valid values: 0.0 through 1. (feet)>> } class coeff_CR { <<Cruise fuel flow correction coefficient. Valid values: 0.0 through 10.0.>> } badaFuel "1..∞" --> badaAirplaneId : badaFuel "1..∞" --> coeff_CF1 : badaFuel "1..∞" --> coeff_CF2 : badaFuel "1..∞" --> coeff_CF3 : badaFuel "1..∞" --> coeff_CF4 : badaFuel "1..∞" --> coeff_CR : </pre>
children	badaAirplaneId coeff_CF1 coeff_CF2 coeff_CF3 coeff_CF4 coeff_CR
used by	element fleet/badaFuel
annotation	documentation A BADA Fuel data record.

element **badaFuel/badaAirplaneId**

diagram	<pre> classDiagram class badaAirplaneId { <<The BADA aircraft ID>> 1..∞ } </pre>
type	badaAirplaneId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The BADA aircraft ID

element **badaFuel/coeff_CF1**

diagram	<pre> classDiagram class coeff_CF1 { <<1st thrust specific fuel consumption coefficient. Valid values: 0.0 through 10.0. Variable units. (kg/(min*kN)) (jet); (kg/(min*kN* knot)); (turbo prop); kg/min (piston)>> } </pre>
---------	---

	<p>type xs:double</p> <p>properties content simple</p> <p>annotation documentation 1st thrust specific fuel consumption coefficient. Valid values: 0.0 through 10.0. Variable units. (kg/(min•kN) (jet); kg/(min•kN•knot); (turboprop); kg/min (piston))</p>
--	---

element **badaFuel/coeff_CF2**

diagram	<p>coeff_CF2 2nd thrust specific fuel consumption coefficient. Valid values: 0.0 through 1. UNITS: knots.</p>
type	xs:double
properties	content simple
annotation	documentation 2nd thrust specific fuel consumption coefficient. Valid values: 0.0 through 1. UNITS: knots.

element **badaFuel/coeff_CF3**

diagram	<p>coeff_CF3 1st descent fuel flow coefficient. Min= Valid values: 0.0 through 100.0.(kg/min)</p>
type	xs:double
properties	content simple
annotation	documentation 1st descent fuel flow coefficient. Min= Valid values: 0.0 through 100.0.(kg/min)

element **badaFuel/coeff_CF4**

diagram	<p>coeff_CF4 2nd descent fuel flow coefficient. Valid values: 0.0 through 1. (feet)</p>
type	xs:double
properties	content simple
annotation	documentation 2nd descent fuel flow coefficient. Valid values: 0.0 through 1. (feet)

element **badaFuel/coeff_CR**

diagram	<p>coeff_CR Cruise fuel flow correction coefficient. Valid values: 0.0 through 10.0.</p>
type	xs:double
properties	content simple
annotation	documentation Cruise fuel flow correction coefficient. Valid values: 0.0 through 10.0.

complexType **badaProfile**

diagram	<pre> classDiagram class badaProfile { massRangeValue companyCode1 companyCode2 companyName aircraftVersion engine climbSpeedBelowTransitionAltitude climbSpeedAboveTransitionAltitude climbMachNumber cruiseSpeedBelowTransitionAltitude cruiseSpeedAboveTransitionAltitude cruiseMachNumber descentSpeedUnderTransitionAltitude descentSpeedOverTransitionAltitude descentMachNumber } badaProfile < --> APFRecord APFRecord --> massRangeValue APFRecord --> companyCode1 APFRecord --> companyCode2 APFRecord --> companyName APFRecord --> aircraftVersion APFRecord --> engine APFRecord --> climbSpeedBelowTransitionAltitude APFRecord --> climbSpeedAboveTransitionAltitude APFRecord --> climbMachNumber APFRecord --> cruiseSpeedBelowTransitionAltitude APFRecord --> cruiseSpeedAboveTransitionAltitude APFRecord --> cruiseMachNumber APFRecord --> descentSpeedUnderTransitionAltitude APFRecord --> descentSpeedOverTransitionAltitude APFRecord --> descentMachNumber </pre> <p>A BADA profile APF (airline procedures file) record.</p>
children	massRangeValue companyCode1 companyCode2 companyName aircraftVersion engine climbSpeedBelowTransitionAltitude climbSpeedAboveTransitionAltitude climbMachNumber cruiseSpeedBelowTransitionAltitude cruiseSpeedAboveTransitionAltitude cruiseMachNumber descentSpeedUnderTransitionAltitude descentSpeedOverTransitionAltitude descentMachNumber
used by	element badaProfileSet/profile
annotation	documentation A BADA profile APF (airline procedures file) record.

element badaProfile/massRangeValue

diagram	<pre> classDiagram class massRangeValue { Mass range. Valid values: LO (low range), AV (average range), HI (high range). } </pre>
type	string2
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 2


Mass range. Valid values: LO (low range), AV (average range), HI (high range).

element badaProfile/companyCode1


diagram	<pre> classDiagram class companyCode1 { Three-letter company code. } </pre>
type	string3

properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 3
annotation	documentation Three-letter company code.


element **badaProfile/companyCode2**

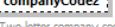diagram	 Two-letter company code.
type	<u>string2</u>
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 2
annotation	documentation Two-letter company code.

element **badaProfile/companyName**

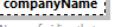diagram	 Name of airline that uses this procedure.
type	<u>string15</u>
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 15
annotation	documentation Name of airline that uses this procedure.


element **badaProfile/aircraftVersion**

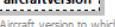diagram	 Aircraft version to which this procedure applies.
type	<u>string12</u>
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 12
annotation	documentation Aircraft version to which this procedure applies.

element **badaProfile/engine**

diagram	 Engine identifier.
type	<u>string12</u>
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 12
annotation	documentation Engine identifier.

element **badaProfile/climbSpeedBelowTransitionAltitude**

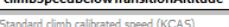diagram	 Standard climb calibrated speed (KCAS) between 1,500 / 6,000 and 10,000 ft (MSL). Min= 0.0 Max= 600.0: UNITS: knots.
type	<u>xs:short</u>
properties	content simple
annotation	documentation Standard climb calibrated speed (KCAS) between 1,500 / 6,000 and 10,000 ft (MSL). Min= 0.0 Max= 600.0: UNITS: knots.

element **badaProfile/climbSpeedAboveTransitionAltitude**

diagram	 climbSpeedAboveTransitionAltitude Standard climb speed (KCAS) between 10,000 ft (MSL) and Mach transition altitude. Min= 0.0 Max= 600.0; UNITS: knots.
type	xs:short
properties	content simple
annotation	documentation Standard climb speed (KCAS) between 10,000 ft (MSL) and Mach transition altitude. Min= 0.0 Max= 600.0; UNITS: knots.

element **badaProfile/climbMachNumber**

diagram	 climbMachNumber Standard climb Mach number above Mach transition altitude (MSL). Min= 0.0 Max= 10.0. UNITS: Dimensionless.
type	xs:double
properties	content simple
annotation	documentation Standard climb Mach number above Mach transition altitude (MSL). Min= 0.0 Max= 10.0. UNITS: Dimensionless.

element **badaProfile/cruiseSpeedBelowTransitionAltitude**

diagram	 cruiseSpeedBelowTransitionAltitude Standard cruise speed (KCAS) between 3,000 and 10,000 ft (MSL). Min= 0.0 Max= 600.0; UNITS: knots.
type	xs:short
properties	content simple
annotation	documentation Standard cruise speed (KCAS) between 3,000 and 10,000 ft (MSL). Min= 0.0 Max= 600.0; UNITS: knots.

element **badaProfile/cruiseSpeedAboveTransitionAltitude**

diagram	 cruiseSpeedAboveTransitionAltitude Standard cruise speed (KCAS) above 10,000 ft (MSL) until Mach transition altitude. Min= 0.0 Max= 600.0; UNITS: knots.
type	xs:short
properties	content simple
annotation	documentation Standard cruise speed (KCAS) above 10,000 ft (MSL) until Mach transition altitude. Min= 0.0 Max= 600.0; UNITS: knots.

element **badaProfile/cruiseMachNumber**

diagram	 cruiseMachNumber Standard cruise Mach number above transition altitude (MSL). Min= 0.0 Max= 10.0. UNITS: Dimensionless.
type	xs:double
properties	content simple
annotation	documentation Standard cruise Mach number above transition altitude (MSL). Min= 0.0 Max= 10.0. UNITS: Dimensionless.

element **badaProfile/descentSpeedUnderTransitionAltitude**

diagram	 descentSpeedUnderTransitionAltitude Standard descent speed (KCAS) between 3,000 / 6,000 and 10,000 ft (MSL). Min= 0.0 Max= 600.0. UNITS: knots.
type	xs:short
properties	content simple
annotation	documentation Standard descent speed (KCAS) between 3,000 / 6,000 and 10,000 ft (MSL). Min= 0.0 Max= 600.0. UNITS: knots.

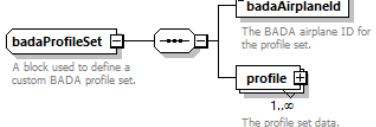
element **badaProfile/descentSpeedOverTransitionAltitude**

diagram	 descentSpeedOverTransitionAltitude Standard descent speed (KCAS) above 10,000 ft (MSL) until Mach transition. Min= 0.0 Max= 600.0. UNITS: knots.
type	xs:short
properties	content simple
annotation	documentation Standard descent speed (KCAS) above 10,000 ft (MSL) until Mach transition. Min= 0.0 Max= 600.0. UNITS: knots.

element **badaProfile/descentMachNumber**

diagram	
	<p>Standard descent Mach number above transition altitude (MSL). Min= 0.0 Max= 10.0 UNITS: Dimensionless.</p>
type	xs:double
properties	content simple
annotation	documentation Standard descent Mach number above transition altitude (MSL). Min= 0.0 Max= 10.0 UNITS: Dimensionless.

complexType **badaProfileSet**

diagram	
children	badaAirplaneId profile
used by	element fleet/badaProfileSet
annotation	documentation A block used to define a custom BADA profile set.

element **badaProfileSet/badaAirplaneId**

diagram	
	<p>The BADA airplane ID for the profile set.</p>
type	badaAirplaneId
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The BADA airplane ID for the profile set.

element **badaProfileSet/profile**

diagram	<pre> classDiagram class badaProfile { massRangeValue companyCode1 companyCode2 companyName aircraftVersion engine climbSpeedBelowTransitionAltitude climbSpeedAboveTransitionAltitude climbMachNumber cruiseSpeedBelowTransitionAltitude cruiseSpeedAboveTransitionAltitude cruiseMachNumber descentSpeedUnderTransitionAltitude descentSpeedOverTransitionAltitude descentMachNumber } profile "1..∞" --> badaProfile : The profile set data. </pre>
type	badaProfile
properties	minOcc 1 maxOcc unbounded content complex
children	massRangeValue companyCode1 companyCode2 companyName aircraftVersion engine climbSpeedBelowTransitionAltitude climbSpeedAboveTransitionAltitude climbMachNumber cruiseSpeedBelowTransitionAltitude cruiseSpeedAboveTransitionAltitude cruiseMachNumber descentSpeedUnderTransitionAltitude descentSpeedOverTransitionAltitude descentMachNumber
annotation	documentation The profile set data.

complexType **badaThrust**

diagram	<pre> classDiagram class badaThrust { <<A custom BADA thrust data record.>> } class badaAirplaneId { <<The BADA airplane ID.>> } class coeff_TC1 class coeff_TC2 class coeff_TC3 class coeff_TC4 class coeff_TC5 class coeff_TDL class coeff_TDH class coeff_APP class coeff_LD class descentAlt class descentSpeed class descentMach class notes badaThrust "3" --> badaAirplaneId badaAirplaneId --> coeff_TC1 coeff_TC1 --> coeff_TC2 coeff_TC2 --> coeff_TC3 coeff_TC3 --> coeff_TC4 coeff_TC4 --> coeff_TC5 coeff_TC5 --> coeff_TDL coeff_TDL --> coeff_TDH coeff_TDH --> coeff_APP coeff_APP --> coeff_LD coeff_LD --> descentAlt descentAlt --> descentSpeed descentSpeed --> descentMach descentMach --> notes </pre>
children	<code>badaAirplaneId coeff_TC1 coeff_TC2 coeff_TC3 coeff_TC4 coeff_TC5 coeff_TDL coeff_TDH coeff_APP coeff_LD descentAlt descentSpeed descentMach notes</code>
used by	element fleet/badaThrust
annotation	documentation A custom BADA thrust data record.

element badaThrust/badaAirplaneId

diagram	<pre> classDiagram class badaAirplaneId { <<The BADA airplane ID.>> } </pre>						
type	<code>badaAirplaneId</code>						
properties	content simple						
facets	<table border="1"> <tr> <td>Kind</td> <td>Value Annotation</td> </tr> <tr> <td>minLength</td> <td>0</td> </tr> <tr> <td>maxLength</td> <td>255</td> </tr> </table>	Kind	Value Annotation	minLength	0	maxLength	255
Kind	Value Annotation						
minLength	0						
maxLength	255						
annotation	documentation The BADA airplane ID.						

element badaThrust/coeff_TC1

diagram	<pre> classDiagram class coeff_TC1 { <<1st max climb thrust coefficient. Valid values: 0.0 through 1.>> } </pre>
type	<code>xs:double</code>
properties	content simple
annotation	documentation 1st max climb thrust coefficient. Valid values: 0.0 through 1.

element **badaThrust/coeff_TC2**

diagram	 coeff_TC2 2nd max climb thrust coefficient. Valid values: 0.0 through 1e9. (feet)
type	xs:double
properties	content simple
annotation	2nd max climb thrust coefficient. Valid values: 0.0 through 1e9. (feet)

element **badaThrust/coeff_TC3**

diagram	 coeff_TC3 3rd max climb thrust coefficient. Valid values: -1034000 to 665880. Variable units. (1/feet^2 (jet); Newton (turboprop); knot-Newton (piston))
type	xs:double
properties	content simple
annotation	3rd max climb thrust coefficient. Valid values: -1034000 to 665880. Variable units. (1/feet^2 (jet); Newton (turboprop); knot-Newton (piston))

element **badaThrust/coeff_TC4**

diagram	 coeff_TC4 1st thrust temperature coefficient. Valid values: -45 through 50. (K)
type	xs:double
properties	content simple
annotation	1st thrust temperature coefficient. Valid values: -45 through 50. (K)

element **badaThrust/coeff_TC5**

diagram	 coeff_TC5 2nd thrust temperature coefficient. Valid values: 0.0 through 10.0. (1/K)
type	xs:double
properties	content simple
annotation	2nd thrust temperature coefficient. Valid values: 0.0 through 10.0. (1/K)

element **badaThrust/coeff_TDL**

diagram	 coeff_TDL Low altitude descent thrust coefficient. Valid values: 0.0 through 10.0
type	xs:double
properties	content simple
annotation	Low altitude descent thrust coefficient. Valid values: 0.0 through 10.0

element **badaThrust/coeff_TDH**

diagram	 coeff_TDH High altitude descent thrust coefficient. Valid values: 0.0 through 10.0
type	xs:double
properties	content simple
annotation	High altitude descent thrust coefficient. Valid values: 0.0 through 10.0

element **badaThrust/coeff_APP**

diagram	 coeff_APP Approach thrust coefficient. Valid values: 0.0 through 10.0.
type	xs:double
properties	content simple
annotation	Approach thrust coefficient. Valid values: 0.0 through 10.0.

element **badaThrust/coeff_LD**

diagram	 coeff_LD Landing thrust coefficient. Valid values: 0.0 through 10.0.
type	xs:double
properties	content simple
annotation	documentation Landing thrust coefficient. Valid values: 0.0 through 10.0.

element **badaThrust/descentAlt**

diagram	 descentAlt Transition altitude for calculation of descent thrust. Min= -9999.0 Max= 60000.0 UNITs: Feet, pressure altitude
type	xs:double
properties	content simple
annotation	documentation Transition altitude for calculation of descent thrust. Min= -9999.0 Max= 60000.0 UNITs: Feet, pressure altitude

element **badaThrust/descentSpeed**

diagram	 descentSpeed Reference descent speed (KCAS). Min= 0.0 Max= 600.0. UNITS: knots.
type	xs:double
properties	content simple
annotation	documentation Reference descent speed (KCAS). Min= 0.0 Max= 600.0. UNITS: knots.

element **badaThrust/descentMach**

diagram	 descentMach Reference descent Mach number. Valid values: 0.0 through 10.0. UNITS: dimensionless.
type	xs:float
properties	content simple
annotation	documentation Reference descent Mach number. Valid values: 0.0 through 10.0. UNITS: dimensionless.

element **badaThrust/notes**

diagram	 notes User notes.
type	string255
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation User notes.

complexType **coord2DType**

diagram	<p>The diagram illustrates the structure of the <code>coord2DType</code>. It starts with a <code>coord2DType</code> element, which branches into two main groups: <code>latlonCoordGroup</code> and <code>utmCoordGroup</code>. The <code>latlonCoordGroup</code> leads to <code>latitude</code> and <code>longitude</code> elements. The <code>utmCoordGroup</code> leads to <code>utmN</code>, <code>utmE</code>, and <code>utmZone</code> elements. There is also a direct path from <code>coord2DType</code> to <code>latitudeDMS</code> and <code>longitudeDMS</code>.</p>
children	<code>latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone</code>
used by	elements <code>stationarySourceOperation/pointCoord pointStationarySource/pointCoord volumeStationarySource/pointCoord oneOrThreeCoords2DGroupSet/pointCoord polygon2DType/vertex</code> complexType <code>coord3DElevationType</code>
annotation	documentation A 2D point coordinate.

complexType coord3DElevationType

diagram	<p>The diagram illustrates the structure of the <code>coord3DElevationType</code>. It starts with a <code>coord3DElevationType</code> element, which branches into two main groups: <code>latlonCoordGroup</code> and <code>utmCoordGroup</code>. The <code>latlonCoordGroup</code> leads to <code>latitude</code> and <code>longitude</code> elements. The <code>utmCoordGroup</code> leads to <code>utmN</code>, <code>utmE</code>, and <code>utmZone</code> elements. A final <code>elevation</code> element is shown at the bottom.</p>
type	extension of <code>coord2DType</code>
properties	base <code>coord2DType</code>
children	<code>latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone elevation</code>
used by	elements <code>roadway/coordinates/vertex polygon3DElevationType/vertex</code>
annotation	documentation Type of coordinates used to specify a point in three-dimensional space. The type is actually the type of the point in two-dimensional space along with an elevation.

element coord3DElevationType/elevation

diagram	<p>The diagram illustrates the structure of the <code>elevation</code> element. It starts with an <code>elevation</code> element, which has a single child element: <code>elevation</code>.</p>
type	<code>xs:float</code>

properties	content simple
annotation	documentation Elevation or Z value for a coordinate.

complexType dispersionWeight1Type

diagram	<p>Abstract type used to specify the dispersion weight for the backbone subtrack. This type is intended only to be a base class and will not be used in ASIF files directly.</p>
children	backbone
used by	element dispersionWeight/dispersionWeight1 complexType dispersionWeight3Type
annotation	documentation Abstract type used to specify the dispersion weight for the backbone subtrack. This type is intended only to be a base class and will not be used in ASIF files directly.

element dispersionWeight1Type/backbone

diagram	<p>Represents the centerline of a set of dispersed tracks.</p>
type	xs:double
properties	content simple
used by	element track
annotation	documentation Represents the centerline of a set of dispersed tracks.

complexType dispersionWeight3Type

diagram	<p>Specify the dispersion weight for a backbone with 2 subtracks..</p> <p>dispersionWeight1Type (extension)</p> <p>backbone</p> <p>Represents the centerline of a set of dispersed tracks.</p> <p>weightl1</p> <p>Specify the dispersion weight for the first left subtrack.</p> <p>weightr1</p> <p>Specify the dispersion weight for the first right subtrack.</p>
type	extension of dispersionWeight1Type
properties	base dispersionWeight1Type
children	backbone weightl1 weightr1
used by	element dispersionWeight/dispersionWeight3 complexType dispersionWeight5Type
annotation	documentation Specify the dispersion weight for a backbone with 2 subtracks..

element dispersionWeight3Type/weightl1

diagram	<p>Specify the dispersion weight for the first left subtrack.</p>
type	xs:double
properties	content simple
annotation	documentation Specify the dispersion weight for the first left subtrack.

element dispersionWeight3Type/weightr1

diagram	<p>Specify the dispersion weight for the first right subtrack.</p>
type	xs:double
properties	content simple
annotation	documentation Specify the dispersion weight for the first right subtrack.

complexType dispersionWeight5Type

diagram	<pre> classDiagram dispersionWeight3Type < -- dispersionWeight5Type dispersionWeight5Type { <<dispersion weight for a backbone with 4 subtracks>> backbone weightl1 weightr1 weightl2 weightr2 } backbone < -- weightl1 backbone < -- weightr1 weightl2 < -- weightl2 weightr2 < -- weightr2 </pre>
type	extension of dispersionWeight3Type
properties	base dispersionWeight3Type
children	backbone weightl1 weightr1 weightl2 weightr2
used by	element dispersionWeight/dispersionWeight5 complexType dispersionWeight7Type
annotation	documentation Specify the dispersion weight for a backbone with 4 subtracks.

element **dispersionWeight5Type/weightl2**

diagram	<pre> classDiagram dispersionWeight5Type { <<dispersion weight for a backbone with 4 subtracks>> weightl2 } weightl2 < -- weightl2 </pre>
type	xs:double
properties	content simple
annotation	documentation Specify the dispersion weight for the second left subtrack.

element **dispersionWeight5Type/weightr2**

diagram	<pre> classDiagram dispersionWeight5Type { <<dispersion weight for a backbone with 4 subtracks>> weightr2 } weightr2 < -- weightr2 </pre>
type	xs:double
properties	content simple
annotation	documentation Specify the dispersion weight for the second right subtrack.

complexType **dispersionWeight7Type**

diagram	<pre> classDiagram dispersionWeight5Type < -- dispersionWeight7Type dispersionWeight7Type { <<dispersion weight for a backbone with 6 subtracks>> backbone weightl1 weightr1 weightl2 weightr2 weightl3 weightr3 } backbone < -- weightl1 backbone < -- weightr1 weightl2 < -- weightl2 weightr2 < -- weightr2 weightl3 < -- weightl3 weightr3 < -- weightr3 </pre>
type	extension of dispersionWeight5Type

properties	base dispersionWeight5Type
children	backbone weight1 weightr1 weightl2 weightr2 weightl3 weightr3
used by	element dispersionWeight/dispersionWeight7 complexType dispersionWeight9Type
annotation	documentation Specify the dispersion weight for a backbone with 6 subtracks.

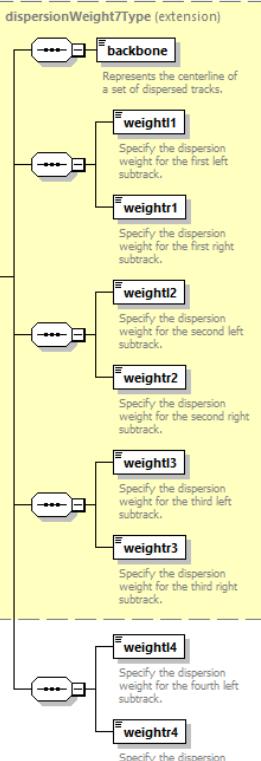
element **dispersionWeight7Type/weightl3**

diagram	
type	xs:double
properties	content simple
annotation	documentation Specify the dispersion weight for the third left subtrack.

element **dispersionWeight7Type/weightr3**

diagram	
type	xs:double
properties	content simple
annotation	documentation Specify the dispersion weight for the third right subtrack.

complexType **dispersionWeight9Type**

diagram	
type	extension of dispersionWeight7Type
properties	base dispersionWeight7Type
children	backbone weightl1 weightr1 weightl2 weightr2 weightl3 weightr3 weightl4 weightr4
used by	element dispersionWeight/dispersionWeight9
annotation	documentation Specify the dispersion weight for a backbone with 8 subtracks.

element **dispersionWeight9Type/weightl4**

diagram	
type	xs:double

properties	content simple
annotation	documentation Specify the dispersion weight for the fourth left subtrack.

element **dispersionWeight9Type/weightr4**

diagram	
type	xs:double
properties	content simple
annotation	documentation Specify the dispersion weight for the fourth right subtrack.

complexType **emissionFactorSet**

diagram	
children	CO HC NOx SOx PM10 CO2 CH4 PM25
used by	elements userGroundSupportEquipment/userEmissionFactors/emissionFactorsCNG userGroundSupportEquipment/userEmissionFactors/emissionFactorsDiesel userGroundSupportEquipment/userEmissionFactors/emissionFactorsGas userGroundSupportEquipment/userEmissionFactors/emissionFactorsLPG
annotation	documentation Supports the definition of user-defined emission factor. This element supports the definition of various émission factors defined under GSE and training fires.

element **emissionFactorSet/CO**

diagram	
type	xs:double
properties	content simple
annotation	documentation Amount of carbon monoxide emitted. Valid values: 0 to 3000. (kg/unit)

element **emissionFactorSet/HC**

diagram	
type	xs:double
properties	content simple
annotation	documentation Amount of hydrocarbons emitted. Valid values: 0 to 100. (kg/unit)

element **emissionFactorSet/NOx**

diagram	
annotation	documentation Amount of nitrous oxides emitted. Valid values: 0 to 100. (kg/unit)

type	xs:double
properties	content simple
annotation	documentation Amount of nitrous oxides emitted. Valid values: 0 to 100. (kg/unit)

element **emissionFactorSet/SOx**

diagram	<p>SOx Amount of sulfur oxides emitted. Valid values: 0 to 10. (kg/unit)</p>
type	xs:double
properties	content simple
annotation	documentation Amount of sulfur oxides emitted. Valid values: 0 to 10. (kg/unit)

element **emissionFactorSet/PM10**

diagram	<p>PM10 Amount of 10-micron particulate matter emitted. Valid values: 0 to 1000. (kg/unit)</p>
type	xs:double
properties	content simple
annotation	documentation Amount of 10-micron particulate matter emitted. Valid values: 0 to 1000. (kg/unit)

element **emissionFactorSet/CO2**

diagram	<p>CO2 CO2 emissions factor. Valid values: 0 to 1000. (grams/hp-hr)</p>
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation CO2 emissions factor. Valid values: 0 to 1000. (grams/hp-hr)

element **emissionFactorSet/CH4**

diagram	<p>CH4 Methane emissions factor. Valid values: 0 to 1000. (grams/hp-hr)</p>
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation Methane emissions factor. Valid values: 0 to 1000. (grams/hp-hr)

element **emissionFactorSet/PM25**

diagram	<p>PM25 PM 2.5 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)</p>
type	doubleInclusive1000
properties	content simple default 0
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation PM 2.5 emissions index, dependent on fuel type. Valid values: 0 to 1000. (Kg/Metric Ton or Kg/Kiloliter or Kg/1000 m^3)

complexType **energyShare**

diagram	<p>A custom BADA energy share.</p> <p>anpAirplaneld The ANP airplane ID.</p> <p>badaAirplaneld The BADA airplane ID.</p> <p>transEnergyShare The proportion of available energy used for acceleration compared to altitude change in the ANP to BADA transition region.</p>
children	anpAirplaneld badaAirplaneld transEnergyShare
used by	element fleet/energyShare
annotation	documentation A custom BADA energy share.

element **energyShare/anpAirplaneld**

diagram	<p>The ANP airplane ID.</p>
type	anpAirplaneld
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The ANP airplane ID.

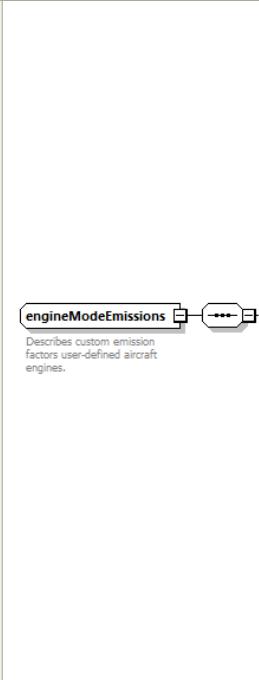
element **energyShare/badaAirplaneld**

diagram	<p>The BADA airplane ID.</p>
type	badaAirplaneld
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation The BADA airplane ID.

element **energyShare/transEnergyShare**

diagram	<p>The proportion of available energy used for acceleration compared to altitude change in the ANP to BADA transition region.</p>
type	xs:double
properties	content simple
annotation	documentation The proportion of available energy used for acceleration compared to altitude change in the ANP to BADA transition region.

complexType **engineModeEmissions**

diagram	 <p>engineModeEmissions</p> <p>Describes custom emission factors user-defined aircraft engines.</p> <p>time Time engine operates in a given mode (minutes). Valid values: Nonnegative.</p> <p>fuel Fuel emission factor (g/kg). Valid values: Nonnegative.</p> <p>CO Amount of carbon monoxide emitted (g/kg). Valid values: Nonnegative.</p> <p>HC Amount of hydrocarbons emitted (g/kg). Valid values: Nonnegative.</p> <p>NOx Amount of nitrous oxide emitted (g/kg). Valid values: Nonnegative.</p> <p>SOx Amount of sulfur oxide emitted (g/kg). Valid values: Nonnegative.</p> <p>SN Smoke number for the engine mode (g/kg). Valid values: Nonnegative.</p> <p>PM Amount of particulate matter emitted (g/kg). Valid values: Nonnegative.</p>
children	time fuel CO HC NOx SOx SN PM
used by	elements aircraftEngine/approachEmissionFactors aircraftEngine/climbEmissionFactors aircraftEngine/takeOffEmissionFactors aircraftEngine/taxiIdleEmissionFactors
annotation	documentation Describes custom emission factors user-defined aircraft engines.

element engineModeEmissions/time

diagram	 <p>time Time engine operates in a given mode (minutes). Valid values: Nonnegative.</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Time engine operates in a given mode (minutes). Valid values: Nonnegative.

element engineModeEmissions/fuel

diagram	 <p>fuel Fuel emission factor (g/kg). Valid values: Nonnegative.</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Fuel emission factor (g/kg). Valid values: Nonnegative.

element engineModeEmissions/CO

diagram	 <p>CO Amount of carbon monoxide emitted (g/kg). Valid values: Nonnegative.</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Amount of carbon monoxide emitted (g/kg). Valid values: Nonnegative.

element engineModeEmissions/HC

diagram	 <p>HC Amount of hydrocarbons emitted (g/kg). Valid values: Nonnegative.</p>
type	xs:double

properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Amount of hydrocarbons emitted (g/kg). Valid values: Nonnegative.

element **engineModeEmissions/NOx**

diagram	 NOx Amount of nitrous oxide emitted (g/kg). Valid values: Nonnegative.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Amount of nitrous oxide emitted (g/kg). Valid values: Nonnegative.

element **engineModeEmissions/SOx**

diagram	 SOx Amount of sulfur oxide emitted (g/kg). Valid values: Nonnegative.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Amount of sulfur oxide emitted (g/kg). Valid values: Nonnegative.

element **engineModeEmissions/SN**


diagram	 SN Smoke number for the engine mode (g/kg). Valid values: Nonnegative.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Smoke number for the engine mode (g/kg). Valid values: Nonnegative.

element **engineModeEmissions/PM**

diagram	 PM Amount of particulate matter emitted (g/kg). Valid values: Nonnegative.
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Amount of particulate matter emitted (g/kg). Valid values: Nonnegative.

complexType **fleet**

diagram

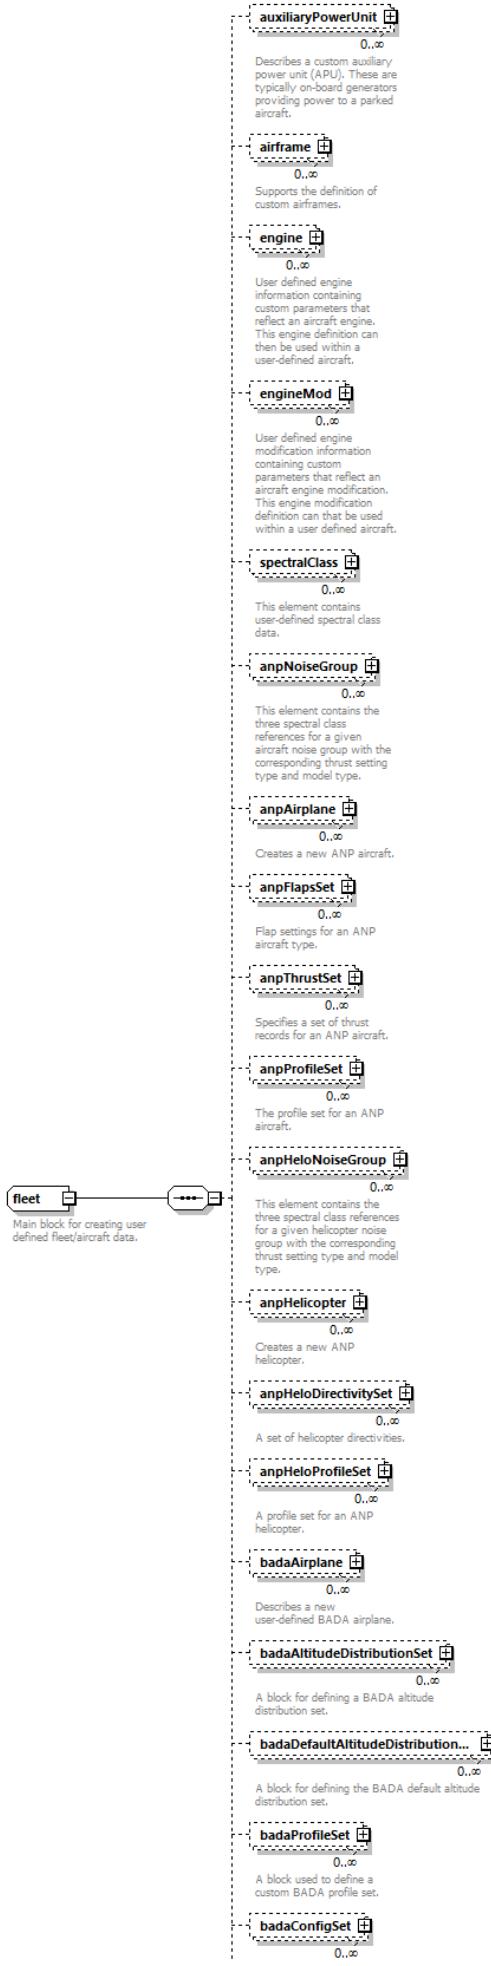

	<p>A block for a custom BADA airplane configuration coefficient set.</p> <ul style="list-style-type: none"> - badaFuel  0..∞ A BADA fuel data record. - badaThrust  0..∞ Custom BADA airplane thrust data sets. - bada4ProfileSet  0..∞ A profile set for an BADA4 airplane. - aircraft  0..∞ A block used to create new user defined AEDT aircraft. - energyShare  0..∞ A custom BADA aircraft energy share set.
children	auxiliaryPowerUnit airframe engine engineMod spectralClass anpNoiseGroup anpAirplane anpFlapsSet anpThrustSet anpProfileSet anpHeloNoiseGroup anpHelo anpHeloDirectivitySet anpHeloProfileSet badaAirplane badaAltitudeDistributionSet badaDefaultAltitudeDistributionSet badaProfileSet badaConfigSet badaFuel badaThrust bada4ProfileSet aircraft energyShare
used by	elements AsifXml/fleet study/fleet
annotation	documentation Main block for creating user defined fleet/aircraft data.

element fleet/auxiliaryPowerUnit

diagram	
type	auxiliaryPowerUnit
properties	minOcc 0 maxOcc unbounded content complex
children	name baseAuxiliaryPowerUnit defaultTimeArrivals defaultTimeDepartures CO HC NOx SOx PM
annotation	documentation Describes a custom auxiliary power unit (APU). These are typically on-board generators providing power to a parked aircraft.

element fleet/airframe

diagram	<pre> classDiagram class airframe { model engineCount engineLocation designationCode maxSeats maxRange introYear euroGroupCode usageCode sizeCode engineType auxiliaryPowerUnitId } airframe < -- airframe airframe "0..>" airframe : Supports the definition of custom airframes. </pre> <p>The diagram shows the <code>airframe</code> class with the following properties:</p> <ul style="list-style-type: none"> <code>model</code>: Unique description of airframe. <code>engineCount</code>: Number of engines on airframe. <code>engineLocation</code>: Position of engine on airframe. Valid values: F (Fuselage/Tail), W (Wing). <code>designationCode</code>: Type of aviation. Valid values: C (Civil), G (General Aviation), M (Military). <code>maxSeats</code>: Maximum seats the airframe can hold including pilots and passengers. <code>maxRange</code>: Number of miles airframe can fly fully fueled. Valid values: Nonnegative. <code>introYear</code>: Year airframe was introduced. Valid values: Nonnegative. <code>euroGroupCode</code>: European group code for this airframe. Valid values: H1 (Helicopter Light), H2 (Helicopter Heavy), JB (Jet Business), JL (Jet Large), JM (Jet Medium), JR (Jet Regional), JS (Jet Small), PP (Propeller), SS (Supersonic), TP (Turboprop). <code>usageCode</code>: Usage code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light). <code>sizeCode</code>: Size code for this airframe. Valid values: H (Heavy), L (Large), M (Medium), S (Small), T (Light), V (Very Light). <code>engineType</code>: Type of engine on this airframe. Valid values: E (Electric), J (Jet), P (Piston), T (Turboprop). <code>auxiliaryPowerUnitId</code>: Identifier of an auxiliary power unit. <p>Associations:</p> <ul style="list-style-type: none"> <code>airframe</code> has a self-loop association labeled <code>0..></code> with the annotation: "Supports the definition of custom airframes."
type	<code>airframe</code>
properties	minOcc 0 maxOcc unbounded content complex
children	model engineCount engineLocation designationCode maxSeats maxRange introYear euroGroupCode usageCode sizeCode engineType auxiliaryPowerUnitId
annotation	<p>documentation</p> <p>Supports the definition of custom airframes.</p>

element **fleet/engine**


<p>diagram</p>	<pre> classDiagram class aircraftEngine { code model engineType notes emissionsEngineModel performanceEngineModel manufacturer combustor superseded ratedEngineOut source bypassRatio pressureRatio tfmFlag defaultSOx taxIdleEmissionFactors takeOffEmissionFactors climbEmissionFactors approachEmissionFactors } engine "0..∞" --> aircraftEngine </pre>
type	aircraftEngine
properties	minOcc 0 maxOcc unbounded content complex
children	code model engineType notes emissionsEngineModel performanceEngineModel manufacturer combustor superseded ratedEngineOut source bypassRatio pressureRatio tfmFlag defaultSOx taxIdleEmissionFactors takeOffEmissionFactors climbEmissionFactors approachEmissionFactors
annotation	documentation User defined engine information containing custom parameters that reflect an aircraft engine. This engine definition can then be used within a user-defined aircraft.


<p>element fleet/engineMod</p>	<pre> classDiagram class aircraftEngineMod { code description } engineMod "0..∞" --> aircraftEngineMod </pre>
---------------------------------------	--

	type aircraftEngineMod
properties	minOcc 0 maxOcc unbounded content complex
children	code description
annotation	documentation User defined engine modification information containing custom parameters that reflect an aircraft engine modification. This engine modification definition can that be used within a user defined aircraft.

element **fleet/spectralClass**

diagram

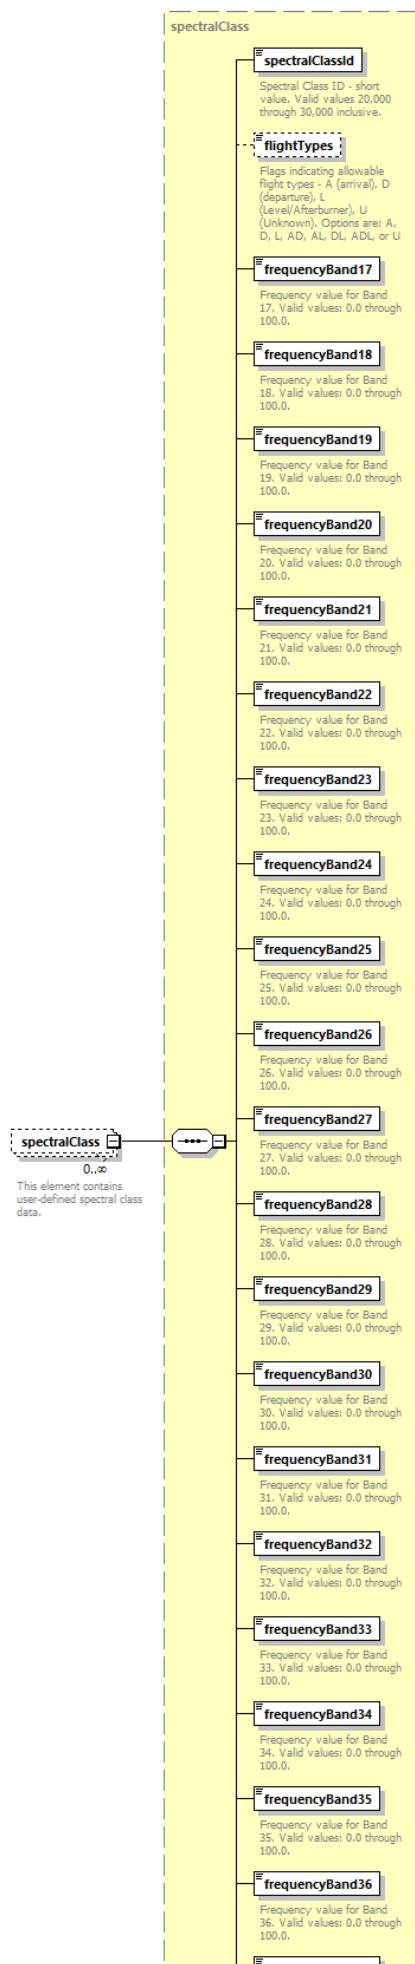

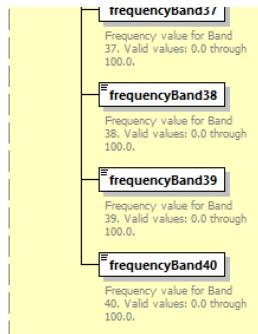


	<p>type spectralClass</p> <p>properties minOcc 0 maxOcc unbounded content complex</p> <p>children spectralClassId flightTypes frequencyBand17 frequencyBand18 frequencyBand19 frequencyBand20 frequencyBand21 frequencyBand22 frequencyBand23 frequencyBand24 frequencyBand25 frequencyBand26 frequencyBand27 frequencyBand28 frequencyBand29 frequencyBand30 frequencyBand31 frequencyBand32 frequencyBand33 frequencyBand34 frequencyBand35 frequencyBand36 frequencyBand37 frequencyBand38 frequencyBand39 frequencyBand40</p> <p>annotation documentation This element contains user-defined spectral class data.</p>
--	---

element fleet/anpNoiseGroup


<p>diagram</p> <pre> classDiagram anpNoiseGroup { noiseld spectralClassApproach spectralClassDeparture spectralClassAfterburner thrustSetType modelType npdCurves } </pre> <p>anpNoiseGroup noiseld Noise group's ID. spectralClassApproach Spectral class number for approach (min = 0, max = 30000). spectralClassDeparture Spectral class number for departure (min = 0, max = 30000). spectralClassAfterburner Spectral class number for afterburner (min = 0, max = 30000). thrustSetType Type of thrust setting. Valid values: I (pounds), P (percent), X (other). The following are typically used for military airplane: A (Power Lever Angle), B (Pounds Thrust), C (Turbine Inlet Temperature [Deg C]), E (Engine Pressure Ratio), F (Fan Speed), H (Equivalent Shaft Power), I (Manifold Pressure [[inches of Mercury]]), M (Percent or Compressor RPM), N (Percent Corrected Rotor Speed), O (Percent Low Pressure Compressor Speed), R (Percent Propeller or Compressor RPM), S (Pounds per Hour of Fuel Flow), V (Percent Fan Speed). modelType Type of distance-duration model. Valid values: I (INM), N (NoiseMap). npdCurves The set of noise curves for ANP aircraft.</p>	<p>type anpNoiseGroup</p> <p>properties minOcc 0 maxOcc unbounded content complex</p> <p>children noiseld spectralClassApproach spectralClassDeparture spectralClassAfterburner thrustSetType modelType npdCurves</p> <p>annotation documentation This element contains the three spectral class references for a given aircraft noise group with the corresponding thrust setting type and model type.</p>
--	---

element fleet/anpAirplane

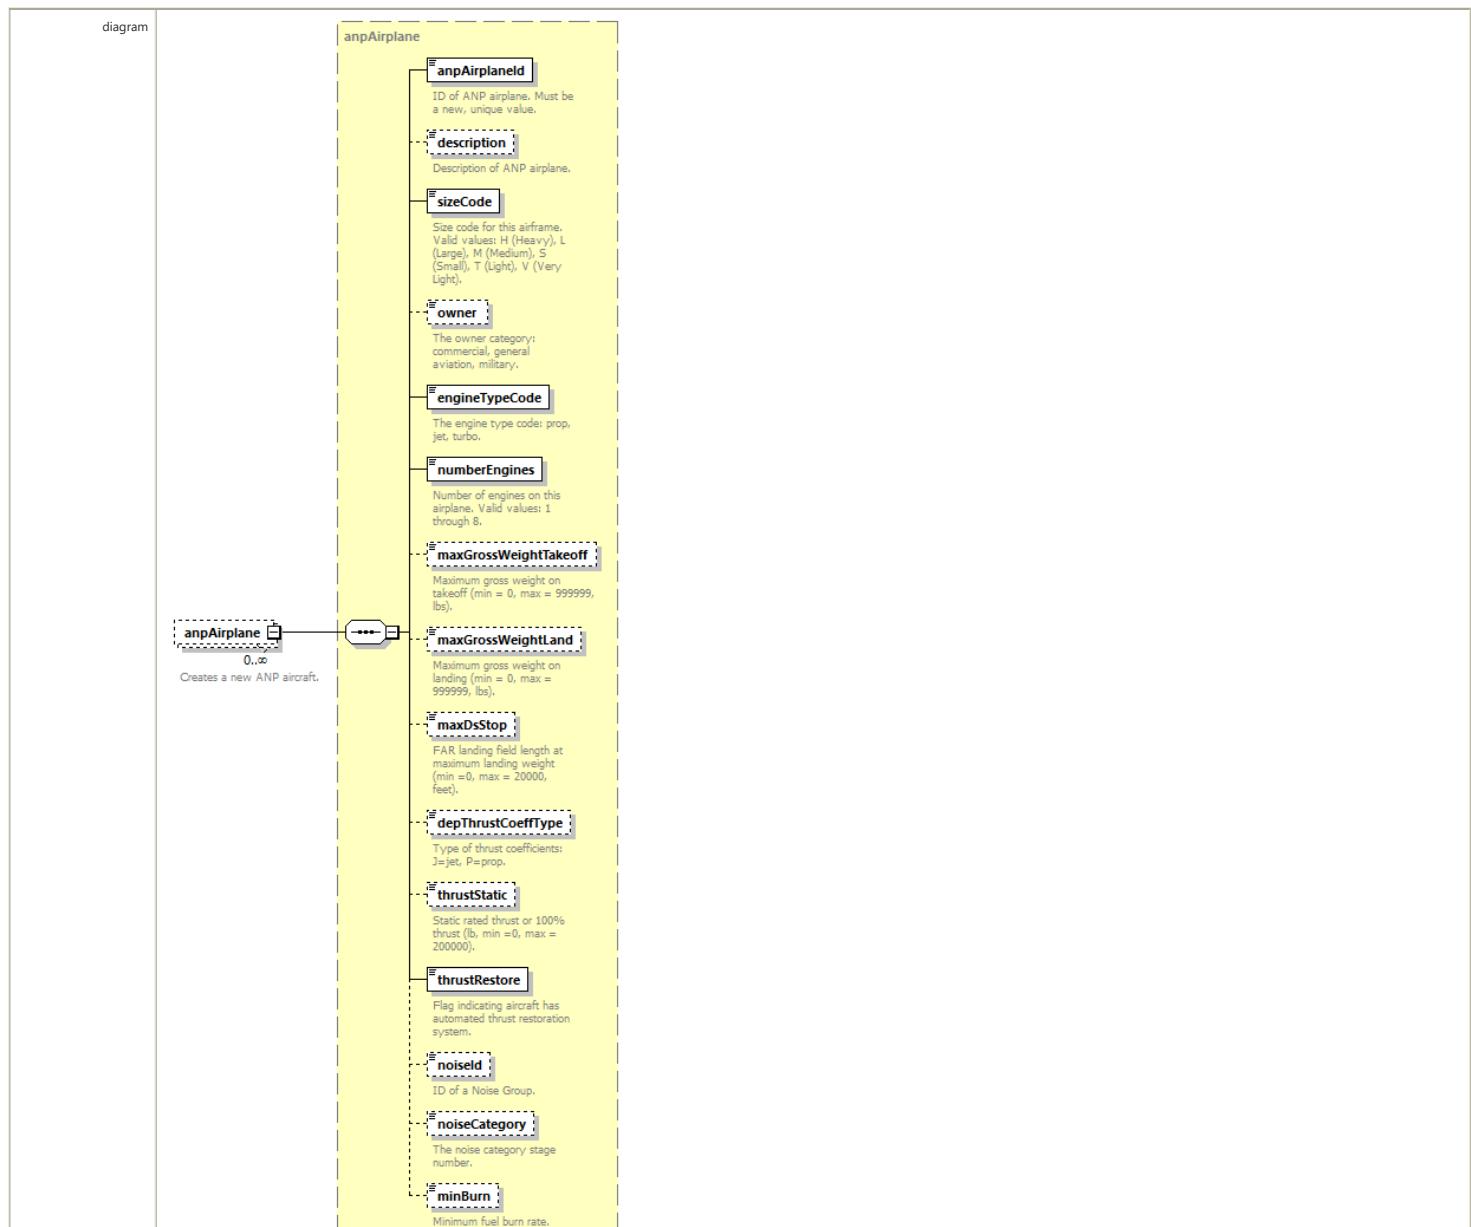

	type	anpAirplane
properties	minOcc 0 maxOcc unbounded content complex	
children	anpAirplaneId description sizeCode owner engineTypeCode numberEngines maxGrossWeightTakeoff maxGrossWeightLand maxDsStop depThrustCoeffType thrustStatic thrustRestore noiseId noiseCategory minBurn	
annotation	documentation Creates a new ANP aircraft.	

element fleet/anpFlapsSet

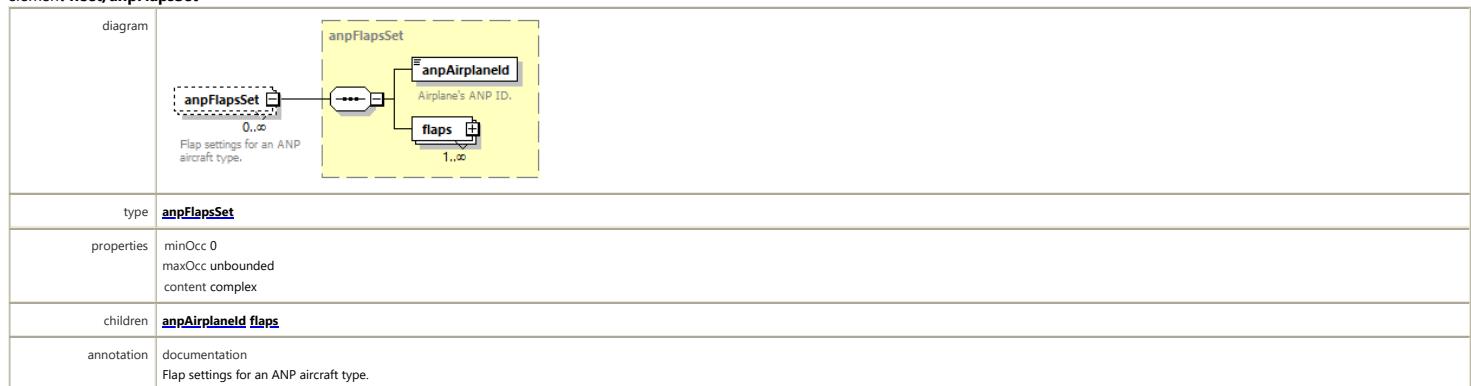

element fleet/anpThrustSet

diagram	<pre> classDiagram class anpThrustSet { anpAirplaneId thrustGeneral[0..∞] thrustJet[1..∞] thrustProp[1..∞] tsfcCoefficients[0..∞] } </pre>
type	anpThrustSet
properties	minOcc 0 maxOcc unbounded content complex
children	anpAirplaneId thrustGeneral thrustJet thrustProp tsfcCoefficients
annotation	documentation Specifies a set of thrust records for an ANP aircraft.

element fleet/anpProfileSet

diagram	<pre> classDiagram class anpProfileSet { anpAirplaneId profile[1..∞] } </pre>
type	anpProfileSet
properties	minOcc 0 maxOcc unbounded content complex
children	anpAirplaneId profile
annotation	documentation The profile set for an ANP aircraft.

element fleet/anpHeloNoiseGroup


diagram	<pre> classDiagram class anpHeloNoiseGroup { noiseld spectralClassApproach spectralClassDeparture spectralClassFlyover speedApproach speedDeparture speedFlyover npdCurves } </pre> <p>This element contains the three spectral class references for a given helicopter noise group with the corresponding thrust setting type and model type.</p>
type	anpHeloNoiseGroup
properties	minOcc 0 maxOcc unbounded content complex
children	noiseld spectralClassApproach spectralClassDeparture spectralClassFlyover speedApproach speedDeparture speedFlyover npdCurves


annotation	documentation
------------	---------------

This element contains the three spectral class references for a given helicopter noise group with the corresponding thrust setting type and model type.

element **fleet/anpHelicopter**

diagram

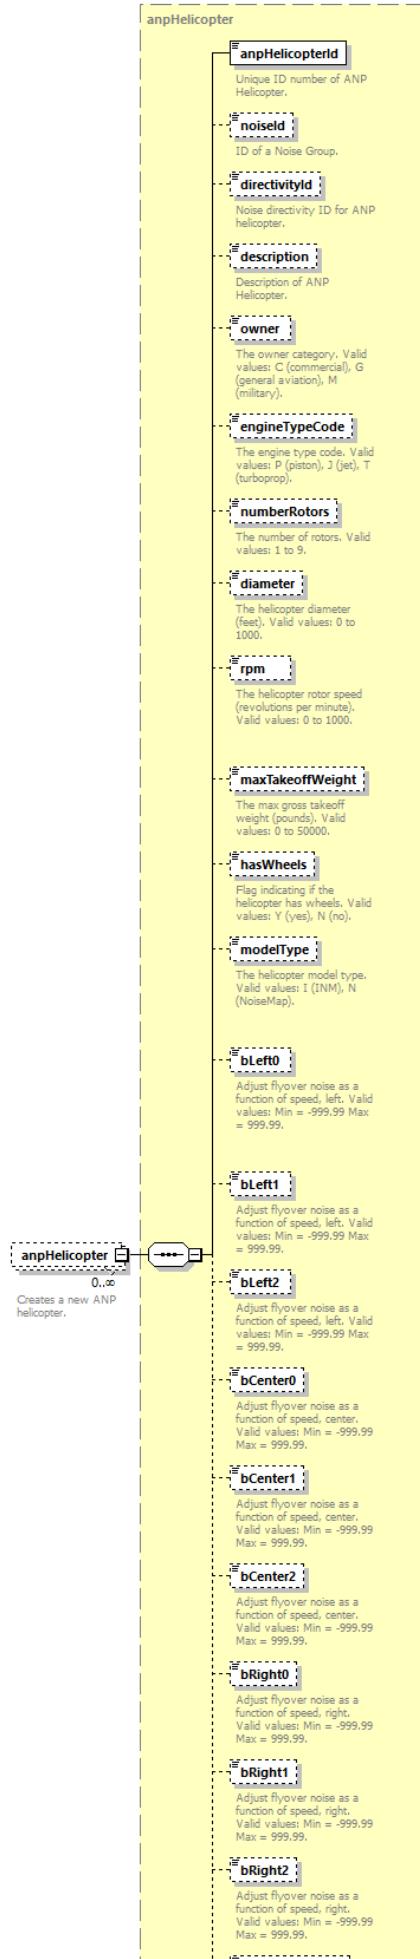

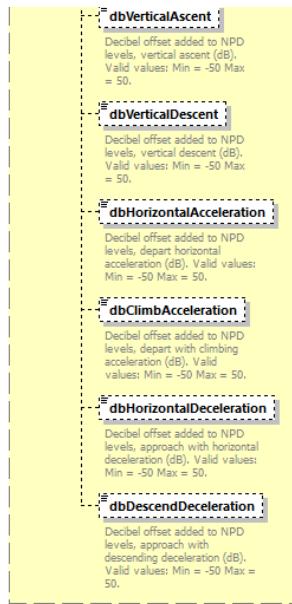

	type	anpHelicopter
properties	minOcc 0 maxOcc unbounded content complex	
children	anpHelicopterId noiseId directivityId description owner engineTypeCode numberRotors diameter rpm maxTakeoffWeight hasWheels modelType bLeft0 bLeft1 bLeft2 bCenter0 bCenter1 bCenter2 bRight0 bRight1 bRight2 dbVerticalAscent dbVerticalDescent dbHorizontalAcceleration dbClimbAcceleration dbHorizontalDeceleration dbDescendDeceleration	
annotation	documentation Creates a new ANP helicopter.	


element fleet/anpHeloDirectivitySet

	diagram	<pre> classDiagram class anpHeloDirectivitySet { anpHeloDirectivitySet 0..∞ anpHeloDirectivitySet A set of helicopter directivities. } class anpHeloDirectivity { Unique ID for ANP helicopters. 1..∞ anpHeloDirectivity ANP Helicopter directivity. } </pre>
	type	anpHeloDirectivitySet
properties	minOcc 0 maxOcc unbounded content complex	
children	anpHelicopterId anpHeloDirectivity .	
annotation	documentation A set of helicopter directivities.	

element fleet/anpHeloProfileSet

	diagram	<pre> classDiagram class anpHeloProfileSet { anpHeloProfileSet 0..∞ anpHeloProfileSet A profile set for an ANP helicopter. } class anpHelicopterId { The anp helicopter id. } class profile { 1..∞ profile One or more ANP profiles. } </pre>
	type	anpHeloProfileSet
properties	minOcc 0 maxOcc unbounded content complex	
children	anpHelicopterId profile	
annotation	documentation A profile set for an ANP helicopter.	

element fleet/badaAirplane

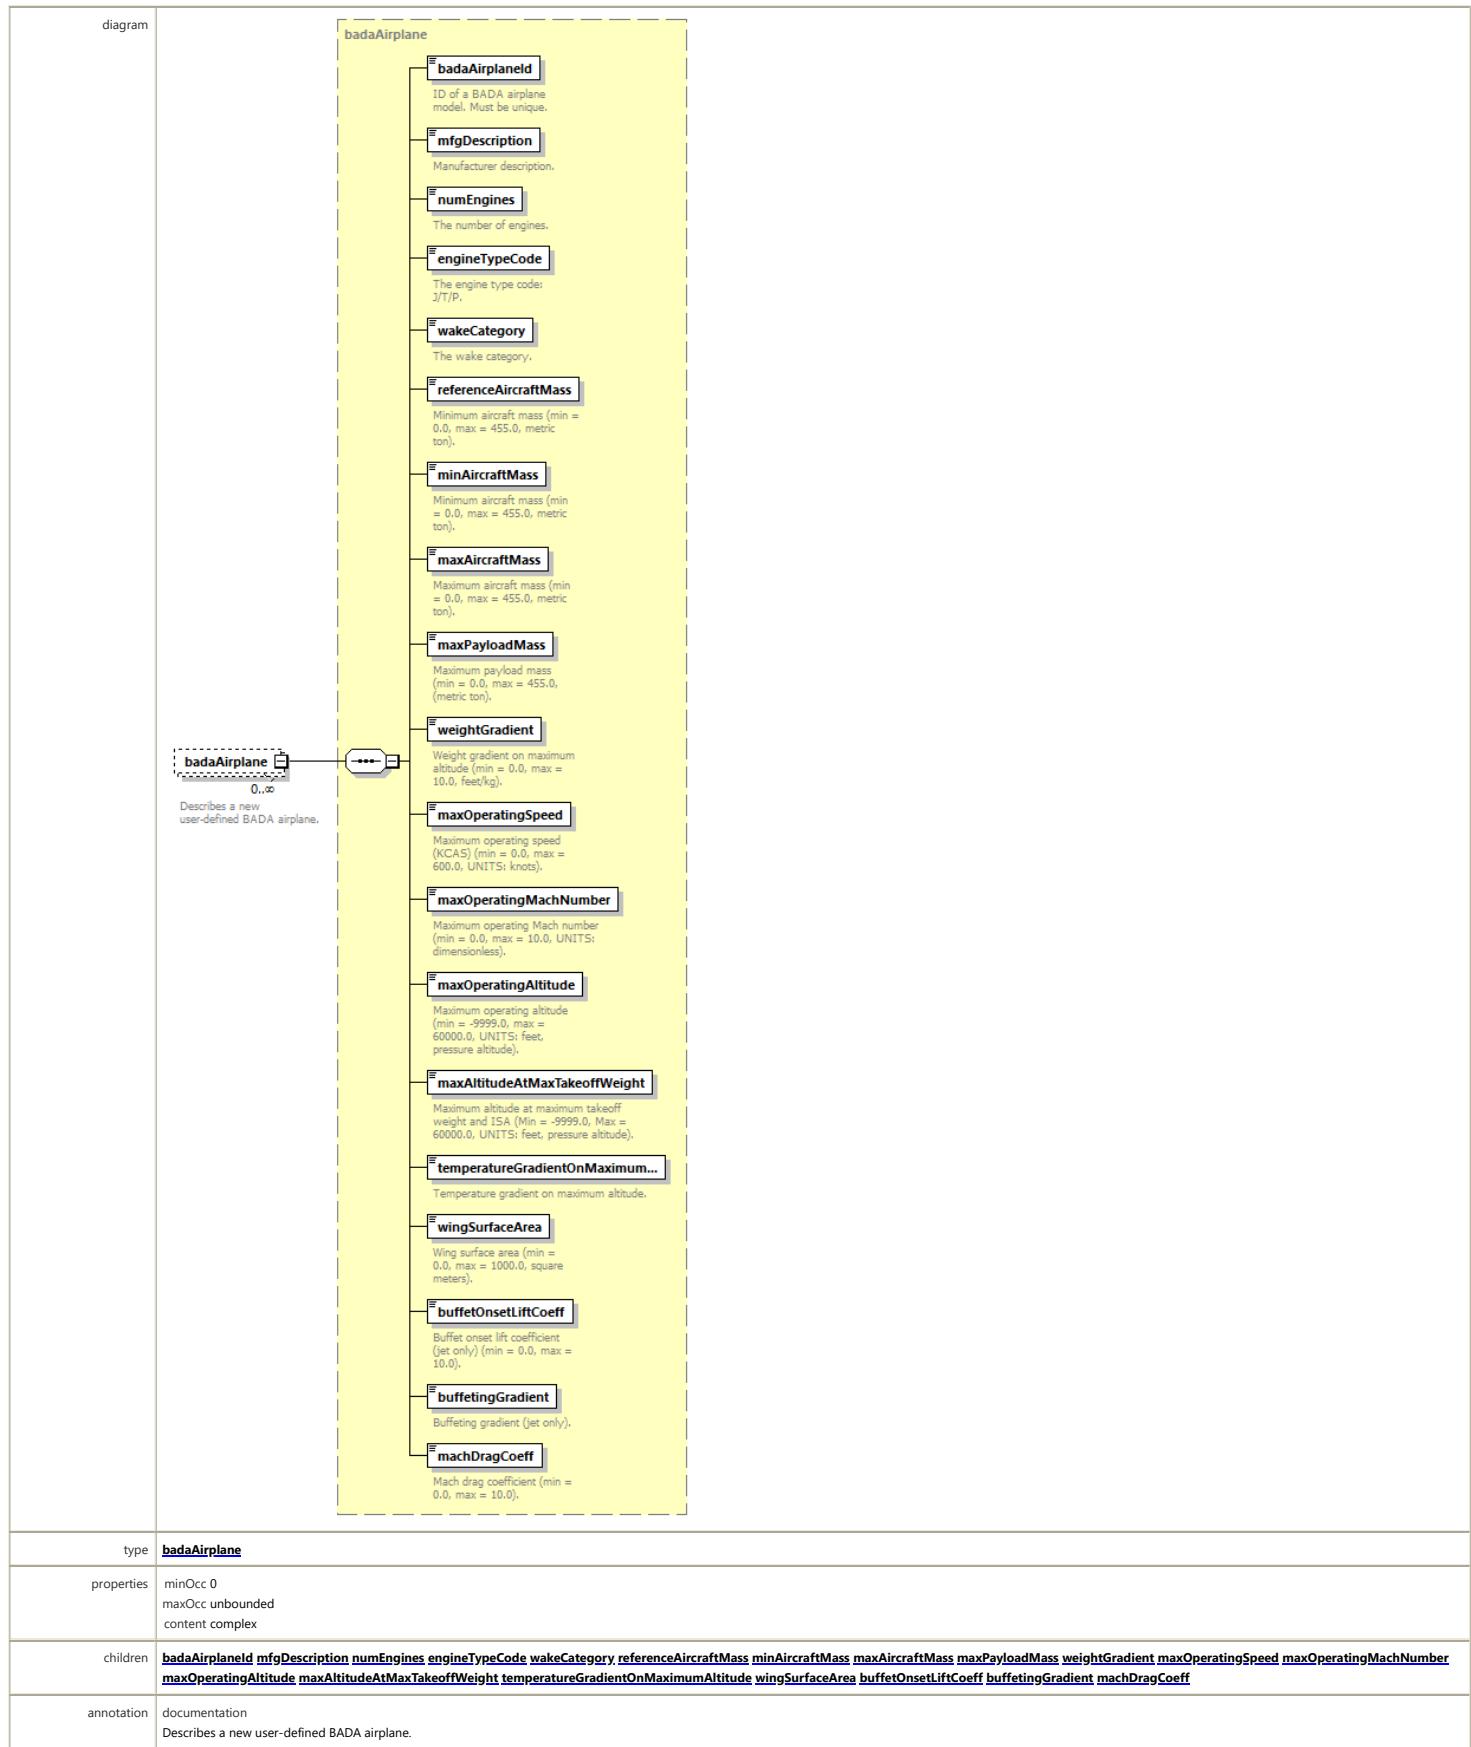

element **fleet/badaAltitudeDistributionSet**

diagram	<pre> classDiagram class badaAltitudeDistributionSet { <<A block for defining a BADA altitude distribution set.>> } class badaAirplaneId { <<Airplane's BADA ID.>> } class altitudeDistribution { <<A block for defining a BADA altitude distribution set.>> } badaAltitudeDistributionSet "0..∞" --> "1..∞" badaAirplaneId : Airplane's BADA ID. badaAltitudeDistributionSet "0..∞" --> "1..∞" altitudeDistribution : A block for defining a BADA altitude distribution set. </pre>
type	badaAltitudeDistributionSet
properties	minOcc 0 maxOcc unbounded content complex
children	badaAirplaneId altitudeDistribution
annotation	documentation A block for defining a BADA altitude distribution set.

element fleet/badaDefaultAltitudeDistributionSet

diagram	<pre> classDiagram class badaDefaultAltitudeDistributionSet { <<A block for defining the BADA default altitude distribution set.>> } class badaAirplaneId { <<Airplane's BADA ID.>> } class altitudeDistribution { <<A block for defining the BADA default altitude distribution set.>> } badaDefaultAltitudeDistributionSet "0..∞" --> "1..∞" badaAirplaneId : Airplane's BADA ID. badaDefaultAltitudeDistributionSet "0..∞" --> "1..∞" altitudeDistribution : A block for defining the BADA default altitude distribution set. </pre>
type	badaAltitudeDistributionSet
properties	minOcc 0 maxOcc unbounded content complex
children	badaAirplaneId altitudeDistribution
annotation	documentation A block for defining the BADA default altitude distribution set.

element fleet/badaProfileSet

diagram	<pre> classDiagram class badaProfileSet { <<A block used to define a custom BADA profile set.>> } class badaAirplaneId { <<The BADA airplane ID for the profile set.>> } class profile { <<The profile set data.>> } badaProfileSet "0..∞" --> "1..∞" badaAirplaneId : The BADA airplane ID for the profile set. badaProfileSet "0..∞" --> "1..∞" profile : The profile set data. </pre>
type	badaProfileSet
properties	minOcc 0 maxOcc unbounded content complex
children	badaAirplaneId profile
annotation	documentation A block used to define a custom BADA profile set.

element fleet/badaConfigSet

diagram	<pre> classDiagram class badaConfigSet { <<A block for a custom BADA airplane configuration coefficient set.>> } class badaAirplaneId { <<The BADA airplane ID for the profile set.>> } class badaConfig { <<The BADA configuration coefficient data.>> } badaConfigSet "0..∞" --> "1..∞" badaAirplaneId : The BADA airplane ID for the profile set. badaConfigSet "0..∞" --> "1..∞" badaConfig : The BADA configuration coefficient data. </pre>
type	badaConfigSet
properties	minOcc 0 maxOcc unbounded content complex
children	badaAirplaneId badaConfig
annotation	documentation A block for a custom BADA airplane configuration coefficient set.

element fleet/badaFuel

diagram	<pre> classDiagram class badaFuel { badaAirplaneld coeff_CF1 coeff_CF2 coeff_CF3 coeff_CF4 } badaFuel "0..∞" --> badaFuel : A BADA fuel data record. </pre>
type	badaFuel
properties	minOcc 0 maxOcc unbounded content complex
children	badaAirplaneld coeff_CF1 coeff_CF2 coeff_CF3 coeff_CF4 coeff_CR
annotation	documentation A BADA fuel data record.

element **fleet/badaThrust**

diagram	<pre> classDiagram class badaThrust { badaAirplaneId coeff_TC1 coeff_TC2 coeff_TC3 coeff_TC4 coeff_TC5 coeff_TDL coeff_TDH coeff_APP coeff_LD descentAlt descentSpeed descentMach notes } badaThrust "0..
Custom BADA airplane
thrust data sets." </pre>
type	badaThrust
properties	minOcc 0 maxOcc unbounded content complex
children	badaAirplaneId coeff_TC1 coeff_TC2 coeff_TC3 coeff_TC4 coeff_TC5 coeff_TDL coeff_TDH coeff_APP coeff_LD descentAlt descentSpeed descentMach notes
annotation	<p>documentation</p> <p>Custom BADA airplane thrust data sets.</p>

element fleet/bada4ProfileSet	<pre> classDiagram class bada4ProfileSet { anpAirplaneId bada4AirplaneModel bada4Engine bada4Suffix bada4profile } bada4ProfileSet "0..
A profile set for an BADA4
airplane." </pre>
--------------------------------------	--

type	bada4ProfileSet
properties	minOcc 0 maxOcc unbounded content complex
children	anpAirplaneId bada4AirplaneModel bada4Engine bada4Suffix bada4profile
annotation	documentation A profile set for an BADA4 airplane.

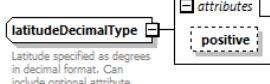
element fleet/aircraft

diagram	<pre> graph LR aircraft[aircraft 0..∞] --- airframeModel[airframeModel] subgraph aircraft [aircraft] direction TB description["description The description for this user defined aircraft."] airframeModel["airframeModel The airframe model used for this user defined aircraft."] engineCode["engineCode The engine code used for this user defined aircraft."] engineModCode["engineModCode The engine modification code used for this user defined aircraft."] anpAirplaneId["anpAirplaneId The ANP airplane linked to this user defined aircraft."] badaAirplaneId["badaAirplaneId The BADA airplane linked to this user defined aircraft."] anpHelicopterId["anpHelicopterId The ANP helicopter linked to this user defined helicopter."] bada4AirplaneModel["bada4AirplaneModel Airplane's BADA 4 model."] bada4Engine["bada4Engine Airplane's BADA 4 engine."] bada4Suffix["bada4Suffix User-defined BADA 4 model suffix."] bada4FlapsMapSourceAnpid["bada4FlapsMapSourceAnpid Source ANP airplane ID for mapping ANP flaps to BADA 4."] end </pre>
type	aircraft
properties	minOcc 0 maxOcc unbounded content complex
children	description airframeModel engineCode engineModCode anpAirplaneId badaAirplaneId anpHelicopterId bada4AirplaneModel bada4Engine bada4Suffix bada4FlapsMapSourceAnpid
annotation	documentation A block used to create new user defined AEDT aircraft.

element fleet/energyShare

diagram	<pre> graph LR energyShare[energyShare 0..∞] --- anpAirplaneId[anpAirplaneId] subgraph energyShare [energyShare] direction TB anpAirplaneId["anpAirplaneId The ANP airplane ID."] badaAirplaneId["badaAirplaneId The BADA airplane ID."] transEnergyShare["transEnergyShare The proportion of available energy used for acceleration compared to altitude change in the ANP to BADA transition region."] end </pre>
type	energyShare
properties	minOcc 0 maxOcc unbounded content complex
children	anpAirplaneId badaAirplaneId transEnergyShare
annotation	documentation A custom BADA aircraft energy share set.

complexType [latitudeDecimalType](#)

diagram													
	Latitude specified as degrees in decimal format. Can include optional attribute positive. (decimal degrees)												
type	extension of xs:double												
properties	base xs:double												
used by	element latlonCoordGroup/latitude												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>positive</td> <td>derived by: xs:string</td> <td>optional</td> <td>N</td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	positive	derived by: xs:string	optional	N		
Name	Type	Use	Default	Fixed	Annotation								
positive	derived by: xs:string	optional	N										
annotation	documentation Latitude specified as degrees in decimal format. Can include optional attribute positive. (decimal degrees)												

attribute **latitudeDecimalType/@positive**

type	restriction of xs:string
properties	use optional default N
facets	Kind Value Annotation pattern N n S s

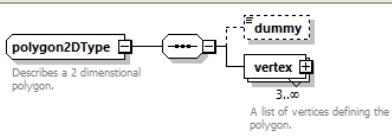
complexType **longitudeDecimalType**

diagram													
	Longitude specified as degrees in decimal format. Can include optional attribute positive. (decimal degrees)												
type	extension of xs:double												
properties	base xs:double												
used by	element latlonCoordGroup/longitude												
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>positive</td> <td>derived by: xs:string</td> <td>optional</td> <td>E</td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	positive	derived by: xs:string	optional	E		
Name	Type	Use	Default	Fixed	Annotation								
positive	derived by: xs:string	optional	E										
annotation	documentation Longitude specified as degrees in decimal format. Can include optional attribute positive. (decimal degrees)												

attribute **longitudeDecimalType/@positive**

type	restriction of xs:string
properties	use optional default E
facets	Kind Value Annotation pattern E e W w

complexType **polygon2DType**

diagram	
	Polyline describing a polygon.
children	dummy vertex
used by	elements boundary/polygon oneOrThreeCoords2DGroupSet/polygonCoords
annotation	documentation Describes a 2 dimensional polygon.

element **polygon2DType/dummy**

diagram	
type	xs:int
properties	minOcc 0 maxOcc 1 content simple

element **polygon2DType/vertex**

diagram	<p>coord2DType</p> <pre> graph LR coord2DType[coord2DType] --> vertex[vertex] vertex --- minOcc3[3..∞] vertex --- maxOccUnbounded["maxOcc unbounded"] vertex --- contentComplex["content complex"] vertex --> lationCoordGroup[lationCoordGroup] lationCoordGroup --> latitude[latitude] lationCoordGroup --> longitude[longitude] latitude --- latitudeDMS[latitudeDMS] longitude --- longitudeDMS[longitudeDMS] vertex --> utmCoordGroup[utmCoordGroup] utmCoordGroup --> utmN[utmN] utmCoordGroup --> utmE[utmE] utmCoordGroup --> utmZone[utmZone] </pre> <p>A list of vertices defining the polygon.</p>
type	coord2DType
properties	minOcc 3 maxOcc unbounded content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone
annotation	documentation A list of vertices defining the polygon.

complexType polygon3DElevationType	
diagram	<pre> graph LR polygon3DElevationType[polygon3DElevationType] --> dummy[dummy] dummy --- vertex[vertex] vertex --- minOcc3[3..∞] vertex --- maxOccUnbounded["maxOcc unbounded"] vertex --- contentComplex["content complex"] </pre> <p>The elevation or Z value for a polygon.</p>
children	dummy vertex
annotation	documentation The elevation or Z value for a polygon.

element polygon3DElevationType/dummy	
diagram	<pre> graph LR dummy[dummy] </pre>
type	xs:int
properties	minOcc 0 maxOcc 1 content simple

element **polygon3DElevationType/vertex**

diagram	<p>The diagram illustrates the structure of the <code>coord3DElevationType</code>. It starts with a yellow box labeled <code>coord3DElevationType</code>. Inside, there are two main groups: <code>latlonCoordGroup</code> and <code>utmCoordGroup</code>. The <code>latlonCoordGroup</code> contains <code>latitude</code> and <code>longitude</code>, each with their respective definitions. The <code>utmCoordGroup</code> contains <code>utmN</code>, <code>utmE</code>, and <code>utmZone</code>. Below these groups is the <code>vertex</code> element, which is described as a list of vertices defining the polygon. At the bottom is the <code>elevation</code> element.</p>
type	coord3DElevationType
properties	minOcc 3 maxOcc unbounded content complex
children	latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone elevation
annotation	documentation A list of vertices defining the polygon.

complexType profiles

diagram	<p>The diagram shows the structure of the <code>profiles</code> element. It contains <code>departureProfile</code> and <code>arrivalProfile</code>.</p>
children	departureProfile arrivalProfile
used by	elements operation/badaProfiles operation/saeProfiles
annotation	documentation Contains an arrival and departure profile.


element profiles/departureProfile

diagram	<p>The diagram shows the structure of the <code>departureProfile</code> element. It is described as a flight's departure profile.</p>
type	profileType
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation A flight's departure profile.

element profiles/arrivalProfile

diagram	<p>The diagram shows the structure of the <code>arrivalProfile</code> element. It is described as a flight's arrival profile.</p>
type	profileType
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation A flight's arrival profile.

complexType runup

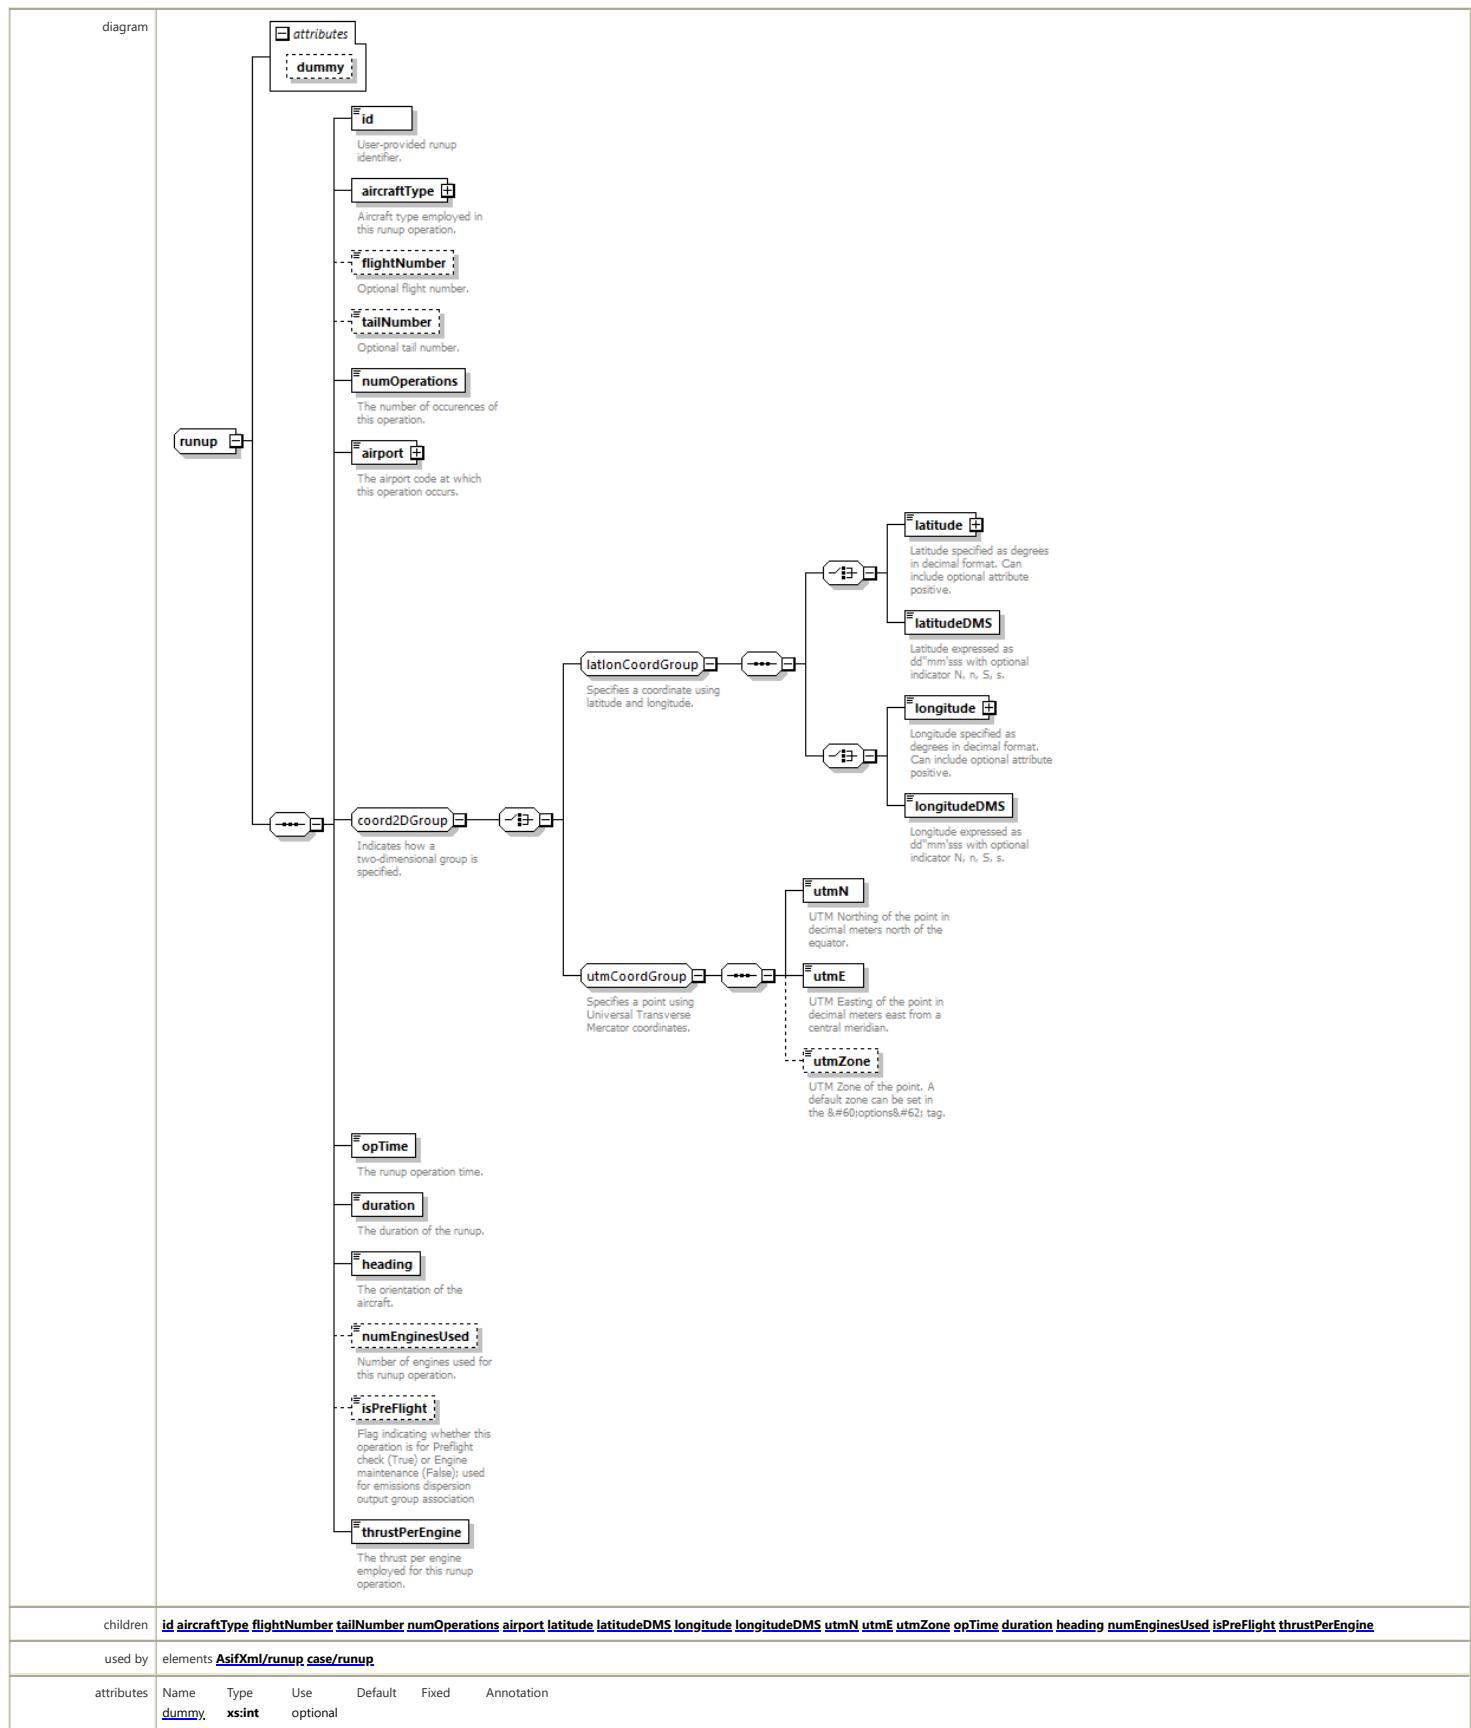


attribute **runup/@dummy**

type	xs:int
properties	use optional


element **runup/id**

diagram	 id User-provided runup identifier.
type	string255
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation User-provided runup identifier.


element runup/aircraftType

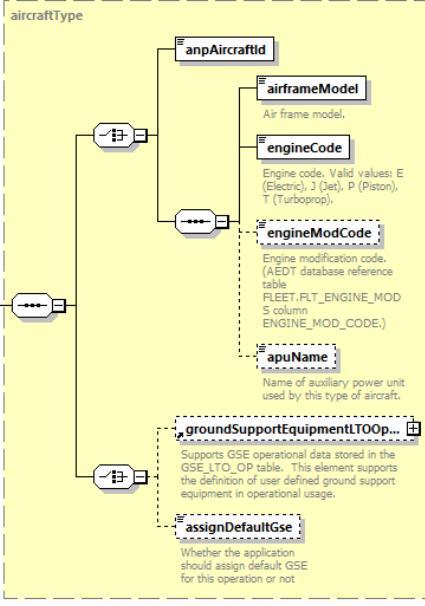diagram	 <pre> classDiagram class aircraftType { anpAircraftId airframeModel engineCode engineModCode apuName groundSupportEquipmentLTOOp... assignDefaultGse } aircraftType < -- aircraftType aircraftType "1" --> anpAircraftId aircraftType "1" --> airframeModel aircraftType "1" --> engineCode aircraftType "1" --> engineModCode aircraftType "1" --> apuName aircraftType "1" --> groundSupportEquipmentLTOOp... aircraftType "1" --> assignDefaultGse anpAircraftId "1" --> aircraftType airframeModel "1" --> aircraftType engineCode "1" --> aircraftType engineModCode "1" --> aircraftType apuName "1" --> aircraftType groundSupportEquipmentLTOOp... "1" --> aircraftType assignDefaultGse "1" --> aircraftType </pre> <p>Aircraft type employed in this runup operation.</p>
type	aircraftType
properties	content complex
children	anpAircraftId airframeModel engineCode engineModCode apuName groundSupportEquipmentLTOOp... assignDefaultGse
annotation	documentation Aircraft type employed in this runup operation.


element runup/flightNumber

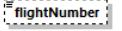diagram	 flightNumber Optional flight number.
type	string16
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 16
annotation	documentation Optional flight number.

element runup/tailNumber

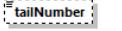diagram	 tailNumber Optional tail number.
type	string8
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation Optional tail number.

element runup/numOperations

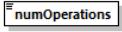diagram	 numOperations The number of occurrences of this operation.
---------	--

type	xs:double
properties	content simple
annotation	documentation The number of occurrences of this operation.

element runup/airport

diagram	<p>The diagram illustrates the relationship between the 'airport' element and the 'airportCode' element. The 'airport' element is shown with a small icon and a brief description: 'The airport code at which this operation occurs.' The 'airportCode' element is shown with a yellow rounded rectangle containing the text 'airportCode'. Inside this, there is a box labeled 'attributes' containing 'type' and 'country'.</p>																		
type	airportCode																		
properties	content complex																		
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>minLength</td> <td>0</td> <td></td> </tr> <tr> <td>maxLength</td> <td>4</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	minLength	0		maxLength	4										
Kind	Value	Annotation																	
minLength	0																		
maxLength	4																		
attributes	<table> <thead> <tr> <th>Name</th> <th>Type</th> <th>Use</th> <th>Default</th> <th>Fixed</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>type</td> <td>airportCodeType</td> <td>optional</td> <td>ANY</td> <td></td> <td></td> </tr> <tr> <td>country</td> <td>string3</td> <td>optional</td> <td>ANY</td> <td></td> <td></td> </tr> </tbody> </table>	Name	Type	Use	Default	Fixed	Annotation	type	airportCodeType	optional	ANY			country	string3	optional	ANY		
Name	Type	Use	Default	Fixed	Annotation														
type	airportCodeType	optional	ANY																
country	string3	optional	ANY																
annotation	documentation The airport code at which this operation occurs.																		

element runup/opTime

diagram	<p>The diagram shows a single 'opTime' element represented by a small icon.</p>
type	xs:dateTime
properties	content simple
annotation	documentation The runup operation time.

element runup/duration

diagram	<p>The diagram shows a single 'duration' element represented by a small icon.</p>
type	xs:double
properties	content simple
annotation	documentation The duration of the runup.

element runup/heading

diagram	<p>The diagram shows a single 'heading' element represented by a small icon.</p>
type	xs:double
properties	content simple
annotation	documentation The orientation of the aircraft.

element runup/numEnginesUsed

diagram	<p>The diagram shows a single 'numEnginesUsed' element represented by a small icon.</p>									
type	int1to9999									
properties	<table> <thead> <tr> <th>minOcc</th> <th>0</th> </tr> </thead> <tbody> <tr> <td>maxOcc</td> <td>1</td> </tr> <tr> <td>content</td> <td>simple</td> </tr> </tbody> </table>	minOcc	0	maxOcc	1	content	simple			
minOcc	0									
maxOcc	1									
content	simple									
facets	<table> <thead> <tr> <th>Kind</th> <th>Value</th> <th>Annotation</th> </tr> </thead> <tbody> <tr> <td>minInclusive</td> <td>1</td> <td></td> </tr> <tr> <td>maxInclusive</td> <td>9999</td> <td></td> </tr> </tbody> </table>	Kind	Value	Annotation	minInclusive	1		maxInclusive	9999	
Kind	Value	Annotation								
minInclusive	1									
maxInclusive	9999									
annotation	documentation Number of engines used for this runup operation.									

element runup/isPreFlight

diagram	<p>The diagram shows a single 'isPreFlight' element represented by a small icon.</p>
annotation	<p>For indicating whether this operation is for Preflight check (True) or Engine maintenance (False); used for emissions dispersion output group association</p>

type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false
annotation	documentation Flag indicating whether this operation is for Preflight check (True) or Engine maintenance (False); used for emissions dispersion output group association

element runup/thrustPerEngine

diagram	<p>The thrust per engine employed for this runup operation.</p>
type	xs:double
properties	content simple
annotation	documentation The thrust per engine employed for this runup operation.

complexType runwayEnd

diagram	<p>This diagram illustrates the structure of the runwayEnd complex type. It starts with a root element 'runwayEnd' which points to a 'name' element (ID of the runway's endpoint). The 'runwayEnd' element also points to an 'elevation' element (Runway endpoint's elevation above MSL in feet). From 'elevation', several other elements branch out: 'threshCrossHeight' (Approach threshold crossing height AGL (feet)), 'threshElevation' (Elevation of runway's endpoint above or below MSL (feet)), 'glideSlope' (Glide slope for runway's endpoint. Valid values: 2 to 6 (decimal degrees)), 'intAltitude' (Altitude at which glide slope should be intercepted above ground level. (feet)), 'depDispThresh' (Displaced threshold length at departure end of runway. (feet)), 'appDispThresh' (Displaced threshold length at arrival end of runway. (feet)), 'percentWind' (Percent change in airport average headwind. (%)), and 'isHelpad' (Indicates if this end of the runway is also a helipad. Valid values: Y = yes, N = no). Additionally, there are two coordinate groups: 'coord2DGroup' (Indicates how a two-dimensional group is specified) and 'latlonCoordGroup' (Specifies a coordinate using latitude and longitude), each leading to 'latitude' and 'longitude' elements. There are also 'utmCoordGroup' and 'utmZone' elements, each leading to 'utmN' and 'utmE' elements.</p>
children	name latitude latitudeDMS longitude longitudeDMS utmN utmE utmZone elevation threshCrossHeight threshElevation glideSlope intAltitude depDispThresh appDispThresh percentWind isHelpad

used by	element runway/runwayEnd
annotation	documentation Characterizes the runway's endpoint.

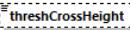
element **runwayEnd/name**

diagram	 name ID of the runway's endpoint.
type	string8
properties	content simple
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation ID of the runway's endpoint.

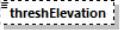
element **runwayEnd/elevation**

diagram	 elevation Runway endpoint's elevation above MSL in feet. (feet)
type	xs:double
properties	content simple
annotation	documentation Runway endpoint's elevation above MSL in feet. (feet)

element **runwayEnd/threshCrossHeight**

diagram	 threshCrossHeight Approach threshold crossing height AGL (feet)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Approach threshold crossing height AGL (feet)

element **runwayEnd/threshElevation**

diagram	 threshElevation Elevation of runway's endpoint above or below MSL (feet)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Elevation of runway's endpoint above or below MSL (feet)

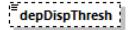
element **runwayEnd/glideSlope**

diagram	 glideSlope Glide slope for runway's endpoint. Valid values: 2 to 6 (decimal degrees)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Glide slope for runway's endpoint. Valid values: 2 to 6 (decimal degrees)

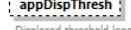
element **runwayEnd/intAltitude**

diagram	 intAltitude Altitude at which glide slope should be intercepted above ground level. (feet)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Altitude at which glide slope should be intercepted above ground level. (feet)

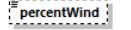
element **runwayEnd/depDispThresh**

diagram	 depDispThresh Displaced threshold length at departure end of runway. (feet)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Displaced threshold length at departure end of runway. (feet)

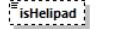
element runwayEnd/appDispThresh

diagram	 appDispThresh Displaced threshold length at arrival end of runway. (feet)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Displaced threshold length at arrival end of runway. (feet)

element runwayEnd/percentWind

diagram	 percentWind Percent change in airport average headwind. (%)
type	xs:double
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Percent change in airport average headwind. (%)

element runwayEnd/isHelpad

diagram	 isHelpad Indicates if this end of the runway is also a helipad. Valid values: Y = yes, N = no.
type	xs:string
properties	minOcc 0 maxOcc 1 content simple
annotation	documentation Indicates if this end of the runway is also a helipad. Valid values: Y = yes, N = no.

complexType **scenarioAirportLayoutType**

diagram	<pre> classDiagram class scenarioAirportLayoutType { airportLayoutName mixingHeight useHourlyMetData averageTemperature dailyHighTemperature dailyLowTemperature pressure pressureMSL humidity windspeed windDirection ceiling visibility airportConfigSet airportCapacity } note over scenarioAirportLayoutType: Describes weather conditions. </pre>
children	<code>airportLayoutName mixingHeight useHourlyMetData averageTemperature dailyHighTemperature dailyLowTemperature pressure pressureMSL humidity windSpeed windDirection ceiling visibility airportConfigSet airportCapacity</code>
used by	element scenarioAirportLayoutSet/scenarioAirportLayout
annotation	<p>documentation</p> <p>Describes weather conditions.</p>

element scenarioAirportLayoutType/airportLayoutName


diagram	<pre> classDiagram class airportLayoutName { Kind Value Annotation minLength 0 maxLength 255 } </pre>
type	<code>string255</code>
properties	content simple
facets	<p>Kind Value Annotation</p> <p>minLength 0</p> <p>maxLength 255</p>

element scenarioAirportLayoutType/mixingHeight

diagram	<pre> classDiagram class mixingHeight { Height at the top layer of atmosphere where relatively vigorous mixing of pollutants and other gases takes place for the airport in a given month. Varies diurnally and seasonally. (feet AFE) } </pre>
type	<code>xs:double</code>
properties	minOcc 0

	maxOcc 1 content simple default 0
annotation	documentation Height at the top layer of atmosphere where relatively vigorous mixing of pollutants and other gases takes place for the airport in a given month. Varies diurnally and seasonally. (feet AFE)

element **scenarioAirportLayoutType/useHourlyMetData**

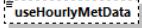diagram	 <p>If true, use user-defined hourly meteorological data to compute emissions. If false, use default annual averages to compute emissions. (true or false)</p>
type	xs:boolean
properties	minOcc 0 maxOcc 1 content simple default false
annotation	documentation If true, use user-defined hourly meteorological data to compute emissions. If false, use default annual averages to compute emissions. (true or false)

element **scenarioAirportLayoutType/averageTemperature**

diagram	 <p>Average temperature (°F).</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Average temperature (°F).

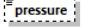
element **scenarioAirportLayoutType/dailyHighTemperature**

diagram	 <p>Average daily high temperature (°F).</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Average daily high temperature (°F).

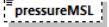
element **scenarioAirportLayoutType/dailyLowTemperature**

diagram	 <p>Average daily low temperature (°F).</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Average daily low temperature (°F).

element **scenarioAirportLayoutType/pressure**

diagram	 <p>Average barometric pressure. (in inches Hg)</p>
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Average barometric pressure. (in inches Hg)

element **scenarioAirportLayoutType/pressureMSL**

diagram	 <p>Average barometric pressure at mean sea level.</p>
type	xs:double
properties	minOcc 0 maxOcc 1

	content simple default 0
annotation	documentation Average barometric pressure at mean sea level.

element **scenarioAirportLayoutType/humidity**

diagram	 humidity Relative humidity (%).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Relative humidity (%).

element **scenarioAirportLayoutType/windSpeed**

diagram	 windSpeed Wind speed at airport surface (mph).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Wind speed at airport surface (mph).

element **scenarioAirportLayoutType/windDirection**

diagram	 windDirection Wind direction. Valid values: 0-360. (decimal degrees)
type	int0to360
properties	minOcc 0 maxOcc 1 content simple default 1
facets	Kind Value Annotation minInclusive 0 maxExclusive 360
annotation	documentation Wind direction. Valid values: 0-360. (decimal degrees)

element **scenarioAirportLayoutType/ceiling**


diagram	 ceiling Ceiling (feet AFE).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Ceiling (feet AFE).

element **scenarioAirportLayoutType/visibility**

diagram	 visibility Visibility (statute miles).
type	xs:double
properties	minOcc 0 maxOcc 1 content simple default 0
annotation	documentation Visibility (statute miles).

complexType **spectralClass**

diagram

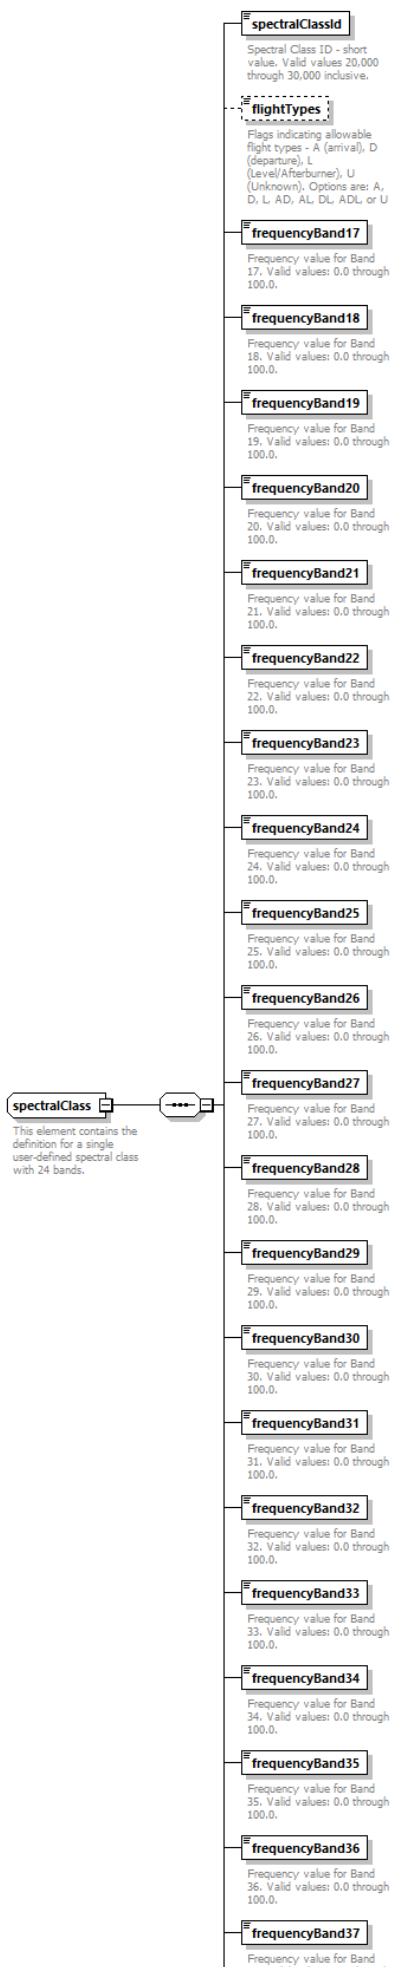

	<p>37. Valid values: 0.0 through 100.0.</p> <p>frequencyBand38 Frequency value for Band 38. Valid values: 0.0 through 100.0.</p> <p>frequencyBand39 Frequency value for Band 39. Valid values: 0.0 through 100.0.</p> <p>frequencyBand40 Frequency value for Band 40. Valid values: 0.0 through 100.0.</p>
children	spectralClassId flightTypes frequencyBand17 frequencyBand18 frequencyBand19 frequencyBand20 frequencyBand21 frequencyBand22 frequencyBand23 frequencyBand24 frequencyBand25 frequencyBand26 frequencyBand27 frequencyBand28 frequencyBand29 frequencyBand30 frequencyBand31 frequencyBand32 frequencyBand33 frequencyBand34 frequencyBand35 frequencyBand36 frequencyBand37 frequencyBand38 frequencyBand39 frequencyBand40
used by	element fleet / spectralClass
annotation	documentation This element contains the definition for a single user-defined spectral class with 24 bands.

element [spectralClass](#)/[spectralClassId](#)

diagram	
	Spectral Class ID - short value. Valid values 20,000 through 30,000 inclusive.
type	spectralClassId
properties	content simple
facets	Kind Value Annotation minInclusive 20000 maxInclusive 30000
annotation	documentation Spectral Class ID - short value. Valid values 20,000 through 30,000 inclusive.

element [spectralClass](#)/[flightTypes](#)

diagram	
	Flags indicating allowable flight types - A (arrival), D (departure), L (Level/Afterburner), U (Unknown). Options are: A, D, L, AD, AL, DL, ADL, or U
type	spectralFlightType
properties	minOcc 0 maxOcc 1 content simple
facets	Kind Value Annotation pattern A D L AD AL DL ADL U
annotation	documentation Flags indicating allowable flight types - A (arrival), D (departure), L (Level/Afterburner), U (Unknown). Options are: A, D, L, AD, AL, DL, ADL, or U

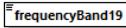
element [spectralClass](#)/[frequencyBand17](#)

diagram	
	Frequency value for Band 17. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 17. Valid values: 0.0 through 100.0.

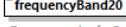
element [spectralClass](#)/[frequencyBand18](#)

diagram	
	Frequency value for Band 18. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 18. Valid values: 0.0 through 100.0.

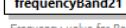
element [spectralClass](#)/[frequencyBand19](#)

diagram	 Frequency value for Band 19. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 19. Valid values: 0.0 through 100.0.

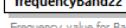
element **spectralClass/frequencyBand20**

diagram	 Frequency value for Band 20. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 20. Valid values: 0.0 through 100.0.

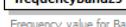
element **spectralClass/frequencyBand21**

diagram	 Frequency value for Band 21. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 21. Valid values: 0.0 through 100.0.

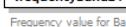
element **spectralClass/frequencyBand22**

diagram	 Frequency value for Band 22. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 22. Valid values: 0.0 through 100.0.

element **spectralClass/frequencyBand23**

diagram	 Frequency value for Band 23. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 23. Valid values: 0.0 through 100.0.

element **spectralClass/frequencyBand24**


diagram	 Frequency value for Band 24. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100

annotation	documentation Frequency value for Band 24. Valid values: 0.0 through 100.0.
------------	--


element **spectralClass/frequencyBand25**

diagram	 Frequency value for Band 25. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 25. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand26**

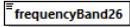diagram	 Frequency value for Band 26. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 26. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand27**

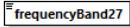diagram	 Frequency value for Band 27. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 27. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand28**

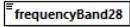diagram	 Frequency value for Band 28. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 28. Valid values: 0.0 through 100.0.

element **spectralClass/frequencyBand29**

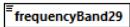
diagram	 Frequency value for Band 29. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 29. Valid values: 0.0 through 100.0.

element **spectralClass/frequencyBand30**

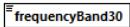
diagram	 Frequency value for Band 30. Valid values: 0.0 through 100.0.
type	floatInclusive100

properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 30. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand31**

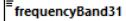diagram	 Frequency value for Band 31. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 31. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand32**

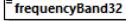diagram	 Frequency value for Band 32. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 32. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand33**

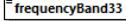diagram	 Frequency value for Band 33. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 33. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand34**

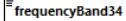diagram	 Frequency value for Band 34. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 34. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand35**

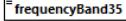diagram	 Frequency value for Band 35. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 35. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand36**

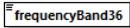diagram	 Frequency value for Band 36. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 36. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand37**

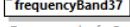diagram	 Frequency value for Band 37. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 37. Valid values: 0.0 through 100.0.


element **spectralClass/frequencyBand38**

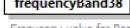diagram	 Frequency value for Band 38. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 38. Valid values: 0.0 through 100.0.

element **spectralClass/frequencyBand39**

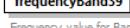diagram	 Frequency value for Band 39. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 39. Valid values: 0.0 through 100.0.

element **spectralClass/frequencyBand40**

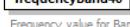diagram	 Frequency value for Band 40. Valid values: 0.0 through 100.0.
type	floatInclusive100
properties	content simple
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation Frequency value for Band 40. Valid values: 0.0 through 100.0.

simpleType **aircraftPerformanceModelType**

type	restriction of xs:string
properties	base xs:string
used by	element scenario/acftPerfModel
facets	Kind Value Annotation enumeration ICAO enumeration SAE1845
annotation	documentation Type of aircraft performance model. Valid values: ICAO, SAE1845.

simpleType **AircraftSizeType**

type	restriction of xs:string
properties	base xs:string
used by	element runwayAssignment/aircraftSize
facets	Kind Value Annotation enumeration S enumeration L enumeration H
annotation	documentation Aircraft size.

simpleType **airframeModel**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraft/airframeModel airframe/model
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Refers to an existing airframe model.

simpleType **airportCodeType**

type	restriction of xs:string
properties	base xs:string
used by	attribute airportCode/@type
facets	Kind Value Annotation enumeration ICAO enumeration IATA enumeration FAA enumeration OTHER enumeration ANY
annotation	documentation The type of an airport code.

simpleType **anpAirplaneId**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraftType/anpAircraftId aircraft/anpAirplaneId anpAirplane/anpAirplaneId anpThrustSet/anpAirplaneId anpFlapsSet/anpAirplaneId anpProfileSet/anpAirplaneId energyShare/anpAirplaneId bada4ProfileSet/anpAirplaneId bada4ProcedureStep/anpAirplaneId aircraft/bada4FlapsMapSourceAnpid
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation ID of ANP airplane. Must be a new, unique value.

simpleType **anpCoeffType**

type	restriction of xs:string
properties	base xs:string
used by	element anpAirplane/depThrustCoeffType
facets	Kind Value Annotation pattern Jet JP Prop P

simpleType **anpFlapId**

type	restriction of xs:string
properties	base xs:string
used by	elements bada4ProcedureStep/anpFlapId anpFlaps/flapid anpProcedureStep/flapid
facets	Kind Value Annotation minLength 0 maxLength 6

simpleType **anpHeloDirectId**

type	restriction of xs:string
properties	base xs:string
used by	element anpHeloDirectivitySet/anpHelicopterId
facets	Kind Value Annotation minLength 0 maxLength 12

simpleType **anpHeloDirectivityId**

type	restriction of xs:string
properties	

properties	base xs:string
used by	element anpHelicopter/directivityId
facets	Kind Value Annotation minLength 0 maxLength 12

simpleType anpHeloGroundType

type	restriction of xs:string
properties	base xs:string
used by	element anpHeloDirectivity/groundType
facets	Kind Value Annotation pattern Hard H Software S File F None N

simpleType anpHeloId

type	restriction of xs:string
properties	base xs:string
used by	elements aircraft/anpHelicopterId anpHelicopter/anpHelicopterId anpHeloProfileSet/anpHelicopterId
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation ID of the helicopter.

simpleType anpHeloNoiseld

type	restriction of xs:string
properties	base xs:string
used by	elements anpHelicopter/noiseld anpHeloNoiseGroup/noiseld
facets	Kind Value Annotation minLength 0 maxLength 255

simpleType anpHeloSideType

type	restriction of xs:string
properties	base xs:string
used by	element anpHeloNPDCurve/sideType
facets	Kind Value Annotation pattern Left L Center C Right R Static S

simpleType anpNoiseld

type	restriction of xs:string
properties	base xs:string
used by	elements anpNoiseGroup/noiseld anpAirplane/noiseld
facets	Kind Value Annotation minLength 0 maxLength 255

simpleType anpNpdNoiseType

type	restriction of xs:string
properties	base xs:string
used by	elements anpNPDCurve/noiseType anpHeloNPDCurve/noiseType
facets	Kind Value Annotation pattern S M E P

simpleType anpNpdOpMode

type	restriction of xs:string
properties	base xs:string
used by	elements anpNPDCurve/opMode anpHeloNPDCurve/opMode
facets	Kind Value Annotation pattern A D L G H V W Y Z B C E F X S

simpleType anpOwnerType

type	restriction of xs:string
properties	base xs:string
used by	elements anpHelicopter/owner anpAirplane/owner
facets	Kind Value Annotation pattern Commercial C Military M General G

simpleType anpSizeCode

type	restriction of xs:string
------	--------------------------

properties	base xs:string
used by	element anpAirplane/sizeCode
facets	Kind Value Annotation pattern Heavy H Large L Small S

simpleType **apuName**

type	restriction of xs:string
properties	base xs:string
used by	elements airframe/auxiliaryPowerUnitId auxiliaryPowerUnit/baseAuxiliaryPowerUnit auxiliaryPowerUnit/name
facets	Kind Value Annotation minLength 0 maxLength 30
annotation	documentation Name of the auxiliary power unit.

simpleType **bada4AirplaneModel**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraft/bada4AirplaneModel bada4ProfileSet/bada4AirplaneModel
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Model of BADA 4 airplane.

simpleType **bada4Engine**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraft/bada4Engine bada4ProfileSet/bada4Engine
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Airplane BADA 4 engine.

simpleType **bada4Suffix**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraft/bada4Suffix bada4ProfileSet/bada4Suffix
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation User-defined BADA 4 model suffix.

simpleType **badaAirplaneId**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraft/badaAirplaneId badaAirplane/badaAirplaneId badaAltitudeDistributionSet/badaAirplaneId badaProfileSet/badaAirplaneId badaConfigSet/badaAirplaneId badaFuel/badaAirplaneId badaThrust/badaAirplaneId energyShare/badaAirplaneId
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation ID of a BADA airplane model. Must be unique.

simpleType **badaPhaseType**

type	restriction of xs:string
properties	base xs:string
used by	element badaConfig/phase
facets	Kind Value Annotation pattern InitialClimb C Takeoff TO Approach AP Landing LD Cruise CR

simpleType **badaWakeType**

type	restriction of xs:string
properties	base xs:string
used by	element badaAirplane/wakeCategory
facets	Kind Value Annotation pattern Heavy H Light L Medium M SuperHeavy J

simpleType **directionType**

type	restriction of xs:string
properties	base xs:string
used by	element taxipath/direction
facets	Kind Value Annotation pattern A Arrival D Departure Inbound O Outbound
annotation	documentation Supports the direction type of a taxi path. Direction type can be either arrival, departure, inbound, or outbound.

simpleType **doubleExclusive0Inclusive10**

type	restriction of xs:double
properties	base xs:double
used by	element pointStationarySource/stackDiameter
facets	Kind Value Annotation maxInclusive 10 minExclusive 0
annotation	documentation A double value in the range (0,10).

simpleType **doubleExclusive10**

type	restriction of xs:double
properties	base xs:double
facets	Kind Value Annotation minInclusive 0 maxExclusive 10
annotation	documentation A double value in the range [0,10).

simpleType **doubleExclusive100**

type	restriction of xs:double
properties	base xs:double
used by	elements taxiway/dispersionWidth categorySandSaltPile/fastestMileOfWind categorySandSaltPile/frictionVelocity categoryBoilerHeater/fuelAshContent categoryBoilerHeater/fuelAshContent categoryBoilerHeater/fuelSulfurContent categoryGenerator/fuelSulfurContent airportConfig/maxWindSpeed categoryFuelTank/verticalOrFloatingTank/meanWindSpeed categorySandSaltPile/meanWindSpeed airportConfig/minWindSpeed categoryDeicingArea/solutionConcentrationPercent
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation A double value in the range [0,100).

simpleType **doubleExclusive1000**

type	restriction of xs:double
properties	base xs:double
used by	elements categoryFuelTank/verticalOrFloatingTank/averageSolutionLevel categorySandSaltPile/massDisturbedPerDisturbance categoryFuelTank/verticalOrFloatingTank/maximumSolutionLevel categoryFuelTank/tankDiameter categoryFuelTank/verticalOrFloatingTank/tankHeight categoryFuelTank/horizontalFixedRooftank/tankLength categoryAircraftEngine/timePercentPower100 categoryAircraftEngine/timePercentPower30 categoryAircraftEngine/timePercentPower7 categoryAircraftEngine/timePercentPower85
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation A double value in the range [0,1000).

simpleType **doubleExclusive10000**

type	restriction of xs:double
properties	base xs:double
used by	element categorySandSaltPile/erodedSurfaceArea
facets	Kind Value Annotation minInclusive 0 maxExclusive 10000
annotation	documentation A double value in the range [0,10000).

simpleType **doubleExclusive2000**

type	restriction of xs:double
properties	base xs:double
used by	elements categoryDeicingArea/ethyleneGlycolDensity categoryDeicingArea/propyleneGlycolDensity categorySolventDegreaser/solutionDensity
facets	Kind Value Annotation minInclusive 0 maxExclusive 2000
annotation	documentation

A double value in the range [0,2000).

simpleType doubleExclusiveRange100

type	restriction of <code>xs:double</code>
properties	base <code>xs:double</code>
used by	elements categorySandSaltPile/moistureContent categorySandSaltPile/surfaceRoughness
facets	Kind Value Annotation minExclusive 0 maxExclusive 100
annotation	documentation A double value in the range (0,100).

simpleType doubleInclusive1

type	restriction of <code>xs:double</code>
properties	base <code>xs:double</code>
used by	elements userGroundSupportEquipment/defaultLoadFactor groundSupportEquipmentGateAssignment/fractionAssigned categoryBoilerHeater/pm25ToPm10Ratio categoryGenerator/pm25ToPm10Ratio categoryIncinerator/pm25ToPm10Ratio categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank/coneRoof/roofSlope categorySandSaltPile/surfaceWindSpeedFraction
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation A double value in the range [0,1].

simpleType doubleInclusive100

type	restriction of <code>xs:double</code>
properties	base <code>xs:double</code>
used by	elements runwayAssignment/arrivalPercentage runwayAssignment/departurePercentage categorySolventDegreaser/pollutionControlFactor categoryBoilerHeater/pollutionControlFactorCH4 categoryIncinerator/pollutionControlFactorCH4 categoryGenerator/pollutionControlFactorCH4 categoryOther/pollutionControlFactorCH4 categoryBoilerHeater/pollutionControlFactorCO categoryGenerator/pollutionControlFactorCO categoryIncinerator/pollutionControlFactorCO categoryOther/pollutionControlFactorCO categoryBoilerHeater/pollutionControlFactorCO2 categoryIncinerator/pollutionControlFactorCO2 categoryGenerator/pollutionControlFactorCO2 categoryOther/pollutionControlFactorCO2 categoryBoilerHeater/pollutionControlFactorNOx categoryIncinerator/pollutionControlFactorNOx categoryOther/pollutionControlFactorNOx categoryBoilerHeater/pollutionControlFactorPM10 categoryIncinerator/pollutionControlFactorPM10 categoryOther/pollutionControlFactorPM10 categoryBoilerHeater/pollutionControlFactorSOx categoryIncinerator/pollutionControlFactorSOx categoryOther/pollutionControlFactorSOx categoryBoilerHeater/pollutionControlFactorTHC categoryOther/pollutionControlFactorTHC categoryBoilerHeater/pollutionControlFactorTNMOC categoryGenerator/pollutionControlFactorTOC categoryIncinerator/pollutionControlFactorTOC categoryOther/pollutionControlFactorTOC categoryBoilerHeater/pollutionControlFactorVOC categoryIncinerator/pollutionControlFactorVOC categorySurfaceCoatingPainting/pollutionControlFactorVOC categoryVocElGroup/pollutionControlFactorVOC pointStationarySource/releaseHeight areaStationarySource/releaseHeight volumeStationarySource/releaseHeight runwayAssignment/tgoPercentage
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation A double value in the range [0,100].

simpleType doubleInclusive1000

type	restriction of <code>xs:double</code>
properties	base <code>xs:double</code>
used by	elements emissionFactorSet/CH4 categoryGenerator/CH4_EF categoryBoilerHeater/CH4_EI categoryTrainingFire/CH4_EI categoryGenerator/CH4_EI categoryIncinerator/CH4_EI categoryOther/CH4_EI emissionFactorSet/CO2 categoryGenerator/CO2_EF categoryOther/CO2_EI categoryGenerator/CO2_EI categoryBoilerHeater/CO2_EI categoryIncinerator/CO2_EI categoryTrainingFire/CO2_EI categoryGenerator/CO_EF categoryIncinerator/CO_EI categoryBoilerHeater/CO_EI categoryOther/CO_EI categoryGenerator/CO_EI pm10TermGroup/constantTermPm10 categoryGenerator/NOx_EF categoryBoilerHeater/NOx_EI categoryIncinerator/NOx_EI categoryOther/NOx_EI categoryGenerator/PM10_EF categoryBoilerHeater/PM10_EI categoryIncinerator/PM10_EI categoryOther/PM10_EI categoryGenerator/PM10_EI emissionFactorSet/PM25 categoryTrainingFire/PM25_EI categoryOther/PM25_EI categoryGenerator/PM25_EI categoryBoilerHeater/PM25_EI categoryIncinerator/PM25_EI categoryOther/SOx_EF categoryGenerator/SOx_EI pm10TermGroup/sulfurTermPm10 categoryBoilerHeater/sulfurTermSOx categoryOther/THC_EI thcElGroup/THC_EI tnmocElGroup/TNMOC_EI categoryGenerator/TOC_EF categoryIncinerator/TOC_EI tocElGroup/TOC_EI categorySurfaceCoatingPainting/VOC_EI categoryDeicingArea/VOC_EI categoryGenerator/VOC_EI vocElGroup/VOC_EI
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation A double value in the range [0,1000].

simpleType doubleInclusive10000

type	restriction of <code>xs:double</code>
properties	base <code>xs:double</code>
used by	element categoryGenerator/powerRatingHorsepower
facets	Kind Value Annotation minInclusive 0 maxInclusive 10000
annotation	documentation A double value in the range [0,10000].

simpleType doubleInclusive2000

type	restriction of <code>xs:double</code>
properties	base <code>xs:double</code>
facets	Kind Value Annotation minInclusive 0 maxInclusive 2000
annotation	documentation

A double value in the range [0,2000].

simpleType doubleInclusive24

type	restriction of xs:double
properties	base xs:double
used by	elements airportConfig/endHour airportConfig/startHour
facets	Kind Value Annotation minInclusive 0 maxInclusive 24
annotation	documentation A double value in the range [0,24].

simpleType doubleInclusive4000

type	restriction of xs:double
properties	base xs:double
used by	element roadwayOperation/roundTripDistance
facets	Kind Value Annotation minInclusive 0 maxInclusive 4000
annotation	documentation A double value in the range [0,4000].

simpleType doubleInclusive500

type	restriction of xs:double
properties	base xs:double
used by	element categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank/domeRoof/domeRadius
facets	Kind Value Annotation minInclusive 0 maxInclusive 500
annotation	documentation A double value in the range [0,500].

simpleType doubleInclusiveRange0to600

type	restriction of xs:double
properties	base xs:double
facets	Kind Value Annotation minInclusive 0 maxInclusive 600
annotation	documentation A double value in the range [0,600].

simpleType doubleInclusiveRange1to30

type	restriction of xs:double
properties	base xs:double
facets	Kind Value Annotation minInclusive 1 maxInclusive 30
annotation	documentation A double value in the range [1,30].

simpleType doubleMin0

type	restriction of xs:double
properties	base xs:double
used by	elements categoryFuelTank/horizontalFixedRoofTank/annualIncreaseInLiquidLevel categoryFuelTank/verticalOrFloatingTank/verticalFixedRoofTank/annualIncreaseInLiquidLevel quarterHourlyProfile/temporalFactor/monthlyProfile/temporalFactor/April monthlyProfile/temporalFactor/August monthlyProfile/temporalFactor/December monthlyProfile/temporalFactor/February dailyProfile/temporalFactor/Friday monthlyProfile/temporalFactor/January monthlyProfile/temporalFactor/July monthlyProfile/temporalFactor/June monthlyProfile/temporalFactor/March monthlyProfile/temporalFactor/May dailyProfile/temporalFactor/Monday monthlyProfile/temporalFactor/November monthlyProfile/temporalFactor/October dailyProfile/temporalFactor/Saturday monthlyProfile/temporalFactor/September dailyProfile/temporalFactor/Sunday dailyProfile/temporalFactor/Thursday dailyProfile/temporalFactor/Tuesday dailyProfile/temporalFactor/Wednesday
facets	Kind Value Annotation minInclusive 0
annotation	documentation A double value with a lower inclusive bound of 0.

simpleType emissionsSourceType

type	restriction of xs:string
properties	base xs:string
used by	element case/source
facets	Kind Value Annotation enumeration Container enumeration Aircraft enumeration GSE Population enumeration Parking Facilities enumeration Roadways

	enumeration Stationary Sources
annotation	documentation Source of emissions.

simpleType **emissionsUnitsType**

type	restriction of xs:string
properties	base xs:string
used by	element study/emissionsUnits
facets	Kind Value Annotation enumeration MetricTonnes enumeration Kilograms enumeration Grams enumeration ImperialTons enumeration Pounds
annotation	documentation Unit of measure for a given emission.

simpleType **empty-string**

type	restriction of xs:string
properties	base xs:string
facets	Kind Value Annotation enumeration

simpleType **engineCode**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraftEngine/code aircraft/engineCode
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation Code for an airframe's engine.

simpleType **engineModCode**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraftEngineMod/code aircraftType/engineModCode aircraft/engineModCode
facets	Kind Value Annotation minLength 0 maxLength 50
annotation	documentation Airplane's engine modification code.

simpleType **engineModel**

type	restriction of xs:string
properties	base xs:string
used by	element aircraftEngine/model
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	

simpleType **engineType**

type	restriction of xs:string
properties	base xs:string
used by	elements aircraftEngine/engineType anpHelicopter/engineTypeCode anpAirplane/engineTypeCode badaAirplane/engineTypeCode
facets	Kind Value Annotation pattern Jet J Turbo Turboprop T Prop Piston P
annotation	documentation Type of engine on this airframe. Valid values: E (Electric), J (Jet), P (Piston), T (Turbo prop).

simpleType **floatExclusive0Inclusive10**

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation maxInclusive 10 minExclusive 0
annotation	documentation A real number in the range (0,10].

simpleType **floatExclusive10**

type	restriction of xs:float

properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxExclusive 10
annotation	documentation A real number in the range [0,10].

simpleType floatExclusive100

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxExclusive 100
annotation	documentation A real number in the range [0,100].

simpleType floatExclusive1000

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxExclusive 1000
annotation	documentation A real number in the range [0,1,000].

simpleType floatExclusive10000

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxExclusive 10000
annotation	documentation A real number in the range [0,10,000].

simpleType floatExclusive2000

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxExclusive 2000
annotation	documentation A real number in the range [0,2,000].

simpleType floatExclusiveRange100

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minExclusive 0 maxExclusive 100
annotation	documentation A real number in the range (0,100).

simpleType floatInclusive1

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxInclusive 1
annotation	documentation A real number in the range [0,1].

simpleType floatInclusive100

type	restriction of xs:float
properties	base xs:float
used by	elements spectralClass/frequencyBand17 spectralClass/frequencyBand18 spectralClass/frequencyBand19 spectralClass/frequencyBand20 spectralClass/frequencyBand21 spectralClass/frequencyBand22 spectralClass/frequencyBand23 spectralClass/frequencyBand24 spectralClass/frequencyBand25 spectralClass/frequencyBand26 spectralClass/frequencyBand27 spectralClass/frequencyBand28 spectralClass/frequencyBand29 spectralClass/frequencyBand30 spectralClass/frequencyBand31 spectralClass/frequencyBand32 spectralClass/frequencyBand33 spectralClass/frequencyBand34 spectralClass/frequencyBand35 spectralClass/frequencyBand36 spectralClass/frequencyBand37 spectralClass/frequencyBand38 spectralClass/frequencyBand39 spectralClass/frequencyBand40
facets	Kind Value Annotation minInclusive 0 maxInclusive 100
annotation	documentation A real number in the range [0,100].

simpleType floatInclusive1000

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxInclusive 1000
annotation	documentation A real number in the range [0,1,000].

simpleType floatInclusive10000

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxInclusive 10000
annotation	documentation A real number in the range [0,10,000].

simpleType floatInclusive2000

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxInclusive 2000
annotation	documentation A real number in the range [0,2,000].

simpleType floatInclusive24

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxInclusive 24
annotation	documentation A real number in the range [0,24].

simpleType floatInclusive4000

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 0 maxInclusive 4000
annotation	documentation A real number in the range [0,4,000].

simpleType floatInclusiveRange1to30

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 1 maxInclusive 30
annotation	documentation A real number in the range [1,30].

simpleType floatInclusiveRange32to600

type	restriction of xs:float
properties	base xs:float
facets	Kind Value Annotation minInclusive 32 maxInclusive 600
annotation	documentation A real number in the range [32,600].

simpleType fuelType

type	restriction of xs:string
properties	base xs:string
used by	elements parkingFacilityOperation/fuelType roadwayOperation/fuelType groundSupportEquipmentPopulationOperation/fuelType groundSupportEquipmentLTOOperation/fuelType
facets	Kind Value Annotation pattern G Gasoline D Diesel C Compressed Natural Gas L Liquefied Petroleum Gas E Electric

annotation documentation
Supports data relating to different types of fuel use. Fuel types can be based on either gasoline, diesel, compressed natural gas, liquid propane gas, or electric based.

simpleType **groundVehicleType**

type	restriction of xs:string	
properties	base xs:string	
used by	elements parkingFacilityOperation/vehicleType roadwayOperation/vehicleType	
facets	Kind Value pattern 0 Default Fleet Mix 1 Passenger Cars 2 Light Trucks 1 3 Light Trucks 2 4 Light Trucks 3 5 Light Trucks 4 6 Class 2b Heavy Trucks 7 Class 3 Heavy Trucks 8 Class 4 Heavy Trucks 9 Class 5 Heavy Trucks 10 Class 6 Heavy Trucks 11 Class 7 Heavy Trucks 12 Class 8a Heavy Trucks 13 Class 8b Heavy Trucks 14 School Busses 15 Transit and Urban Busses 16 Motorcycle	Annotation
annotation	documentation Supports data relating to the use of ground vehicles - NOT currently used in AEDT. Ground vehicle types can range from fleet mixes, passenger cars, and various light or heavy trucks.	

simpleType **int0to23**

type	restriction of xs:int	
properties	base xs:int	
used by	attribute quarterHourlyProfile/temporalFactor/@startHour	
facets	Kind Value Annotation minInclusive 0 maxInclusive 23	
annotation	documentation An integer in the range [0,23].	

simpleType **int0to360**

type	restriction of xs:int	
properties	base xs:int	
used by	elements airportConfig/endWindAngle airportConfig/startWindAngle scenarioAirportLayoutType/windDirection	
facets	Kind Value Annotation minInclusive 0 maxExclusive 360	
annotation	documentation An integer in the range [0,360].	

simpleType **int0to5**

type	restriction of xs:int	
properties	base xs:int	
used by	element categoryOther/fuelUnits	
facets	Kind Value Annotation minInclusive 0 maxInclusive 5	
annotation	documentation An integer in the range [0,5].	

simpleType **int0to87**

type	restriction of xs:int	
properties	base xs:int	
facets	Kind Value Annotation minInclusive 0 maxInclusive 87	
annotation	documentation An integer in the range [0,87].	

simpleType **int1to13**

type	restriction of xs:int	
properties	base xs:int	
used by	element categorySolventDegreaser/typeCode	
facets	Kind Value Annotation minInclusive 1 maxInclusive 13	
annotation	documentation An integer in the range [1,13].	

simpleType **int1to15**

type	restriction of xs:int	
properties	base xs:int	
facets	Kind Value Annotation minInclusive 1 maxInclusive 15	
annotation	documentation An integer in the range [1,15].	

simpleType **int1to2**

type	restriction of xs:int	
properties	base xs:int	

properties	base xs:int
used by	element categoryIncinerator/typeCode
facets	Kind Value Annotation minInclusive 1 maxInclusive 2
annotation	documentation An integer in the range [1,2].

simpleType int1to25

type	restriction of xs:int
properties	base xs:int
used by	element categoryFuelTank/typeCode
facets	Kind Value Annotation minInclusive 1 maxInclusive 25
annotation	documentation An integer in the range [1,25].

simpleType int1to4

type	restriction of xs:int
properties	base xs:int
used by	element categoryDeicingArea/typeCode
facets	Kind Value Annotation minInclusive 1 maxInclusive 4
annotation	documentation An integer in the range [1,4].

simpleType int1to5

type	restriction of xs:int
properties	base xs:int
used by	elements categorySandSaltPile/typeCode categoryTrainingFire/typeCode
facets	Kind Value Annotation minInclusive 1 maxInclusive 5
annotation	documentation An integer in the range [1,5].

simpleType int1to8

type	restriction of xs:int
properties	base xs:int
used by	elements categoryGenerator/typeCode categorySurfaceCoatingPainting/typeCode
facets	Kind Value Annotation minInclusive 1 maxInclusive 8
annotation	documentation An integer in the range [1,8].

simpleType int1to93

type	restriction of xs:int
properties	base xs:int
facets	Kind Value Annotation minInclusive 1 maxInclusive 93
annotation	documentation An integer in the range [1,93].

simpleType int1to9999

type	restriction of xs:int
properties	base xs:int
used by	elements airframe/maxSeatsRunup/numEnginesUsed
facets	Kind Value Annotation minInclusive 1 maxInclusive 9999
annotation	documentation An integer in the range [1,9999].

simpleType int5to15

type	restriction of xs:int
properties	base xs:int
annotation	documentation An integer in the range [5,15].

used by	element categoryFuelTank/reidVaporPressure
facets	Kind Value Annotation minInclusive 5 maxInclusive 15
annotation	documentation An integer in the range [5,15].

simpleType int5to65

type	restriction of xs:int
properties	base xs:int
used by	element roadwayOperation/speed
facets	Kind Value Annotation minInclusive 5 maxInclusive 65
annotation	documentation An integer in the range [5,65].

simpleType int6to13

type	restriction of xs:int
properties	base xs:int
facets	Kind Value Annotation minInclusive 6 maxInclusive 13
annotation	documentation An integer in the range [6,13].

simpleType int89to148

type	restriction of xs:int
properties	base xs:int
facets	Kind Value Annotation minInclusive 89 maxInclusive 148
annotation	documentation An integer in the range [89,148].

simpleType latitudeDMSType

type	restriction of xs:string
properties	base xs:string
used by	element latlonCoordGroup/latitudeDMS
facets	Kind Value Annotation pattern [0-9]{2}[- ;]"[0-9]{2}[- ;]apos;[0-9]{2}(.{0-9}{3})?[N n S s]
annotation	documentation Latitude expressed as dd°mm'sss with optional indicator N, n, S, s. (degrees)

simpleType longitudeDMSType

type	restriction of xs:string
properties	base xs:string
used by	element latlonCoordGroup/longitudeDMS
facets	Kind Value Annotation pattern [0-9]{2}[0-9]{2}[- ;]"[0-9]{2}[- ;]apos;[0-9]{2}(.{0-9}{3})?[E e W w]
annotation	documentation Longitude expressed as dd°mm'sss with optional indicator N, n, S, s. (degrees)

simpleType nodeControlType

type	restriction of xs:string
properties	base xs:string
used by	attributes trackNode/altitude/@control trackNode/speed/@control
facets	Kind Value Annotation pattern 0 None 1 AtOrBelow 2 Match 3 AtOrAbove
annotation	documentation Type of altitude clearance at this point.

simpleType opType

type	restriction of xs:string
properties	base xs:string
used by	element operation/opType
facets	Kind Value Annotation pattern A Arrival D Departure V Overflight F Circuit T TouchAndGo R Runup W RunwayToRunway L LTO LandingTakoff X Taxi
annotation	documentation Type of operation.

simpleType originSourceType

type	restriction of xs:string
properties	base xs:string
used by	elements polarGrid/originSource polarReceptor/originSource
facets	Kind Value Annotation pattern Gate Parking Facility Roadway Runway Stationary Source Taxiway Training Fire
annotation	documentation Supports the polarReceptor source type. Original source type can be either gate, parking facility, roadway, runway, stationary source, taxiway, and training fire.

simpleType profileType

type	string255
properties	base string255
used by	elements profiles/arrivalProfile operation/badaProfile profiles/departureProfile operation/saeProfile
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation An aircraft's flight profile.

simpleType quarterHourMinutes

type	restriction of xs:int
properties	base xs:int
used by	attribute quarterHourlyProfile/temporalFactor/@startMinutes
facets	Kind Value Annotation enumeration 0 enumeration 15 enumeration 30 enumeration 45
annotation	documentation Either 0, 15, 30, or 45.

simpleType spectralClassId

type	restriction of xs:short
properties	base xs:short
used by	element spectralClass/spectralClassId
facets	Kind Value Annotation minInclusive 20000 maxInclusive 30000
annotation	documentation User-defined Spectral Class ID in the range 20,000 to 30,000 - inclusive.

simpleType spectralFlightType

type	restriction of xs:string
properties	base xs:string
used by	element spectralClass/flightTypes
facets	Kind Value Annotation pattern A D L AD AL DL ADL U
annotation	documentation Flags indicating allowable flight types - A (arrival), D (departure), L (Level/Afterburner), U (Unknown).

simpleType string1

type	restriction of xs:string
properties	base xs:string
used by	elements operation/arrivalStageLength operation/departureStageLength airframe/designationCode airframe/engineLocation airframe/engineType anpTfcCoefficients mode anpNoiseGroup modelType anpHelicopter modelType anpHeloProfile operationType anpHeloProcedureStep operationType anpFlaps operationType anpProfile operationType bada4Profile operationType anpHeloDirectivity opMode anpProfilePoint opMode anpHeloProfile profileStageLength anpHeloProcedureStep profileStageLength anpProfile profileStageLength airframe/sizeCode operation/stageLength anpHeloProcedureStep stepType anpProcedureStep stepType bada4ProcedureStep stepType anpNoiseGroup thrustSetType anpThrustGeneral thrustType anpThrustJet thrustType anpThrustProp thrustType anpProcedureStep thrustType bada4ProcedureStep thrustType airframe/usageCode bada4Profile weightClass
facets	Kind Value Annotation minLength 0 maxLength 1
annotation	documentation A string up to one character long.

simpleType string10

type	restriction of xs:string
properties	base xs:string
used by	elements badaConfig/configName aircraftEngine/superseded
facets	Kind Value Annotation minLength 0 maxLength 10

annotation	documentation A string up to 10 characters long.
------------	---

simpleType string100

type	restriction of xs:string
properties	base xs:string
used by	elements operation/activityProfile airportConfig/configurationName activityProfile/dailyProfile aircraftEngine/manufacturer activityProfile/monthlyProfile airport/name quarterHourlyProfile/profileName dailyProfile/profileName monthlyProfile/profileName activityProfile/quarterHourlyProfile aircraftEngine/source airport/zone attribute activityProfile/@name
facets	Kind Value Annotation minLength 0 maxLength 100
annotation	documentation A string up to 100 characters long.

simpleType string1024

type	restriction of xs:string
properties	base xs:string
used by	element aircraftEngine/notes
facets	Kind Value Annotation minLength 0 maxLength 1024
annotation	documentation A string up to 1024 characters long.

simpleType string11

type	restriction of xs:string
properties	base xs:string
used by	elements windRoseStation/calmCriteria windRoseStation/endDayMonth windRoseStation/userString
facets	Kind Value Annotation minLength 0 maxLength 11
annotation	documentation A string up to 11 characters long.

simpleType string12

type	restriction of xs:string
properties	base xs:string
used by	elements badaProfile/aircraftVersion windRoseStation/beginDayMonth badaProfile/engine operation/userType
facets	Kind Value Annotation minLength 0 maxLength 12
annotation	documentation A string up to 12 characters long.

simpleType string14

type	restriction of xs:string
properties	base xs:string
used by	element windRoseData/directionRange
facets	Kind Value Annotation minLength 0 maxLength 14
annotation	documentation A string up to 14 characters long.

simpleType string15

type	restriction of xs:string
properties	base xs:string
used by	elements badaProfile/companyName airport/faid
facets	Kind Value Annotation minLength 0 maxLength 15
annotation	documentation A string up to 15 characters long.

simpleType string16

type	restriction of xs:string
properties	base xs:string
used by	elements nodeIdGroup/description operation/flightNumber runup/flightNumber case/hourlyWxMD5 operation/id nodeIdGroup/id operation/userParam attribute AsifXml/OverVersion
facets	Kind Value Annotation minLength 0 maxLength 16
annotation	documentation A string up to 16 characters long.

simpleType string2

type	restriction of xs:string
properties	base xs:string
used by	elements badaProfile/companyCode2 airframe/euroGroupCode badaProfile/massRangeValue
facets	Kind Value Annotation minLength 0 maxLength 2
annotation	documentation A string up to two characters long.

simpleType string20

type	restriction of xs:string
properties	base xs:string
used by	elements groundSupportEquipmentGateAssignment/gate taxiway/name taxipath/taxiwayName
facets	Kind Value Annotation minLength 0 maxLength 20
annotation	documentation A string up to 20 characters long.

simpleType string200

type	restriction of xs:string
properties	base xs:string
facets	Kind Value Annotation minLength 0 maxLength 200
annotation	documentation A string up to 200 characters long.

simpleType string25

type	restriction of xs:string
properties	base xs:string
used by	elements aircraftEngine/emissionsEngineModel airport/facilityType aircraftEngine/performanceEngineModel airportWeatherStation/weatherStationName
facets	Kind Value Annotation minLength 0 maxLength 25
annotation	documentation A string up to 25 characters long.

simpleType string255

type	restriction of xs:string
properties	base xs:string
used by	elements aircraftType/airframeModel trackref/airportLayoutName scenarioAirportLayoutType/airportLayoutName study/description aircraft/description scenario/description case/description aircraftEngineMod/description anpHelicopter/description anpAirplane/description categoryAircraftEngine/engineCode aircraftType/engineCode bada4Profile/flightProcedure case/hourlyWxFile/runup/id badaAirplane/infoDescription building/name receptorSet/name pointReceptor/name study/name scenario/name case/name annualization/name annualizationCase/name airportLayoutType/name badaThrust/notes anpHeloProfile/profileGroupId anpHeloProcedureStep/profileGroupId anpProfile/profileGroupId case/reference/refCase case/reference/refScenario sensorNode/source study/terrainFiles trackref/trackName simpleType profileType
facets	Kind Value Annotation minLength 0 maxLength 255
annotation	documentation A string up to 255 characters long.

simpleType string3

type	restriction of xs:string
properties	base xs:string
used by	element badaProfile/companyCode1 attribute airportCode/@country
facets	Kind Value Annotation minLength 0 maxLength 3
annotation	documentation A string up to three characters long.

simpleType string30

type	restriction of xs:string
properties	base xs:string
facets	Kind Value Annotation minLength 0 maxLength 30

annotation	documentation A string up to 30 characters long.
------------	---

simpleType **string32**

type	restriction of xs:string
properties	base xs:string
used by	element windRoseStation/windRoseDataSource
facets	Kind Value Annotation minLength 0 maxLength 32

simpleType **string4**

type	restriction of xs:string
properties	base xs:string
used by	element operation/carrier complexType airportCode
facets	Kind Value Annotation minLength 0 maxLength 4
annotation	documentation A string up to four characters long.

simpleType **string40**

type	restriction of xs:string
properties	base xs:string
used by	elements groundSupportEquipmentPopulationOperation/activityProfile emissionsUsage/activityProfile operation/arrivalGate operation/departureGate taxiPath/gateName userGroundSupportEquipment/gseName gate/name stationarySource/name parkingFacility/name roadway/name polarGrid/originName polarReceptor/originName stationarySourceOperation/refName parkingFacilityOperation/refName roadwayOperation/refName
facets	Kind Value Annotation minLength 0 maxLength 40
annotation	documentation A string up to 40 characters long.

simpleType **string42**

type	restriction of xs:string
properties	base xs:string
used by	element windRoseStation/windRoseStationDescription
facets	Kind Value Annotation minLength 0 maxLength 42

simpleType **string5**

type	restriction of xs:string
properties	base xs:string
used by	elements airportWeatherStation/wbanId airportWeatherStation/weatherStationCode windRose/windRoseStationId windRoseStation/windRoseStationId
facets	Kind Value Annotation minLength 0 maxLength 5

simpleType **string50**

type	restriction of xs:string
properties	base xs:string
used by	elements airport/cityName aircraftEngine/combustor airport/state aircraftEngine/tfmtFlag
facets	Kind Value Annotation minLength 0 maxLength 50
annotation	documentation A string up to 50 characters long.

simpleType **string6**

type	restriction of xs:string
properties	base xs:string
used by	elements centroid/bnald airportWeatherStation/cooperativelv taxiTime/source
facets	Kind Value Annotation minLength 0 maxLength 6
annotation	documentation A string up to six characters long.

simpleType **string64**

type	restriction of xs:string
properties	base xs:string
used by	element track/name
facets	Kind Value Annotation minLength 0 maxLength 64
annotation	documentation A string up to 64 characters long.

simpleType [string6](#)

type	restriction of xs:string
properties	base xs:string
used by	element windRoseStation/windRoseDataSet
facets	Kind Value Annotation minLength 0 maxLength 66

simpleType [string7](#)

type	restriction of xs:string
properties	base xs:string
used by	element airport/dafifId
facets	Kind Value Annotation minLength 0 maxLength 7

simpleType [string8](#)

type	restriction of xs:string
properties	base xs:string
used by	elements operation/arrivalRunway_case/climateId operation/departureRunway_climate/identifier runwayEnd/name trackref/runway_track/runway runwayAssignment/runway_taxipath/runwayName operation/tailNumber/runup/tailNumber
facets	Kind Value Annotation minLength 0 maxLength 8
annotation	documentation A string up to eight characters long.

simpleType [string9](#)

type	restriction of xs:string
properties	base xs:string
used by	element windRoseStation/directionUnit
facets	Kind Value Annotation minLength 0 maxLength 9

simpleType [studyType](#)

type	restriction of xs:string
properties	base xs:string
used by	element study/studyType
facets	Kind Value Annotation enumeration Emissions enumeration Dispersion enumeration Noise and Emissions enumeration Noise and Dispersion
annotation	documentation Type of study. NOTE: AEDT only supports the Noise and Emissions value.

simpleType [taxiModelType](#)

type	restriction of xs:string
properties	base xs:string
used by	element scenario/taxiModel
facets	Kind Value Annotation enumeration UserSpecified enumeration Delayed enumeration Sequencing
annotation	documentation Type of taxi modeling.

simpleType [timeInModeBasisType](#)

type	restriction of xs:string
properties	base xs:string
used by	element scenario/timeInModeBasis

	facets	Kind Value Annotation enumeration Performance enumeration ICAO
	annotation	documentation Time in mode can either be based on ICAO or performance.

simpleType **trackType**

	type	restriction of xs:string
	properties	base xs:string
	used by	elements trackref/optype track/optype
	facets	Kind Value Annotation pattern A Arrival D Departure V Overflight T TouchAndGo X ArrivalHeliTaxi O DepartureHeliTaxi
	annotation	documentation Type of track.

simpleType **trainingFireFuelType**

	type	restriction of xs:string
	properties	base xs:string
	facets	Kind Value Annotation pattern JP-4 JP-5 JP-8 Propane Tekflame
	annotation	documentation Supports data relating to training fire content. Training fire fuel types can be either JP-4, JP-5, JP-8, propane, or tekflame.

simpleType **vectorTrackType**

	type	restriction of xs:string
	properties	base xs:string
	used by	element trackVector/type
	facets	Kind Value Annotation pattern S Straight L LeftTurn R RightTurn
	annotation	documentation Type of vector.

simpleType **weatherDataYear**

	type	union of (restriction of xs:int , restriction of xs:string)
	used by	element weatherData/year
	annotation	documentation There are expected to be 11 records for weather data - one each for the preceding 10 years and one AVG record for the Average of the ten years.

simpleType **wingType**

	type	restriction of xs:string
	properties	base xs:string
	used by	element track/wingtype
	facets	Kind Value Annotation pattern F FixedWing R RotaryWing
	annotation	documentation Type of wing. If not specified, AEDT attempts to determine the wing type based on the optype.

simpleType **yesNoType**

	type	restriction of xs:string
	properties	base xs:string
	used by	elements anpHelicopter/hasWheels anpAirplane/thrustRestore anpHeloProfile/useDirectivity anpHeloProfile/useTrack
	facets	Kind Value Annotation pattern Yes Y No N
	annotation	documentation Simple element allowing for either a choice of "yes" or "no".